

NAVAL POSTGRADUATE SCHOOL

Monterey, California



C338645
V.1

THESIS

NUMERICAL ANALYSIS OF
DOUBLE DELTA ANTENNAS
VOLUME I

by

Achmad Chafid

December 1988

Thesis Advisor
Co-Advisor

Richard W. Adler
James K. Breakall

Approved for public release; distribution is unlimited.

Prepared for :
US Army Information Systems Engineering and Integration Center
Ft. Huachuca, AZ 85613

T241846

NAVAL POSTGRADUATE SCHOOL
MONTEREY, CALIFORNIA 93943

Rear Admiral R. C. Austin
Superintendent

This thesis prepared in conjunction with research sponsored in part by US Army
Information Systems Engineering and Integration Center.

Reproduction of all or part of this report is authorized.

Released By:

GORDON E. SCHACHER
Dean of Science and Engineering

Unclassified
Security classification of this page

REPORT DOCUMENTATION PAGE				
1a Report Security Classification Unclassified			1b Restrictive Markings	
2a Security Classification Authority			3 Distribution Availability of Report Approved for public release; distribution is unlimited.	
2b Declassification Downgrading Schedule				
Performing Organization Report Number(s)			5 Monitoring Organization Report Number(s)	
4a Name of Performing Organization Naval Postgraduate School		6b Office Symbol <i>(if applicable)</i> 62	7a Name of Monitoring Organization Naval Postgraduate School	
4c Address (city, state, and ZIP code) Monterey, CA 93943-5000			7b Address (city, state, and ZIP code) Monterey, CA 93943-5000	
4a Name of Funding Sponsoring Organization USAISEC		8b Office Symbol <i>(if applicable)</i>	9 Procurement Instrument Identification Number	
4c Address (city, state, and ZIP code) Coammader, USAISEC, ASB-SET-P, Ft. Huachuca, AZ 85613			10 Source of Funding Numbers: N62271-8-R-WR-8-006-0	
			Program Element No	Project No
1 Title (include security classification) NUMERICAL ANALYSIS OF DOUBLE DELTA ANTENNAS VOLUME I				
2 Personal Author(s) Achmad Chafid				
3a Type of Report Master's Thesis		13b Time Covered From To	14 Date of Report (year, month, day) December 1988	15 Page Count 61
6 Supplementary Notation The views expressed in this thesis are those of the author and do not reflect the official policy or position of the Department of Defense or the U.S. Government.				
7 Cosati Codes			18 Subject Terms (continue on reverse if necessary and identify by block number) Computer Simulation, Numerical Electromagnetics Code (NEC), Delta Antenna, Duoble Delta Antenna	
Field	Group	Subgroup		
9 Abstract (continue on reverse if necessary and identify by block number) The Double Delta antenna is an HF communication antenna which exists in many forms throughout military communication commands. Performance characteristics for existing designs are presently unknown and are required in order to recommend an optimum design. This thesis investigates Double Delta antennas used by the US Army (lowband and highband), the US Air Force (lowband and highband), and a commercial model. Selected models are analyzed by a computer simulation method using the Numerical Electromagnetics Code (NEC). The antenna designs are investigated to determine optimum performance characteristics over the 2 - 30 MHz range of frequencies. The parameters calculated were input impedance, VSWR, and antenna gain radiation patterns. For the performance of the antennas when sited near lossy ground, the Sommerfeld method was employed. Finally the results of the evaluation are presented and recommendations are made.				
20 Distribution Availability of Abstract <input checked="" type="checkbox"/> unclassified unlimited <input type="checkbox"/> same as report <input type="checkbox"/> DTIC users			21 Abstract Security Classification Unclassified	
22a Name of Responsible Individual Richard W. Adler			22b Telephone (include Area code) (408) 646-2352	22c Office Symbol 62Ab

DD FORM 1473,84 MAR

83 APR edition may be used until exhausted
All other editions are obsolete

security classification of this page

Unclassified

Approved for public release; distribution is unlimited.

Numerical Analysis of
Double Delta Antennas
Volume I

by

Achmad Chafid
Major, Indonesia Air Force
B.S., Indonesia Air Force Academy, 1974 Yogyakarta

Submitted in partial fulfillment of the
requirements for the degree of

MASTER OF SCIENCE IN ENGINEERING SCIENCE

from the

NAVAL POSTGRADUATE SCHOOL
December 1988

Gordon E. Schacher,
Dean of Science and Engineering

ABSTRACT

The Double Delta antenna is an HF communication antenna which exists in many forms throughout military communication commands. Performance characteristics for existing designs are presently unknown and are required in order to recommend an optimum design.

This thesis investigates Double Delta antennas used by the US Army (lowband and highband), the US Air Force (lowband and highband), and a commercial model. Selected models are analyzed by a computer simulation method using the Numerical Electromagnetics Code (NEC). The antenna designs are investigated to determine optimum performance characteristics over the 2 - 30 MHz range of frequencies. The parameters calculated were input impedance, VSWR, and antenna gain radiation patterns. For the performance of the antennas when sited near lossy ground, the Sommerfeld method was employed. Finally the results of the evaluation are presented and recommendations are made.

TABLE OF CONTENTS

I. INTRODUCTION	1
A. BACKGROUND	1
B. PROBLEM ENVIRONMENT	1
1. Antenna Parameters	1
a. Impedance	1
b. Voltage Standing Wave Ratio (VSWR).	2
c. Average Power Gain	3
C. SCOPE AND LIMITATION	3
II. ANALYSIS OF DOUBLE DELTA ANTENNAS	5
A. DESCRIPTION	5
1. The Army Lowband Double Delta Antenna	5
2. The Army Highband Double Delta Antenna	5
3. The Air Force Lowband Double Delta Antenna	7
4. The Air Force Highband Double Delta Antenna	8
5. The ESI 32A2A Broadband DD Antenna	8
B. COMPUTER MODELS	8
C. STUDY PARAMETERS	12
III. PERFORMANCE PARAMETERS OF DOUBLE DELTA ANTENNAS ..	13
A. THE ARMY DOUBLE DELTA ANTENNA	13
1. Lowband version	13
a. Input Impedance and VSWR	13
b. Radiaton Patterns	15
2. Highband version	16
a. Input Impedance and VSWR	16
b. Radiation Patterns	19
B. THE AIR FORCE DOUBLE DELTA ANTENNA	21
1. Lowband version	21
a. Input Impedance and VSWR	22
b. Radiation Patterns	23

2. Highband version	24
a. Input Impedance and VSWR	24
b. Radiation Patterns	27
C. THE ESI 32A2A DOUBLE DELTA ANTENNA	29
a. Input Impedance and VSWR	30
b. Radiation Patterns	30
IV. CONCLUSIONS AND RECOMMENDATIONS	36
A. CONCLUSIONS	36
B. RECOMMENDATIONS	36
APPENDIX A. THE NUMERICAL ELECTROMAGNETICS CODE (NEC) ..	37
A. INTRODUCTION	37
B. STRUCTURE MODELING	37
1. Wire Modeling	38
2. Modeling Structures Over Ground	39
APPENDIX B. INPUT DATA SETS USED FOR THE COMPUTER MODELS	40
LIST OF REFERENCES	46
INITIAL DISTRIBUTION LIST VOLUME I	47
INITIAL DISTRIBUTION LIST VOLUME II	49

LIST OF TABLES

Table 1.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMAL- IZED IMPEDANCE = 50 OHMS)	14
Table 2.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMAL- IZED IMPEDANCE = 300 OHMS)	14
Table 3.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMAL- IZED IMPEDANCE = 600 OHMS)	15
Table 4.	POWER GAIN VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA (BORESIGHT)	16
Table 5.	POWER GAIN VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA (BROADSIDE)	16
Table 6.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY HIGHBAND ANTENNA OVER PERFECT GROUND (NORMAL- IZED IMPEDANCE = 50 OHMS)	17
Table 7.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY HIGHBAND DD ANTENNA OVER PERFECT GROUND (NOR- MALIZED IMPEDANCE = 300 OHMS)	18
Table 8.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY HIGHBAND DD ANTENNA OVER PERFECT GROUND (NOR- MALIZED IMPEDANCE = 600 OHMS)	19
Table 9.	POWER GAIN VS FREQUENCY FOR THE ARMY HIGHBAND DD ANTENNA (BORESIGHT)	20
Table 10.	POWER GAIN VS FREQUENCY FOR THE ARMY HIGHBAND DD ANTENNA (BROADSIDE)	21
Table 11.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMAL- IZED IMPEDANCE = 50 OHMS)	22
Table 12.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMAL-	

	IZED IMPEDANCE = 300 OHMS)	22
Table 13.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMAL- IZED IMPEDANCE = 600 OHMS)	23
Table 14.	POWER GAIN VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA (BORESIGHT)	23
Table 15.	POWER GAIN VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA (BROADSIDE)	23
Table 16.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE HIGHBAND ANTENNA OVER PERFECT GROUND (NORMAL- IZED IMPEDANCE = 50 OHMS)	25
Table 17.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE HIGHBAND DD ANTENNA OVER PERFECT GROUND (NOR- MALIZED IMPEDANCE = 300 OHMS)	26
Table 18.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE HIGHBAND DD ANTENNA OVER PERFECT GROUND (NOR- MALIZED IMPEDANCE = 600 OHMS)	27
Table 19.	POWER GAIN VS FREQUENCY FOR THE AIR FORCE HIGHBAND DD ANTENNA (BORESIGHT)	28
Table 20.	POWER GAIN VS FREQUENCY FOR THE AIR FORCE HIGHBAND DD ANTENNA (BROADSIDE)	29
Table 21.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA OVER PERFECT GROUND (NOR- MALIZED IMPEDANCE = 50 OHMS)	31
Table 22.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA OVER PERFECT GROUND (NOR- MALIZED IMPEDANCE = 300 OHMS)	32
Table 23.	IMPEDANCE AND VSWR VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA OVER PERFECT GROUND (NOR- MALIZED IMPEDANCE = 600 OHMS)	33
Table 24.	POWER GAIN VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA (BORESIGHT)	34
Table 25.	POWER GAIN VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA (BROADSIDE)	35

LIST OF FIGURES

Figure 1.	The Army Lowband Double Delta Antenna from TM 11-486-6	6
Figure 2.	The Army Highband Double Delta Antenna from TM 11-486-6	7
Figure 3.	The Air Force Lowband DD Antenna from AFCS Memo 08 April, 1979	9
Figure 4.	The Air Force Highband DD Antenna from the AFCS Memo of 08 April, 1979	10
Figure 5.	The ESI 32A2A Broadband DD Antenna from Electrospace Systems Incorporated.	11

ACKNOWLEDGEMENTS

I would like to thank Profs. Richard W. Adler and James K. Breakall for their guidance, warm assistance and support for the successful completion of this thesis.

I dedicate this thesis to my wife Atik and my sons Irfan Indrabayu and Yudhi Indrajati, for their love, patience, understanding and continuing support throughout my study at the NPS.

Finally my thanks to Lieutenant Commander USN Calvin P Langford for his guidance at the beginning of my work on this thesis.

I. INTRODUCTION

A. BACKGROUND

The double delta antenna is constructed from two crossed triangular loop antennas oriented at a certain angle to each other. In general, there are two types of loop antennas, a circular loop antenna and a polygonal loop antenna. By selecting an appropriate shape of loop antenna, broadband impedance characteristics can be expected. This antenna provides a radiation pattern with the major lobe perpendicular to the earth's surface; therefore, it could be used to determine the height and the critical frequency of the ionospheric layer directly above a station. It is also useful for short-range ionospheric HF communication. The most common double delta antenna is fed from the center of a horizontal wire (base-driven) and loaded at the top. There are many double delta antennas used for both military and commercial purposes. Throughout this thesis, the double delta antenna, along with its many characteristics, will be discussed.

B. PROBLEM ENVIRONMENT

This thesis investigates the Double Delta antenna used by the US Army (lowband and highband), the US Air Force (lowband and highband) and the ESI 32A2A, sold commercially. Performance characteristics for these models are required in order to obtain an optimum design. Therefore there is a need to study the characteristic parameters of these antennas.

1. Antenna Parameters

a. Impedance

The input impedance is described as the impedance (voltage to current ratio) presented by the antenna at its feed terminals.

The input impedance can be defined as follows :

$$Z_{in} = R_{in} + jX_{in} \quad (1)$$

where :

- Z_{in} is the antenna impedance at its terminals
- R_{in} is the antenna resistance at its terminals
- X_{in} is the antenna reactance at its terminals

The resistive part alone consists of two components :

$$R_{in} = R_r + R_L \quad (2)$$

where :

- R_r is radiation resistance of the antenna
- R_L is loss resistance of the antenna

Radiation resistance R_r represents power that leaves the antenna as radiation, while loss resistance R_L represents power dissipation due to antenna structure losses. Input reactance, X_{in} , is related to relative power storage in the near field of the antenna. The antenna input impedance is very important in order to avoid losses when power is transferred from the system to the antenna or from the antenna to the system. The maximum transfer can be achieved if the antenna impedance "matches" the impedance of the system. Matching occurs when one impedance is the conjugate of another [Ref. 1].

b. Voltage Standing Wave Ratio (VSWR).

If the system were operated with a poor match at the antenna there would be reflections set up along the transmission line. Therefore, the voltage standing wave ratio (VSWR) is much greater than one. In many applications the VSWR is not high, but an extremely low VSWR is also not a necessity. For example, a VSWR = 2 leads to 89 percent power transmission. On the other hand, if the VSWR is very high, power will travel back and forth along the transmission line, and, if the line is lossy and/or of long length, dissipative losses may be significant [Ref. 2].

VSWR can be related to impedances :

$$VSWR = \frac{1 + \sqrt{\frac{(R_L - R_0)^2 + X_L^2}{(R_L + R_0)^2 + X_L^2}}}{1 - \sqrt{\frac{(R_L - R_0)^2 + X_L^2}{(R_L + R_0)^2 + X_L^2}}} \quad (3)$$

where :

- R_L is the antenna resistance
- X_L is the antenna reactance
- $R_0 = Z_0$ of the transmission line

The percentage of reflected power can be related to VSWR using the equation :

$$P_r = \left[\frac{(VSWR - 1)^2}{(VSWR + 1)^2} \right] \times 100\% \quad (4)$$

where P_r is the percent reflected power.

c. *Average Power Gain*

Another useful parameter describing the performance of an antenna is gain. Measurements can provide efficiency of the antenna as well as its directional radiation capability. A common criteria applied to an antenna computer model is given by calculating the average power gain. It is obtained by integrating the radiated power density to find the total radiated power, and then comparing that with the total input power at the feed points. The comparison will show equal values for a valid solution. The average power gain is a useful criteria for checking the accuracy of computing the input impedance for any computer model of a wire antenna. The average gain should equal 1 for an antenna in free space and equal 2 for an antenna over perfectly conducting ground; otherwise the model may not be correct. Because the ideal value is not always reached in real-world applications, an acceptable tolerance is considered. For engineering purposes, an average power gain within 10 percent of ideal is acceptable [Ref. 3].

C. SCOPE AND LIMITATION

This thesis investigates the Double Delta antenna from the US Army (lowband and highband) and the USAF (lowband and highband), plus the commercially produced ESI 32A2A. The first analysis conducted is the investigation of input impedance, VSWR, and radiation patterns. References for normalizing impedances of 50, 300 and 600 ohms were used to compute the input impedance and VSWR. Radiation patterns were computed for elevation and azimuth planes. The vertical gain elevation power pattern was computed for 91 points of θ at ϕ equal 0 degrees and 91 points of θ at ϕ equal 90 degrees. The horizontal gain azimuth power pattern was computed for 91 points of ϕ at θ equal 70, 50, 30, and 10 degrees respectively.

Performance of these antennas over real ground conditions are also of interest for the following parameters :

1. Poor ground conditions :
 - Relative dielectric constant of ground $\epsilon_r = 5$
 - Conductivity of ground $\sigma = 10^{-3}$ mhos/m
2. Fair ground (average ground) conditions :

- Relative dielectric constant of ground $\epsilon_r = 12$
 - Conductivity of ground $\sigma = 5 \times 10^{-3}$ mhos/m
3. Good ground conditions :
- Relative dielectric constant of ground $\epsilon_r = 30$
 - Conductivity of ground $\sigma = 10^{-2}$ mhos/m

Throughout this thesis, a special program called NEC - *Numerical Electromagnetics Code* - is used [Ref. 3]. Computations were done with a single precision version which was found to be sufficiently accurate. To accurately model wire antennas near lossy ground via NEC, the computationally intensive Sommerfeld method is required. Initial tests of the sensitivity of DD antennas to ground constants revealed the fact that very little variation in gain occurs (less than 1.5 dB) as ground conditions vary from poor to fair and from fair to good. Time and computer resource limitations justify the choice of one set of conditions - fair ground - for this investigation.

This thesis divided into two volumes, Volume I and Volume II. Volume I presents the antennas were investigated, method for investigation, and the results of investigation. Volume II contains Appendix C, the plots of input impedance, VSWR, and maximum gain versus frequency and plots of radiation patterns for each frequency for the antennas.

II. ANALYSIS OF DOUBLE DELTA ANTENNAS

A. DESCRIPTION

1. The Army Lowband Double Delta Antenna

Figure 1 shows the NEC wire model of the Army Lowband DD antenna from the Army Signal Corps publication TM 11-486-6. The antenna consists of two separate different size delta antennas, installed perpendicular to one another forming an asymmetric double delta. This antenna is designed for operation during the low-frequency portion of the nominal 11.1 year solar cycle, when the majority of the critical frequencies fall in the lower end of the HF band. The effective gain over the low-frequency end of the band is provided by increasing the antenna leg dimensions [Ref. 4]. The following parameters specify the Army Lowband Double Delta antenna :


1. Two long arms : 150 feet each
2. Two short arms : 65 feet each
3. Top height : 65 feet
4. Top loading : 600 ohms
5. Frequency : 2 to 8 MHz
6. Arm height : 3 feet

The structure is fed at the center of the arms. The model is simulated over perfectly conducting ground and fair ground using the Sommerfeld method. (This is true for all Double Deltas in this study).

2. The Army Highband Double Delta Antenna

Figure 2 shows the Army Highband Double Delta antenna from the Army Signal Corps publication TM 11-486-6. The antenna consists of two identical delta antennas, installed perpendicular to each other forming a symmetric double delta antenna. The two delta antennas are identical, except for the terminating resistances. The receiving delta antenna only requires a very low wattage resistor. The transmitting termination must be capable of dissipating one half of the average power of the transmitter output. This antenna is installed for operation during the high-frequency portion of the solar cycle [Ref. 4]. The following specify the Army Highband Double Delta antenna :


1. Four symmetric arms : 65 feet each
2. Top height : 65 feet

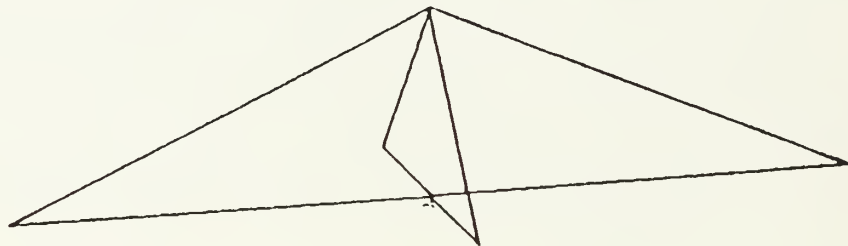

THETA = 75.00 PHI = 75.00 ETA = 90.00

Figure 1. The Army Lowband Double Delta Antenna from TM 11-486-6

3. Top loading : 600 ohms
4. Frequency : 8 to 30 MHz
5. Arm height : 3 feet

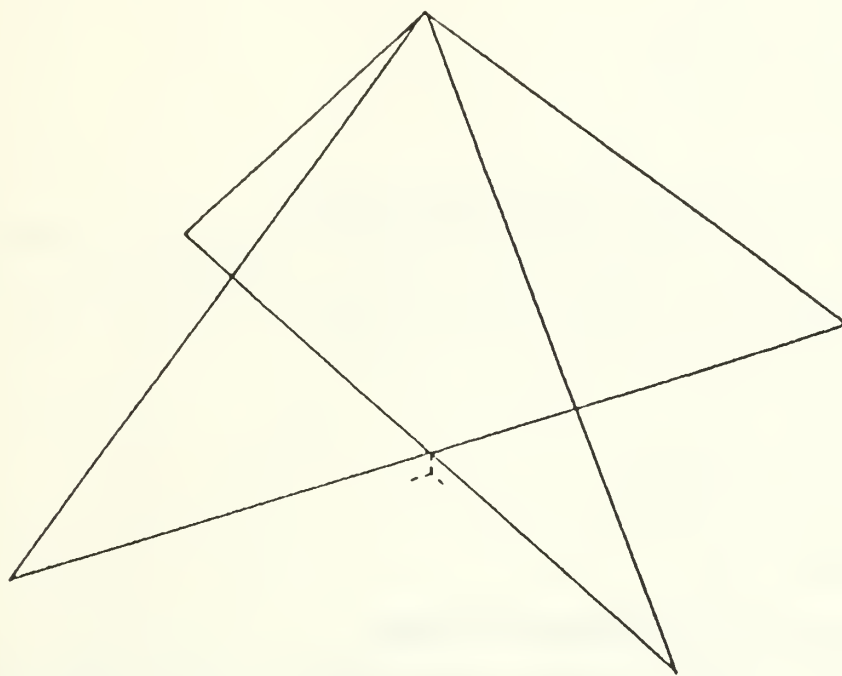

THETA = 60.00 PHI = 60.00 ETA = 90.00

Figure 2. The Army Highband Double Delta Antenna from TM 11-486-6

3. The Air Force Lowband Double Delta Antenna

Figure 3 shows the NEC wire model of the Air Force Lowband DD antenna from the AFCS memo of April 8, 1979. The antenna consists of two identical delta an-

tennas, installed at an angle of 60 degrees (and/or 120 degrees) to each other [Ref. 5]. The following parameters specify the Air Force Lowband Double Delta antenna :

1. Four symmetric arms :100 feet each
2. Top height : 33 feet
3. Top loading : 600 ohms
4. Frequency : 2 to 8 MHz
5. Arm height : 5 feet

4. The Air Force Highband Double Delta Antenna

Figure 4 shows the highband version of the Air Force Double Delta, and the similarity to the Air Force lowband model. The parameters are :

1. Four symmetric arms : 50 feet each
2. Top height : 33 feet.
3. Top loading : 600 ohms
4. Frequency : 8 to 30 MHz
5. Arm height : 5 feet


5. The ESI 32A2A Broadband DD Antenna

Figure 5 depicts the ESI 32A2A Broadband Double Delta antenna from Electrospace Systems Incorporated. The antenna consists of two separate delta antennas, installed at 60 degrees to each other. This antenna is tapered at four of the side angles. The wires are terminated at the apex in a resistive load equal to the wire's characteristic impedance which ensures omnidirectional radiation patterns at an angle near the zenith [Ref. 6]. The specifications of the ESI 32A2A Broadband Double Delta antenna are :

1. Four slanting symmetric arms : 75.08 feet each
2. Top height : 76.54 feet
3. Top loading : 600 ohms
4. Frequency : 2 to 30 MHz
5. Arm height : 9.71 feet

B. COMPUTER MODELS

The antennas were modeled on the IBM system 3033 main-frame computer by using the Numerical Electromagnetics Code (NEC).

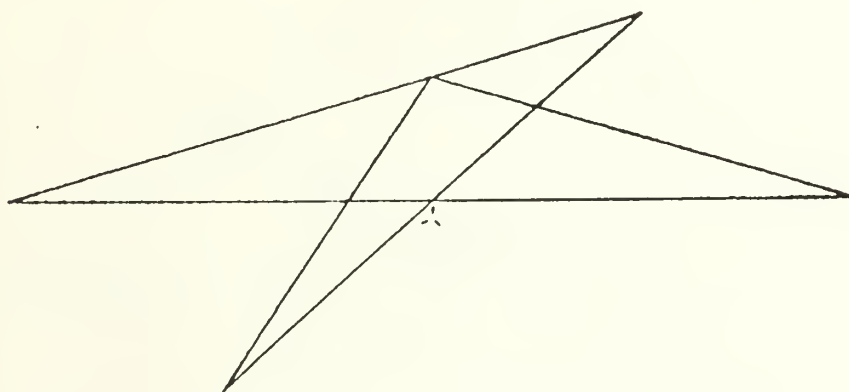

THETA = 60.00 PHI = 60.00 ETA = 90.00

Figure 3. The Air Force Lowband DD Antenna from AFCS Memo 08 April, 1979

The data sets which describe the structures and request computation of structure characteristics are arranged in files made up of card images (comment cards, geometry cards and control cards). Appendix B shows the data sets used in this study. The following cards play a specific role in the computation analysis :

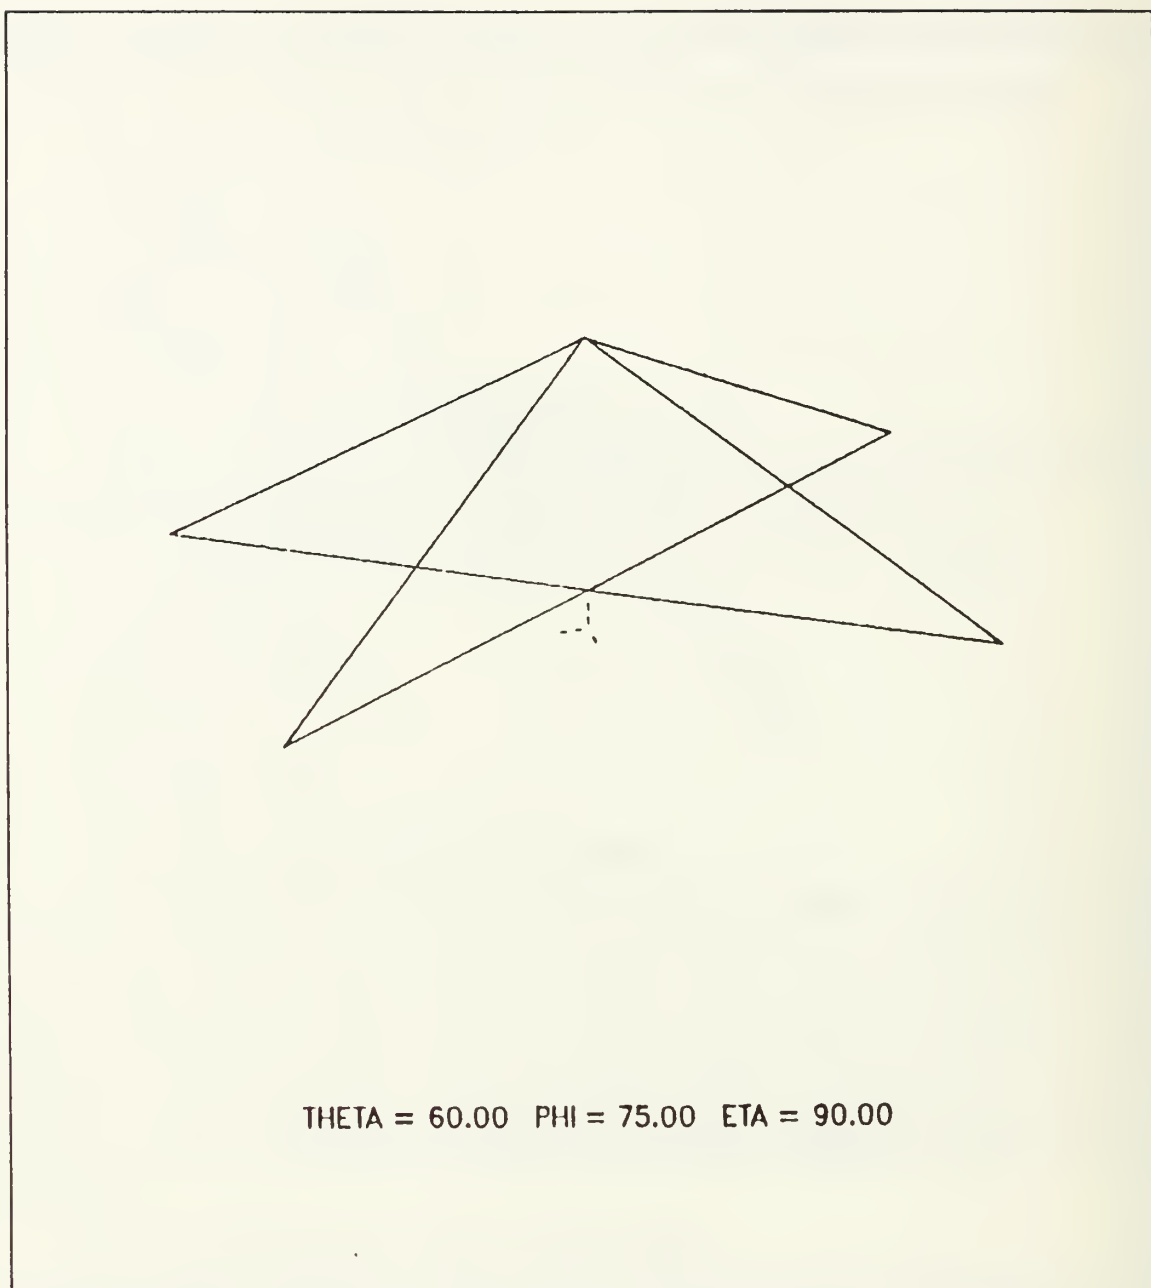


Figure 4. The Air Force Highband DD Antenna from the AFCS Memo of 08 April, 1979

1. GN cards specify the relative dielectric constant and conductivity of the ground in the vicinity of the antenna.
2. PL cards set flags for writing selected output data into a predesignated file for later plotting of the currents, near fields, patterns, impedance, admittance & VSWR.

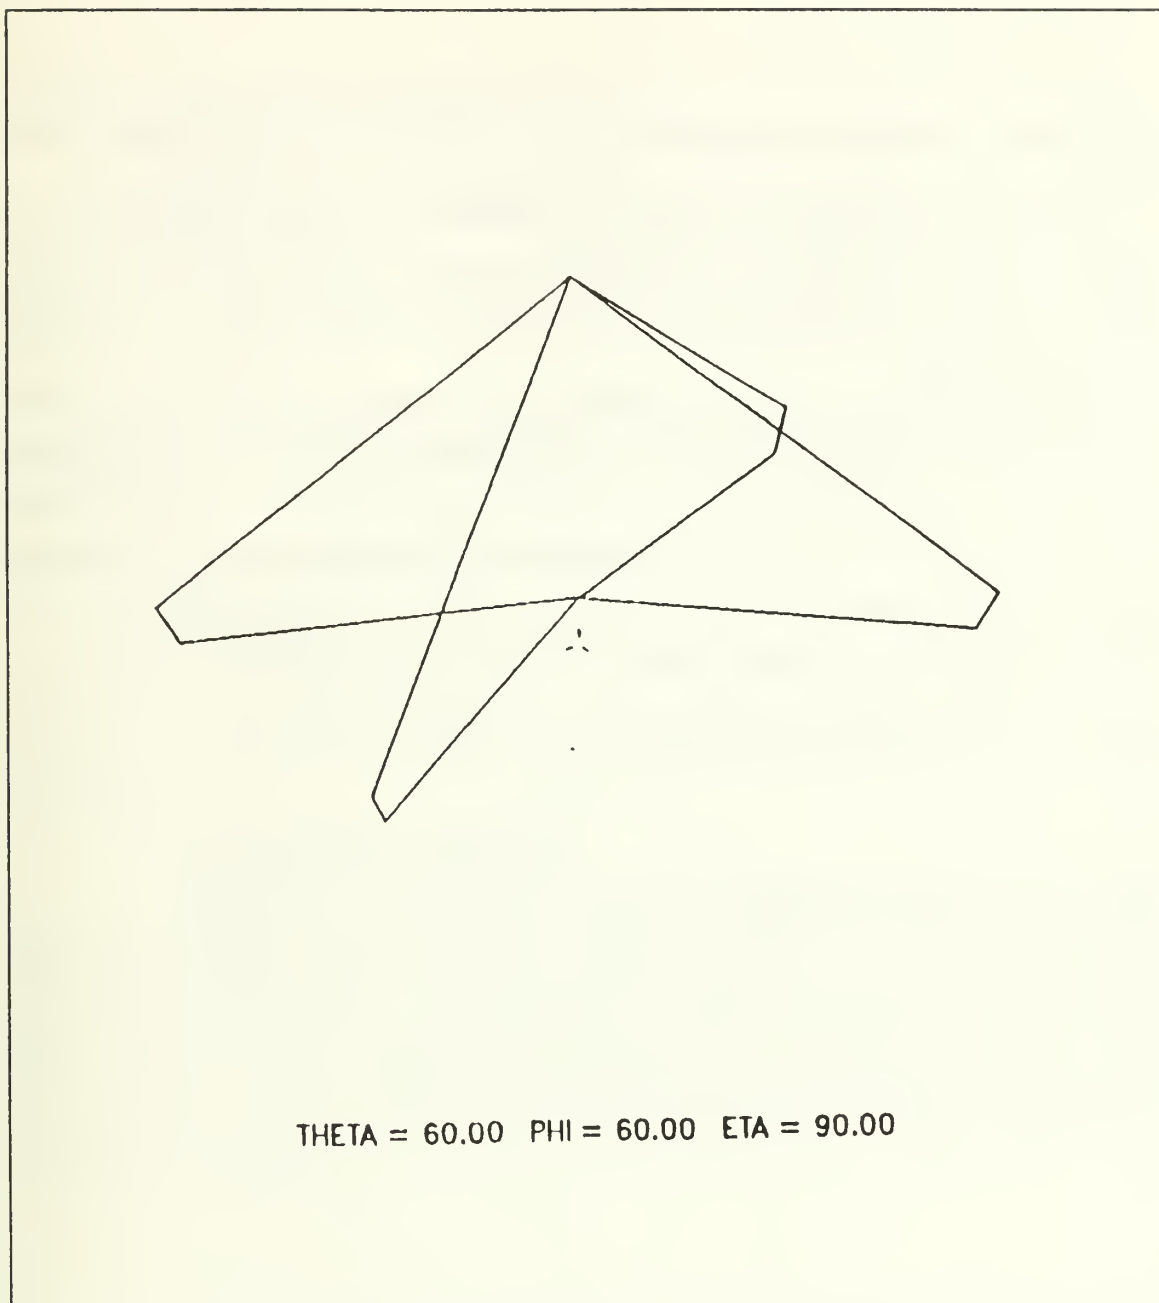


Figure 5. The ESI 32A2A Broadband DD Antenna from Electrospace Systems Incorporated.

3. RP cards specify radiation pattern sampling parameters and cause program execution.

C. STUDY PARAMETERS

Since the performance of an antenna is determined by its characteristic parameters, this study investigates the input impedance and VSWR. Radiation patterns are also valuable for evaluating the performance of an antenna and are investigated as well.

The data sets for computer models of the Double Delta antennas described in Section A are given in Appendix B. Computations of input impedance and VSWR referenced to normalizing impedances of 50, 300 and 600 ohms are done over perfectly conducting ground.

Data sets which are used for the antenna gain power pattern over perfectly conducting ground are in Appendix B. Antenna gain radiation patterns were also calculated over fair ground conditions using the Sommerfeld method for the elevation and azimuth planes. The vertical gain elevation pattern is computed for 91 points of θ at ϕ equal 0 degrees and 91 points of θ at ϕ equal 90 degrees. The horizontal gain azimuth pattern is computed for 91 points of ϕ at θ equal 70, 50, 30, and 10 degrees respectively.

III. PERFORMANCE PARAMETERS OF DOUBLE DELTA ANTENNAS

As described in the previous chapter, the Double Delta antennas from the US Army and the US Air Force, both for lowband and highband, and the ESI 32A2A Broadband DD antenna from Electrospace Systems Inc. were modeled on the IBM Computer using a special program, the Numerical Electromagnetics Code (NEC). A single precision version of NEC was found adequate with respect to accuracy and was used throughout the simulation process. This chapter presents the results given by running the data sets of Appendix B.

A. THE ARMY DOUBLE DELTA ANTENNA

1. Lowband version

This antenna has unsymmetric arms. The long arms provide effective gain for low-frequency use. The unsymmetric arms of this antenna will force different elevation patterns for the two positions, which we label broadside (perpendicular to the long side) and boresight.

a. Input Impedance and VSWR

This antenna has reasonably flat input impedance within the frequency range for normalized impedance equal to 300, or 600 ohms. For 50 ohms the input impedance varies excessively. The value of VSWR varies with frequency, but is acceptable at specific frequencies depending on the normalization impedance, 50, 300, or 600 ohms. Tables 1, 2, and 3 show the input impedance and VSWR for the Army Lowband DD antenna over perfect ground using normalizing impedances equal to 50, 300, and 600 ohms, respectively.

Table 1. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 50 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	$179.8 + j93.3$	$3.59 + j1.86$	4.62
3	$113.6 - j95.8$	$2.27 - j1.91$	4.08
4	$55.16 + j22.86$	$1.10 + j0.45$	1.56
5	$59.13 + j23.24$	$1.18 + j0.46$	1.58
6	$411.4 + j122.8$	$8.22 + j2.45$	8.97
7	$113.06 - j73.94$	$2.26 - j1.47$	3.37
8	$110.87 + j97.01$	$2.21 + j1.94$	4.12

Table 2. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 300 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	$179.8 + j93.26$	$0.60 + j0.30$	1.9
3	$113.6 - j95.8$	$0.37 - j0.32$	2.95
4	$55.16 + j22.86$	$0.18 + j0.07$	5.47
5	$59.13 + j23.24$	$0.20 + j0.07$	5.11
6	$411.4 + j122.8$	$1.37 + j0.41$	1.60
7	$113.06 - j73.94$	$0.37 - j0.25$	2.84
8	$110.87 + j97.01$	$0.37 + j0.32$	3.03

Table 3. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 600 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	$179.8 + j93.26$	$0.30 + j0.15$	3.43
3	$113.6 - j95.8$	$0.19 - j0.16$	5.42
4	$55.16 + j22.86$	$0.09 + j0.03$	10.89
5	$59.13 + j23.24$	$0.10 + j0.03$	10.16
6	$411.4 + j122.8$	$0.68 + j0.20$	1.57
7	$113.06 - j73.94$	$0.18 - j0.13$	5.39
8	$110.87 + j97.01$	$0.18 + j0.16$	5.56

b. Radiation Patterns

The radiation patterns are computed for elevation and azimuth planes over perfect and fair ground for each frequency within the frequency range. Elevation patterns are provided both for boresight and broadside.

Over perfect ground and fair ground, for 2 to 4 MHz, the direction of the maximum intensity of radiation is vertical. Above 4 MHz the maximum shifts to an elevation angle less than 90 degrees. But at 8 MHz, the direction of maximum radiation reverts back to a 90 degree elevation angle (boresight). For the broadside case, the antenna radiates toward the vertical. It shows the characteristics of an NVIS (near vertical incidence) antenna. Overall attenuation is present in the fair ground pattern shapes compared to perfect ground. In general, this antenna at the lowest frequency (2 MHz), has a minimum antenna gain greater than -10 dBi. Tables 4 and 5 show the maximum gain versus frequency for the Army Lowband DD Antenna, for perfect ground and fair ground.

Table 4. POWER GAIN VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA (BORESIGHT)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
2	4.0	90	-5.0	90
3	6.0	90	-2.0	90
4	5.0	90	-4.0	90
5	2.5	50	-4.0	45
6	4.0	55	-1.8	52.5
7	3.0	60	-2.8	60
8	3.0	65	0	90

Table 5. POWER GAIN VS FREQUENCY FOR THE ARMY LOWBAND DD ANTENNA (BROADSIDE)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
2	4.0	90	-5.2	90
3	5.5	90	-2.0	90
4	5.0	90	-4.0	90
5	-2.0	90	-5.0	90
6	1.8	90	-3.0	90
7	-1.8	90	-3.0	90
8	-3.5	90	0	90

2. Highband version

This is a symmetric double delta antenna, modified from the lowband-version by shortening the long arm lengths. It is designed for operation during the high frequency portion of the solar cycle. This antenna provides the same vertical pattern for both broadside and endfire (boresight).

a. Input Impedance and VSWR

A broadband input impedance is achieved by using a normalized impedance equal to the load of 600 ohms. A normalized impedance of 300 ohms provides an acceptable VSWR for most frequencies within the frequency range. For 50 or 600 ohms, the VSWR is unacceptable over most of the HF band. Tables 6, 7, and 8 show the input

impedance and VSWR for the Army Highband DD Antenna using normalized impedances equal to 50, 300, and 600 ohms respectively.

Table 6. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY HIGHBAND ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 50 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
8	162 + j6.54	2.53 + j0.13	2.54
9	293 - j25.7	5.86 - j0.51	5.90
10	95.2 - j83.4	1.90 - j1.67	3.61
11	60.3 + j30.2	1.21 + j0.60	1.77
12	112 + j155	224 + j3.11	6.85
13	391 + j51.4	7.83 + j1.03	7.96
14	170 - j30.7	3.39 - j0.61	3.51
15	235 + j61.7	4.71 + j1.23	5.05
16	221 - j132	4.43 - j2.65	6.07
17	82 - j49.1	1.64 - j0.98	2.42
18	84.6 + j54.5	1.69 + j1.09	2.60
19	177 + j90.1	3.54 + j1.80	4.52
20	164 + j48.7	3.28 + j0.97	3.6
21	191 + j130	3.83 + j2.60	5.67
22	419 - j0.64	8.39 - j1.30	8.39
23	149 - j132	2.98 - j2.65	5.49
24	92 - j11.3	1.84 - j0.226	1.88
25	143 + j39.4	2.86 + j0.788	3.10
26	119 + j19.10	2.39 + j0.382	2.46
27	104 + j97.60	2.08 + j1.95	4.15
28	212 + j192	4.24 + j3.85	7.84
29	376 - j31.5	7.52 - j0.63	7.58
30	173 - j59	3.45 - j1.18	3.89

**Table 7. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY
HIGHBAND DD ANTENNA OVER PERFECT GROUND
(NORMALIZED IMPEDANCE = 300 OHMS)**

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
8	162 + j6.54	0.42 + j0.02	2.37
9	293 - j25.7	0.97 - j0.08	1.09
10	95.2 - j83.4	0.32 - j0.27	3.42
11	60.3 + j30.2	0.20 + j0.10	5.03
12	112 + j155	0.37 + j0.51	3.48
13	391 + j51.4	1.30 + j0.17	1.36
14	170 - j30.7	0.56 - j0.10	1.81
15	235 + j61.7	0.78 + j0.20	1.40
16	221 - j132	0.73 - j0.44	1.80
17	82 - j49.1	0.27 - j0.16	3.77
18	84.6 + j54.5	0.28 + j0.18	3.67
19	177 + j90.1	0.59 + j0.30	1.92
20	164 + j48.7	0.54 + j0.16	1.9
21	191 + j130	0.63 + j0.43	2.0
22	419 - j0.64	1.40 - j0.002	1.40
23	149 - j132	0.49 - j0.44	2.51
24	92 - j11.3	0.30 - j0.037	3.27
25	143 + j39.4	0.47 + j0.13	2.14
26	119 + j19.10	0.39 + j0.63	2.53
27	104 + j97.60	0.34 + j0.32	3.23
28	212 + j192	0.70 + j0.64	2.26
29	376 - j31.5	1.25 - j0.10	1.28
30	173 - j59	0.57 - j0.20	1.84

Table 8. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ARMY HIGHBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 600 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
8	162 + j6.54	0.21 + j0.01	4.74
9	293 - j25.7	0.48 - j0.04	2.05
10	95.2 - j83.4	0.16 - j0.14	6.43
11	60.3 + j30.2	0.10 + j0.05	9.97
12	112 + j155	0.18 + j0.25	5.72
13	391 + j51.4	0.65 + j0.09	1.55
14	170 - j30.7	0.28 - j0.05	3.55
15	235 + j61.7	0.39 + j0.10	2.58
16	221 - j132	0.37 - j0.22	2.86
17	82 - j49.1	0.14 - j0.08	7.37
18	84.6 + j54.5	0.14 + j0.09	7.15
19	177 + j90.1	0.29 + j0.15	3.48
20	164 + j48.7	0.27 + j0.08	3.68
21	191 + j130	0.32 + j0.23	3.3
22	419 - j0.64	0.70 - j0.001	1.43
23	149 - j132	0.25 - j0.22	4.24
24	92 - j11.3	0.15 - j0.018	6.52
25	143 + j39.4	0.24 + j0.07	4.22
26	119 + j19.10	0.19 + j0.32	5.03
27	104 + j97.60	0.17 + j0.16	5.93
28	212 + j192	0.35 + j0.32	3.16
29	376 - j31.5	0.65 - j0.05	1.60
30	173 - j59	0.28 - j0.10	3.51

b. Radiation Patterns

The radiation patterns over perfectly conducting and fair ground (real, lossy ground) for this antenna show that the direction of maximum intensity of radiation for a frequency range of 8 MHz to 24 MHz occurs at an elevation angle of 90 degrees, even though the lobe begins to split into several smaller lobes before 20 MHz. Above 24 MHz, the direction of maximum intensity of radiation shifts to an angle less than 90

degrees elevation angle. Tables 9 and 10 show the maximum gain for the Army Highband DD Antenna.

Table 9. POWER GAIN VS FREQUENCY FOR THE ARMY HIGHBAND DD ANTENNA (BORESIGHT)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation dBi
8	0.4	90	-0.3	90
9	4.0	90	1.1	90
10	7.0	90	1.4	90
11	8	90	1.2	90
12	7.8	90	0.7	90
13	5.5	90	-0.6	90
14	1.6	35	-3.5	90
15	1.8	52.5	-3.8	50
16	4.6	90	-2.1	90
17	8.8	90	0.9	90
18	10	90	3.2	90
19	9.0	90	3.2	90
20	5.9	90	2.2	90
21	4.4	90	0.9	90
22	7.4	90	1.8	90
23	8.4	90	2.3	90
24	8.4	90	1.0	90
25	4.8	90	-1.0	37.5
26	5.0	72.5	-0.9	37.5
27	7.0	64	-1.0	37.5
28	8.4	74	0	74
29	7.6	74	0.1	74
30	4.8	75	-0.8	75

Table 10. POWER GAIN VS FREQUENCY FOR THE ARMY Highband DD ANTENNA (BROADSIDE)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
8	0.4	90	-0.3	90
9	4.0	90	1.1	90
10	7.0	90	1.4	90
11	8	90	1.2	90
12	7.8	90	0.7	90
13	5.5	90	-0.6	90
14	1.6	35	-3.5	90
15	1.8	52.5	-3.8	50
16	4.6	90	-2.1	90
17	8.8	90	0.9	90
18	10	90	3.2	90
19	9.0	90	3.2	90
20	5.9	90	2.2	90
21	4.4	90	0.9	90
22	7.4	90	1.8	90
23	8.4	90	2.3	90
24	8.4	90	1.0	90
25	4.8	90	-1.0	37.5
26	5.0	72.5	-0.9	37.5
27	7.0	64	-1.0	37.5
28	8.4	74	0	74
29	7.6	74	0.1	74
30	4.8	75	-0.8	75

B. THE AIR FORCE DOUBLE DELTA ANTENNA

1. Lowband version

This antenna is symmetric and has long arms which provide the effective gain over the low-frequency range. The antenna consists of two deltas at an angle of 60 degrees to each other. Therefore, it has different patterns for broadside and endfire (boresight).

a. Input Impedance and VSWR

The broadband impedance characteristics are achieved by using a normalized impedance equal to the load of 600 ohms. For a normalized impedance of 300 ohms, the input impedance is reasonably flat for all frequencies within the frequency range. For 50 ohms, the input impedance varies substantially. The VSWR is very good for for 300 and 600 ohm normalized feedpoint impedances. The maximum is 2.3:1 with the average being 1.65:1 for 600 ohms, and the maximum value equal to 2.01:1 with an average value of 1.6:1 for 300 ohms. For 50 ohms, the VSWR is greater than 5:1 for all frequencies. Tables 11, 12, and 13 show the input impedance and VSWR for the Air Force Double Delta antenna.

Table 11. IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 50 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	$400 + j187$	$8.0 + j3.70$	9.78
3	$381 + j8.87$	$7.62 + j0.18$	7.63
4	$493 + j122$	$9.86 + j2.44$	1.05
5	$481 - j201$	$9.61 - j4.02$	11.3
6	$262 - j28.4$	$5.23 - j0.56$	5.29
7	$395 + j129$	$7.90 + j2.577$	8.75
8	$448 + j13.4$	$8.96 + j0.26$	8.97

Table 12. IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 300 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	$400 + j187$	$1.33 + j0.62$	1.83
3	$381 + j8.87$	$1.27 + j0.03$	1.27
4	$493 + j122$	$1.64 + j0.41$	1.80
5	$481 - j201$	$1.60 - j0.67$	2.01
6	$262 - j28.4$	$0.87 - j0.09$	1.19
7	$395 + j129$	$1.32 + j0.42$	1.58
8	$448 + j13.4$	$1.49 + j0.04$	1.50

Table 13. IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 600 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	400 + j187	0.66 + j0.31	1.74
3	381 + j8.87	0.64 + j0.01	1.58
4	493 + j122	0.82 + j0.20	1.35
5	481 - j201	0.80 - j0.35	1.54
6	262 - j28.4	0.43 - j0.04	2.30
7	395 + j129	0.65 + j0.21	1.64
8	448 + j13.4	0.75 + j0.02	1.34

b. Radiation Patterns

For both perfectly conducting and fair ground conditions, this antenna has the major lobe maximum at an elevation angle of 90 degrees from 2 to 7 MHz. At 8 MHz, the direction of maximum radiation shifts to an angle less than 90 degrees (boresight). For broadside azimuth, the direction of maximum radiation is vertical for all frequencies within the band. Antenna gain for the lowest frequency (2 MHz) is very small, less than -10 dBi. Tables 14 and 15 show the maximum gain for the Air Force Lowband Double Delta Antenna.

Table 14. POWER GAIN VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA (BORESIGHT)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
2	-17	90	-17.4	90
3	-8.2	90	-8.3	90
4	-4.2	90	-4.5	90
5	-1.9	90	-3.0	90
6	-2.2	90	-3.0	90
7	-4.4	90	-5.5	90
8	-0.2	45	-3.5	40

Table 15. POWER GAIN VS FREQUENCY FOR THE AIR FORCE LOWBAND DD ANTENNA (BROADSIDE)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
2	-16	90	-17.5	90
3	-8.2	90	-8.3	90
4	-4.2	90	-4.3	90
5	-2.1	90	-3.0	90
6	-2.2	90	-3.0	90
7	-4.4	90	-5.5	90
8	-7.2	90	-10.0	90

2. Highband version

This antenna is exactly the same as the low-frequency version, except the arms are shorter, providing useful gain over the high frequency band.

a. Input Impedance and VSWR

This antenna, like its lowband relative, has smooth input impedance for 600 ohms normalized impedance, acceptable values for 300, ohms and widely variable impedances for 50 ohms. The values of VSWR follow the same trend as input impedance. The maximum value is 2.33:1 with an average value of 1.6:1 for normalized impedance of 300 ohms, 2.51:1 with an average value equal to 1.7:1 for 600 ohms, and at 50 ohms values greater than 5:1 for any frequency. Tables 16, 17, and 18 show the impedance and VSWR for the Air Force Highband Double Delta antenna.

Table 16. IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE HIGHBAND ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 50 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
8	530 + j127	10.6 + j2.55	11.2
9	612 - j93.1	12.2 - j1.86	12.5
10	401 - j198	8.03 - j3.96	10.0
11	268 - j96.1	5.36 - j1.92	6.07
12	251 + j31.9	5.03 + j0.63	5.11
13	328 + j124	6.56 + j2.48	7.52
14	430 + j91.2	8.59 + j1.82	8.99
15	401 + j31.8	8.03 + j0.63	8.08
16	372 + j76.4	7.43 + j1.53	7.75
17	440 + j131	8.79 + j2.62	9.58
18	565 + j44.0	11.3 + j0.88	11.4
19	473 - j137	9.47 - j2.75	10.3
20	306 - j102	6.11 - j2.04	6.81
21	258 + j11.0	5.17 + j0.22	5.18
22	302 + j91.9	6.04 + j1.84	6.62
23	358 + j81.4	7.16 + j1.63	7.50
24	326 + j63.1	6.52 + j1.26	6.77
25	297 + j130	5.94 + j2.60	7.11
26	362 + j232	7.23 + j4.65	10.3
27	580 + j232	11.6 + j4.64	13.5
28	620 - j105	12.4 - j2.10	12.8
29	341 - j149	6.82 - j2.98	8.14
30	239 - j15.5	4.78 - j0.31	4.80

Table 17. IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE HIGHBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 300 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
8	530 + j127	1.77 + j0.42	1.91
9	612 - j93.1	2.04 - j0.31	2.10
10	401 - j198	1.34 - j0.65	1.88
11	268 - j96.1	0.89 - j0.32	1.43
12	251 + j31.9	0.84 + j0.10	1.24
13	328 + j124	1.09 + j0.41	1.50
14	430 + j91.2	1.43 + j0.30	1.55
15	401 + j31.8	1.34 + j0.10	1.36
16	372 + j76.4	1.24 + j0.255	1.37
17	440 + j131	1.47 + j0.43	1.68
18	565 + j44.0	1.88 + j0.15	1.90
19	473 - j137	1.58 - j0.45	1.78
20	306 - j102	1.02 - j0.34	1.40
21	258 + j11.0	0.86 + j0.04	1.17
22	302 + j91.9	1.01 + j0.30	1.36
23	358 + j81.4	1.19 + j0.27	1.36
24	326 + j63.1	1.09 + j0.21	1.24
25	297 + j130	0.99 + j0.43	1.54
26	362 + j232	1.21 + j0.77	2.04
27	580 + j232	1.93 + j0.77	2.33
28	620 - j105	2.07 - j0.35	2.14
29	341 - j149	1.14 - j0.49	1.61
30	239 - j15.5	0.79 - j5.16	1.26

Table 18. IMPEDANCE AND VSWR VS FREQUENCY FOR THE AIR FORCE HIGHBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 600 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
8	530 + j127	0.88 + j0.21	1.29
9	612 - j93.1	1.02 - j0.15	1.17
10	401 - j198	0.66 - j0.33	1.76
11	268 - j96.1	0.45 - j0.16	2.31
12	251 + j31.9	0.42 + j0.05	2.39
13	328 + j124	0.55 + j0.21	1.94
14	430 + j91.2	0.71 + j0.15	1.46
15	401 + j31.8	0.67 + j0.05	1.50
16	372 + j76.4	0.62 + j0.13	1.66
17	440 + j131	0.73 + j0.22	1.49
18	565 + j44.0	0.94 + j0.07	1.10
19	473 - j137	0.79 - j0.23	1.42
20	306 - j102	0.51 - j0.17	2.04
21	258 + j11.0	0.43 + j0.02	2.32
22	302 + j91.9	0.50 + j0.15	2.05
23	358 + j81.4	0.60 + j0.13	1.72
24	326 + j63.1	0.55 + j0.11	1.87
25	297 + j130	0.49 + j0.22	2.14
26	362 + j232	0.61 + j0.38	2.02
27	580 + j232	0.95 + j0.38	1.48
28	620 - j105	1.04 - j0.17	1.19
29	341 - j149	0.57 - j0.24	1.91
30	239 - j15.5	0.39 - j2.58	2.51

b. Radiation Patterns

Zenith-directed radiation occurs from 8 to 13 MHz; above 13 MHz, the elevation angle for maximum radiation drops below 90 degrees (boresight). In the broadside case, the 90 degree elevation angle holds for all frequencies (8 to 30 MHz). The beam begins to split into several smaller lobes above 25 MHz. Tables 19 and 20 show the maximum gain for the Air Force Highband Double Delta antenna.

Table 19. POWER GAIN VS FREQUENCY FOR THE AIR FORCE HIGHBAND DD ANTENNA (BORESIGHT)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
8	0	90	-1.0	90
9	0.65	90	-0.2	90
10	0.6	90	-0.15	90
11	0	90	-0.6	90
12	-1.2	90	-1.4	90
13	-3.0	90	-2.6	90
14	-0.8	35	-2.4	90
15	0.85	35	-1.0	30
16	2.4	40	0.3	40
17	2.8	40	1.10	40
18	2.8	45	1.8	40
19	2.6	47.5	1.4	45
20	2.2	52.5	1.1	50
21	2.4	55	1.2	55
22	4.0	60	2.2	57.5
23	4.3	60	2.8	60
24	4.8	62.5	2.8	60
25	4.9	22.5	2.2	22.5
26	6.8	25	3.8	22.5
27	7.0	27.5	4.8	27.5
28	6.8	30	4.6	30
29	5.3	37.5	4.0	35
30	6.8	42.5	4.2	40

Table 20. POWER GAIN VS FREQUENCY FOR THE AIR FORCE HIGHBAND DD ANTENNA (BROADSIDE)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
8	0	90	-1.0	90
9	0.40	90	-0.2	90
10	0.45	90	-0.15	90
11	0	90	-0.6	90
12	-1.2	90	-1.4	90
13	-3.5	90	-2.4	90
14	-4.0	90	-3.0	90
15	-3.20	90	-2.8	90
16	-2.8	90	-3.0	90
17	-2.6	90	-2.8	90
18	-2.0	90	-2.4	90
19	-1.2	90	-2.4	90
20	0	90	-2.0	90
21	0.4	90	-1.4	90
22	0.15	90	-1.4	90
23	-0.35	90	-1.6	90
24	-0.9	90	-1.6	90
25	0	90	-1.2	90
26	1.2	90	-0.25	90
27	2.4	90	0.3	90
28	2.4	90	0.3	90
29	1.4	90	-0.9	90
30	-0.95	90	-3.8	90

C. THE ESI 32A2A DOUBLE DELTA ANTENNA

This is a broadband double delta antenna. The configuration and height above ground of this antenna were selected to provide maximum radiation near the zenith for lowband-frequencies. It has a different pattern for boresight and broadside due to the 60 degree angle between the two delta loops.

a. Input Impedance and VSWR

The input impedance of this antenna is maximally flat for 600 ohm normalization. Typical 300 and 50 ohm results occur similar to the other DD antennas. The maximum value of VSWR is 2.63:1 with an average value of 1.5:1 for 300 ohms. A maximum value of 2.36:1 with an average of 1.7:1 for 600 ohms. For 50 ohms, the value of VSWR is greater than 5:1 for all frequencies. Tables 21, 22 and 23 show the input impedance and VSWR for the ESI 32A2A Broadband Double Delta antenna.

b. Radiation Patterns

For perfect and fair ground conditions, below 7 MHz, the direction of maximum radiation is vertical. Above a frequency of 7 MHz, the lobe begins to split into smaller lobes, and the angle drops below 90 degrees (boresight). In the broadside case, the direction of maximum radiation is vertical from 2 to 19 MHz. At 9 MHz the beam begins typical small-lobe formation. Above 19 MHz the elevation angle of the lobe drops. For the lowest frequency (2 MHz), the antenna gain is less than -10 dBi. Tables 24 and 25 show the maximum gain for the ESI 32A2A Broadband Double Delta antenna in both perfect and fair ground conditions.

Table 21. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 50 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	365 + j57.10	7.31 + j1.14	7.49
3	332 - j4.03	6.64 - j0.08	6.64
4	362 + j194	7.24 + j3.89	9.36
5	778 + j80.8	15.6 + j1.62	15.7
6	444 - j193	8.87 - j3.87	10.6
7	427 - j36.3	8.55 - j0.72	8.61
8	371 - j148	7.43 - j2.96	8.63
9	255 + j23.5	5.10 + j0.47	5.15
10	460 + j196	9.19 + j3.92	10.9
11	494 - j125	9.87 - j2.50	10.5
12	366 + j32.5	7.32 + j0.65	7.38
13	572 - j61.4	11.4 - j1.23	11.6
14	291 - j132	5.81 - j2.26	7.04
15	299 + j95.6	5.97 + j1.91	6.60
16	496 - j24.1	9.92 - j0.48	9.94
17	307 - j8.86	6.14 - j0.17	6.15
18	430 + j130	8.61 + j2.60	9.41
19	458 - j117	9.15 - j2.23	9.76
20	299 + j7.14	5.97 + j0.14	5.98
21	447 + j40.2	8.94 + j0.80	9.01
22	320 - j52.2	6.39 - j1.04	6.57
23	321 + j97.4	6.43 + j1.95	7.03
24	454 + j10.8	9.09 + j0.22	9.09
25	302 + j10.4	6.04 + j0.21	6.05
26	411 + j138	8.21 + j2.75	9.15
27	423 - j90.0	8.46 - j1.80	8.84
28	275 + j27.6	5.51 + j0.55	5.57
29	396 + j77.2	7.92 + j1.54	8.22
30	301 - j9.58	6.03 - j0.19	6.03

Table 22. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 300 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	365 + j57.10	1.22 + j0.19	1.30
3	332 - j4.03	1.11 - j0.013	1.11
4	362 + j194	1.21 + j0.64	1.84
5	778 + j80.8	2.59 + j0.27	2.63
6	444 - j193	1.48 - j0.64	1.91
7	427 - j36.3	1.42 - j0.12	1.44
8	371 - j148	1.24 - j0.49	1.63
9	255 + j23.5	0.85 + j0.07	1.20
10	460 + j196	1.53 + j0.65	1.95
11	494 - j125	1.65 - j0.42	1.80
12	366 + j32.5	1.22 + j0.11	1.25
13	572 - j61.4	1.91 - j0.20	1.94
14	291 - j132	0.96 - j0.44	1.56
15	299 + j95.6	0.99 + j0.32	1.37
16	496 - j24.1	1.65 - j0.08	1.66
17	307 - j8.86	1.02 - j0.03	1.04
18	430 + j130	1.43 + j0.43	1.66
19	458 - j117	1.53 - j0.39	1.69
20	299 + j7.14	0.99 + j0.03	1.02
21	447 + j40.2	1.49 + j0.13	1.51
22	320 - j52.2	1.07 - j0.17	1.20
23	321 + j97.4	1.07 + j0.32	1.38
24	454 + j10.8	1.51 + j0.03	1.52
25	302 + j10.4	1.01 + j0.03	1.04
26	411 + j138	1.37 + j0.46	1.65
27	423 - j90.0	1.41 - j0.30	1.53
28	275 + j27.6	0.91 + j0.09	1.14
29	396 + j77.2	1.32 + j0.26	1.43
30	301 - j9.58	1.00 - j0.03	1.03

Table 23. IMPEDANCE AND VSWR VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA OVER PERFECT GROUND (NORMALIZED IMPEDANCE = 600 OHMS)

Freq.	Impedance (un-normalized)	Impedance (normalized)	VSWR
2	365 + j57.10	0.61 + j0.09	1.67
3	332 - j4.03	0.55 - j0.006	1.81
4	362 + j194	0.60 + j0.32	1.91
5	778 + j80.8	1.28 + j0.13	1.33
6	444 - j193	0.74 - j0.32	1.61
7	427 - j36.3	0.71 - j0.06	1.41
8	371 - j148	0.62 - j0.25	1.77
9	255 + j23.5	0.42 + j0.04	2.36
10	460 + j196	0.76 + j0.33	1.58
11	494 - j125	0.82 - j0.21	1.35
12	366 + j32.5	0.61 + j0.05	1.65
13	572 - j61.4	0.95 - j0.10	1.12
14	291 - j132	0.48 - j0.22	2.19
15	299 + j95.6	0.49 + j0.16	2.08
16	496 - j24.1	0.83 - j0.04	1.22
17	307 - j8.86	0.51 - j0.018	1.95
18	430 + j130	0.71 + j0.22	1.52
19	458 - j117	0.77 - j0.19	1.42
20	299 + j7.14	0.48 + j0.018	2.01
21	447 + j40.2	0.75 + j0.06	1.36
22	320 - j52.2	0.53 - j0.08	1.90
23	321 + j97.4	0.53 + j0.16	1.94
24	454 + j10.8	0.76 + j0.018	1.32
25	302 + j10.4	0.51 + j0.017	1.99
26	411 + j138	0.68 + j0.23	1.60
27	423 - j90.0	0.71 - j0.15	1.48
28	275 + j27.6	0.45 + j0.04	2.18
29	396 + j77.2	0.68 + j0.13	1.56
30	301 - j9.58	0.50 - j0.016	1.99

Table 24. POWER GAIN VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA (BORESIGHT)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
2	-12.7	90	-15.0	90
3	-5.6	90	-7.5	90
4	-2.0	90	-4.5	90
5	-1.0	90	-2.8	90
6	-2.1	90	-2.8	90
7	-3.95	90	-3.0	90
8	-1.8	30	-3.0	90
9	0.60	32.5	-1.9	30
10	1.1	32.5	-0.45	30
11	-0.56	50	-2.7	35
12	2.60	57.5	0.45	52.5
13	4.80	57.5	1.80	55
14	3.80	57.5	0.95	58
15	4.0	90	1.85	90
16	4.0	90	2.0	90
17	6.0	37.5	2.80	36
18	7.0	40	4.2	37.5
19	7.2	40	4.2	40
20	5.0	65	2.4	60
21	5.6	57.5	3.40	25
22	5.5	27.5	2.60	27.5
23	8.0	27.5	5.2	27.5
24	8.1	30	5.8	27.5
25	5.8	45	4.1	35
26	8.4	42.5	5.6	42.5
27	8.6	42.5	5.0	42.5
28	8.0	57.5	5.4	57.5
29	8.9	57.5	6.8	57.5
30	7.2	57.5	5.4	57.5

Table 25. POWER GAIN VS FREQUENCY FOR THE ESI 32A2A BROADBAND DD ANTENNA (BROADSIDE)

Freq.	Power gain (Perfect gnd) dBi	Elevation angle	Power gain (Fair gnd) dBi	Elevation angle
2	-12.2	90	-15.0	90
3	-5.6	90	-7.5	90
4	-2.0	90	-4.5	90
5	-1.0	90	-2.8	90
6	-0.50	0	-2.8	90
7	-0.60	0	-3.0	90
8	-1.3	0	-3.0	90
9	-2.1	90	-3.2	90
10	-2.6	90	-4	90
11	-2.6	90	-4.6	90
12	-2.80	90	-4.6	90
13	-3.0	90	-4.1	90
14	0.70	90	-0.65	90
15	4.0	90	1.90	90
16	4.0	90	2.0	90
17	2.50	0	-0.30	90
18	3.2	0	-2.4	90
19	2.4	0	-3.0	90
20	1.5	60	-1.4	60
21	2.2	62.5	-0.15	62.5
22	0.60	65	-1.0	65
23	1.2	67.5	-0.65	67.5
24	2.8	62.5	0.30	67.5
25	2.2	40	-1.2	67.5
26	4.4	42.5	0	42.5
27	3.0	42.5	-0.35	42.5
28	0.95	47.5	-1.2	46
29	3.2	47.5	0	47.5
30	3.1	47.5	-0.50	47.5

IV. CONCLUSIONS AND RECOMMENDATIONS

A. CONCLUSIONS

This thesis has presented a numerical analysis of the double delta antennas presently used by the US Army, the US Air Force and a commercial model (ESI 32A2A) to obtain performance parameters such as input impedance, VSWR, and radiation patterns.

The results indicate a normalized impedance equal to the terminating load resistance for the antennas provide broadband impedance characteristics within the 2 - 30 MHz frequency range. The VSWR varies excessively for all frequencies for the Army DD antenna, but an acceptable value of VSWR exists for the Air Force and the ESI 32A2A DD antennas by using a normalized impedance equal to 300 or 600 ohms. At 2 MHz, the gain is less than -10 dBi for the Air Force and the ESI DD antennas, but for the Army DD antenna it is greater than -10 dBi. The Army DD antenna provides radiation patterns with the direction of maximum radiation vertical at frequencies below 24 MHz. However, the radiation actually begins to split into smaller lobes at 20 MHz. Above 24 MHz, the direction of maximum radiation shifts to an elevation angle less than 90 degrees. The Air Force DD antenna has radiation patterns with the maximum radiation occurring at 90 degrees elevation for all frequencies. The radiation begins to split into several small lobes at 25 MHz. From 2 to 19 MHz, the ESI 32A2A DD antenna shows radiation patterns with the direction of maximum intensity of radiation occurring at 90 degrees elevation angle, even though the beam begins to split into a several small lobes at 9 MHz. Above 19 MHz, the maximum shifts to an elevation angle less than 90 degrees.

B. RECOMMENDATIONS

This thesis has presented an extensive study of double delta antennas to determine antenna performance parameters such as input impedance, VSWR and antenna gain radiation patterns.

If computer resources become available and if antenna siting conditions warrant it, other ground characteristics can be investigated. Multi-wire elements show broadband performance (they approximate low Q "fat" conductors) and might provide improved performance in VSWR. If omni-directional azimuthal characteristics are desired, the DD model with 60 degree angles between loops could be reconfigured at 90 degrees.

APPENDIX A. THE NUMERICAL ELECTROMAGNETICS CODE (NEC)

A. INTRODUCTION

The Numerical Electromagnetics Code (NEC) is a user-oriented computer code for analysis of the electromagnetic response of antennas and other metal structures. It is built around the numerical solution of integral equations for the current induced on the structure by sources or incident fields. This approach avoids many of the simplifying assumptions required by other solution methods and provides a highly accurate and versatile tool for electromagnetic analysis.

The code combines an integral equation for smooth surfaces with one specialized to wires to provide for convenient and accurate modeling of a wide range of structures. A model may include nonradiating networks and transmission lines connecting parts of the structure, perfect or imperfect conductors, and lumped element loading. A structure may also be modeled over a ground plane that may be either a perfect or imperfect conductor.

The excitation may be either voltage sources on the structure or an incident plane wave of linear or elliptic polarization. The output may include induced currents and charges, near electric or magnetic fields, and radiated fields. Hence the program is suited to either antenna analysis or scattering and EMP studies.

The integral equation approach is best suited to structures with dimensions up to several wavelengths. Although there is no theoretical size limit, the numerical solution requires a matrix equation of increasing order as the structure size is increased relative to a wavelength. Hence, modeling very large structures may require more computer time and file storage than is practical on a particular machine. In such cases standard high-frequency approximations such as geometrical optics, physical optics, or geometrical theory of diffraction may be more suitable than the integral equation approach used in NEC [Ref. 3].

B. STRUCTURE MODELING

The basic devices for modeling structures with the NEC code are short, straight segments for modeling wires and flat patches for modeling surfaces. An antenna and any conducting objects in its vicinity that affect its performance must be modeled with strings of segments following the paths of wires and with patches covering surfaces.

Proper choice of the segments and patches for a model is the most critical step in obtaining accurate results.

1. Wire Modeling

A wire segment is defined by the coordinates of its two end points and its radius. Modeling a wire structure with segments involves both geometrical and electrical factors. Geometrically, the segments should follow the paths of conductors as closely as possible, using a piece-wise linear fit on curves. The following are the electrical considerations for wire segment modeling :

1. The segment length Δ relative to the wavelength λ :
 - Δ should be less than about 0.1λ in order to get accurate results in most cases.
 - Somewhat longer segments may be acceptable on long wires with no abrupt changes while shorter segments, 0.05λ or less may be needed in modeling critical regions of antenna.
 - Δ less than 0.001λ should be avoided since similarity of the constant and cosine components of the current expansion can lead to numerical inaccuracy.
2. The wire radius, a , relative to λ is limited by the approximations used in the kernel of the electric field integrational equation. There are two approximation options, the thin-wire kernel and an extended thin-wire kernel. In the thin-wire kernel, currents on the surface are represented by a filament current on the segment axis. In the extended thin-wire kernel, a current uniformly distributed around the segment surface is assumed. The field of this current is approximated by the first two terms in a series expansion of the exact field in powers of a^2 . Higher order approximations are not used. The first term in the series, which is independent of a , is identical to the thin-wire kernel while the second term extends the accuracy for larger values of a . Only currents in the axial direction on a segment are considered. The acceptability of these approximations depends on both the value of a/λ and the tendency of the excitation to produce circumferential current or current variation. Unless $2\pi a/\lambda$ is much less than 1, the validity of these approximations should be considered.
3. Connected segments must have identical coordinates for the connected ends. NEC assumes two end segments are connected if the separation between the end segment is less than 0.001 times the length of the shortest segment.
4. Segment intersection other than at ends does not allow current to flow from one segment to another.
5. Large radius changes in the wire should be avoided particularly if it consists of short segments. If the segment has large radius, then sharp bends should be avoided as well.
6. When modeling a solid structure with wire grid, a large number of segments should be used.
7. A segment is needed at the point where a network connection, a voltage, or a current source is located.
8. Base-fed wires connected to ground should be vertical.

9. The segments on either side of the citation source should be parallel and have the same length and radii.
10. Parallel wires should be several radii apart.
11. Before modeling a structure on the NPS main-frame, the limit of the number of segments and the number of connection points should be checked in the log of dimension changes by inspecting the code for the particular version of NEC from the Fortran library.

2. Modeling Structures Over Ground

Several options are available in NEC for modeling an antenna over a ground plane. For a perfectly conducting ground, the code generates an image of the structure reflected in the ground surface. The image is exactly equivalent to a perfectly conducting ground and results in solution accuracy comparable to that for a free space model. Structures may be close to the ground or contacting it in this case.

A finitely conducting ground may be modeled by an image modified by using the Sommerfeld method (available for wires only). The interpolation table must be generated by running a separate program SOMNTX using an input file of type SDATA containing ground parameters and frequency prior to the NEC run.

Both perfectly conducting and finitely conducting ground have the same height restriction for horizontal wires above the ground. For the horizontal wire with radius a , and height h , $(h^2 + a^2)^{1/2}$ should be greater than about 10^{-6} wavelengths. Furthermore, the height should be at least several times the radius for the thin-wire approximation to be valid.

APPENDIX B. INPUT DATA SETS USED FOR THE COMPUTER MODELS

1. The following data set was used to obtain antenna gain power patterns for the ARMY (lowband) DD antennas over perfect ground at 2 MHz. The antenna gain is calculated for each frequency from 2 to 8 MHz. The antenna gain radiation pattern over the real ground (fair ground) conditions was computed using the Sommerfeld method. The GN card for fair ground conditions is :

GN2, 0, 0, 0, 12, 0.005

CM	THE ARMY SIGNAL CORPS LO FREQ DOUBLE DELTA
CM	
CM	FROM TM 11-486-6
CM	
CE	
GW1, 45, 0, 0, 0, 150, 0, 0, .3	LONG HORIZ. WIRE
GW2, 50, 0, 0, 65, 150, 0, 0, .3	LONG SLANT WIRE
GW3, 20, 0, 0, 0, 0, 65, 0, .3	SHORT HORIZ. WIRE
GW4, 30, 0, 0, 65, 0, 65, 0, .3	SHORT SLANT WIRE
GM0, 0, 0, 0, 0, .7, .7, 3, 001.005	
GR0, 2	ROTATE FOR 2 OTHER LEGS/SYMMETERY
GS1	SCALING
GE1	SYMMETRY FLAG/GND PLANE
GN1	PERFECT GROUND
FR0, 0, 0, 0, 2	FREQUENCY 2 MHZ
WG	WRITE GREEN FUNCTION
NX	NEXT STRUCTURE
CE	
GF	GREEN FUNCTION OPTION
GW66, 1, .7, .7, 3, -.7, -.7, 3, .3	LOAD WIRE
GW77, 1, .7, .7, 68, -.7, -.7, 68, .3	FEED WIRE
GS1	SCALING
GE1	SYMETRIC FLAG/GND PLANE
LD0, 77, 1, 1, 600	LOAD 600 OHM
EX0, 66, 1, 0, 1	EXCITATION
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 0, 1, 0	PHI AT 0 VARY OF THETA
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 90, 1, 0	PHI AT 90 VARY OF THETA
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 70, 0, 0, 1	THETA AT 70 VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 50, 0, 0, 1	THETA AT 50 VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 30, 0, 0, 1	THETA AT 30 VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 10, 0, 0, 1	THETA AT 10 VARY OF PHI

XQ
EN

2. The following data set was used to obtain antenna gain power patterns for the ARMY (highband) DD Antenna over perfect ground at 8 MHZ. The antenna gain is calculated for each frequency from 8 to 30 MHZ. Computation over fair ground conditions uses the GN card as described on the first data set.

```
CM      THE ARMY SIGNAL CORPS HI DOUBLE DELTA
CM      FROM TM 11-486-6
CE
GW1, 20, 0, 0, 0, 65, 0, 0, .3      HORIZONTAL WIRE
GW2, 30, 0, 0, 0, 65, 65, 0, 0, .3  SLANT WIRE
GM0, 0, 0, 0, 0, 0, 0, 3, 001.00    RAISE IT UP 3 FEET OFF THE GROUND
GR0, 4                                ROTATE FOR 3 OTHER LEGS/SYMMETERY
GS1                                    SCALING
GE1                                    SYMMETRY FLAG/GND PLANE
GN1                                    PERFECT GROUND
FR0, 0, 0, 0, 8                      FREQUENCY
EX0, 1, 1, 0, 1                      EXCITATION
EX0, 1, 21, 0, 1                     EXCITATION
EX0, 1, 41, 0, -1                    EXCITATION
EX0, 1, 61, 0, -1                    EXCITATION
LD0, 2, 1, 1, 600                    LOAD A SYMMETRIC SECTION 600 OHM
PL3, 1, 0, 4                          VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 0, 1, 0       PHI AT 0 VARY OF THETA
PL3, 1, 0, 4                          VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 90, 1, 0      PHI AT 90 VARY OF THETA
PL3, 1, 0, 4                          VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 70, 0, 0, 1        THETA AT 70 VARY OF PHI
PL3, 1, 0, 4                          VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 50, 0, 0, 1        THETA AT 50 VARY OF PHI
PL3, 1, 0, 4                          VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 30, 0, 0, 1        THETA AT 30 VARY OF PHI
PL3, 1, 0, 4                          VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 10, 0, 0, 1        THETA AT 10 VARY OF PHI
XQ
EN
```

3. The following data set was used to obtain antenna gain power patterns for the USAF (lowband) DD Antenna over perfect ground at 2 MHZ. The antenna gain is computed for each frequency from 2 to 8 MHZ. Computation over fair ground conditions uses the GN card as described on the first data set.

```
CM      THE AIR FORCE LO FREQ DOUBLE DELTA ANTENNA
CM      FROM AFCS MEMO OF 08 APRIL 79
CE
GW1, 30, 0, 0, 0, 100, 0, 0, .01     HORIZ. WIRE
GW2, 35, 0, 0, 33, 100, 0, 0, .01    SLANT WIRE
GM0, 0, 0, 0, 0, 0, 0, 5, 001.003    RAISE IT UP 5 FEET OFF THE GROUND
GM0, 0, 0, 0, 30, 0, 0, 0, 001.003   ROTATE FM XZ-PLANE TO POSITION
GX0, 110                              REFLECT IN X & Y FOR REST OF IT
```

GS1	SCALING
GE1	SYMMETRY FLAG/GND PLANE
GN1	PERFECT GROUND
FR0, 0, 0, 0, 2	FREQUENCY
EX0, 1, 1, 0, 1	EXCITATION
EX0, 1, 31, 0, -1	EXCITATION
EX0, 1, 61, 0, 1	EXCITATION
EX0, 1, 91, 0, -1	EXCITATION
LDO, 2, 1, 1, 600	LOAD A SYMM. SECTION 600 OHM
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 0, 1, 0	PHI AT 0 AND VARY OF THETA
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 90, 1, 0	PHI AT 90 AND VARY OF THETA
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 70, 0, 0, 1	THETA AT 70 AND VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 50, 0, 0, 1	THETA AT 50 AND VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 30, 0, 0, 1	THETA AT 30 AND VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 10, 0, 0, 1	THETA AT 10 AND VARY OF PHI
XQ	
EN	

4. The following data set was used to obtain antenna gain power patterns for the USAF (highband) DD Antenna over perfect ground at 8 MHz. The antenna gain is computed for each frequency from 8 to 30 MHz. Computation over fair ground conditions uses the GN card as described on the first data set.

CM	THE AIR FORCE HI FREQ DOUBLE DELTA ANTENNA
CM	FROM AFCS MEMO OF 08 APRIL 79
CE	
GW1, 15, 0, 0, 0, 50, 0, 0, .01	HORIZ. WIRE
GW2, 18, 0, 0, 33, 50, 0, 0, .01	SLANT WIRE
GM0, 0, 0, 0, 0, 0, 0, 5, 001.003	RAISE IT UP 5 FEET OFF THE GROUND
GM0, 0, 0, 0, 30, 0, 0, 0, 001.003	ROTATE FM XZ-PLANE TO POSITION
GX0, 110	REFLECT IN X & Y FOR REST OF IT
GS1	SCALING
GE1	SYMMETRY FLAG/GND PLANE
GN1	PERFECT GROUND
FR0, 0, 0, 0, 8	FREQUENCY
EX0, 1, 1, 0, 1	EXCITATION
EX0, 1, 16, 0, -1	EXCITATION
EX0, 1, 31, 0, 1	EXCITATION
EX0, 1, 46, 0, -1	EXCITATION
LDO, 2, 1, 1, 600	LOAD A SYMM. SECTION 600 OHM
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 0, 1, 0	PHI AT 0 AND VARY OF THETA
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 90, 1, 0	PHI AT 90 AND VARY OF THETA
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 70, 0, 0, 1	THETA AT 0 AND VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 50, 0, 0, 1	THETA AT 50 AND VARY OF PHI

PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 30, 0, 0, 1	THETA AT 30 AND VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 10, 0, 0, 1	THETA AT 10 AND VARY OF PHI
XQ	
EN	

5. The following data set was used to obtain antenna gain power patterns for the ESI 32A2A DD Antenna over perfect ground at 2 MHz. The antenna gain is computed for each frequency from 2 to 30 MHz. Computation over fair ground conditions uses the GN card as described on the first data set.

THE ESI 32A2A DOUBLE DELTA ANTENNA	
8 - 32 MUZZ MODEL	
CM	
CM	
CE	
GW1, 25, 0, 0, 9.71, 74.695, 0, 1.65, .01	LOWER HORIZONTAL WIRE
GW2, 3, 74.695, 0, 1.65, 79.346, 0, 9, .01	OUTER VERTICAL SHUNT WIRE
GW3, 35, 0, 0, 76.54, 79.346, 0, 9, .01	SLANT WIRE
GM0, 0, 0, 0, 30, 0, 0, 0, 001.004	ROTATE FM XZ-PLANE TO POSITION
GM0, 1, 0, 0, -60, 0, 0, 0, 001.004	CREATE SECOND LEG OF FRONT HALF
GR10, 2	CREATE THE BACK HALF
GS1	SCALING
GE1	SET SYMM/GND FLAG
GN1	PERFECT GROUND
FR0, 0, 0, 0, 2	FREQUENCY
EX0, 1, 1, 0, 1	EXCITATION
EX0, 1, 26, 0, -1	EXCITATION
EX0, 11, 1, 0, -1	EXCITATION
EX0, 11, 26, 0, 1	EXCITATION
LDO, 3, 1, 1, 600	LOAD THE TOP SEGMENTS 600 OHM
LDO, 3, 36, 36, 600	
LDO, 13, 1, 1, 600	
LDO, 13, 36, 36, 600	
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 0, 1, 0	PHI AT 0 AND VARY OF THETA
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 91, 1, 1500, -90, 90, 1, 0	PHI AT 90 AND VARY OF THETA
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 70, 0, 0, 1	THETA AT 70 AND VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 50, 0, 0, 1	THETA AT 50 AND VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 30, 0, 0, 1	THETA AT 30 AND VARY OF PHI
PL3, 1, 0, 4	VERT, HORZ AND TOTAL GAIN
RP0, 1, 91, 1500, 10, 0, 0, 1	THETA AT 10 AND VARY OF PHI
XQ	
EN	

6. The following data set was used to calculate impedance and VSWR for the ARMY (highband) DD antenna from 8 - 30 MHz over perfect ground using a normalized impedance of 50 ohms. To calculate input impedance using 300 and 600 ohms, change the value of normalized impedance in the EX card accordingly.

CM	THE ARMY SIGNAL CORPS HI FREQ DOUBLE DELTA
CM	FROM TM 11-486-6
CE	
GW1, 20, 0, 0, 0, 65, 0, 0, .3	HORIZONTAL WIRE
GW2, 30, 0, 0, 0, 65, 65, 0, 0, .3	SLANT WIRE
GM0, 0, 0, 0, 0, 0, 0, 3, 001.003	RAISE IT UP 3 FEET OFF THE GROUND
GR0, 4	ROTATE FOR 3 OTHER LEGS/SYMMETERY
GS1	SCALING
GE1	SYMMETRY FLAG/GND PLANE
GN1	PERFECT GROUND
FR0, 23, 0, 0, 8, 1	FREQUENCY 8 TO 30 MHZ
LD0, 2, 1, 1, 600	LOAD A SYMMETRIC SECTION 600 OHM
EX0, 1, 1, 01, 1, 0, 50	EXCITATIONS,
EX0, 1, 21, 01, 1, 0, 50	NORMALIZED IMPEDANCE 50 OHM
EX0, 1, 41, 01, -1, 0, 50	
EX0, 1, 61, 01, -1, 0, 50	
PL4	IMPEDANCE, VSWR
XQ	
EN	

7. The following data set was used to calculate impedance and VSWR for the USAF (lowband) DD antenna from 2 - 8 MHz over perfect ground using a normalized impedance of 50 ohms.

CM	THE AIR FORCE LO FREQ DOUBLE DELTA
CM	FROM AFCS MEMO OF 08 APR 79
CE	
GW1, 30, 0, 0, 0, 100, 0, 0, .01	HORIZ. WIRE
GW2, 35, 0, 0, 33, 100, 0, 0, .01	SLANT WIRE
GM0, 0, 0, 0, 0, 0, 0, 5, 001.003	RAISE IT UP 5 FEET OFF THE GROUND
GM0, 0, 0, 0, 30, 0, 0, 0, 001.003	ROTATE FM XZ-PLANE TO POSITION
GX0, 110	REFLECT IN X & Y FOR REST OF IT
GS1	SCALING
GE1	SYMMETRY FLAG/GND PLANE
GN1	PERFECT GROUND
FR0, 7, 0, 0, 2, 1	FREQUENCY 2 TO 8 MHZ
LD0, 2, 1, 1, 600	LOAD A SYMM. SECTION 600 OHM
EX0, 1, 1, 01, 1, 0, 50	EXCITATIONS,
EX0, 1, 31, 01, -1, 0, 50	NORMALIZED IMPEDANCE 50 OHM
EX0, 1, 61, 01, 1, 0, 50	
EX0, 1, 91, 01, -1, 0, 50	
PL4	IMPEDANCE, VSWR
XQ	
EN	

8. The following data set was used to calculate impedance and VSWR for the USAF (highband) DD antenna from 8 - 30 MHz over perfect ground using a normalized impedance of 50 ohms.

CM	THE AIR FORCE HI FREQ DOUBLE DELTA
CM	FROM AFCS MEMO OF 08 APR 79
CE	
GW1, 15, 0, 0, 0, 50, 0, 0, .01	HORIZ. WIRE

GW2, 18, 0, 0, 33, 50, 0, 0, .01	SLANT WIRE
GM0, 0, 0, 0, 0, 0, 0, 5, 001.003	RAISE IT UP 5 FEET OFF THE GROUND
GM0, 0, 0, 0, 30, 0, 0, 0, 001.003	ROTATE FM XZ-PLANE TO POSITION
GX0, 110	REFLECT IN X & Y FOR REST OF IT
GS1	SCALING
GE1	SYMMETRY FLAG/GND PLANE
GN1	PERFECT GROUND
FR0, 23, 0, 0, 8, 1	FREQUENCY 8 TO 30 MHZ
LD0, 2, 1, 1, 600	LOAD A SYMM. SECTION 600 OHM
EX0, 1, 1, 01, 1, 0, 50	EXCITATIONS,
EX0, 1, 16, 01, -1, 0, 50	NORMALIZED IMPEDANCE 50 OHM
EX0, 1, 31, 01, 1, 0, 50	
EX0, 1, 46, 01, -1, 0, 50	
PL4	IMPEDANCE, VSWR
XQ	
EN	

9. The following data set was used to calculate impedance and VSWR for the ESI 32A2A DD antenna from 2 - 30 MHz over perfect ground using a normalized impedance of 50 ohms.

CM	THE ESI 32A2A DOUBLE DELTA ANTENNA
CM	8 - 32 MUZZ MODEL
CE	
GW1, 25, 0, 0, 9.71, 74.695, 0, 1.65, .01	LOWER HORIZONTAL WIRE
GW2, 3, 74.695, 0, 1.65, 79.346, 0, 9, .01	OUTER VERTICAL SHUNT WIRE
GW3, 35, 0, 0, 76.54, 79.346, 0, 9, .01	SLANT WIRE
GM0, 0, 0, 0, 30, 0, 0, 0, 001.004	ROTATE FM XZ-PLANE TO POSITION
GM0, 1, 0, 0, -60, 0, 0, 0, 001.004	CREATE SECOND LEG OF FRONT HALF
GR10, 2	CREATE THE BACK HALF
GS1	SCALING
GE1	SET SYMM/GND FLAG
GN1	PERFECT GROUND
FR0, 29, 0, 0, 2, 1	FREQUENCY 2 TO 30 MHZ
EX0, 1, 1, 01, 1, 0, 50	EXCITATIONS,
EX0, 1, 26, 01, -1, 0, 50	NORMALIZED IMPEDANCE 50 OHM
EX0, 11, 1, 01, -1, 0, 50	
EX0, 11, 26, 01, 1, 0, 50	
LD0, 3, 1, 1, 600	LOAD THE TOP SEGMENTS 600 OHM
LD0, 3, 36, 36, 600	
LD0, 13, 1, 1, 600	
LD0, 13, 36, 36, 600	
PL4	IMPEDANCE, VSWR
XQ	
EN	

LIST OF REFERENCES

1. Balanis, C. A., *Antenna Theory Analysis and Design*, pp. 53 - 57, Harper and Row, Publishers, Inc. 1982.
2. Stutzman, W. L. and Thiele, G. A., *Antenna Theory and Design*, pp. 212 - 220, John Wiley and Sons, New York, 1981.
3. Burke, G. J. and Poggio, A. J., Naval Ocean Systems Center Technical Document 116, *Numerical Electromagnetics Code (NEC) Method of Moments*, January 1981.
4. *The Army Signal Corps Double Delta Antenna*, TM 11-486-6.
5. *The Air Force Double Delta Antenna*, memo of April 8, 1979.
6. *The ESI 32A2A Broadband HF Antenna manual*, Electrospace Systems Inc., Richardson, 1984.

INITIAL DISTRIBUTION LIST VOLUME I

	No. Copies
1. Defense Technical Information Center Cameron Station Alexandria, VA 22304-6145	2
2. Library, Code 0142 Naval Postgraduate School Monterey, CA 93943-5002	2
3. Chairman, Code 62 Department of Electrical and Computer Engineering Naval Postgraduate School Monterey, CA 93943-5000	1
4. Dr. Richard W. Adler, Code 62Ab Department of Electrical and Computer Engineering Naval Postgraduate School Monterey, CA 93943-5000	10
5. Dr. James K. Breakall, Code 62Bk Department of Electrical and Computer Engineering Naval Postgraduate School Monterey, CA 93943-5000	10
6. Lee W. Corrington Commander USAISEC, ASB-SET-P Ft. Huachuca, AZ 85613-7300	1
7. Pete Cunningham US Army Cecom Attn : AMSEL-RD-COM-TA-1 Ft. Monmouth, NJ 07703	1
8. G. H. Hagn SRI International 1611 N. Kent Street Arlington, VA 22209	1
9. Janet McDonald Commander USAISEC, ASB-SET-P FT. Huachuca, AZ 85613-5300	1
10. Ric Thowless NOSC Code 822 (T) 271 Catalina Blvd.	1

San Diego, CA 92152

11. Ed Shea 1
8818 Burbank Road
Annandale, VA 22003
12. Bob Rigel 1
8806 Crendall Road
Lanham, MD 20801
13. Chief of the Defense Attache 1
Embassy of the Republic of Indonesia
2020 Massachusetts avenue N.W.
Washington D.C. 20036
14. Director of Research Administration, Code 012 1
Naval Postgraduate School
Monterey, CA 93943
15. Center for Naval Analyses 1
4401 Ford Avenue
Alexandria, VA 22302-0268
16. Director of Education of the Indonesia Air Force 1
Jl Gatot Subroto no 76
Jakarta-Selatan
Indonesia
17. Director of Elec.& Comm. of the Indonesia Air Force 1
Jl Gatot Sobroto no 76
Jakarta-Selatan
Indonesia
18. Commandant of TPI Air Force Base 1
Jln Nusantara Km12
Tanjungpinang - Kep.Riau
Indonesia
19. Achmad Chafid 2
Major Indonesia Air Force
TPI Air Force Base
Tanjungpinang - Kep.Riau
Indonesia

INITIAL DISTRIBUTION LIST VOLUME II

		No. Copies
1.	Defense Technical Information Center Cameron Station Alexandria, VA 22304-6145	2
2.	Library, Code 0142 Naval Postgraduate School Monterey, CA 93943-5002	2
3.	Dr. Richard W. Adler, Code 62Ab Departement of Electrical and Computer Engineering Naval Postgraduate School Monterey, CA 93943-5000	3
4.	Dr. James K. Breakall, Code 62Bk Departement of Electrical and Computer Engineering Naval Postgraduate School Monterey, CA 93943-5000	2
5.	Lee W. Corrington Commander USAISEC, ASB-SET-P Ft. Huachuca, AZ 85613-7300	1
6.	Pete Cunningham US Army Cecom Attn : AMSEL-RD-COM-TA-1 Ft. Monmouth, NJ 07703	1
7.	G. H. Hagn SRI International 1611 N. Kent Street Arlington, VA 22209	1
8.	Janet McDonald Commander USAISEC, ASB-SET-P FT. Huachuca, AZ 85613-5300	1
9.	Ed Shea 8818 Burbank Road Annandale, VA 22003	1
10.	Bob Rigel 8806 Crendall Road Lanham, MD 20801	1

11. Chief of the Defense Attache
Embassy of the Republic of Indonesia
2020 Massachusetts avenue N.W.
Washington D.C. 20036
12. Director of Research Administration, Code 012
Naval Postgraduate School
Monterey, CA 93943
13. Center for Naval Analyses
4401 Ford Avenue
Alexandria, VA 22302-0268
14. Director of Education of the Indonesia Air Force
Jl Gatot Subroto no 76
Jakarta-Selatan
Indonesia
15. Director of Elec.& Comm. of the Indonesia Air Force
Jl Gatot Sobroto no 76
Jakarta-Selatan
Indonesia
16. Commandant of TPI Air Force Base
Jln Nusantara Km12
Tanjungpinang - Kep.Riau
Indonesia
17. Achmad Chafid
Major Indonesia Air Force
TPI Air Force Base
Tanjungpinang - Kep.Riau
Indonesia

Thesis
C338645 Chafid
v.1 Numerical analysis of
c.1 Double Delta antennas.

Thesis
C338645 Chafid
v.1 Numerical analysis of
c.1 Double Delta antennas.




Numerical analysis of Double Delta anten



3 2768 000 88747 5

DUDLEY KNOX LIBRARY

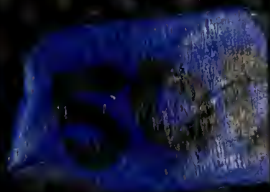



DUDLEY R. LIBRARY
NAVAL POSTGRADUATE SCHOOL
MONTEREY, CALIFORNIA 93943-6002

NAVAL POSTGRADUATE SCHOOL

Monterey, California



C 338645
V. 2

THESIS

NUMERICAL ANALYSIS OF
DOUBLE DELTA ANTENNAS
VOLUME II

by

Achmad Chafid

December 1988

Thesis Advisor
Co-Advisor

Richard W. Adler
James K. Breakall

Approved for public release; distribution is unlimited.

Prepared for :
US Army Information Systems Engineering and Integration Center
Ft. Huachuca, AZ 85613

T241847

NAVAL POSTGRADUATE SCHOOL
MONTEREY, CALIFORNIA 93943

Rear Admiral R. C. Austin
Superintendent

This thesis prepared in conjunction with research sponsored in part by US Army
Information Systems Engineering and Integration Center.

Reproduction of all or part of this report is authorized.

Released By:

GORDON E. SCHACHER
Dean of Science and Engineering

Unclassified

security classification of this page

REPORT DOCUMENTATION PAGE

1a Report Security Classification Unclassified		1b Restrictive Markings	
2a Security Classification Authority		3 Distribution Availability of Report	
2b Declassification Downgrading Schedule		Approved for public release; distribution is unlimited.	
4 Performing Organization Report Number(s)		5 Monitoring Organization Report Number(s)	
6a Name of Performing Organization Naval Postgraduate School	6b Office Symbol (if applicable) 62	7a Name of Monitoring Organization Naval Postgraduate School	
6c Address (city, state, and ZIP code) Monterey, CA 93943-5000		7b Address (city, state, and ZIP code) Monterey, CA 93943-5000	
8a Name of Funding Sponsoring Organization USAISEC	8b Office Symbol (if applicable)	9 Procurement Instrument Identification Number	
8c Address (city, state, and ZIP code) Coammader, USAISEC, ASB-SET-P, Ft. Huachuca, AZ 85613		10 Source of Funding Numbers: N62271-8-R-WR-8-006-0	
		Program Element No	Project No
		Task No	Work Unit Accession No
11 Title (include security classification) NUMERICAL ANALYSIS OF DOUBLE DELTA ANTENNAS VOLUME II			
12 Personal Author(s) Achmad Chafid			
13a Type of Report Master's Thesis	13b Time Covered From To	14 Date of Report (year, month, day) December 1988	15 Page Count 339
16 Supplementary Notation The views expressed in this thesis are those of the author and do not reflect the official policy or position of the Department of Defense or the U.S. Government.			
17 Cosati Codes		18 Subject Terms (continue on reverse if necessary and identify by block number)	
Field	Group	Subgroup	
		Computer Simulation. Numerical Electromagnetics Code (NEC). Delta Antenna, Duoble Delta Antenna	
19 Abstract (continue on reverse if necessary and identify by block number)			
<p>The Double Delta antenna is an IIF communication antenna which exists in many forms throughout military communication commands. Performance characteristics for existing designs are presently unknown and are required in order to recommend an optimum design.</p> <p>This thesis investigates Double Delta antennas used by the US Army (lowband and highband), the US Air Force (lowband and highband), and a commercial model. Selected models are analyzed by a computer simulation method using the Numerical Electromagnetics Code (NEC). The antenna designs are investigated to determine optimum performance characteristics over the 2 - 30 MHz range of frequencies. The parameters calculated were input impedance, VSWR, and antenna gain radiation patterns. For the performance of the antennas when sited near lossy ground, the Sommerfeld method was employed. Finally the results of the evaluation are presented and recommendations are made.</p>			
20 Distribution Availability of Abstract <input checked="" type="checkbox"/> unclassified unlimited <input type="checkbox"/> same as report <input type="checkbox"/> DTIC users		21 Abstract Security Classification Unclassified	
22a Name of Responsible Individual Richard W. Adler		22b Telephone (include Area code) (408) 646-2352	22c Office Symbol 62Ab

DD FORM 1473, 84 MAR

83 APR edition may be used until exhausted
All other editions are obsolete

security classification of this page

Unclassified

Approved for public release; distribution is unlimited.

Numerical Analysis of
Double Delta Antennas
Volume II

by

Achmad Chafid
Major, Indonesia Air Force
B.S., Indonesia Air Force Academy, 1974 Yogyakarta

Submitted in partial fulfillment of the
requirements for the degree of

MASTER OF SCIENCE IN ENGINEERING SCIENCE

from the

NAVAL POSTGRADUATE SCHOOL
December 1988

Gordon E. Schacher,
Dean of Science and Engineering

NUMERICAL ANALYSIS OF DOUBLE DELTA ANTENNAS

VOLUME II

This volume contains Appendix C, the plots of input impedance, VSWR, and maximum gain versus frequency and plots of radiation patterns for each frequency for the Army, the Air Force, and the ESI 32A2A Double Delta antennas. Descriptions of the Army, the Air Force, the ESI 32A2A Double Delta antenna, and method and results of the investigation were described in Volume I.

1112515
C338645
V.2
C.1

TABLE OF CONTENTS

APPENDIX C: PLOTS OF INPUT IMPEDANCE, VSWR, AND MAXIMUM GAIN VERSUS FREQUENCY AND PLOTS OF RADIATION PATTERNS FOR EACH FREQUENCY	1
INITIAL DISTRIBUTION LIST VOLUME II	313

LIST OF FIGURES

Figure 6.	VSWR vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 50 ohms)	1
Figure 7.	VSWR vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 300 ohms)	2
Figure 8.	VSWR vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 600 ohms)	3
Figure 9.	Comparison VSWR vs frequency for the Army Lowband DD antenna over perfect ground	4
Figure 10.	Impedance vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 50 ohms)	5
Figure 11.	Impedance vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 300 ohms)	6
Figure 12.	Impedance vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 600 ohms)	7
Figure 13.	Max. gain vs frequency for the Army Lowband DD antenna over perfect ground and fair ground (boresight)	8
Figure 14.	Max. gain vs frequency for the Army Lowband DD antenna over perfect and fair ground (broadside)	9
Figure 15.	VSWR vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 50 ohms)	10
Figure 16.	VSWR vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 300 ohms)	11
Figure 17.	VSWR vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 600 ohms)	12
Figure 18.	Comparison VSWR vs frequency for the Army Highband DD antenna over perfect ground	13
Figure 19.	Impedance vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 50 ohms)	14
Figure 20.	Impedance vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 300 ohms)	15
Figure 21.	Impedance vs freq. for the Army Highband DD antenna over perfect	

	ground (normalized impedance = 600 ohms)	16
Figure 22.	Max. gain vs freq. for the Army Highband DD antenna over perfect ground and fair ground (boresight)	17
Figure 23.	Max. gain vs frequency for the Army Highband DD antenna over perfect ground and fair ground (broadside)	18
Figure 24.	VSWR vs freq. for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 50 ohms)	19
Figure 25.	VSWR vs freq. for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 300 ohms)	20
Figure 26.	VSWR vs freq. for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 600 ohms)	21
Figure 27.	Comparison VSWR vs freq. for the Air Force Lowband DD antenna over perfect ground	22
Figure 28.	Impedance vs frequency for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 50 ohms)	23
Figure 29.	Impedance vs frequency for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 300 ohms)	24
Figure 30.	Impedance vs frequency for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 600 ohms)	25
Figure 31.	Max. gain vs freq. for the Air Force Lowband DD antenna over perfect ground and fair ground (boresight)	26
Figure 32.	Max. gain vs frequency for the Air Force Lowband DD antenna over perfect ground and fair ground (broadside)	27
Figure 33.	VSWR vs freq. for the Air Force Highband DD antenna over perfect ground (normalized impedance = 50 ohms)	28
Figure 34.	VSWR vs freq. for the Air Force Highband DD antenna over perfect ground (normalized impedance = 300 ohms)	29
Figure 35.	VSWR vs freq. for the Air Force Highband DD antenna over perfect ground (normalized impedance = 600 ohms).	30
Figure 36.	Comparison VSWR vs frequency for the Air Force Highband DD antenna over perfect ground	31
Figure 37.	Impedance vs frequency for the Air Force Highband DD antenna over perfect ground (normalized impedance = 50 ohms)	32
Figure 38.	Impedance vs frequency for the Air Force Highband DD antenna over perfect ground (normalized impedance = 300 ohms)	33

Figure 39. Impedance vs frequency for the Air Force Highband DD antenna over perfect ground (normalized impedance = 600 ohms)	34
Figure 40. Max. gain vs freq. for the Air Force Highband DD antenna over perfect ground and fair ground (boresight)	35
Figure 41. Max. gain vs frequency for the Air Force Highband DD antenna over perfect ground and fair ground (broadside)	36
Figure 42. VSWR vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 50 ohms)	37
Figure 43. VSWR vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 300 ohms)	38
Figure 44. VSWR vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 600 ohms)	39
Figure 45. Comparison VSWR vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground	40
Figure 46. Impedance vs freq. for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 50 ohms)	41
Figure 47. Impedance vs freq. for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 300 ohms)	42
Figure 48. Impedance vs freq. for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 600 ohms)	43
Figure 49. Max. gain vs freq. for the ESI 32A2A Broadband DD antenna over perfect ground and fair ground (boresight)	44
Figure 50. Max. gain vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground and fair ground (broadside)	45
Figure 51. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 2 MHz	46
Figure 52. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 2 MHz	47
Figure 53. Azimuth patterns of the Army Lowband DD antenna over fair ground at 2 MHz	48
Figure 54. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 3 MHz	49
Figure 55. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 3 MHz	50
Figure 56. Azimuth patterns of the Army Lowband DD antenna over fair ground	

at 3 MHz	51
Figure 57. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 4 MHz	52
Figure 58. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 4 MHz	53
Figure 59. Azimuth patterns of the Army Lowband DD antenna over fair ground at 4 MHz	54
Figure 60. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 5 MHz	55
Figure 61. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 5 MHz	56
Figure 62. Azimuth patterns of the Army Lowband DD antenna over fair ground at 5 MHz	57
Figure 63. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 6 MHz	58
Figure 64. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 6 MHz	59
Figure 65. Azimuth patterns of the Army Lowband DD antenna over fair ground at 6 MHz	60
Figure 66. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 7 MHz	61
Figure 67. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 7 MHz	62
Figure 68. Azimuth patterns of the Army Lowband DD antenna over fair ground at 7 MHz	63
Figure 69. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 8 MHz	64
Figure 70. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 8 MHz	65
Figure 71. Azimuth patterns of the Army Lowband DD antenna over fair ground at 8 MHz	66
Figure 72. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 8 MHz	67
Figure 73. Azimuth patterns of the Army Highband DD antenna over perfect ground at 8 MHz	68

Figure 74. Azimuth patterns of the Army Highband DD antenna over fair ground at 8 MHz	69
Figure 75. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 9 MHz	70
Figure 76. Azimuth patterns of the Army Highband DD antenna over perfect ground at 9 MHz	71
Figure 77. Azimuth patterns of the Army Highband DD antenna over fair ground at 9 MHz	72
Figure 78. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 10 MHz	73
Figure 79. Azimuth patterns of the Army Highband DD antenna over perfect ground at 10 MHz	74
Figure 80. Azimuth patterns of the Army Highband DD antenna over fair ground at 10 MHz	75
Figure 81. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 11 MHz	76
Figure 82. Azimuth patterns of the Army Highband DD antenna over perfect ground at 11 MHz	77
Figure 83. Azimuth patterns of the Army Highband DD antenna over fair ground at 11 MHz	78
Figure 84. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 12 MHz	79
Figure 85. Azimuth patterns of the Army Highband DD antenna over perfect ground at 12 MHz	80
Figure 86. Azimuth patterns of the Army Highband DD antenna over fair ground at 12 MHz	81
Figure 87. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 13 MHz	82
Figure 88. Azimuth patterns of the Army Highband DD antenna over perfect ground at 13 MHz	83
Figure 89. Azimuth patterns of the Army Highband DD antenna over fair ground at 13 MHz	84
Figure 90. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 14 MHz	85
Figure 91. Azimuth patterns of the Army Highband DD antenna over perfect	

	ground at 14 MHz	86
Figure 92.	Azimuth patterns of the Army Highband DD antenna over fair ground at 14 MHz	87
Figure 93.	Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 15 MHz	88
Figure 94.	Azimuth patterns of the Army Highband DD antenna over perfect ground at 15 MHz	89
Figure 95.	Azimuth patterns of the Army Highband DD antenna over fair ground at 15 MHz	90
Figure 96.	Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 16 MHz	91
Figure 97.	Azimuth patterns of the Army Highband DD antenna over perfect ground at 16 MHz	92
Figure 98.	Azimuth patterns of the Army Highband DD antenna over fair ground at 16 MHz	93
Figure 99.	Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 17 MHz	94
Figure 100.	Azimuth patterns of the Army Highband DD antenna over perfect ground at 17 MHz	95
Figure 101.	Azimuth patterns of the Army Highband DD antenna over fair ground at 17 MHz	96
Figure 102.	Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 18 MHz	97
Figure 103.	Azimuth patterns of the Army Highband DD antenna over perfect ground at 18 MHz	98
Figure 104.	Azimuth patterns of the Army Highband DD antenna over fair ground at 18 MHz	99
Figure 105.	Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 19 MHz	100
Figure 106.	Azimuth patterns of the Army Highband DD antenna over perfect ground at 19 MHz	101
Figure 107.	Azimuth patterns of the Army Highband DD antenna over fair ground at 19 MHz	102
Figure 108.	Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 20 MHz	103

Figure 109. Azimuth patterns of the Army Highband DD antenna over perfect ground at 20 MHz	104
Figure 110. Azimuth patterns of the Army Highband DD antenna over fair ground at 20 MHz	105
Figure 111. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 21 MHz	106
Figure 112. Azimuth patterns of the Army Highband DD antenna over perfect ground at 21 MHz	107
Figure 113. Azimuth patterns of the Army Highband DD antenna over fair ground at 21 MHz	108
Figure 114. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 22 MHz	109
Figure 115. Azimuth patterns of the Army Highband DD antenna over perfect ground at 22 MHz	110
Figure 116. Azimuth patterns of the Army Highband DD antenna over fair ground at 22 MHz	111
Figure 117. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 23 MHz	112
Figure 118. Azimuth patterns of the Army Highband DD antenna over perfect ground at 23 MHz	113
Figure 119. Azimuth patterns of the Army Highband DD antenna over fair ground at 23 MHz	114
Figure 120. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 24 MHz	115
Figure 121. Azimuth patterns of the Army Highband DD antenna over perfect ground at 24 MHz	116
Figure 122. Azimuth patterns of the Army Highband DD antenna over fair ground at 24 MHz	117
Figure 123. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 25 MHz	118
Figure 124. Azimuth patterns of the Army Highband DD antenna over perfect ground at 25 MHz	119
Figure 125. Azimuth patterns of the Army Highband DD antenna over fair ground at 25 MHz	120
Figure 126. Elevation patterns of the Army Highband DD antenna over perfect	

ground and fair ground at 26 MHz	121
Figure 127. Azimuth patterns of the Army Highband DD antenna over perfect ground at 26 MHz	122
Figure 128. Azimuth patterns of the Army Highband DD antenna over fair ground at 26 MHz	123
Figure 129. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 27 MHz	124
Figure 130. Azimuth patterns of the Army Highband DD antenna over perfect ground at 27 MHz	125
Figure 131. Azimuth patterns of the Army Highband DD antenna over fair ground at 27 MHz	126
Figure 132. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 28 MHz	127
Figure 133. Azimuth patterns of the Army Highband DD antenna over perfect ground at 28 MHz	128
Figure 134. Azimuth patterns of the Army Highband DD antenna over fair ground at 28 MHz	129
Figure 135. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 29 MHz	130
Figure 136. Azimuth patterns of the Army Highband DD antenna over perfect ground at 29 MHz	131
Figure 137. Azimuth patterns of the Army Highband DD antenna over fair ground at 29 MHz	132
Figure 138. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 30 MHz	133
Figure 139. Azimuth patterns of the Army Highband DD antenna over perfect ground at 30 MHz	134
Figure 140. Azimuth patterns of the Army Highband DD antenna over fair ground at 30 MHz	135
Figure 141. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 2 MHz	136
Figure 142. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 2 MHz	137
Figure 143. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 2 MHz	138

Figure 144. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 3 MHz	139
Figure 145. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 3 MHz	140
Figure 146. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 3 MHz	141
Figure 147. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 4 MHz	142
Figure 148. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 4 MHz	143
Figure 149. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 4 MHz	144
Figure 150. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 5 MHz	145
Figure 151. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 5 MHz	146
Figure 152. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 5 MHz	147
Figure 153. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 6 MHz	148
Figure 154. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 6 MHz	149
Figure 155. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 6 MHz	150
Figure 156. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 7 MHz	151
Figure 157. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 7 MHz	152
Figure 158. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 7 MHz	153
Figure 159. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 8 MHz	154
Figure 160. Azimuth patterns of The Air Force Lowband DD antenna over perfect ground at 8 MHz	155
Figure 161. Azimuth patterns of the Air Force Lowband DD antenna over fair	

ground at 8 MHz	156
Figure 162. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 8 MHz	157
Figure 163. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 8 MHz	158
Figure 164. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 8 MHz	159
Figure 165. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 9 MHz	160
Figure 166. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 9 MHz	161
Figure 167. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 9 MHz	162
Figure 168. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 10 MHz	163
Figure 169. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 10 MHz	164
Figure 170. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 10 MHz	165
Figure 171. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 11 MHz	166
Figure 172. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 11 MHz	167
Figure 173. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 11 MHz	168
Figure 174. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 12 MHz	169
Figure 175. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 12 MHz	170
Figure 176. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 12 MHz	171
Figure 177. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 13 MHz	172
Figure 178. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 13 MHz	173

Figure 179. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 13 MHz	174
Figure 180. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 14 MHz	175
Figure 181. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 14 MHz	176
Figure 182. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 14 MHz	177
Figure 183. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 15 MHz	178
Figure 184. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 15 MHz	179
Figure 185. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 15 MHz	180
Figure 186. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 16 MHz	181
Figure 187. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 16 MHz	182
Figure 188. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 16 MHz	183
Figure 189. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 17 MHz	184
Figure 190. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 17 MHz	185
Figure 191. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 17 MHz	186
Figure 192. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 18 MHz	187
Figure 193. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 18 MHz	188
Figure 194. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 18 MHz	189
Figure 195. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 19 MHz	190
Figure 196. Azimuth patterns of the Air Force Highband DD antenna over perfect	

ground at 19 MHz	191
Figure 197. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 19 MHz	192
Figure 198. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 20 MHz	193
Figure 199. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 20 MHz	194
Figure 200. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 20 MHz	195
Figure 201. Elevation patterns of the Air Force highband DD antenna over perfect ground and fair ground at 21 MHz	196
Figure 202. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 21 MHz	197
Figure 203. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 21 MHz	198
Figure 204. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 22 MHz	199
Figure 205. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 22 MHz	200
Figure 206. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 22 MHz	201
Figure 207. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 23 MHz	202
Figure 208. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 23 MHz	203
Figure 209. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 23 MHz	204
Figure 210. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 24 MHz	205
Figure 211. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 24 MHz	206
Figure 212. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 24 MHz	207
Figure 213. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 25 MHz	208

Figure 214. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 25 MHz	209
Figure 215. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 25 MHz	210
Figure 216. Elevation patterns of the Air Force highband DD antenna over perfect ground and fair ground at 26 MHz	211
Figure 217. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 26 MHz	212
Figure 218. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 26 MHz	213
Figure 219. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 27 MHz	214
Figure 220. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 27 MHz	215
Figure 221. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 27 MHz	216
Figure 222. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 28 MHz	217
Figure 223. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 28 MHz	218
Figure 224. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 28 MHz	219
Figure 225. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 29 MHz	220
Figure 226. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 29 MHz	221
Figure 227. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 29 MHz	222
Figure 228. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 30 MHz	223
Figure 229. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 30 MHz	224
Figure 230. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 30 MHz	225
Figure 231. Elevation patterns of the ES1 32A2A DD antenna over perfect ground	

and fair ground at 2 MHz	226
Figure 232. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 2 MHz	227
Figure 233. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 2 MHz	228
Figure 234. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 3 MHz	229
Figure 235. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 3 MHz	230
Figure 236. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 3 MHz	231
Figure 237. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 4 MHz	232
Figure 238. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 4 MHz	233
Figure 239. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 4 MHz	234
Figure 240. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 5 MHz	235
Figure 241. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 5 MHz	236
Figure 242. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 5 MHz	237
Figure 243. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 6 MHz	238
Figure 244. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 6 MHz	239
Figure 245. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 6 MHz	240
Figure 246. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 7 MHz	241
Figure 247. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 7 MHz	242
Figure 248. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 7 MHz	243

Figure 249. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 8 MHz	244
Figure 250. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 8 MHz	245
Figure 251. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 8 MHz	246
Figure 252. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 9 MHz	247
Figure 253. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 9 MHz	248
Figure 254. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 9 MHz	249
Figure 255. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 10 MHz	250
Figure 256. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 10 MHz	251
Figure 257. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 10 MHz	252
Figure 258. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 11 MHz	253
Figure 259. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 11 MHz	254
Figure 260. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 11 MHz	255
Figure 261. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 12 MHz	256
Figure 262. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 12 MHz	257
Figure 263. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 12 MHz	258
Figure 264. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 13 MHz	259
Figure 265. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 13 MHz	260
Figure 266. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at	

13 MHz	261
Figure 267. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 14 MHz	262
Figure 268. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 14 MHz	263
Figure 269. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 14 MHz	264
Figure 270. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 15 MHz	265
Figure 271. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 15 MHz	266
Figure 272. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 15 MHz	267
Figure 273. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 16 MHz	268
Figure 274. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 16 MHz	269
Figure 275. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 16 MHz	270
Figure 276. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 17 MHz	271
Figure 277. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 17 MHz	272
Figure 278. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 17 MHz	273
Figure 279. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 18 MHz	274
Figure 280. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 18 MHz	275
Figure 281. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 18 MHz	276
Figure 282. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 19 MHz	277
Figure 283. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 19 MHz	278

Figure 284. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 19 MHz	279
Figure 285. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 20 MHz	280
Figure 286. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 20 MHz	281
Figure 287. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 20 MHz	282
Figure 288. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 21 MHz	283
Figure 289. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 21 MHz	284
Figure 290. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 21 MHz	285
Figure 291. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 22 MHz	286
Figure 292. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 22 MHz	287
Figure 293. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 22 MHz	288
Figure 294. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 23 MHz	289
Figure 295. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 23 MHz	290
Figure 296. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 23 MHz	291
Figure 297. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 24 MHz	292
Figure 298. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 24 MHz	293
Figure 299. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 24 MHz	294
Figure 300. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 25 MHz	295
Figure 301. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground	

at 25 MHz	296
Figure 302. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at	
25 MHz	297
Figure 303. Elevation patterns of the ESI 32A2A DD antenna over perfect ground	
and fair ground at 26 MHz	298
Figure 304. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground	
at 26 MHz	299
Figure 305. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at	
26 MHz	300
Figure 306. Elevation patterns of the ESI 32A2A DD antenna over perfect ground	
and fair ground at 27 MHz	301
Figure 307. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground	
at 27 MHz	302
Figure 308. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at	
27 MHz	303
Figure 309. Elevation patterns of the ESI 32A2A DD antenna over perfect ground	
and fair ground at 28 MHz	304
Figure 310. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground	
at 28 MHz	305
Figure 311. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at	
28 MHz	306
Figure 312. Elevation patterns of the ESI 32A2A DD antenna over perfect ground	
and fair ground at 29 MHz	307
Figure 313. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground	
at 29 MHz	308
Figure 314. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at	
29 MHz	309
Figure 315. Elevation patterns of the ESI 32A2A DD antenna over perfect ground	
and fair ground at 30 MHz	310
Figure 316. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground	
at 30 MHz	311
Figure 317. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at	
30 MHz	312

APPENDIX C. PLOTS OF INPUT IMPEDANCE, VSWR, AND
MAXIMUM GAIN VERSUS FREQUENCY AND PLOTS OF RADIATION
PATTERNS FOR EACH FREQUENCY

ARMY LO-BAND DD ANTENNA

VSWR VS FREQ/PERF.GND/ $Z_0=50$ OHMS

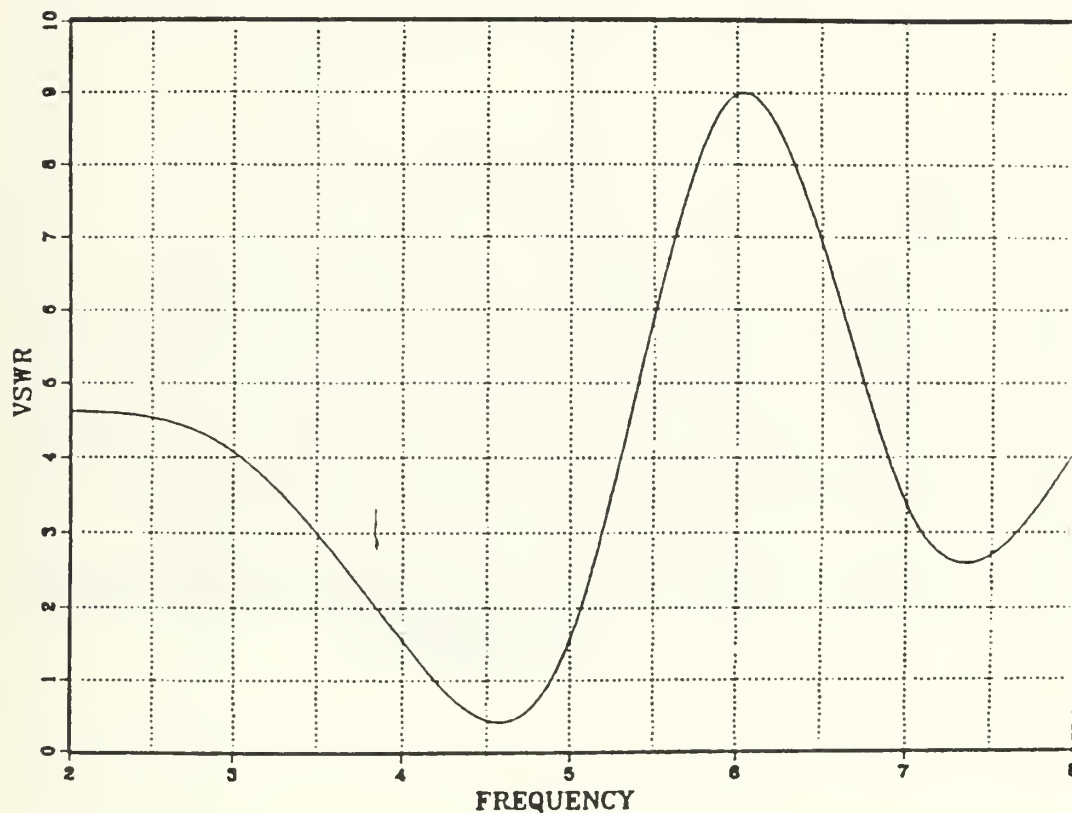


Figure 6. VSWR vs freq. for the Army Lowband DD antenna over perfect ground
(normalized impedance = 50 ohms)

ARMY LO-BAND DD ANTENNA

VSWR VS FREQ/PRF.GND/ $Z_0=300$ OHMS

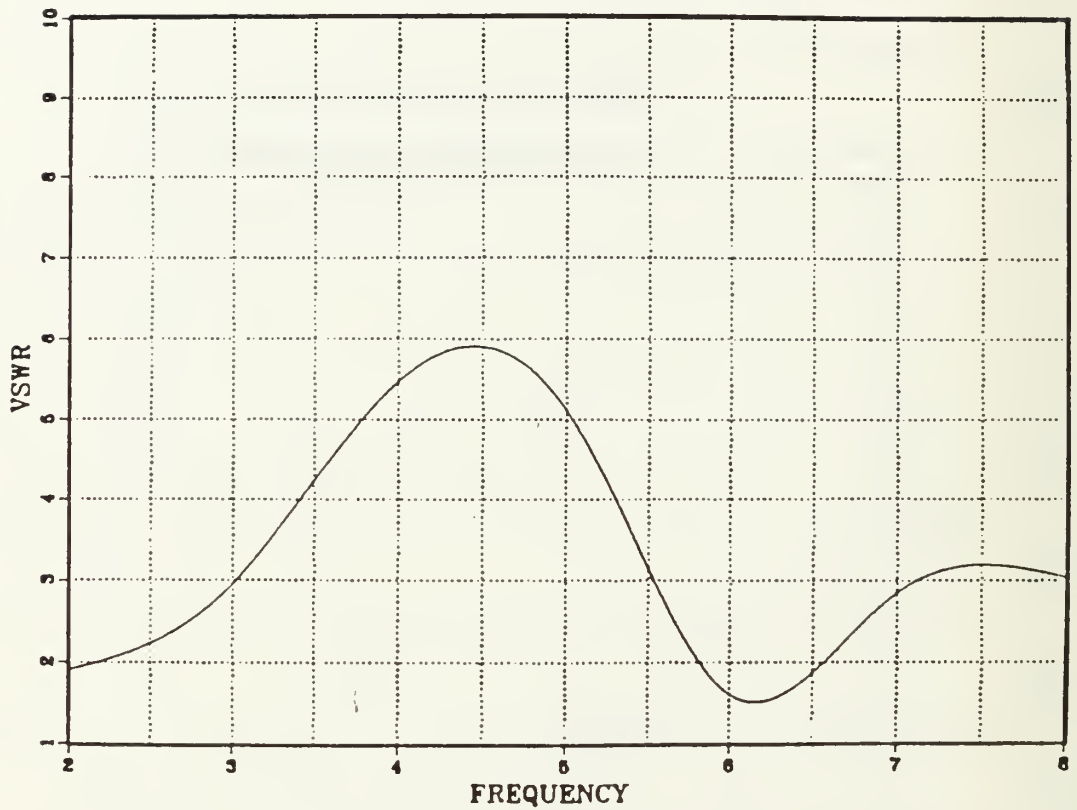


Figure 7. VSWR vs freq. for the Army Lowband DD antenna over perfect ground
(normalized impedance = 300 ohms)

ARMY LO-BAND DD ANTENNA

VSWR VS FREQ/PRF.GND/Z0=600 OHMS

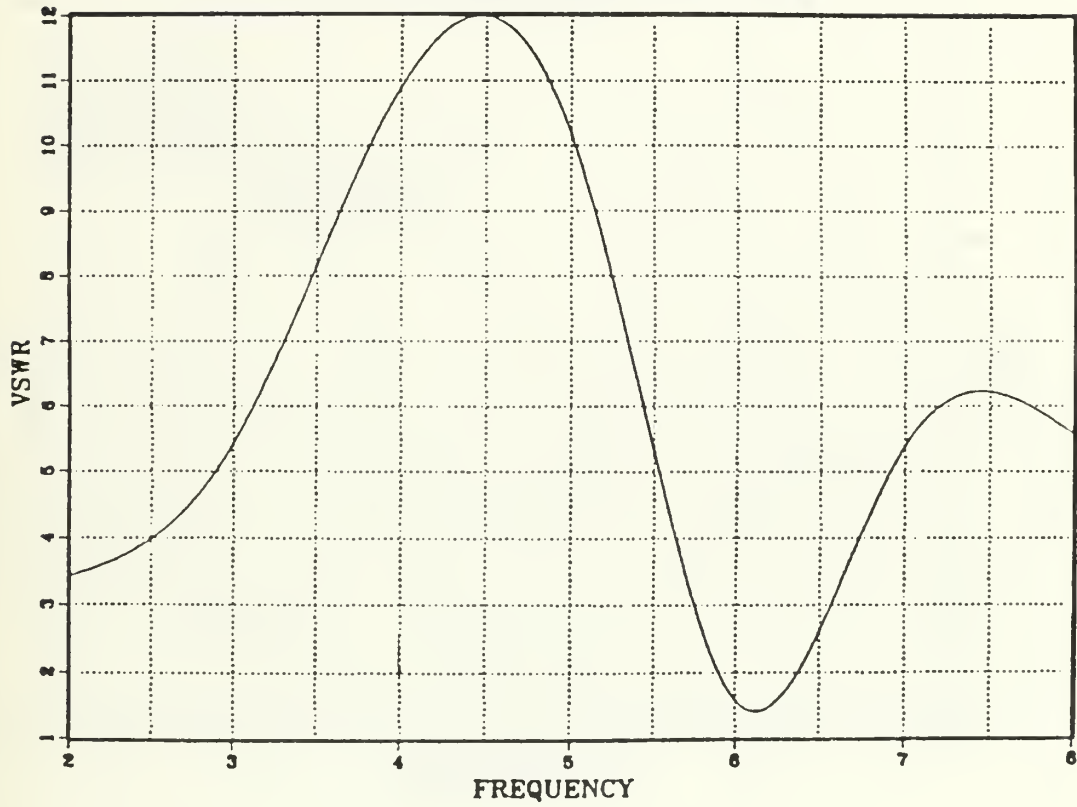


Figure 8. VSWR vs freq. for the Army Lowband DD antenna over perfect ground
(normalized impedance = 600 ohms)

ARMY LO-BAND DD ANTENNA

COMPARISON VSWR VS FREQ/PERF.GND

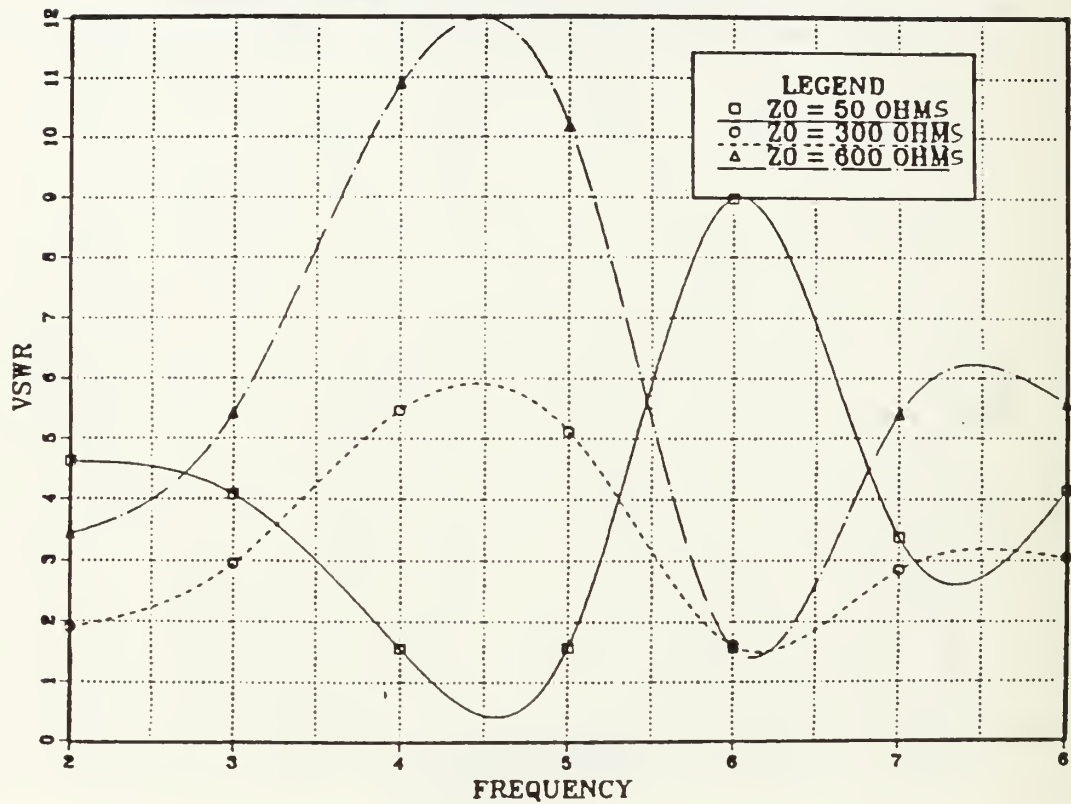


Figure 9. Comparison VSWR vs frequency for the Army Lowband DD antenna over perfect ground

ARMY LO-BAND DD ANTENNA

IMP. VS FREQ/PERF.GND/ $Z_0=50$ OHMS

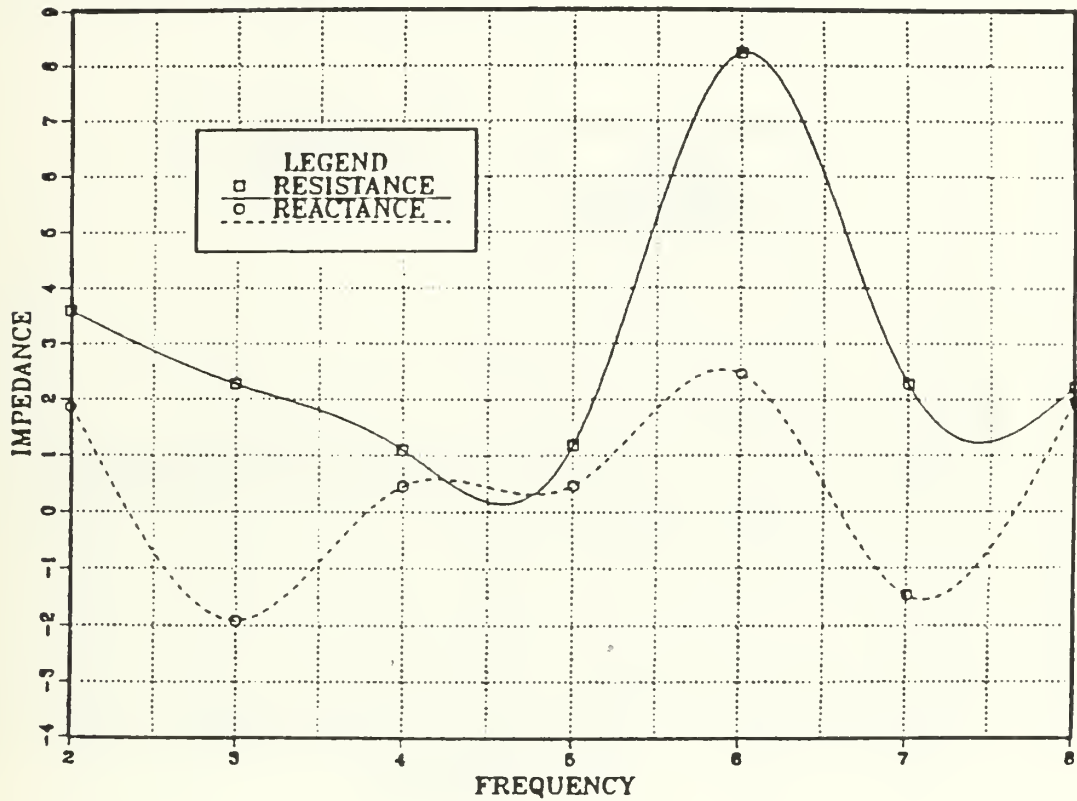


Figure 10. Impedance vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 50 ohms)

ARMY LO-BAND DD ANTENNA

IMP. VS FREQ./PRF.GND/ $Z_0=300$ OHMS

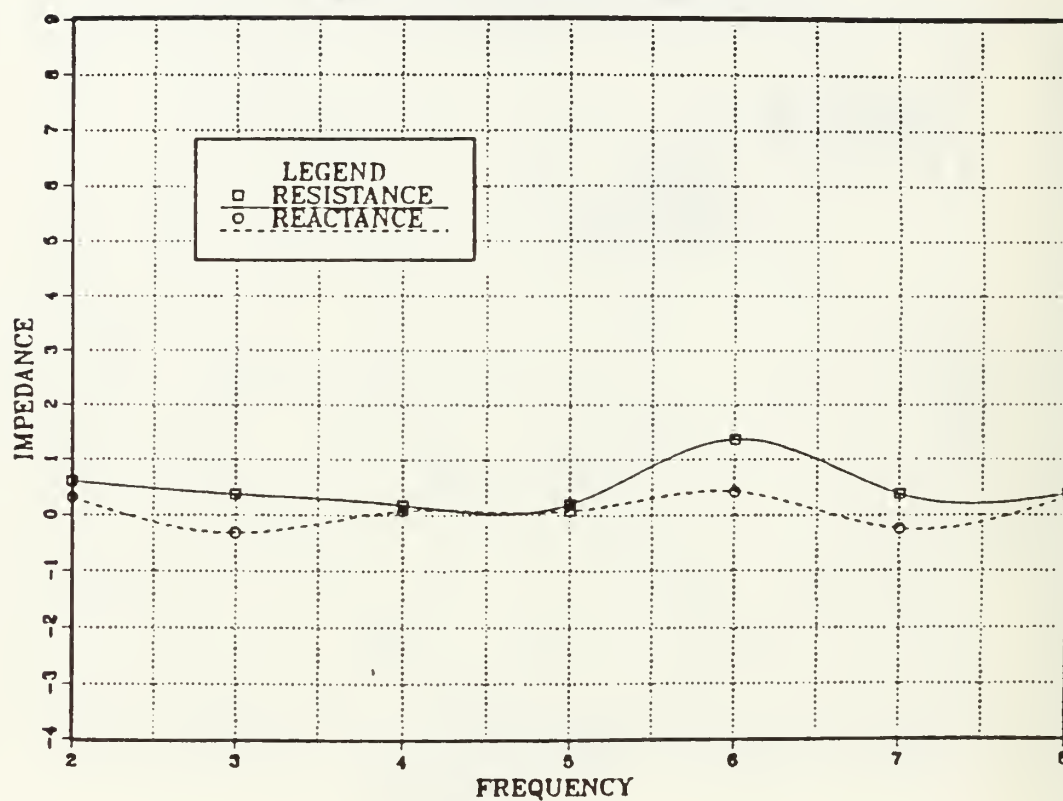


Figure 11. Impedance vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 300 ohms)

ARMY LO-BAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=800$ OHMS

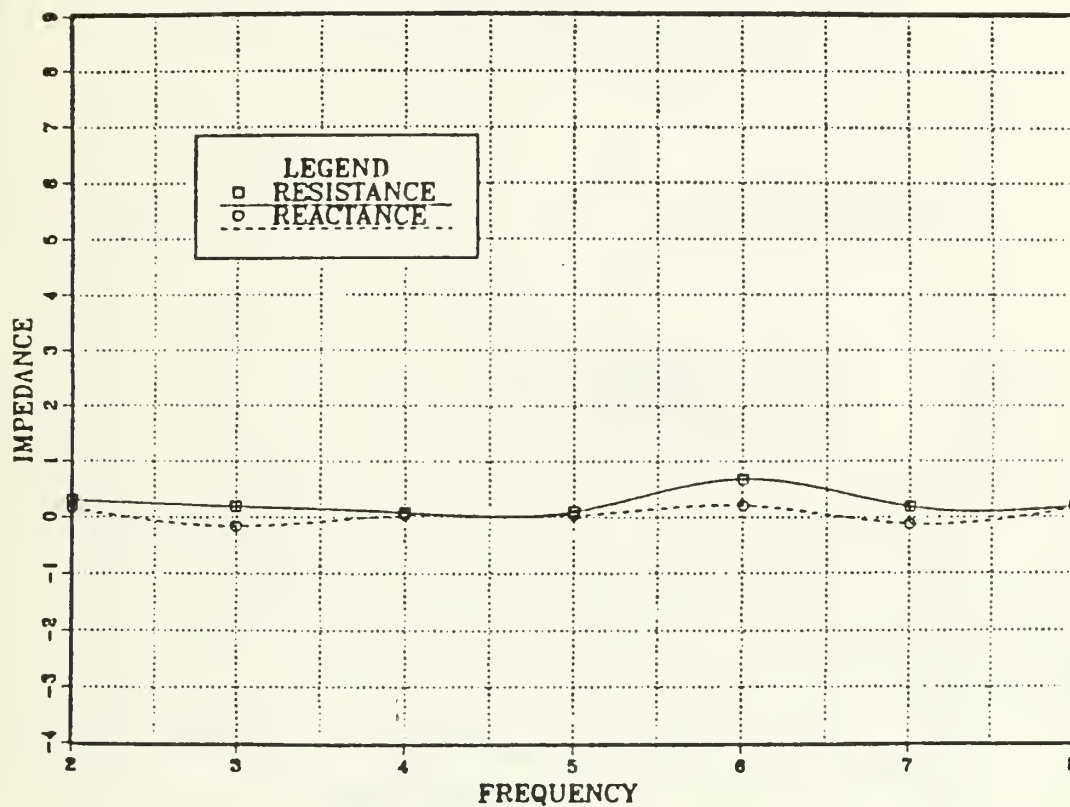


Figure 12. Impedance vs freq. for the Army Lowband DD antenna over perfect ground (normalized impedance = 600 ohms)

ARMY LO-BAND DD ANTENNA

ELEVATION PATTERN (BORESIGHT)

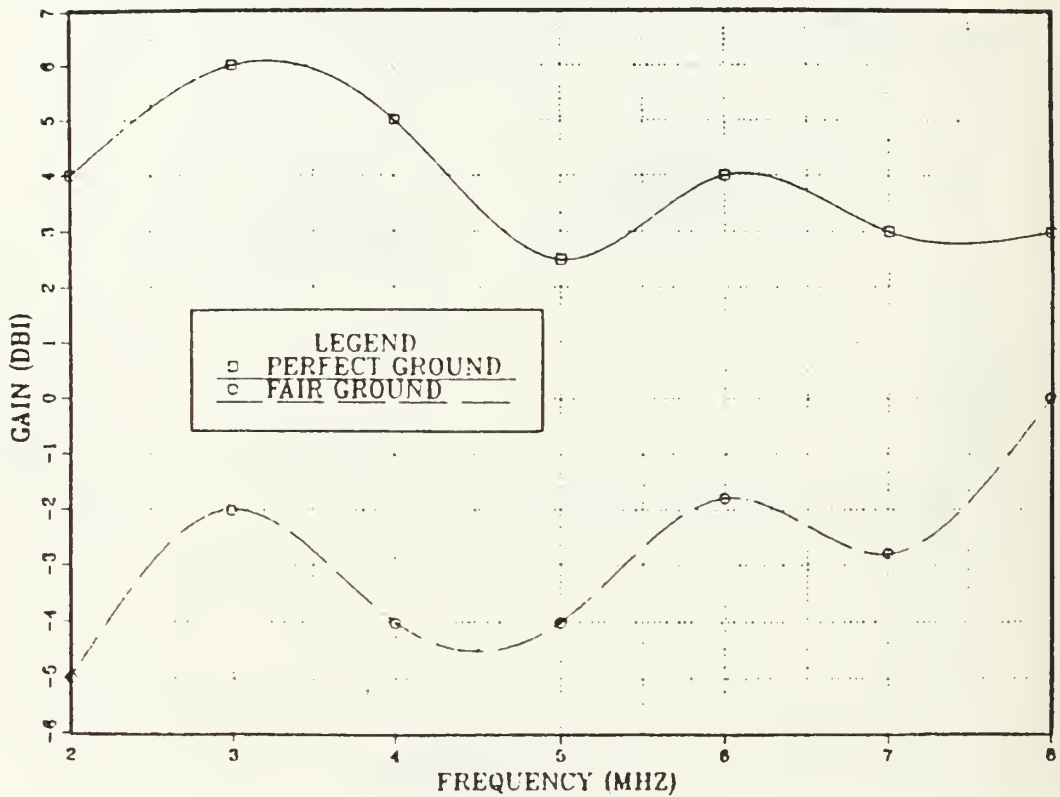


Figure 13. Max. gain vs frequency for the Army Lowband DD antenna over perfect ground and fair ground (boresight)

ARMY LO-BAND DD ANTENNA

ELEVATION PATTERN (BROADSIDE)

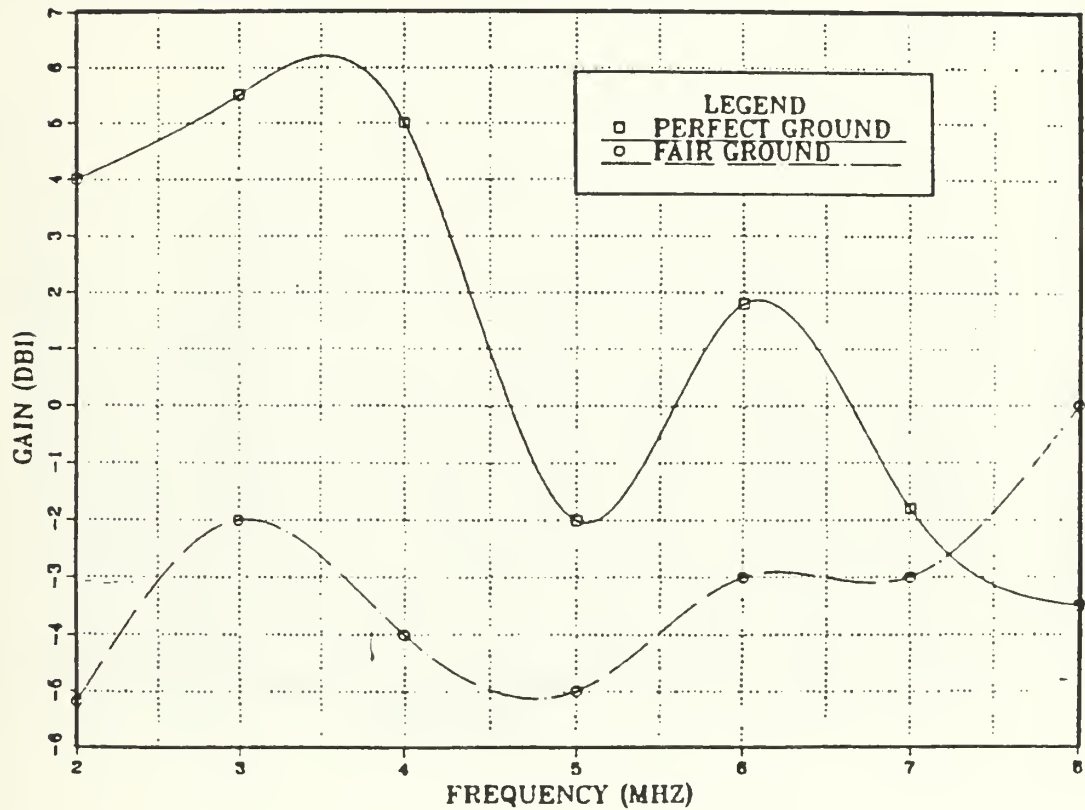


Figure 14. Max. gain vs frequency for the Army Lowband DD antenna over perfect and fair ground (broadside)

ARMY HI-BAND DD ANTENNA

VSWR VS FREQ/PERF.GND/ $Z_0=50$ OHMS

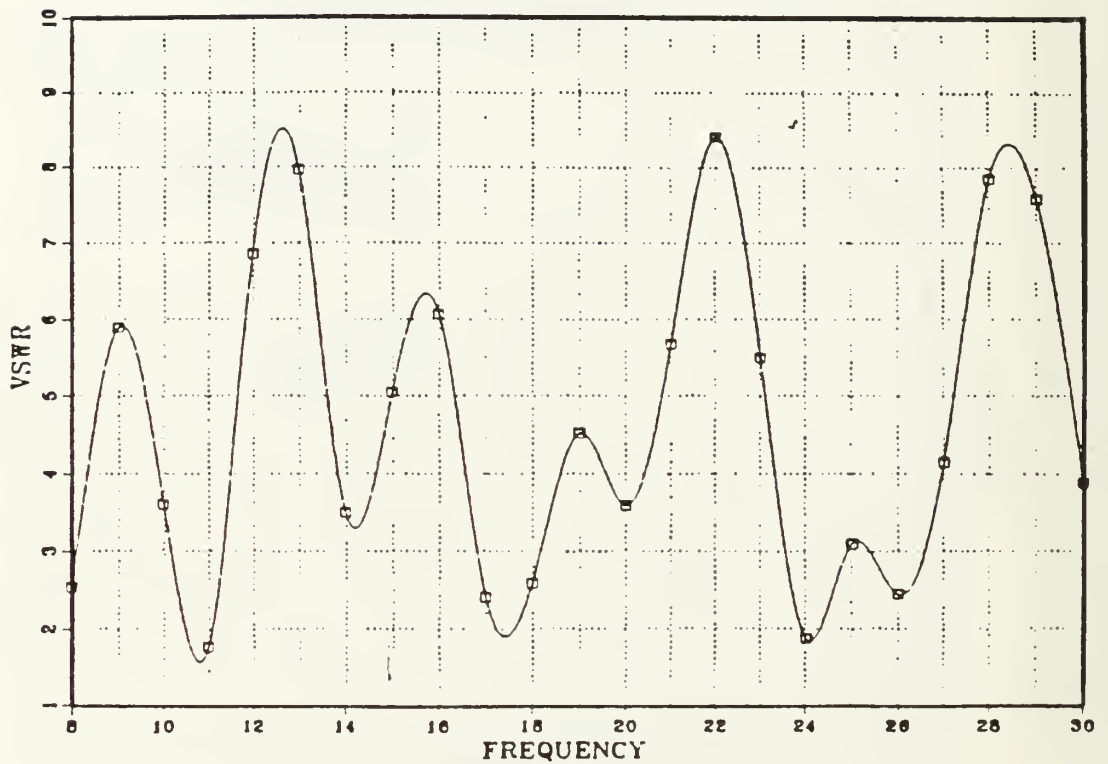


Figure 15. VSWR vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 50 ohms)

ARMY HI-BAND DD ANTENNA

VSWR VS FREQ/PRF.GND/ $Z_0=300$ OHMS

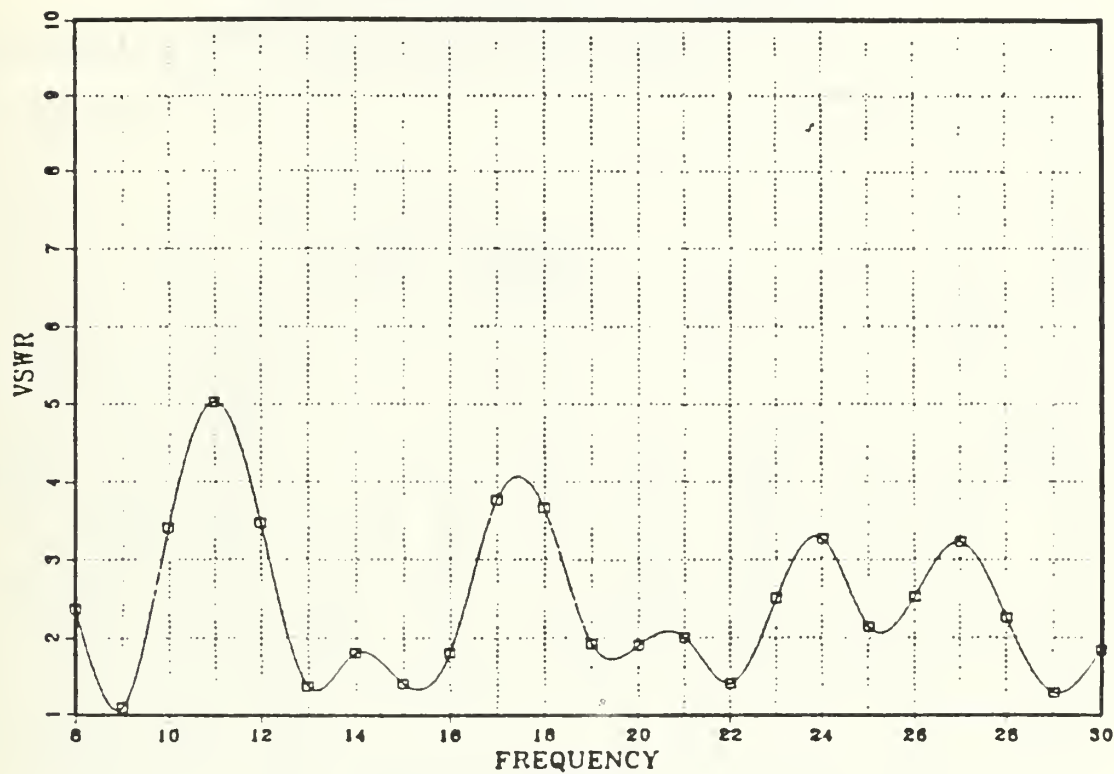


Figure 16. VSWR vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 300 ohms)

ARMY HI-BAND DD ANTENNA

VSWR VS FREQ/PRF.GND/Z0=600 OHMS

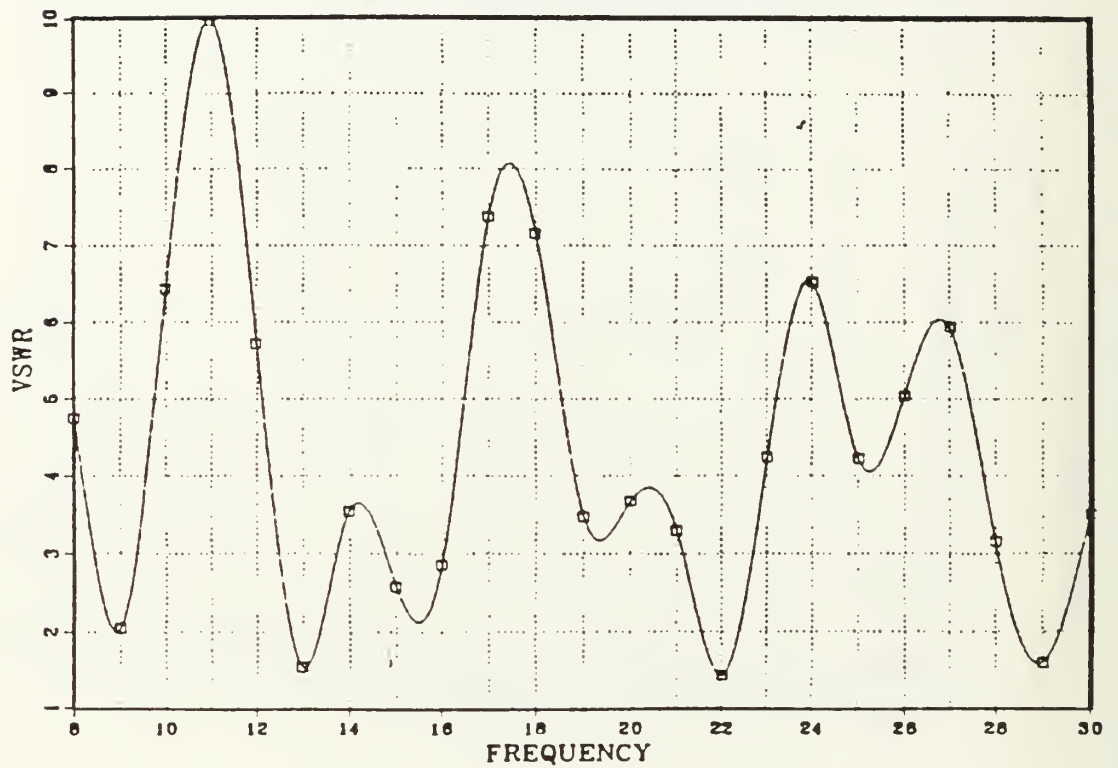


Figure 17. VSWR vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 600 ohms)

ARMY HI-BAND DD ANTENNA

COMPARISON VSWR VS FREQ/PERF.GND

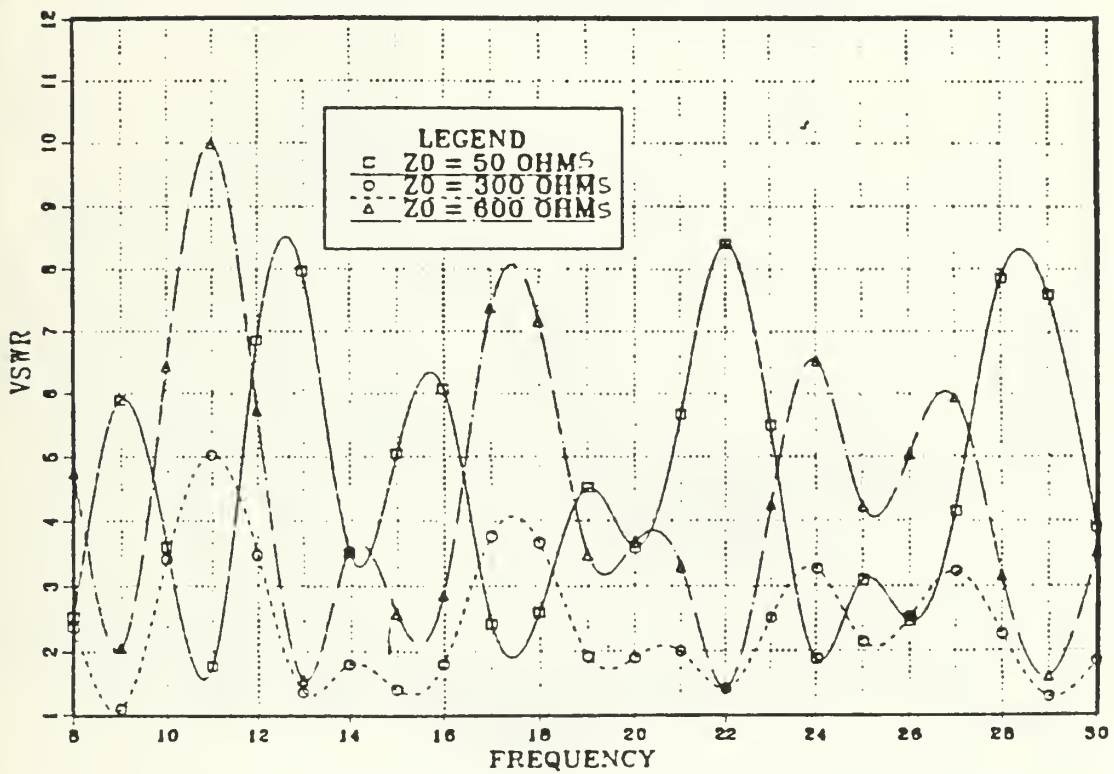


Figure 18. Comparison VSWR vs frequency for the Army Highband DD antenna over perfect ground

ARMY HI-BAND DD ANTENNA

IMP. VS FREQ/PERF.GND/ $Z_0=50$ OHMS

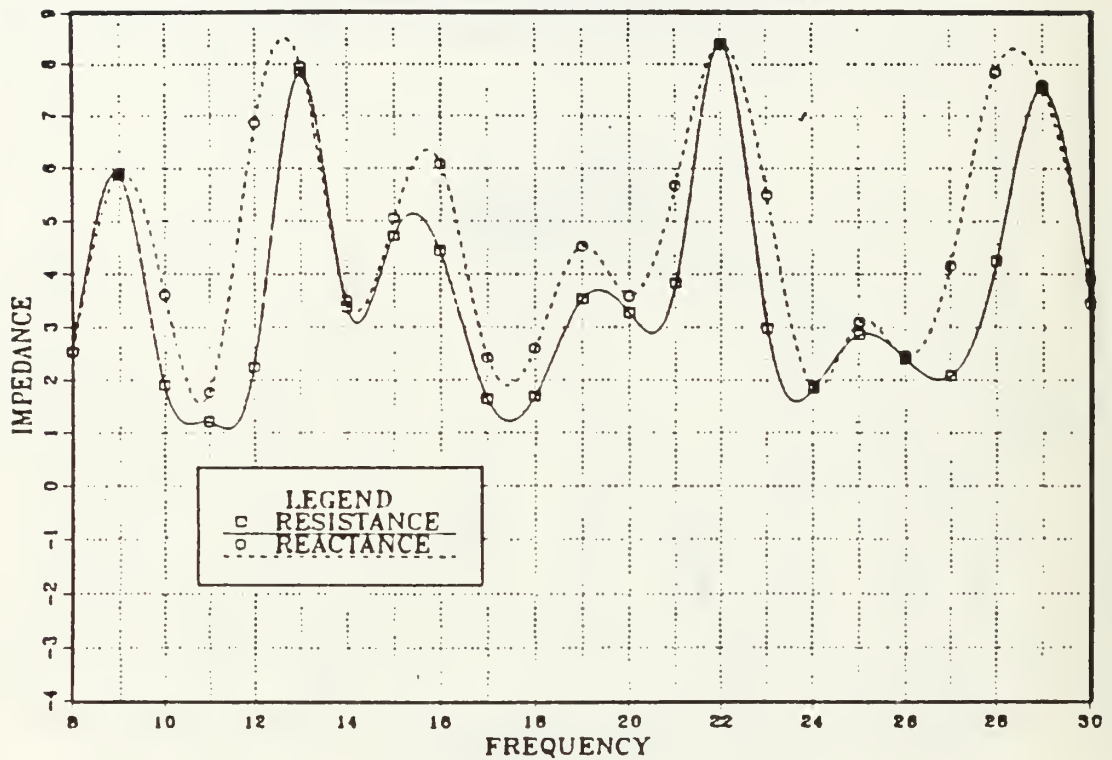


Figure 19. Impedance vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 50 ohms)

ARMY HI-BAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=300$ OHMS

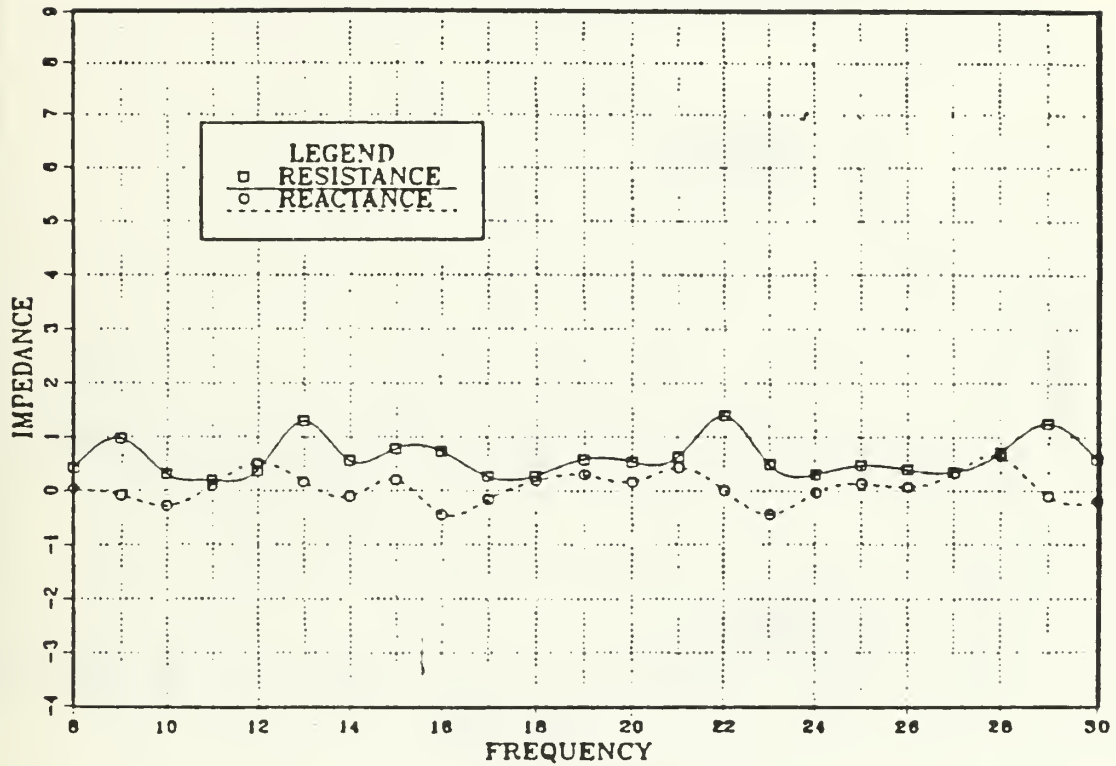


Figure 20. Impedance vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 300 ohms)

ARMY HI-BAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=800$ OHMS

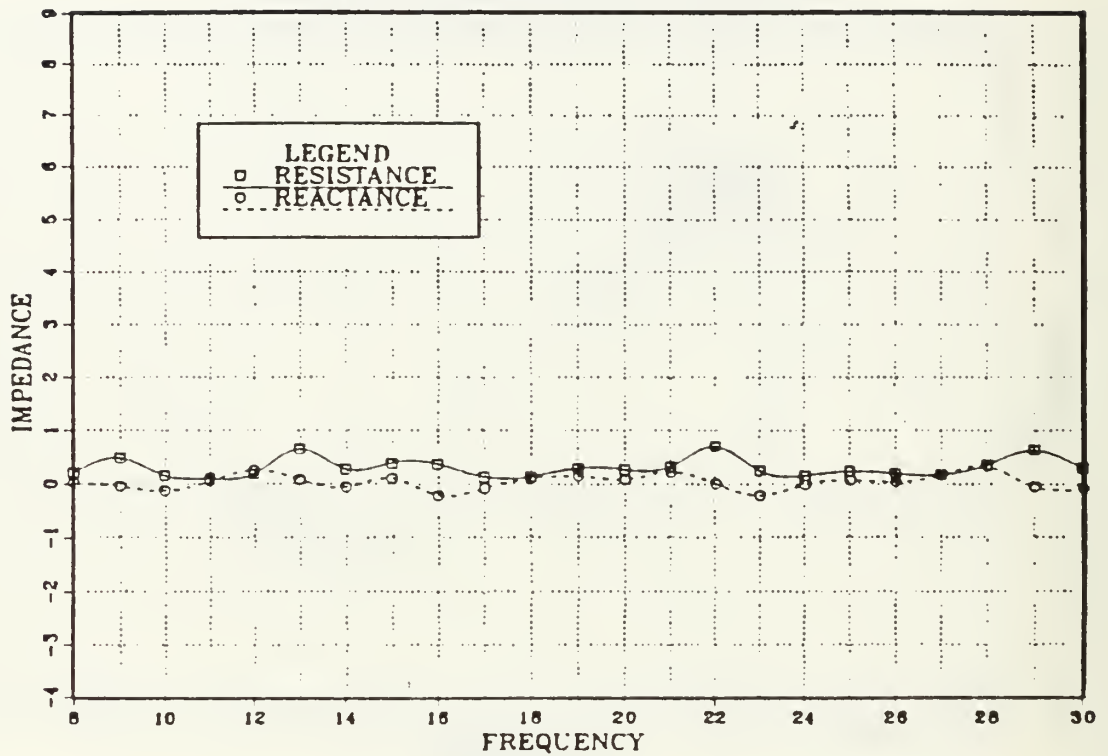


Figure 21. Impedance vs freq. for the Army Highband DD antenna over perfect ground (normalized impedance = 600 ohms)

ARMY HI-BAND DD ANTENNA

ELEVATION PATTERN (BORESIGHT)

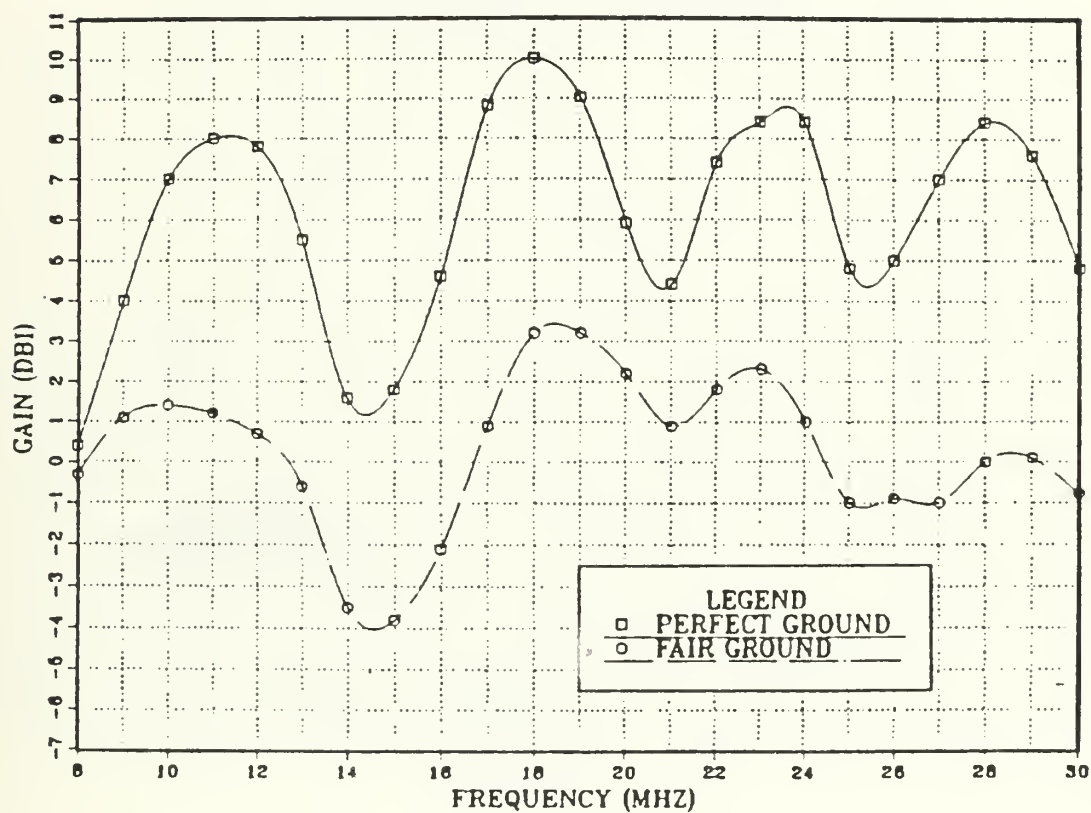


Figure 22. Max. gain vs freq. for the Army Highband DD antenna over perfect ground and fair ground (boresight)

ARMY HI-BAND DD ANTENNA

ELEVATION PATTERN (BROADSIDE)

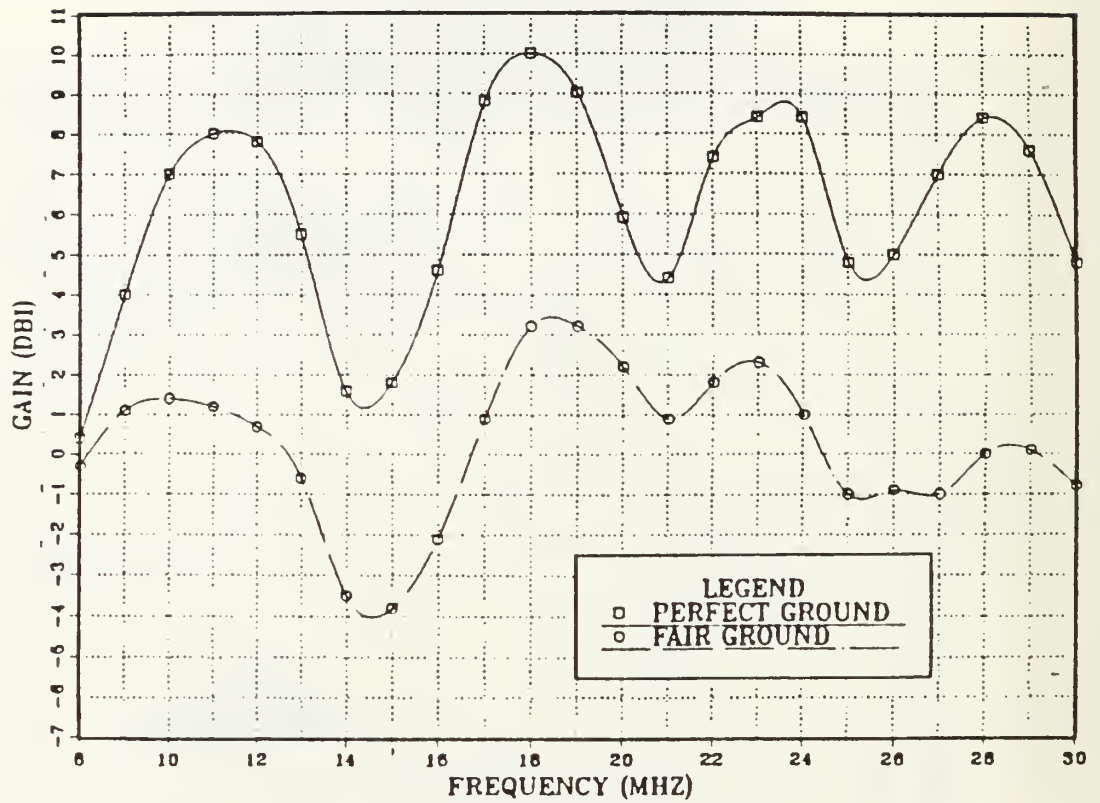


Figure 23. Max. gain vs frequency for the Army Highband DD antenna over perfect ground and fair ground (broadside)

AIR FORCE LO-BAND DD ANTENNA

VSWR VS FREQ/PERF.GND/ $Z_0=50$ OHMS

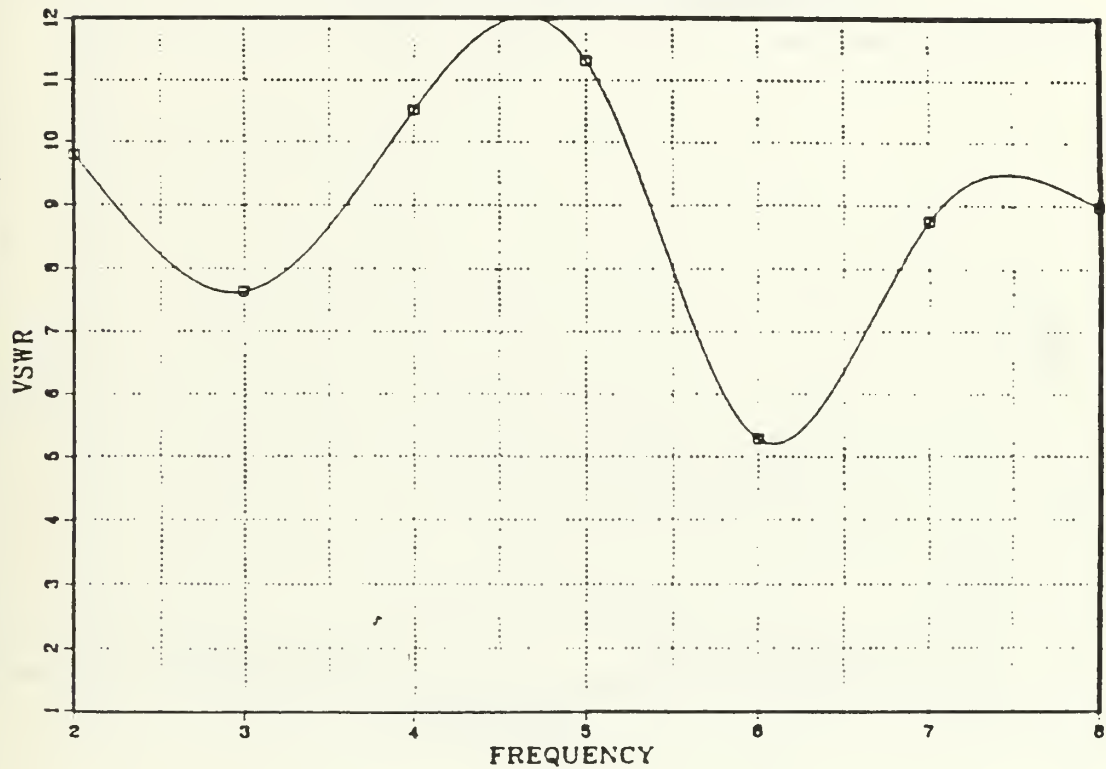


Figure 24. VSWR vs freq. for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 50 ohms)

AIR FORCE LO-BAND DD ANTENNA

VSWR VS FREQ/PRF.GND/ $Z_0=300$ OHMS

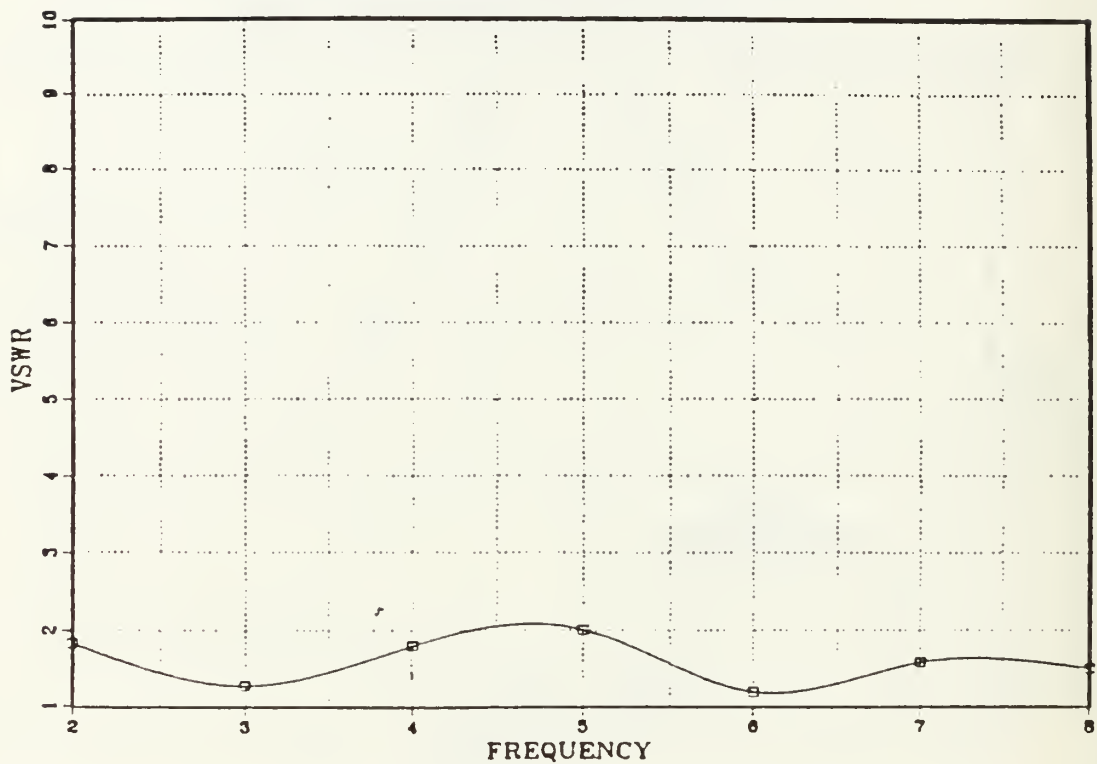


Figure 25. VSWR vs freq. for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 300 ohms)

AIR FORCE LO-BAND DD ANTENNA

VSWR VS FREQ/PRF.GND/ $Z_0=600$ OHMS

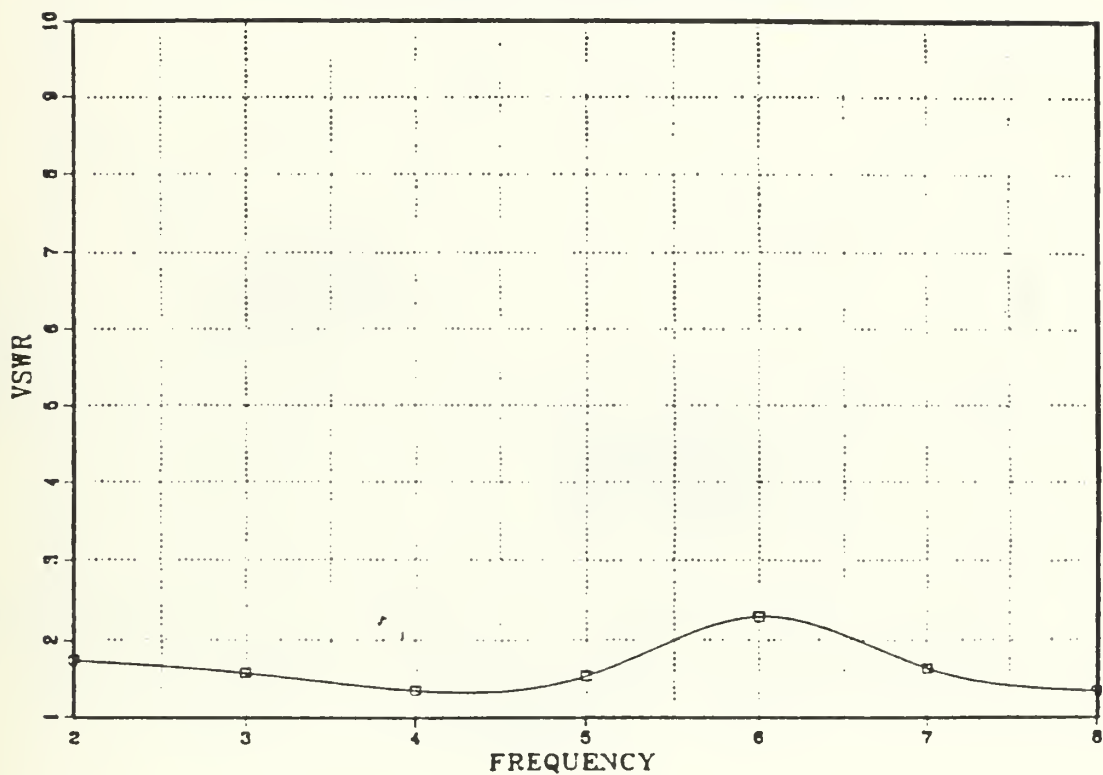


Figure 26. VSWR vs freq. for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 600 ohms)

AIR FORCE LO-BAND DD ANTENNA

COMPARISON VSWR VS FREQ/PERF.GND

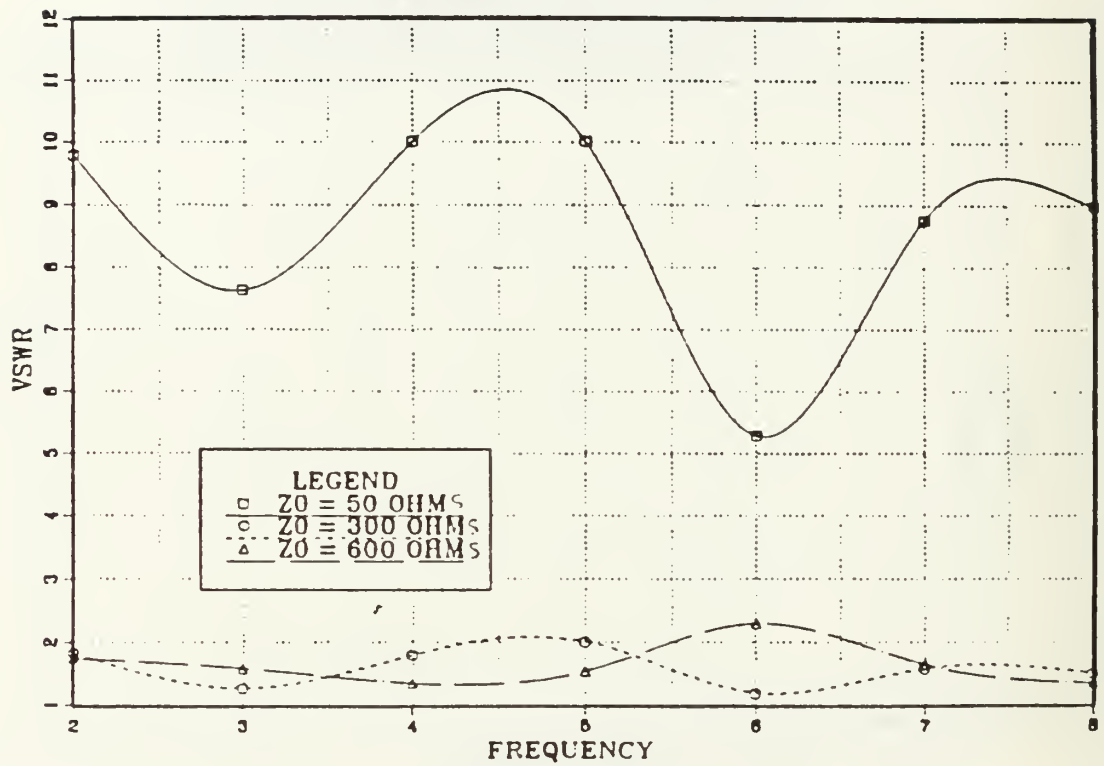


Figure 27. Comparison VSWR vs freq. for the Air Force Lowband DD antenna over perfect ground

AIR FORCE LO-BAND DD ANTENNA

IMP. VS FREQ/PERF.GND/ $Z_0=50$ OHMS

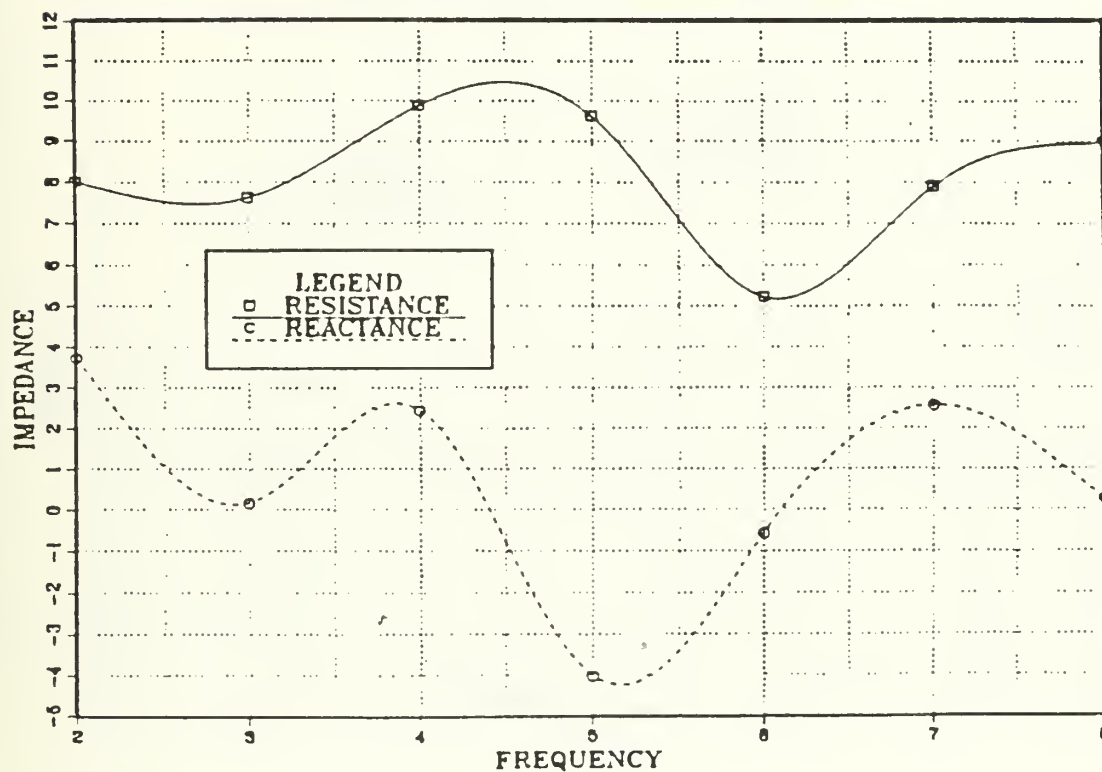


Figure 28. Impedance vs frequency for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 50 ohms)

AIR FORCE LO-BAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=300$ OHMS

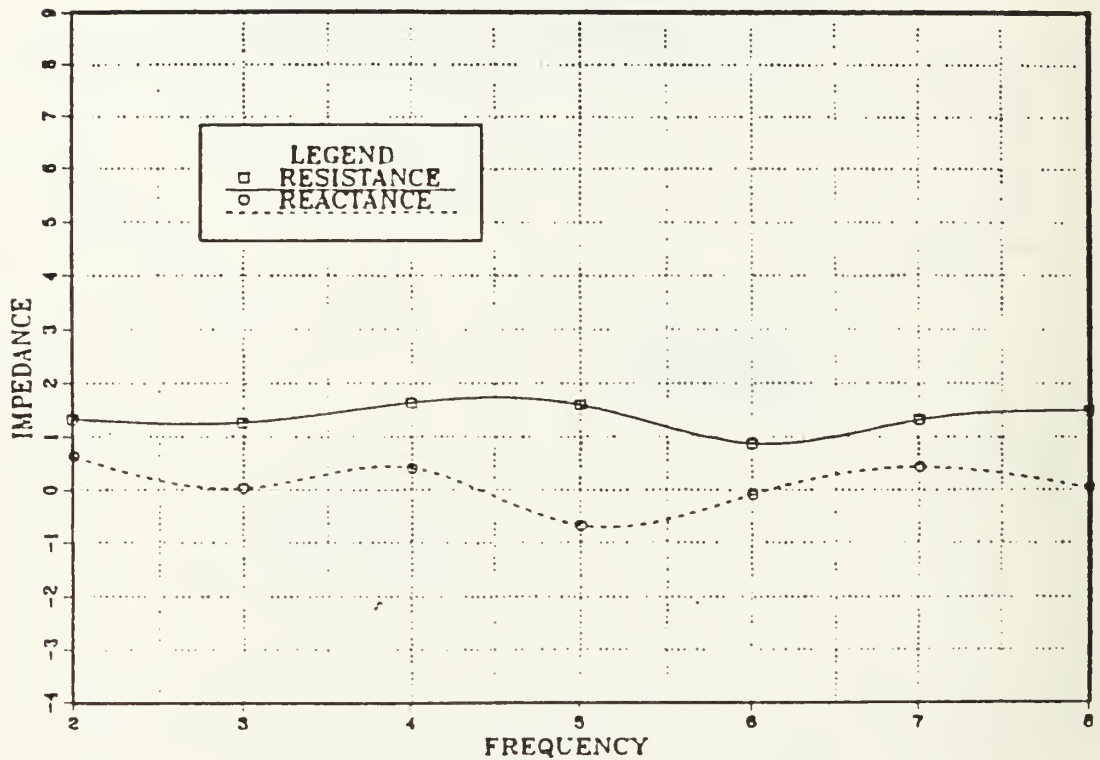


Figure 29. Impedance vs frequency for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 300 ohms)

AIR FORCE LO-BAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=600$ OHMS

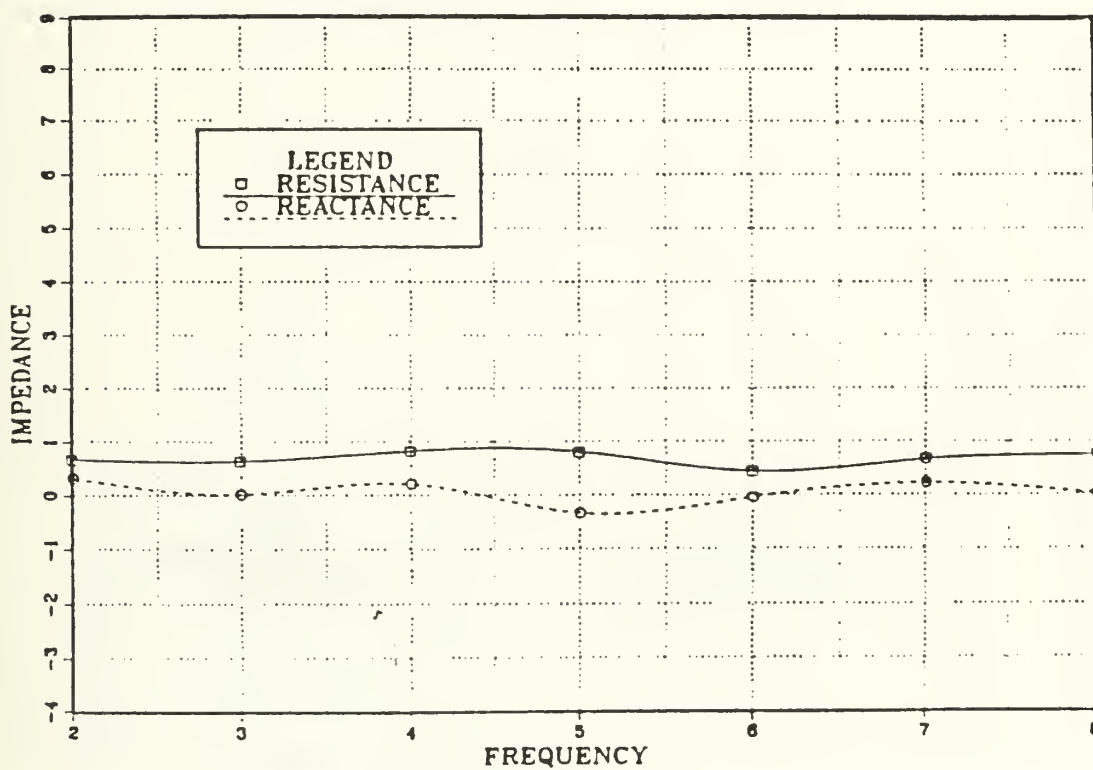


Figure 30. Impedance vs frequency for the Air Force Lowband DD antenna over perfect ground (normalized impedance = 600 ohms)

AIR FORCE LO-BAND DD ANTENNA
ELEVATION PATTERN (BORESIGHT)

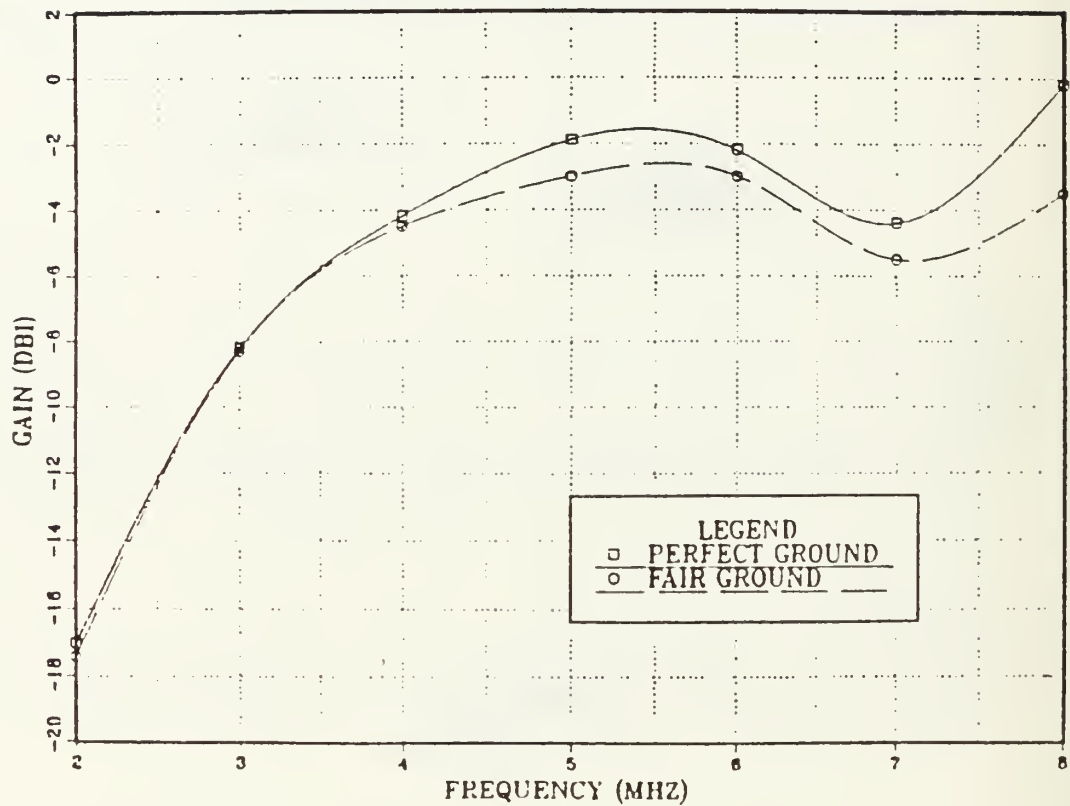


Figure 31. Max. gain vs freq. for the Air Force Lowband DD antenna over perfect ground and fair ground (boresight)

AIR FORCE LO-BAND DD ANTENNA

ELEVATION PATTERN (BROADSIDE)

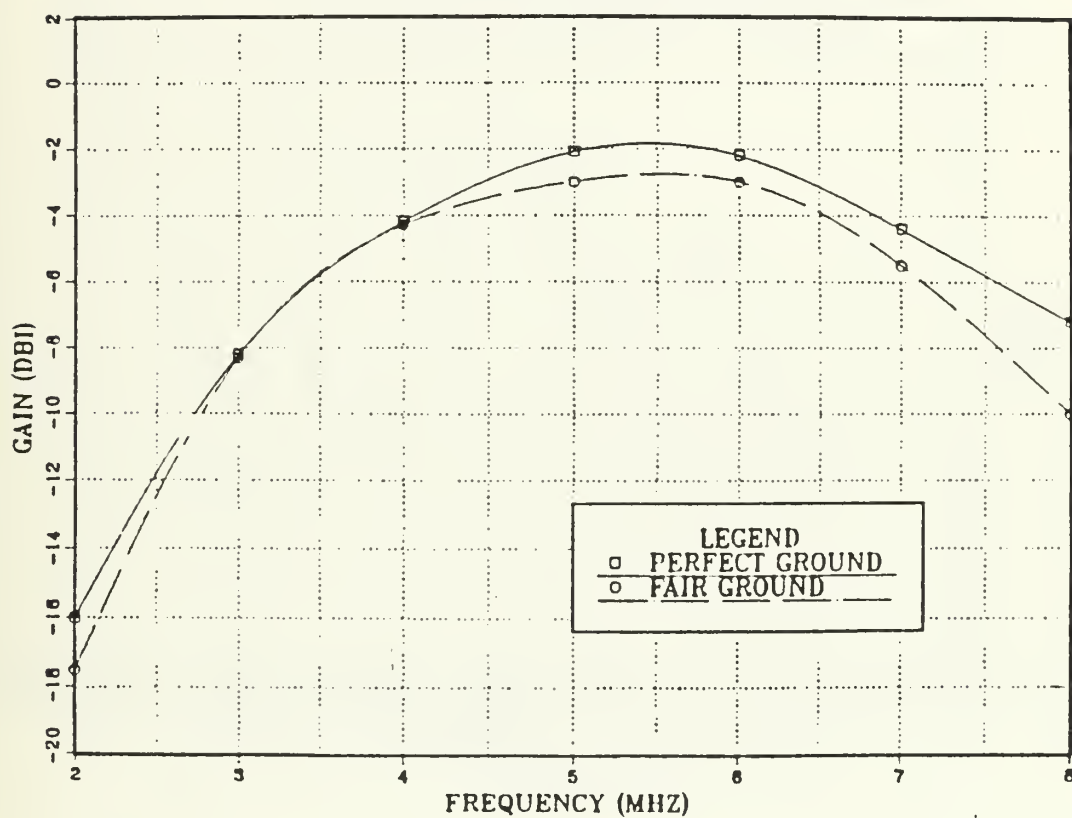


Figure 32. Max. gain vs frequency for the Air Force Lowband DD antenna over perfect ground and fair ground (broadside)

AIR FORCE HI-BAND DD ANTENNA

VSWR VS FREQ/PERF.GND/ $Z_0=50$ OHMS

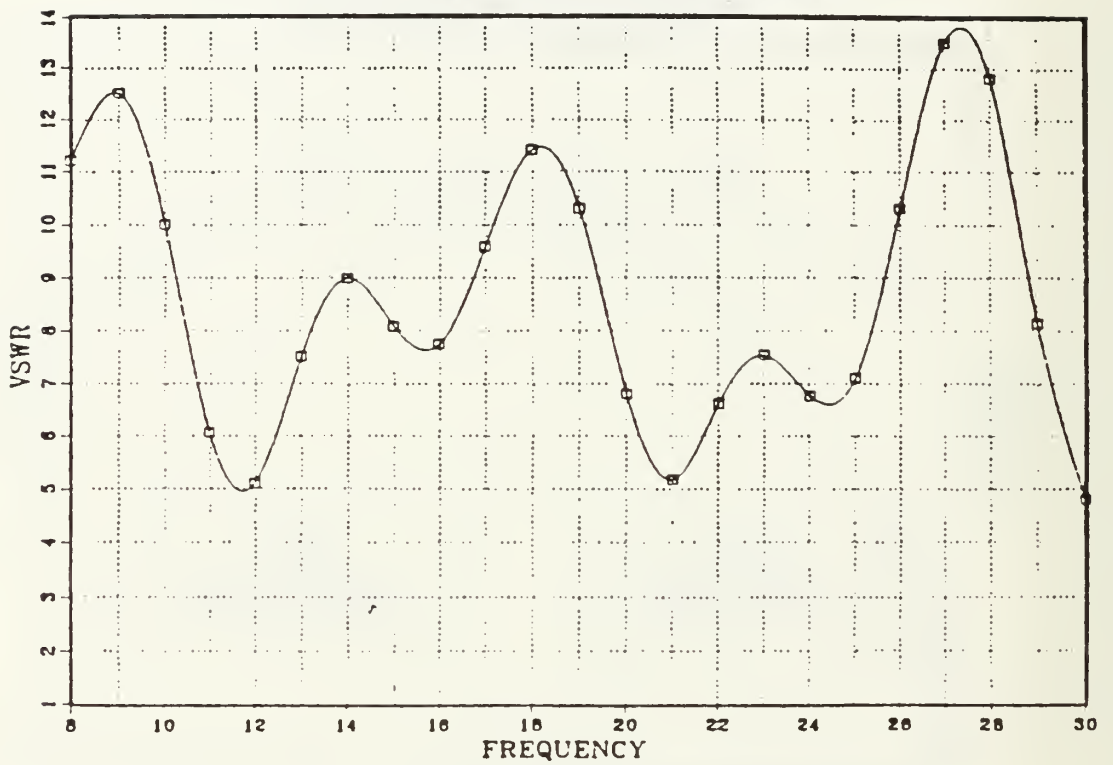


Figure 33. VSWR vs freq. for the Air Force Highband DD antenna over perfect ground (normalized impedance = 50 ohms)

AIR FORCE HI-BAND DD ANTENNA

VSWR VS FREQ/PRF.GND/ $Z_0=300$ OHMS

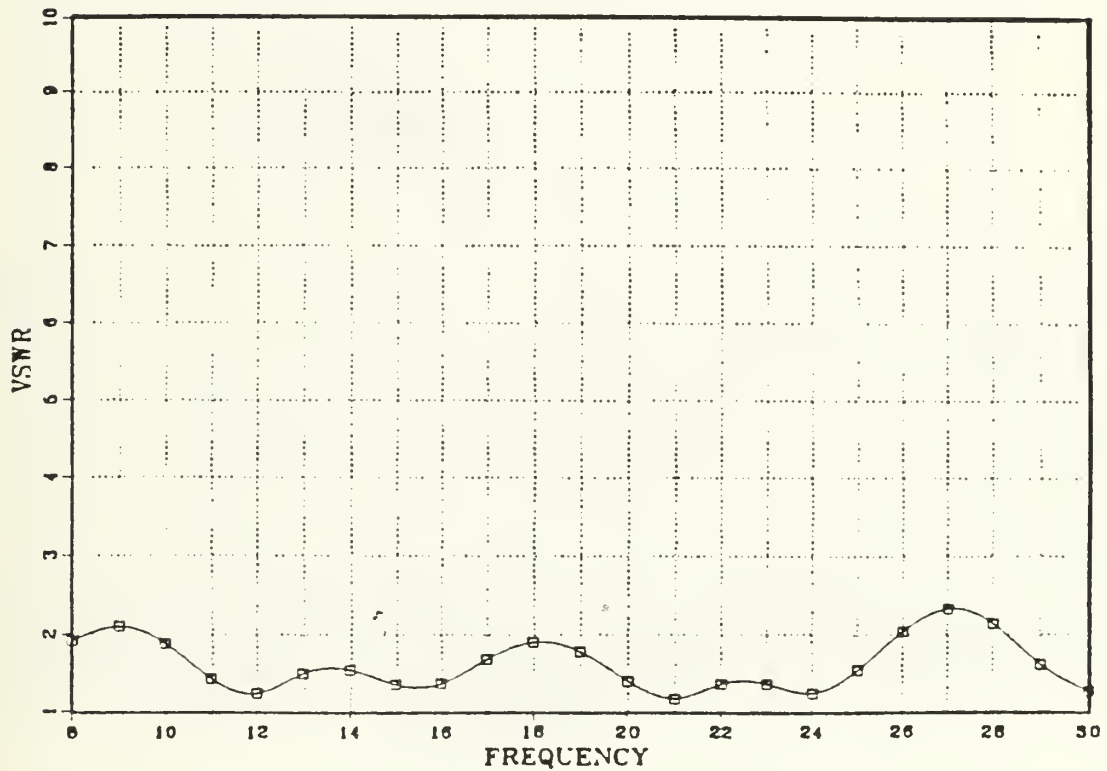


Figure 34. VSWR vs freq. for the Air Force Highband DD antenna over perfect ground (normalized impedance = 300 ohms)

AIR FORCE HI-BAND DD ANTENNA

VSWR VS FREQ/PRF.GND/ $Z_0=600$ OHMS

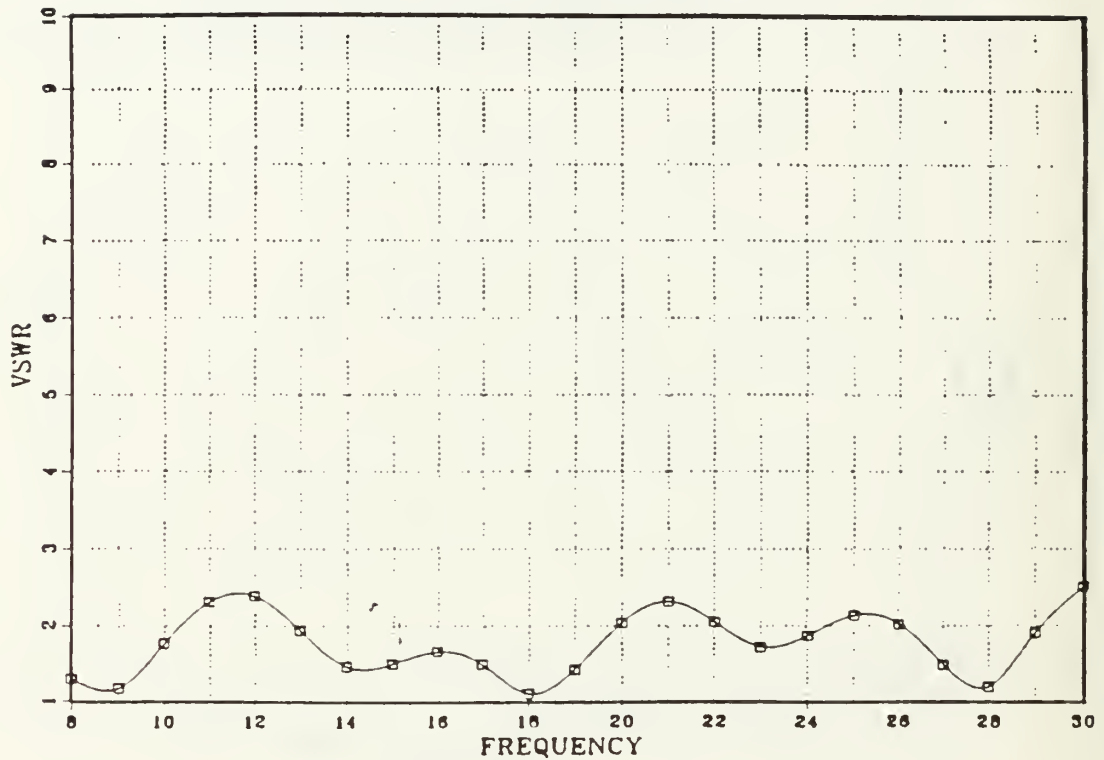


Figure 35. VSWR vs freq. for the Air Force Highband DD antenna over perfect ground (normalized impedance = 600 ohms).

AIR FORCE HI-BAND DD ANTENNA

COMPARISON VSWR VS FREQ/PERF.GND

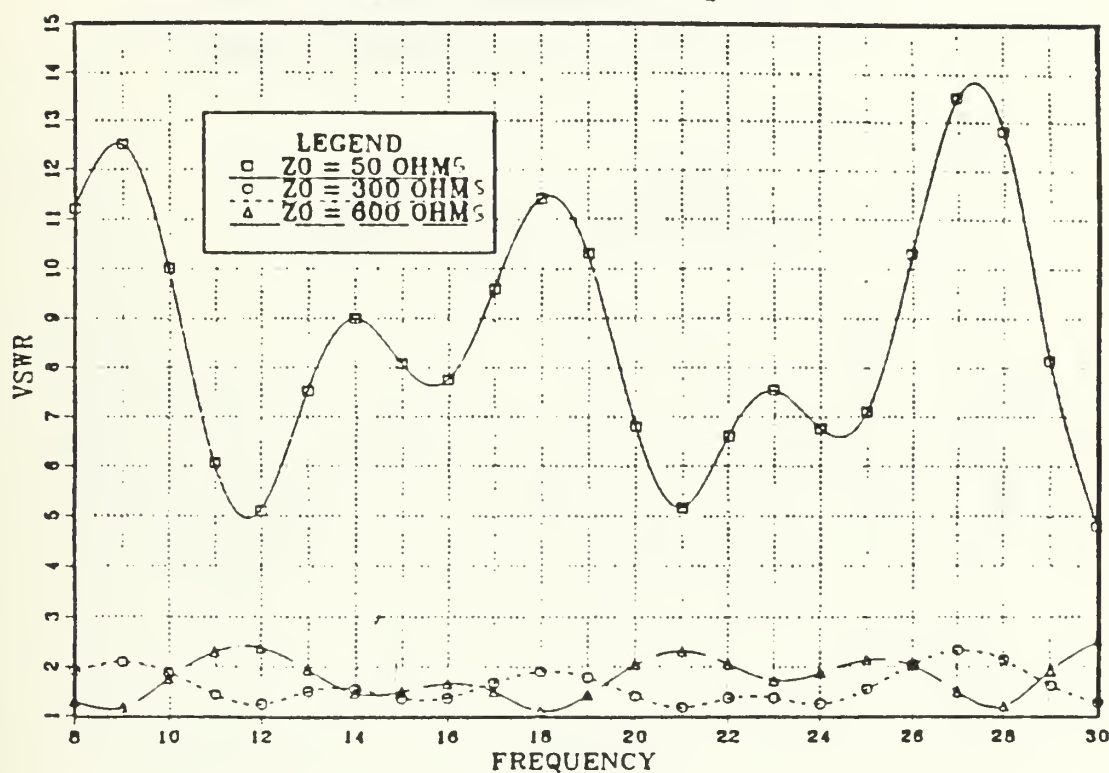


Figure 36. Comparison VSWR vs frequency for the Air Force Highband DD antenna over perfect ground

AIR FORCE HI-BAND DD ANTENNA

IMP. VS FREQ/PERF.GND/ $Z_0=50$ OHMS

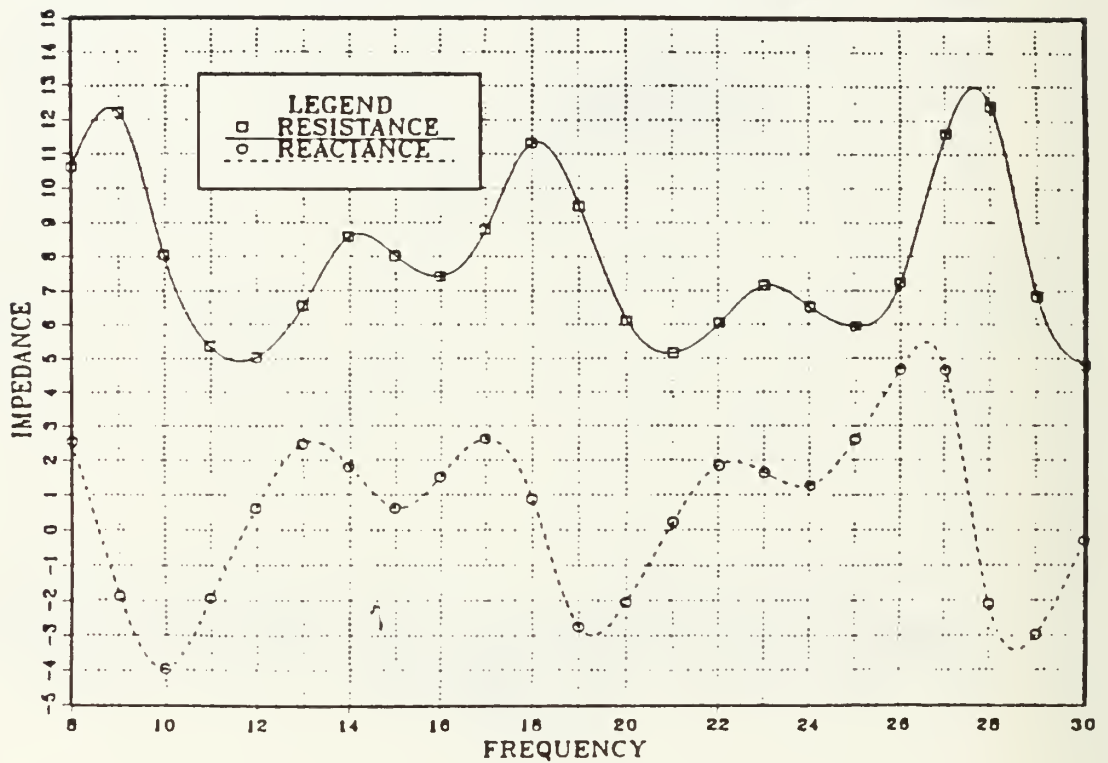


Figure 37. Impedance vs frequency for the Air Force Highband DD antenna over perfect ground (normalized impedance = 50 ohms)

AIR FORCE HI-BAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=300$ OHMS

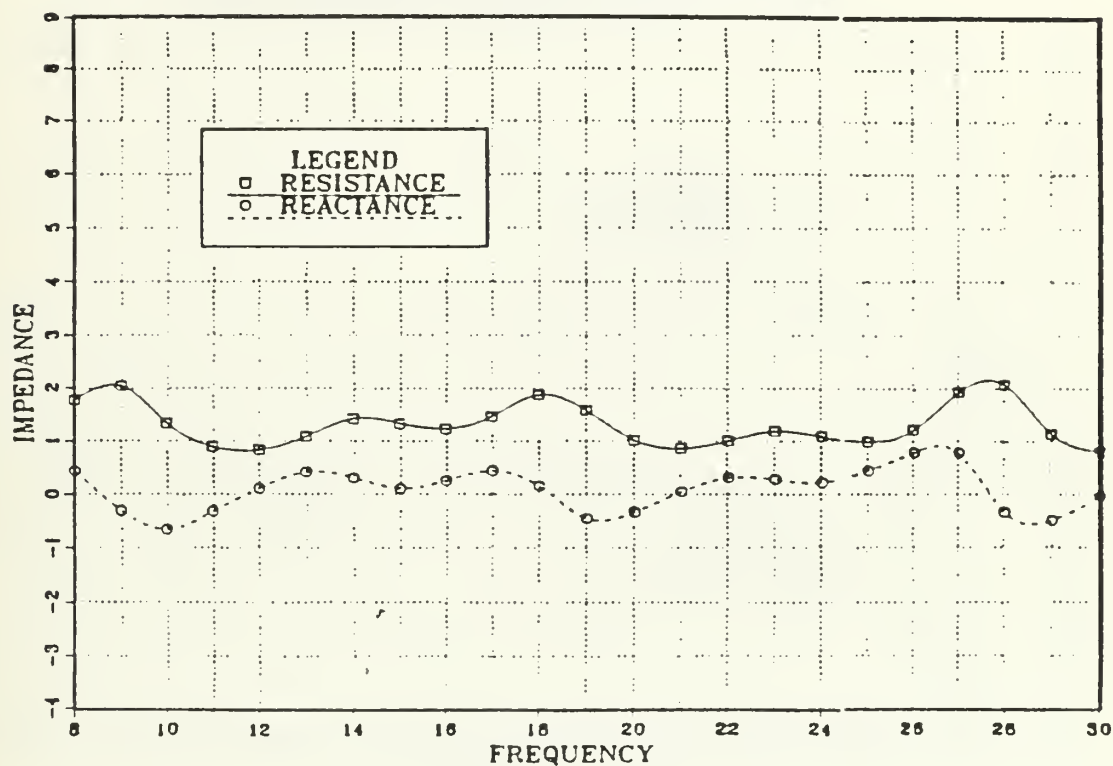


Figure 38. Impedance vs frequency for the Air Force Highband DD antenna over perfect ground (normalized impedance = 300 ohms)

AIR FORCE HI-BAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=600$ OHMS

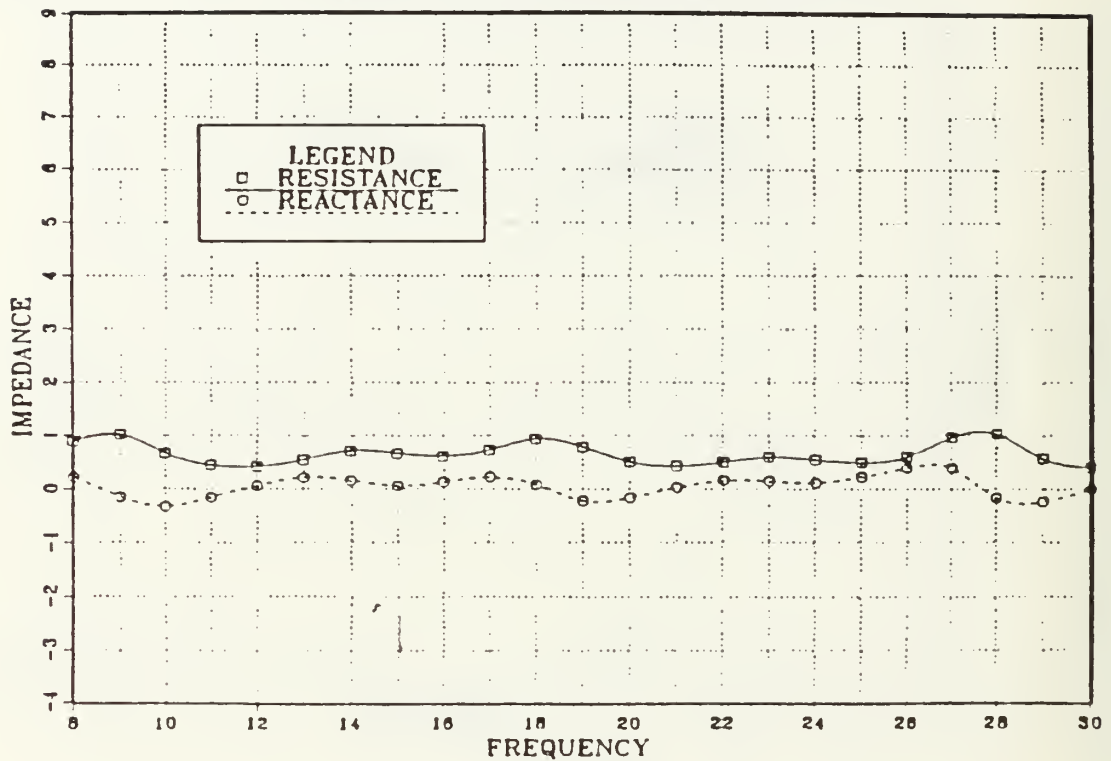


Figure 39. Impedance vs frequency for the Air Force Highband DD antenna over perfect ground (normalized impedance = 600 ohms)

AIR FORCE HI-BAND DD ANTENNA

ELEVATION PATTERN (BORESIGHT)

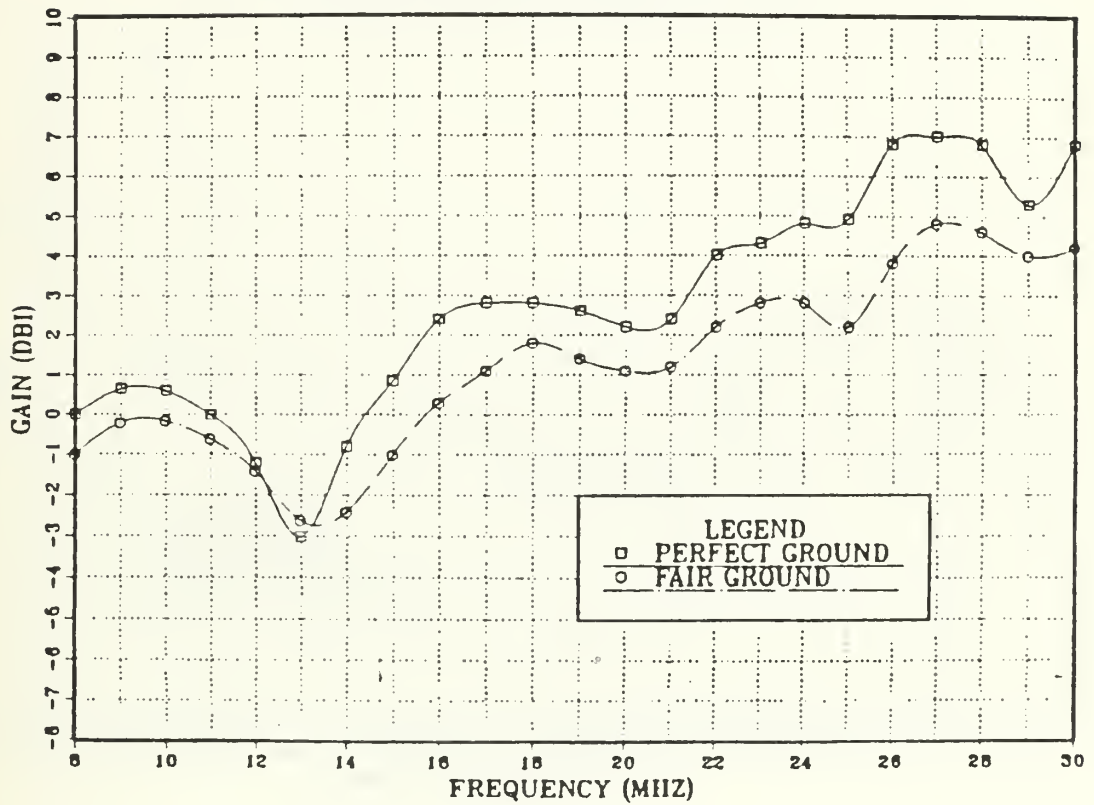


Figure 40. Max. gain vs freq. for the Air Force Highband DD antenna over perfect ground and fair ground (boresight)

AIR FORCE HI-BAND DD ANTENNA

ELEVATION PATTERN (BROADSIDE)

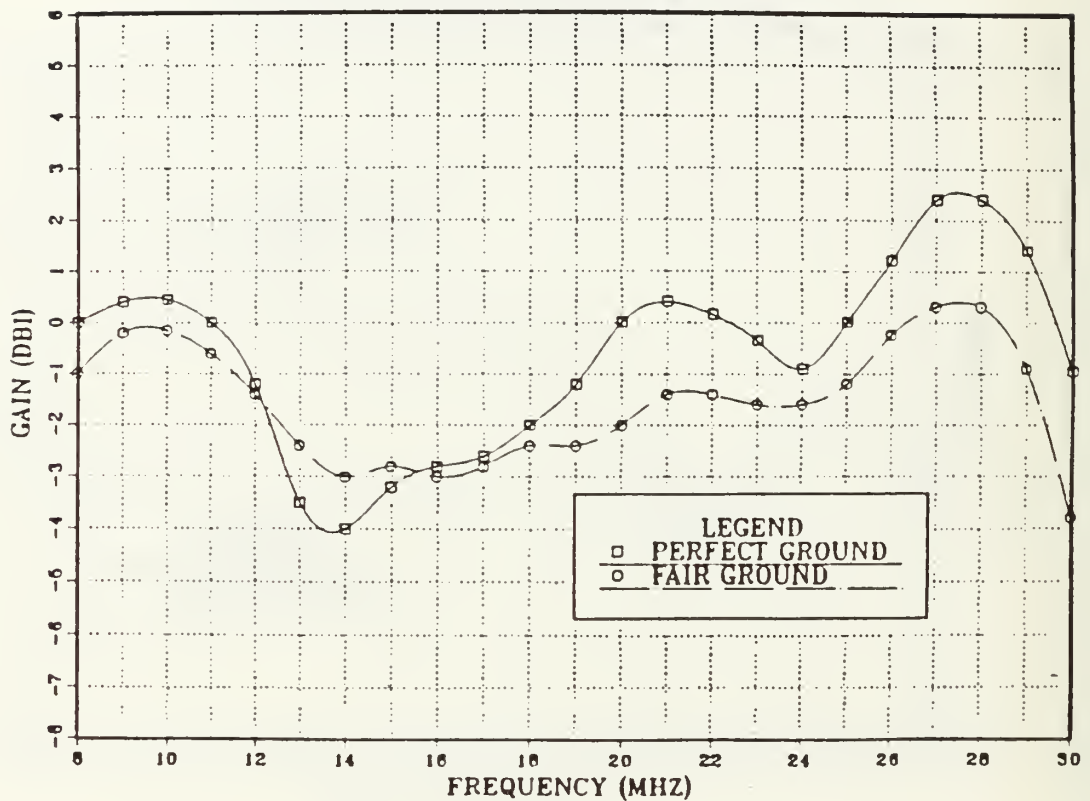


Figure 41. Max. gain vs frequency for the Air Force Highband DD antenna over perfect ground and fair ground (broadside)

ESI 32A2A BROADBAND DD ANTENNA

VSWR VS FREQ/PERF.GND/ $Z_0=50\text{ OHMS}$

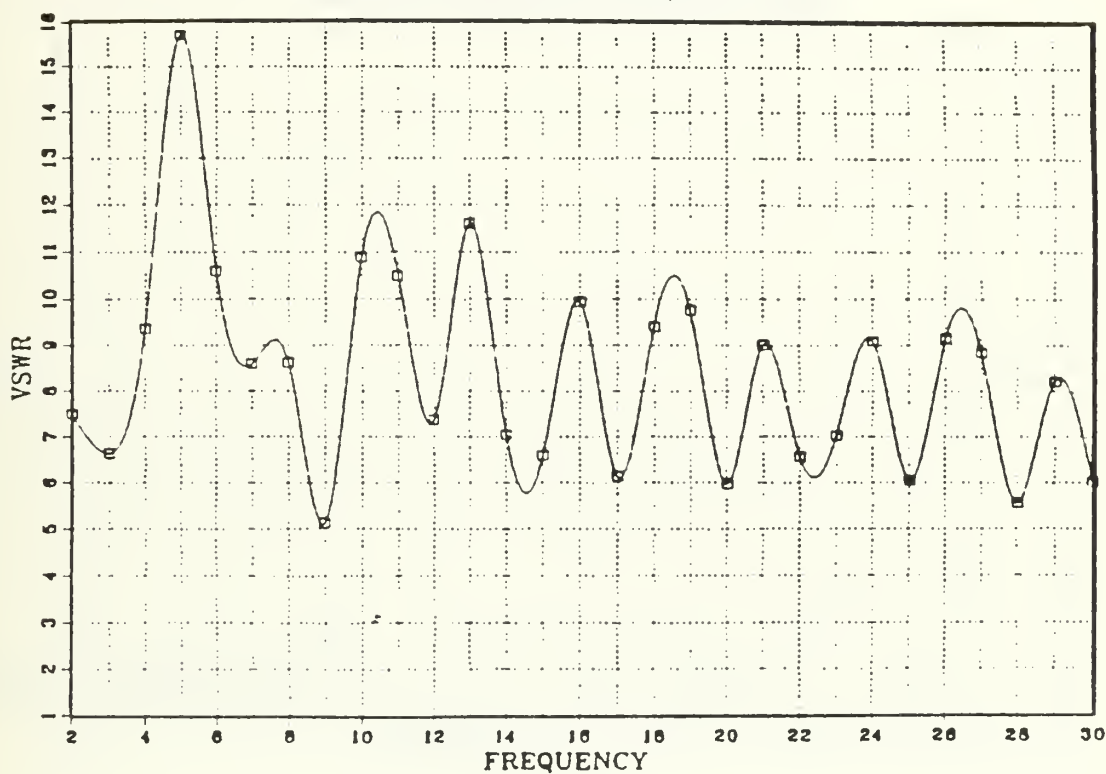


Figure 42. VSWR vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 50 ohms)

ESI 32A2A BROADBAND DD ANTENNA

VSWR VS FREQ/PRF.GND/ $Z_0=300$ OHMS

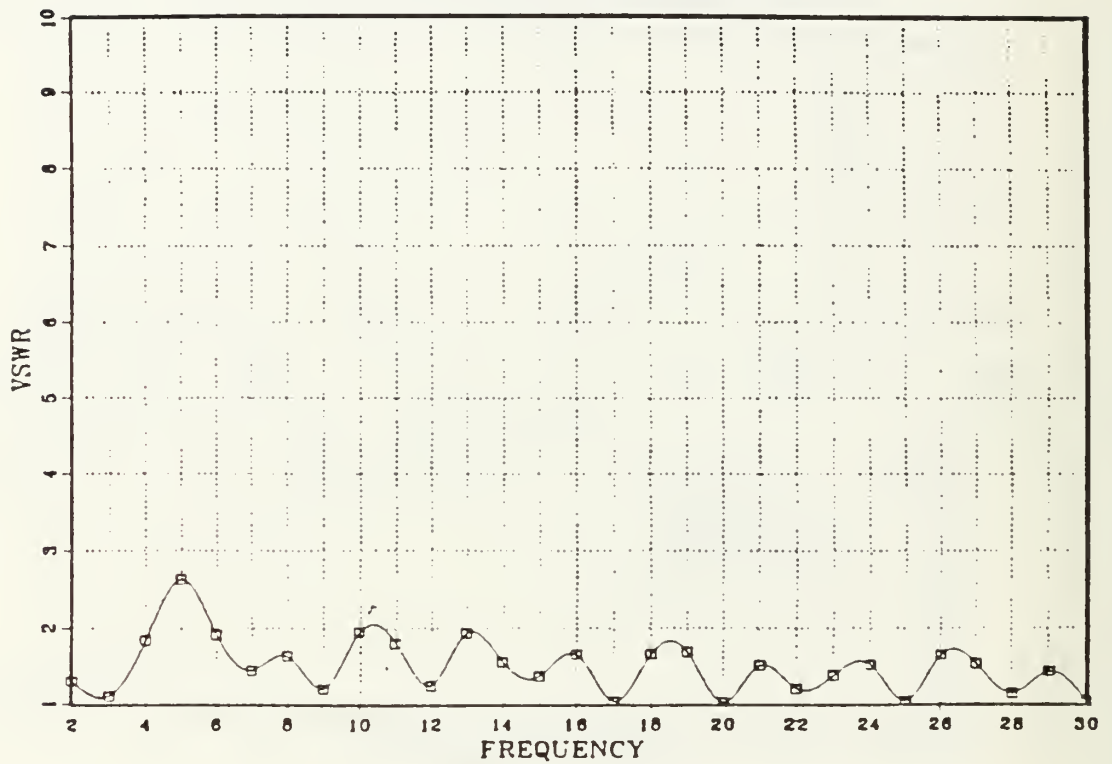


Figure 43. VSWR vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 300 ohms)

ESI 32A2A BROADBAND DD ANTENNA

VSWR VS FREQ/PRF.GND/ $Z_0=600$ OHMS

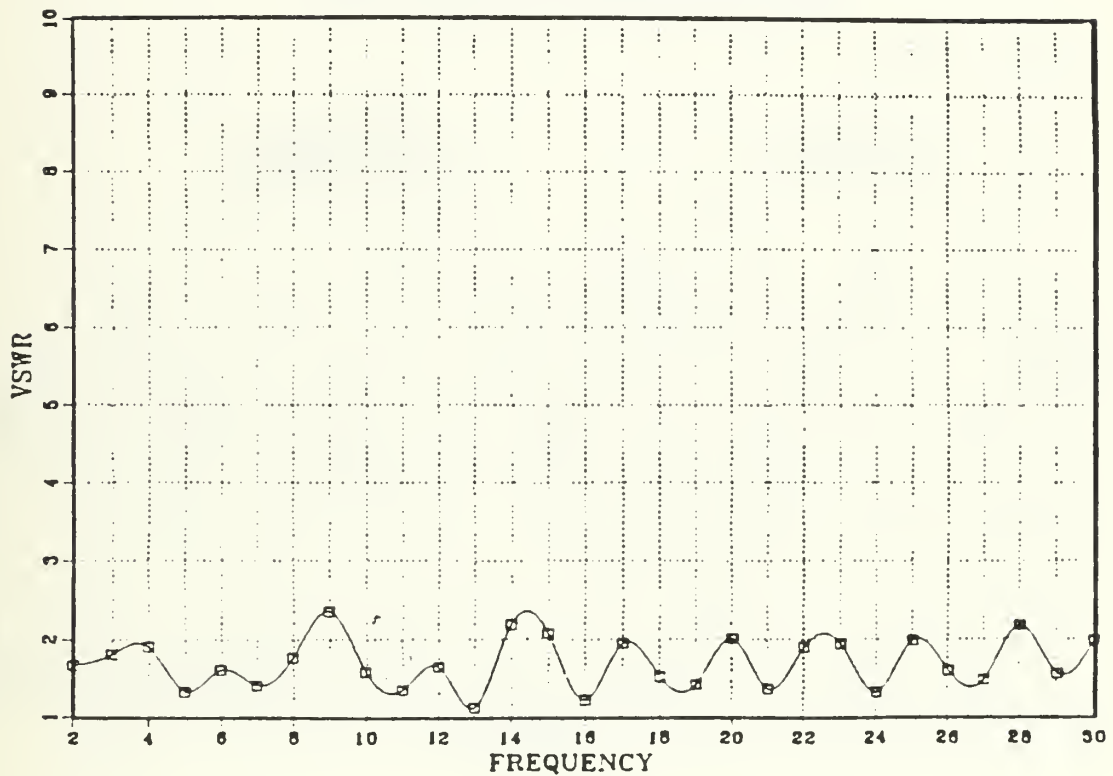


Figure 44. VSWR vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 600 ohms)

ESI 32A2A BROADBAND DD ANTENNA

COMPARISON VSWR VS FREQ/PERF.GND

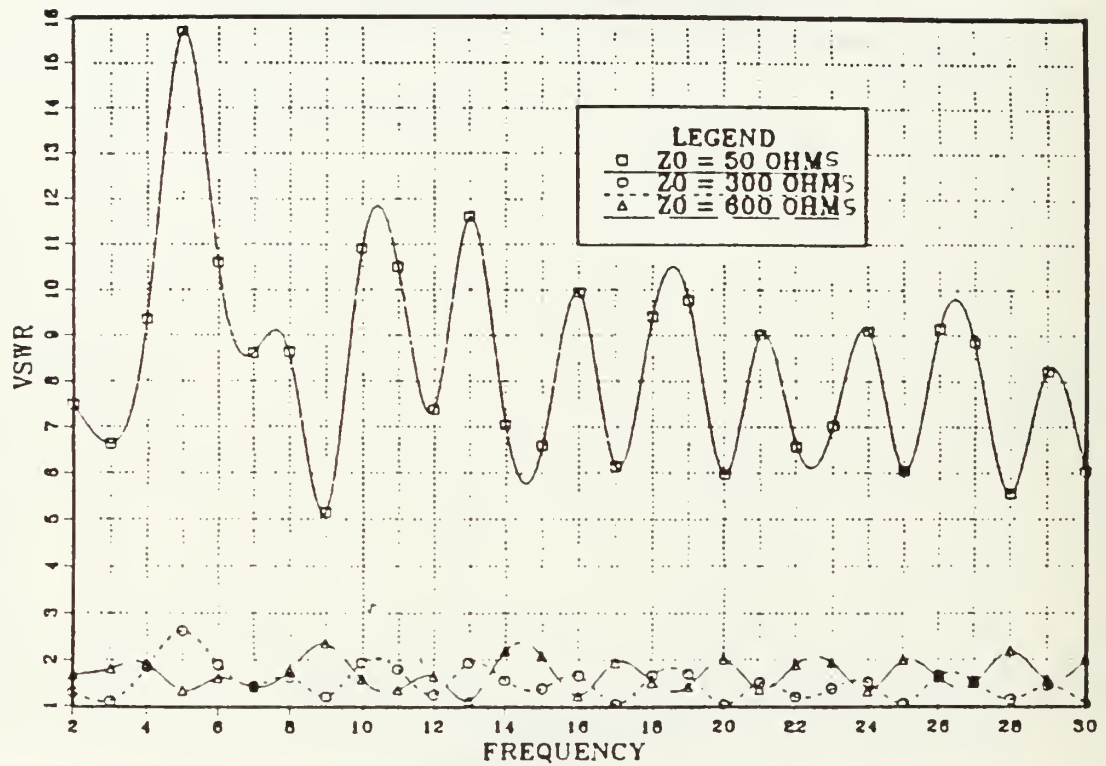


Figure 45. Comparison VSWR vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground

ESI 32A2A BROADBAND DD ANTENNA

IMP. VS FREQ./PERF.GND/ $Z_0=50$ OHMS

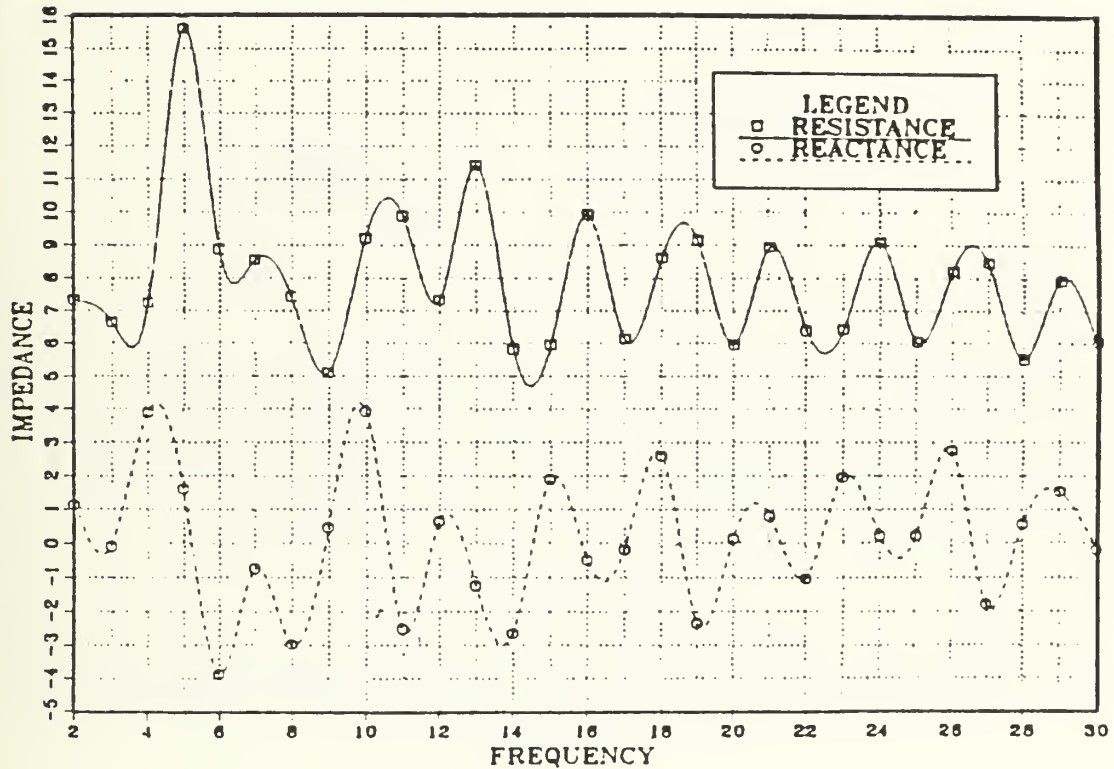


Figure 46. Impedance vs freq. for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 50 ohms)

ESI 32A2A BROADBAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=300$ OHMS

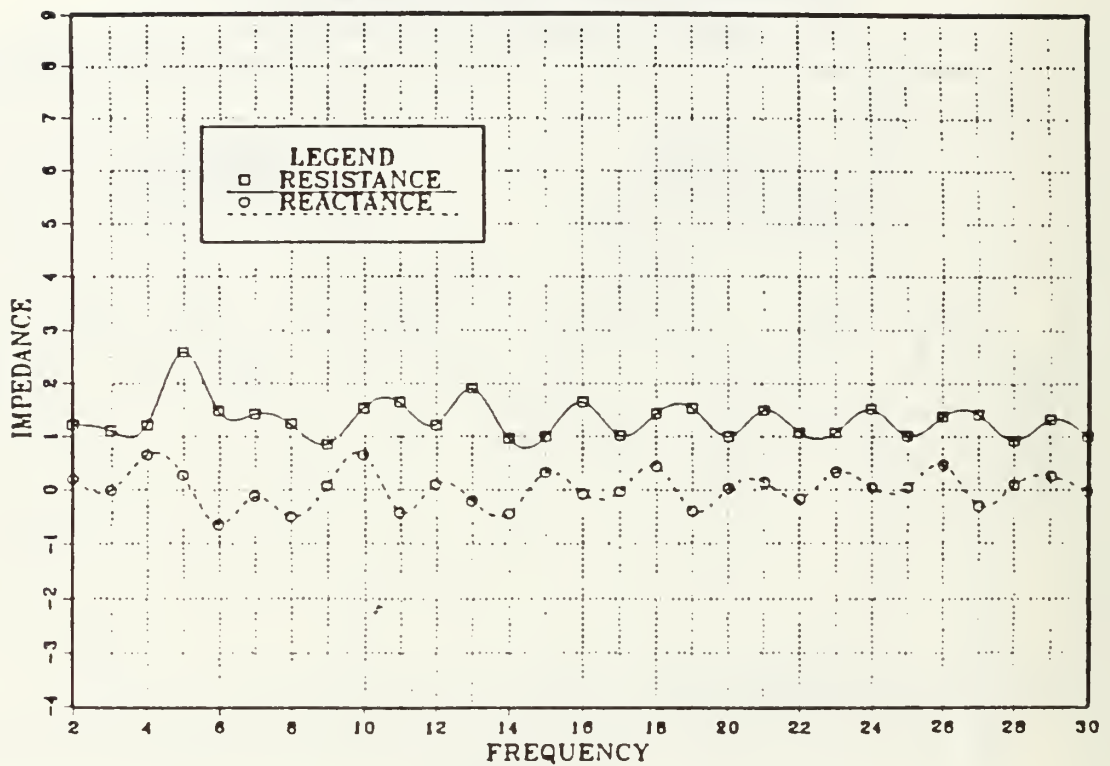


Figure 47. Impedance vs freq. for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 300 ohms)

ESI 32A2A BROADBAND DD ANTENNA

IMP. VS FREQ/PRF.GND/ $Z_0=600$ OHMS

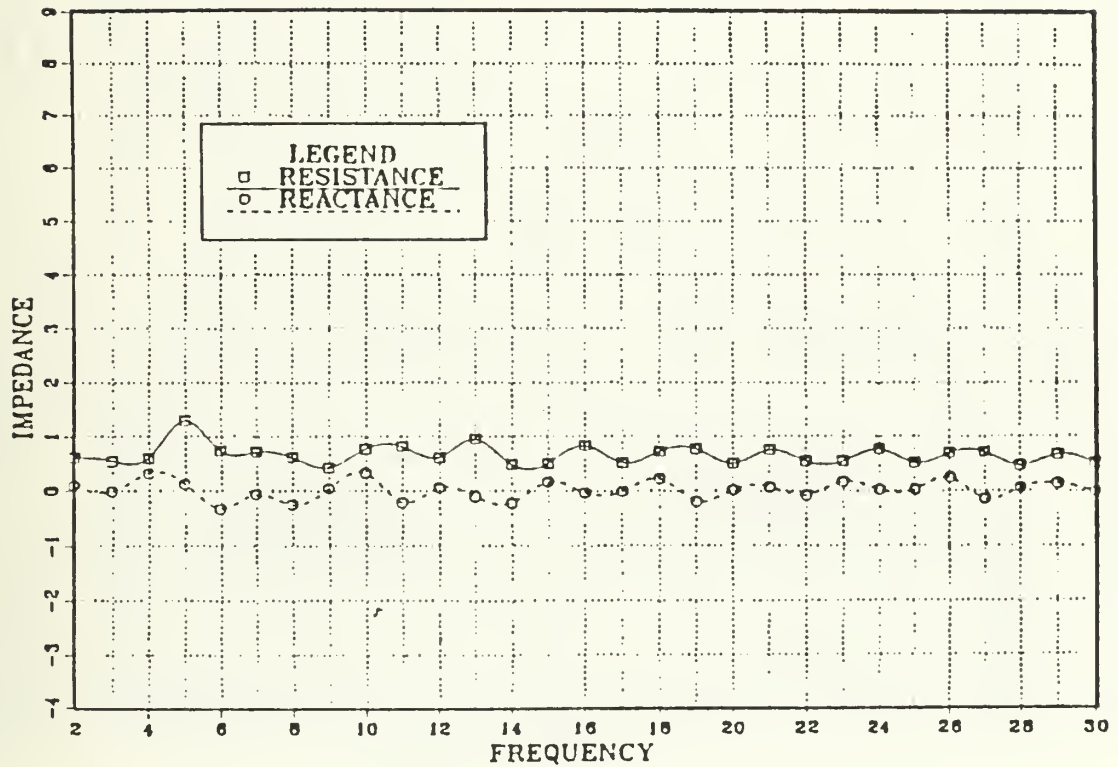


Figure 48. Impedance vs freq. for the ESI 32A2A Broadband DD antenna over perfect ground (normalized impedance = 600 ohms)

ESI 32A2A BROADBAND DD ANTENNA

ELEVATION PATTERN (BORESIGHT)

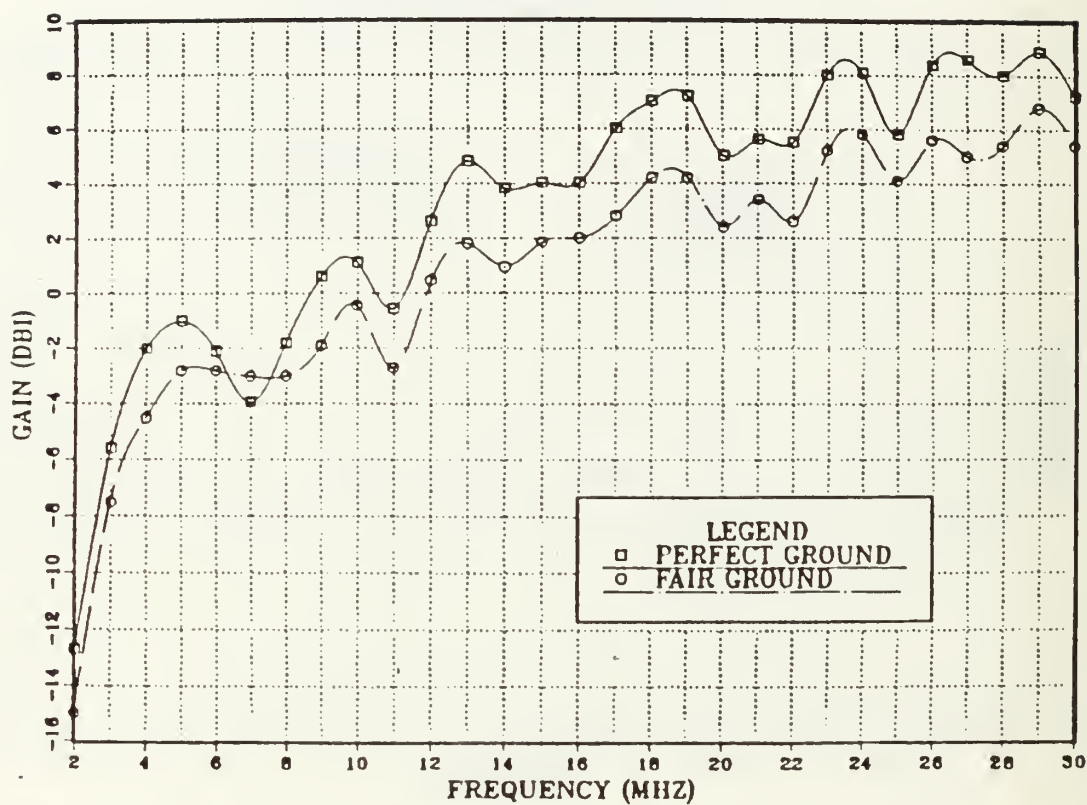


Figure 49. Max. gain vs freq. for the ESI 32A2A Broadband DD antenna over perfect ground and fair ground (boresight)

ESI 32A2A BROADBAND DD ANTENNA

ELEVATION PATTERN (BROADSIDE)



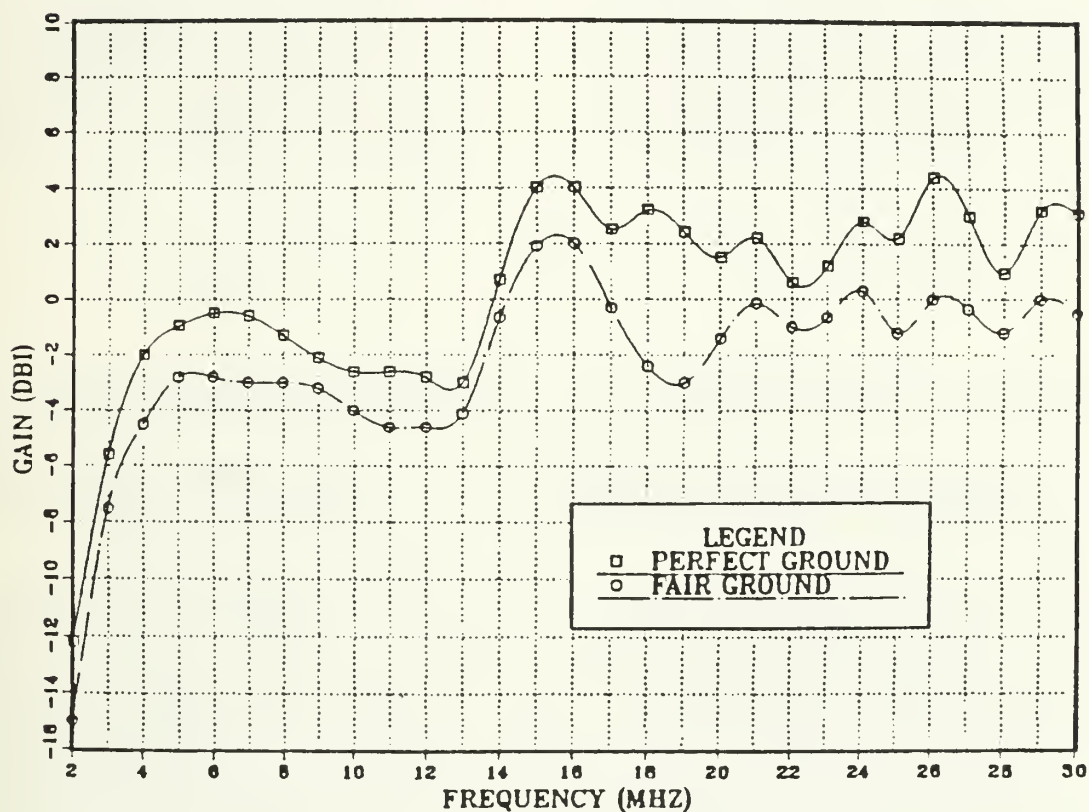


Figure 50. Max. gain vs frequency for the ESI 32A2A Broadband DD antenna over perfect ground and fair ground (broadside)


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

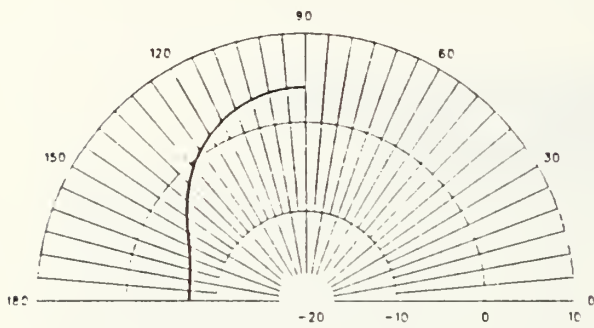

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

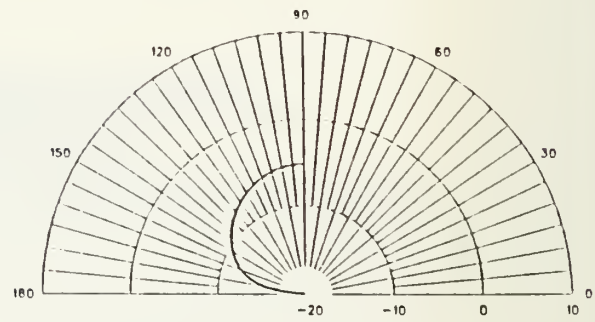

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

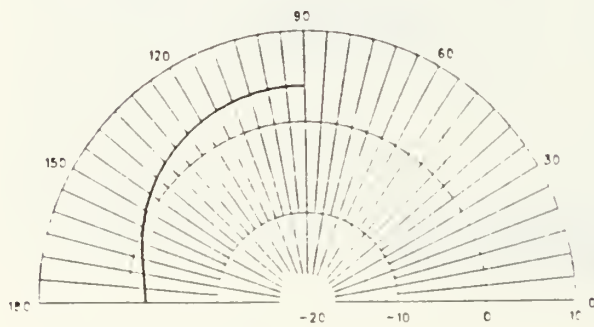

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



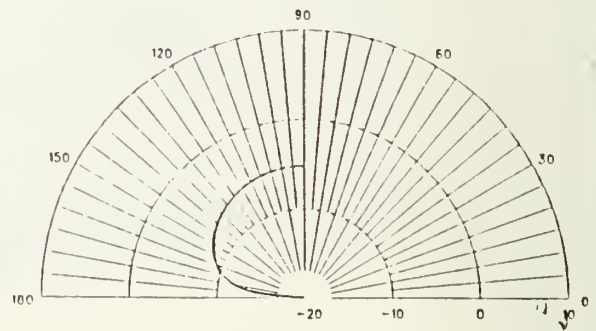


Figure 51. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 2 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

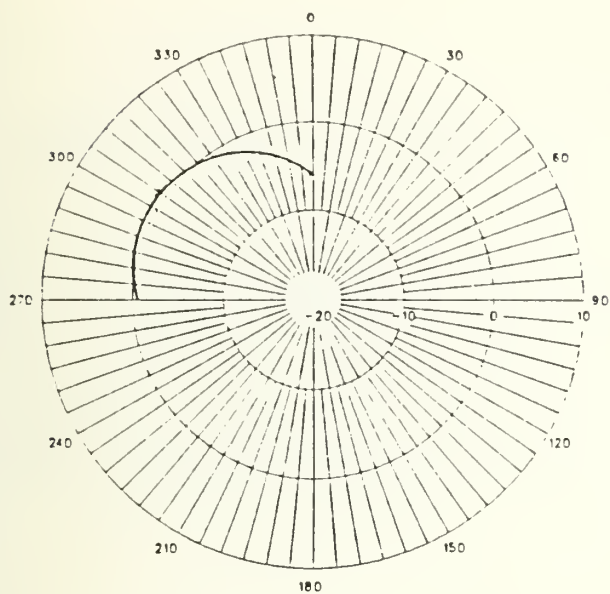

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

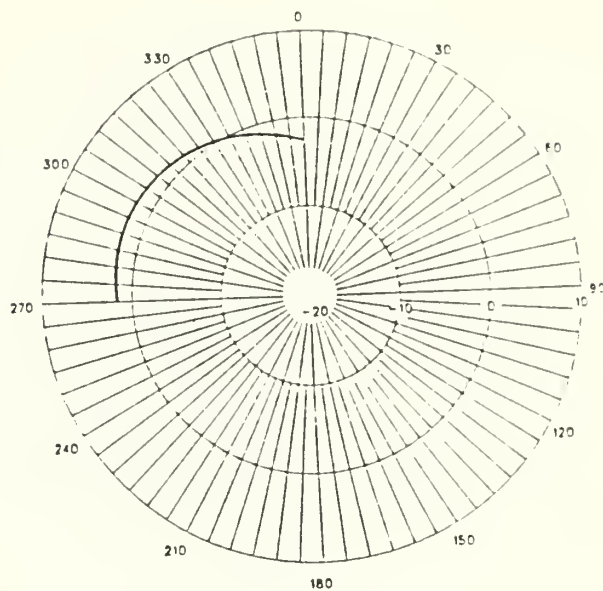

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

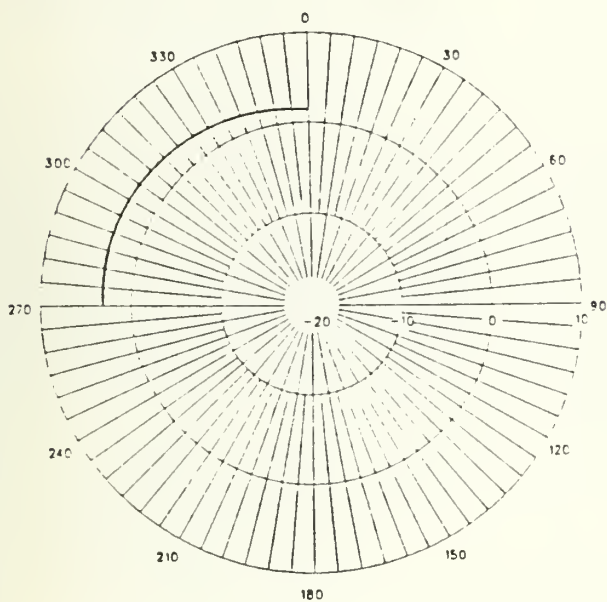

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



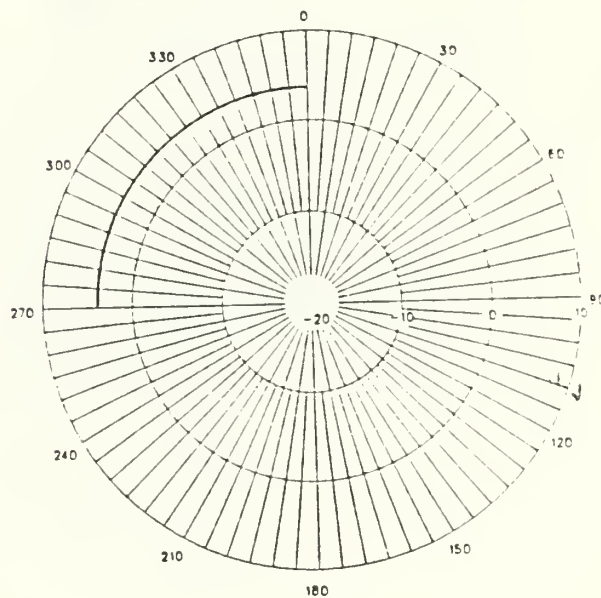


Figure 52. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 2 MHz


ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

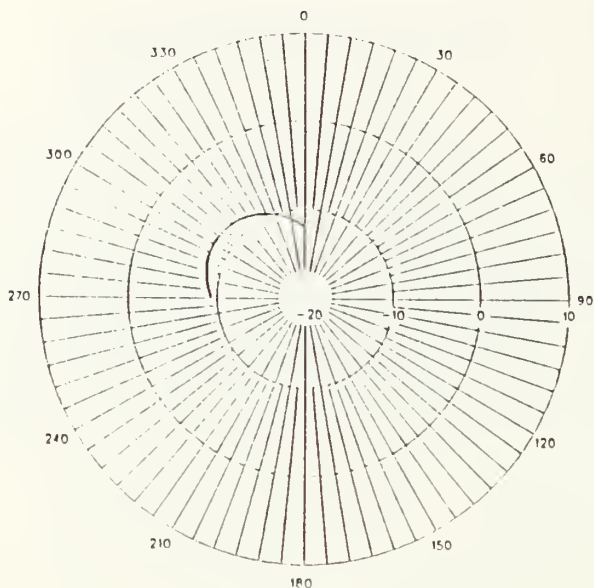

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

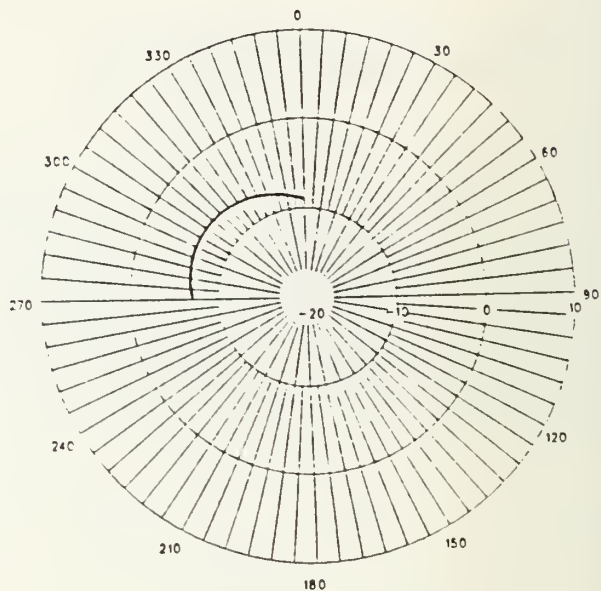

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

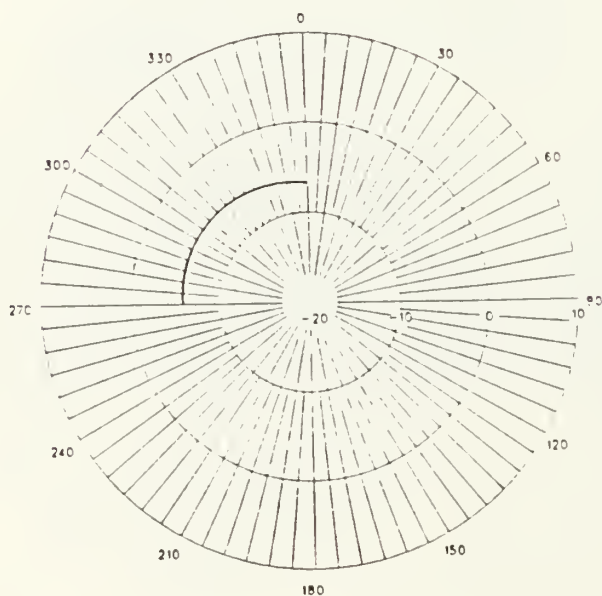

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



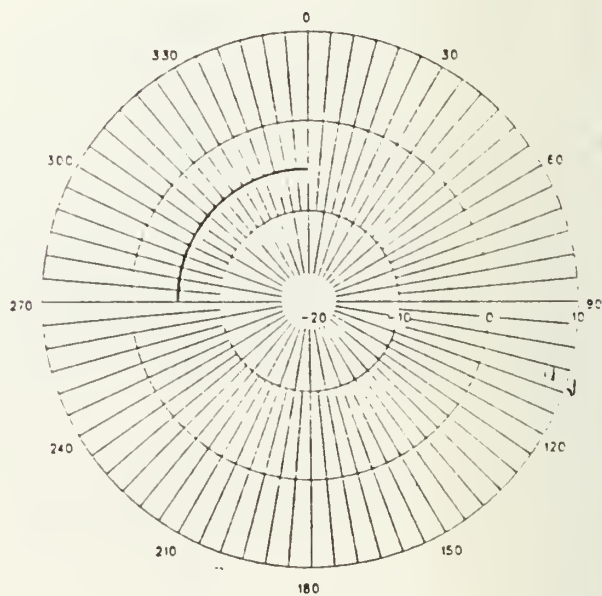


Figure 53. Azimuth patterns of the Army Lowband DD antenna over fair ground at 2 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

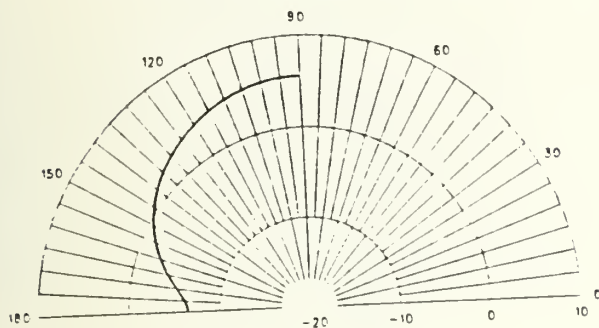

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

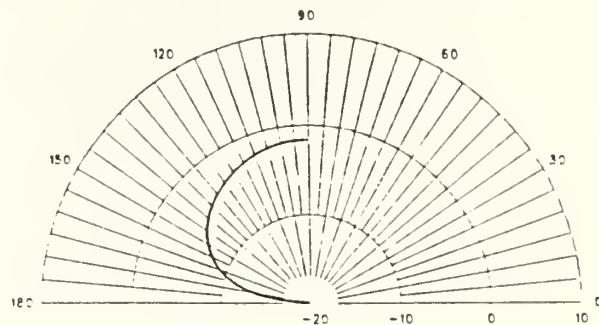

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

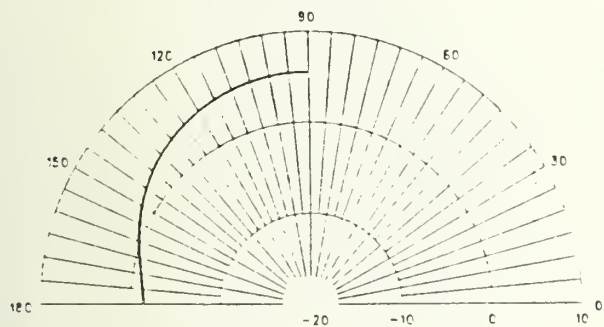

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



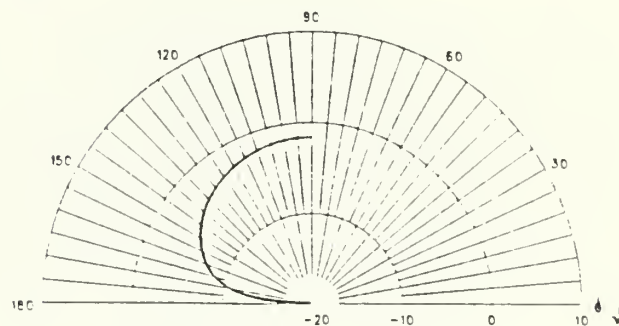


Figure 54. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 3 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

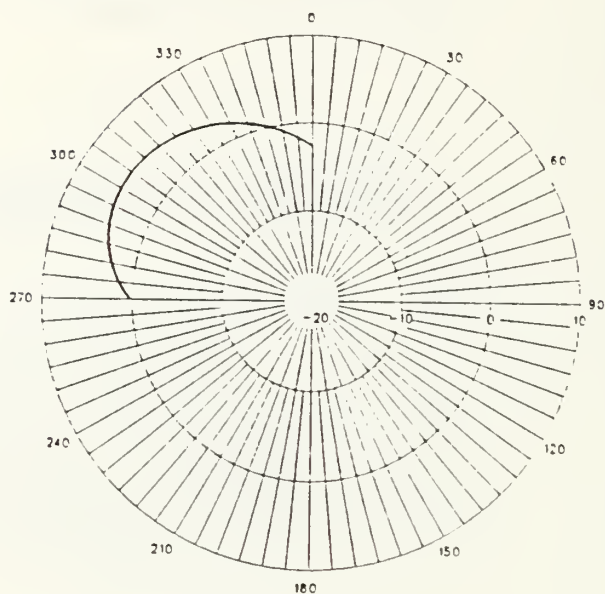

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

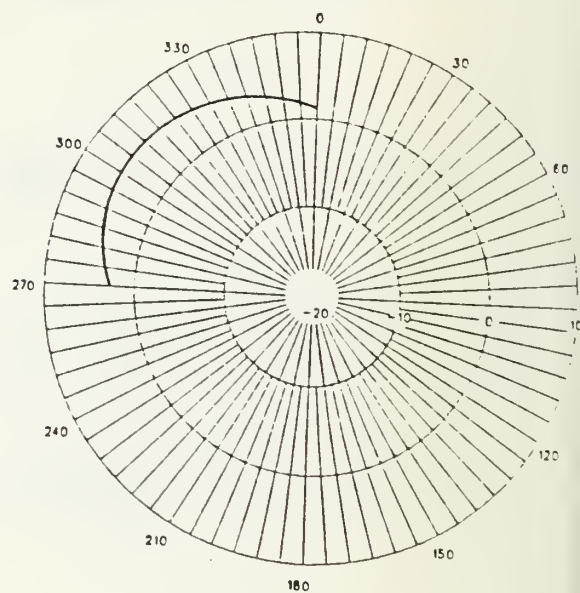

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

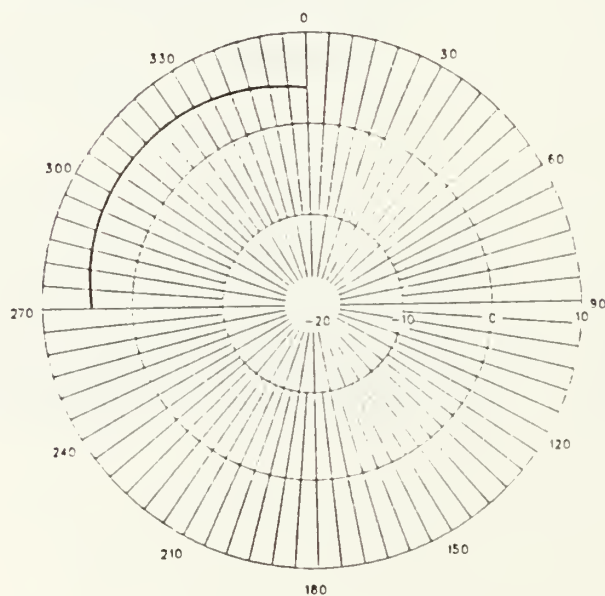

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



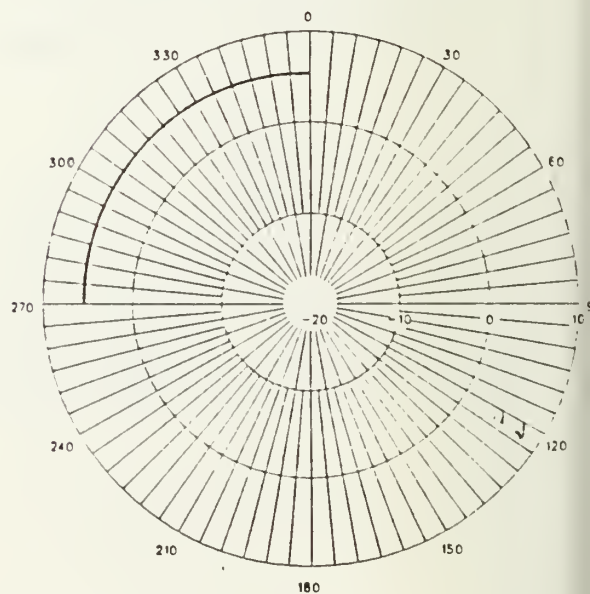


Figure 55. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 3 MHz


ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

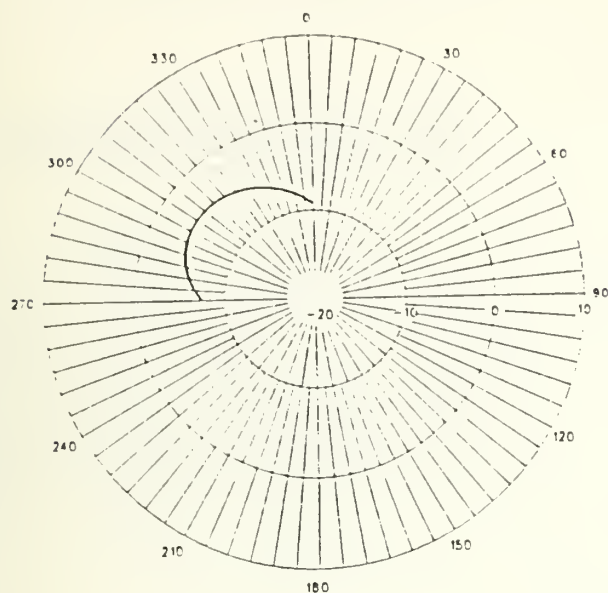

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

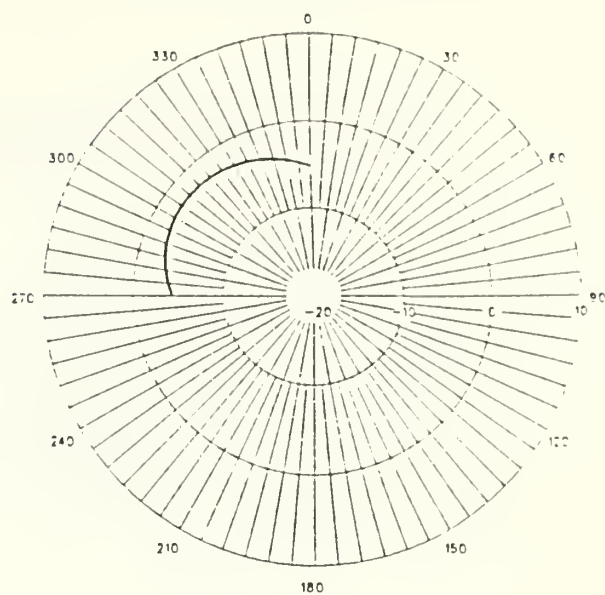

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

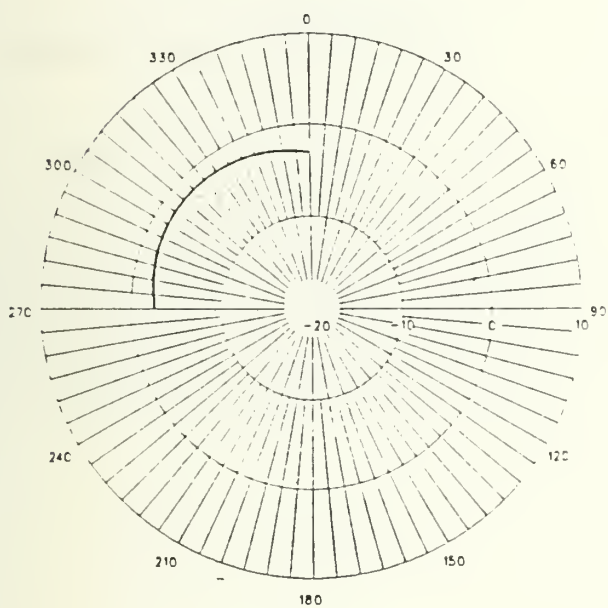

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



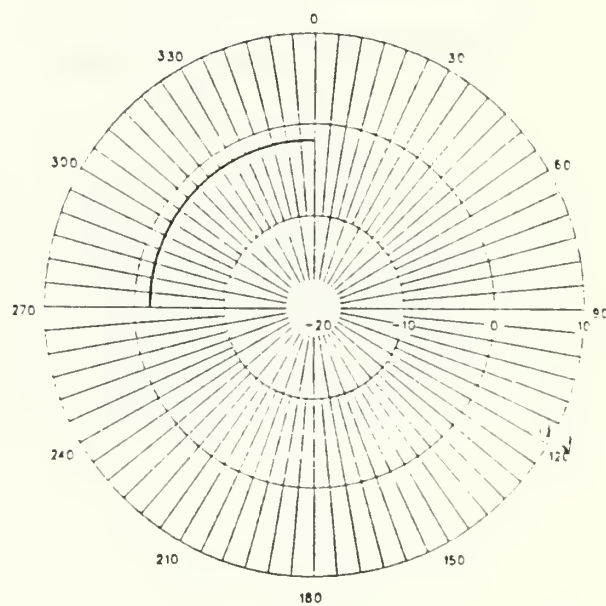


Figure 56. Azimuth patterns of the Army Lowband DD antenna over fair ground at 3 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

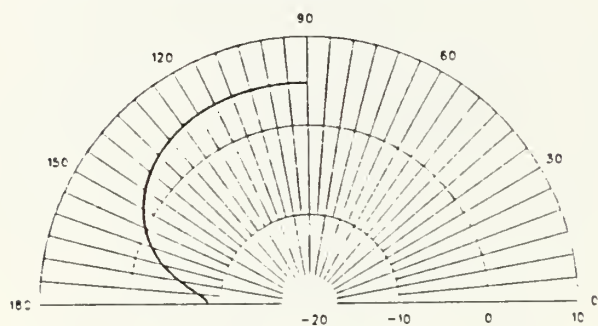

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

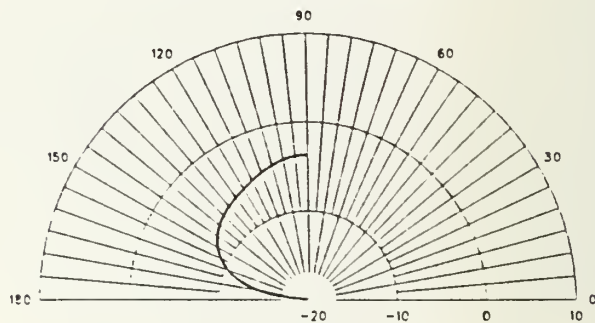

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

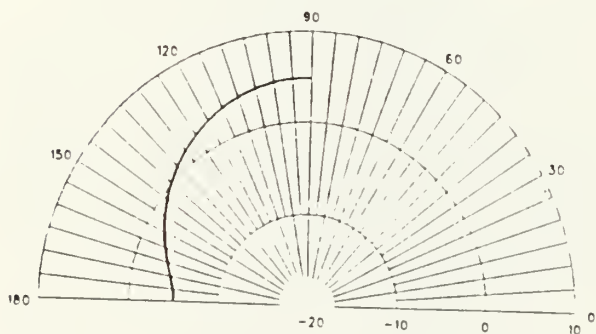

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



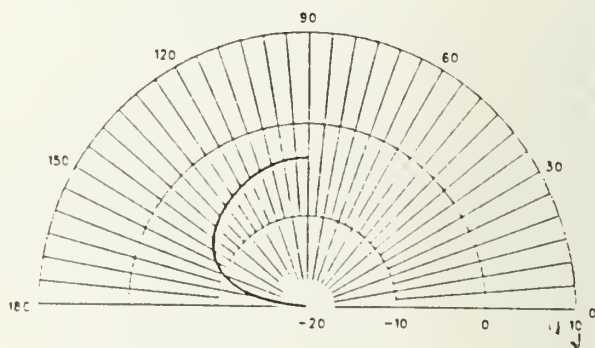


Figure 57. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 4 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

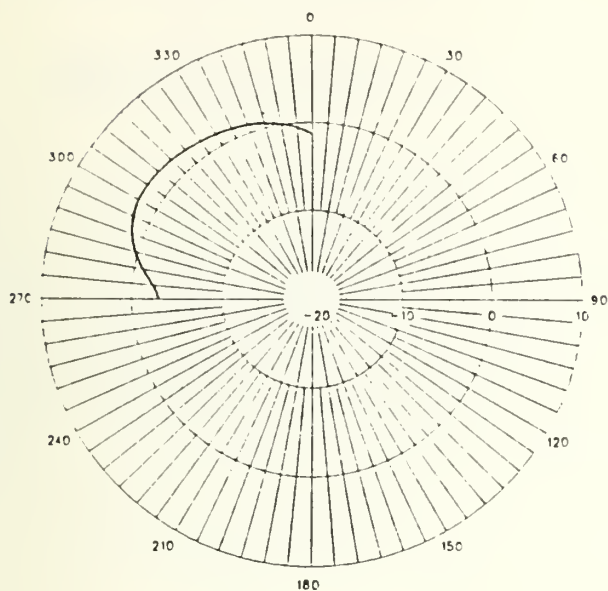

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

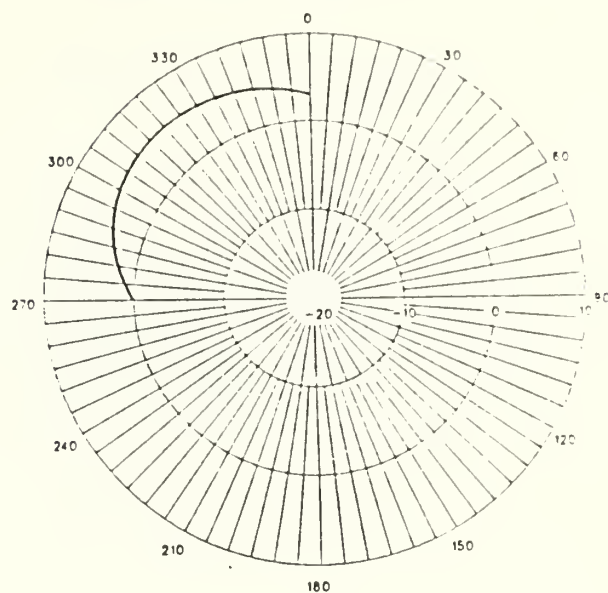

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

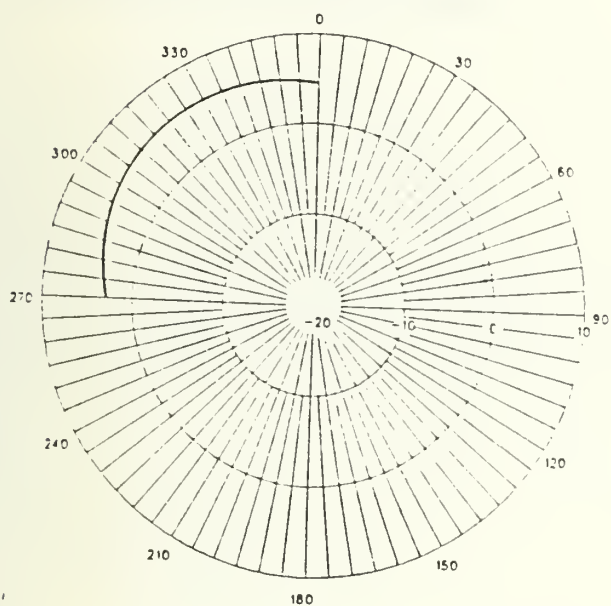

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



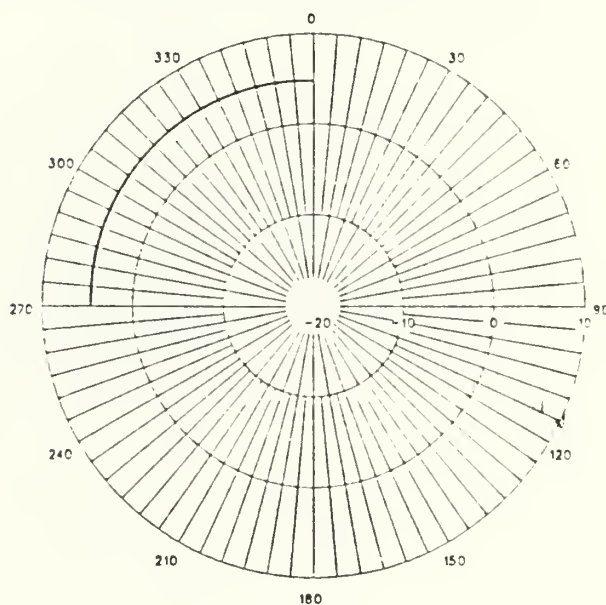


Figure 58. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 4 MHz


ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

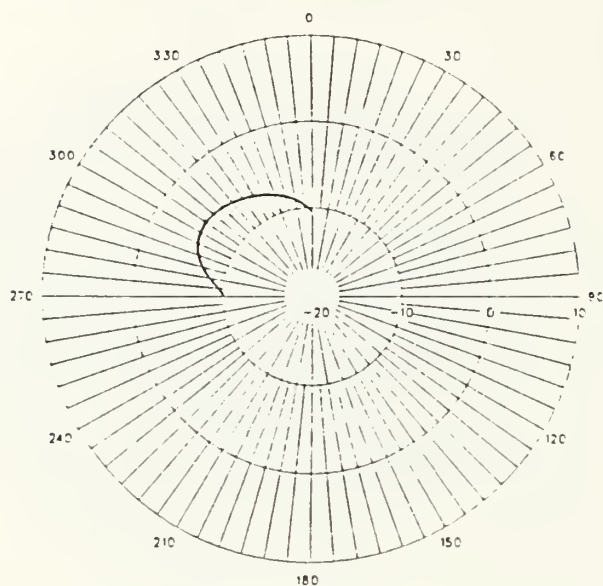

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

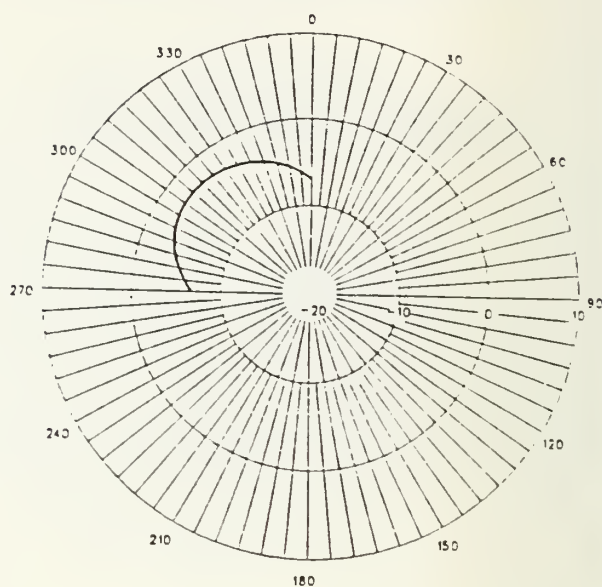

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

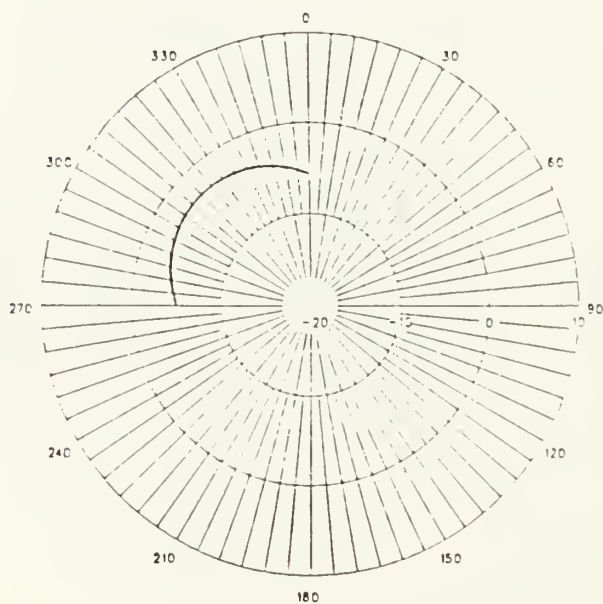

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



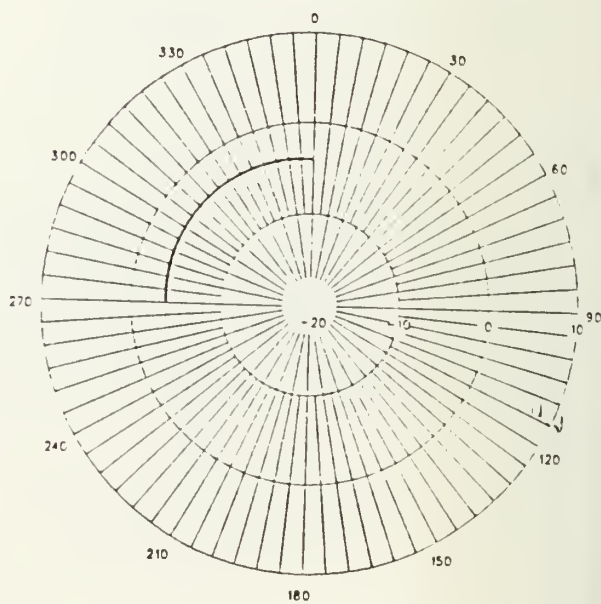


Figure 59. Azimuth patterns of the Army Lowband DD antenna over fair ground at 4 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

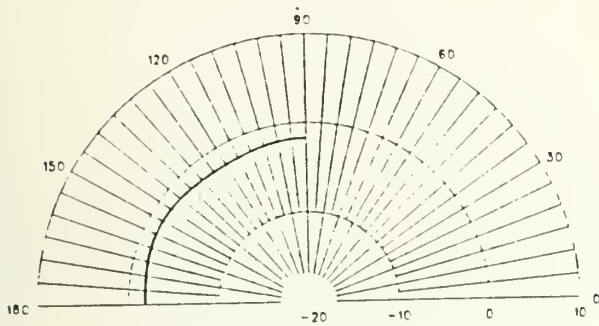

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

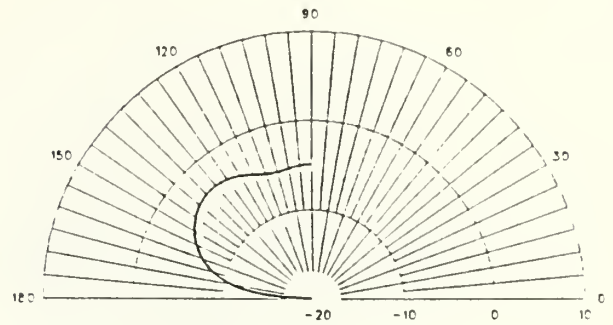

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

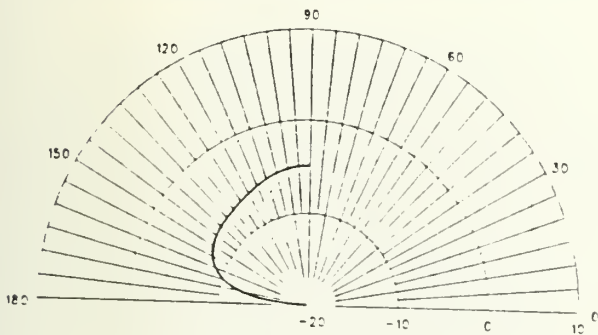

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT



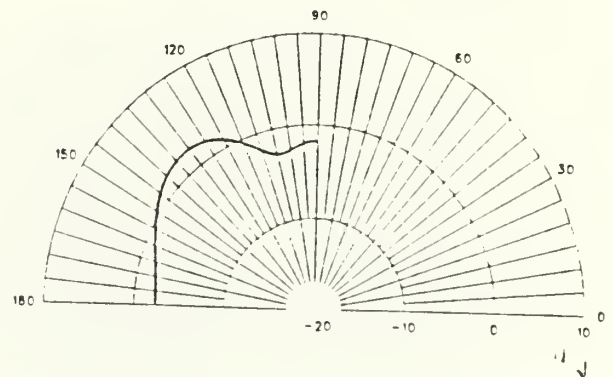


Figure 60. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 5 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

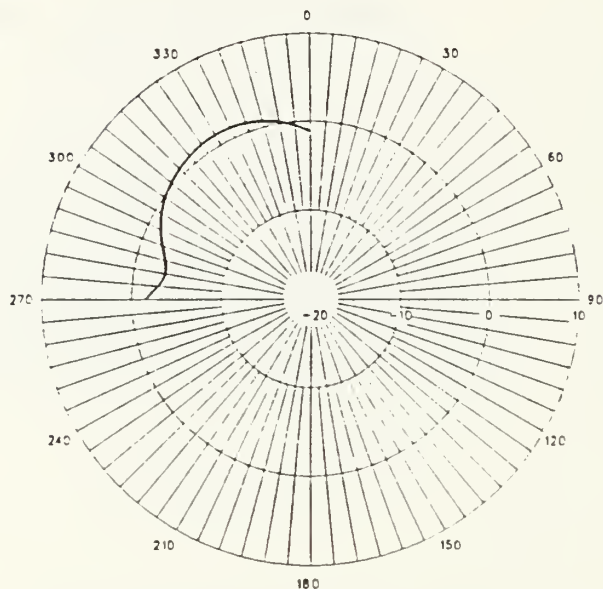

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

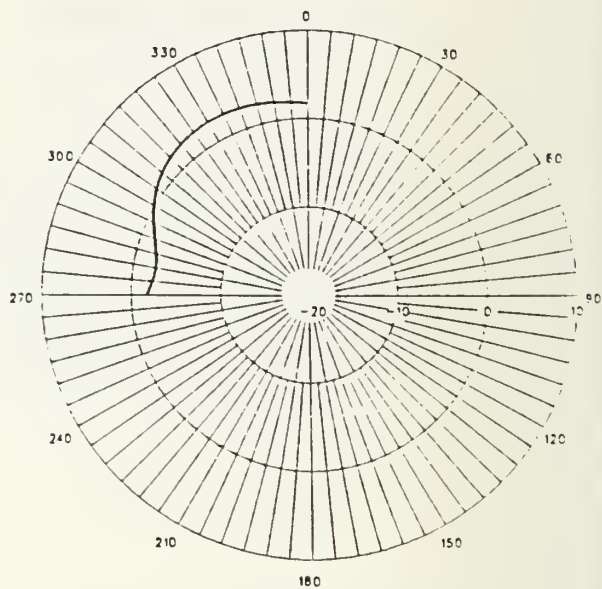

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

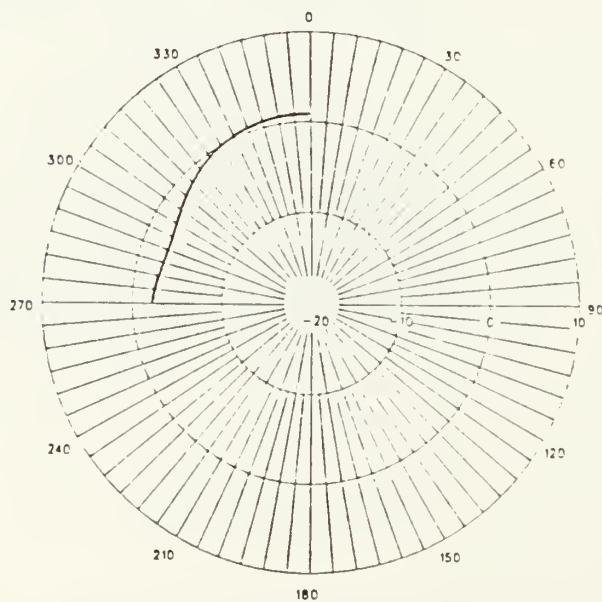

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



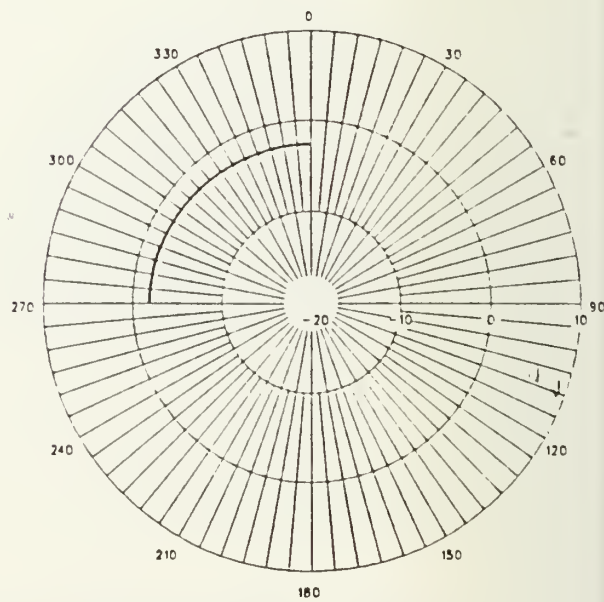


Figure 61. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 5 MHz


ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

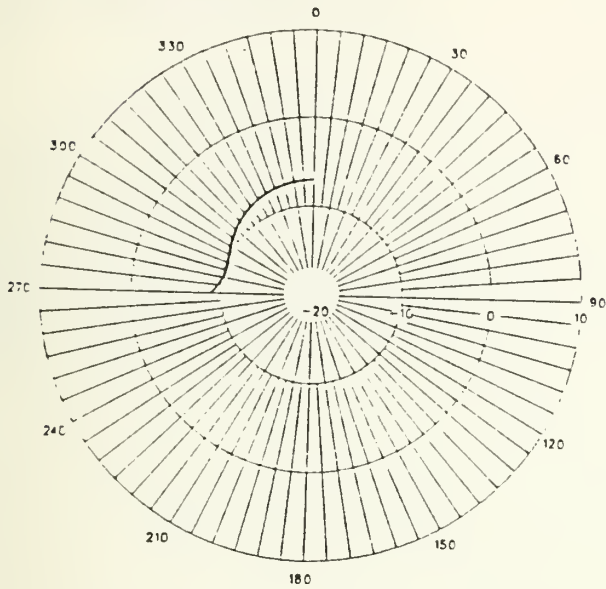

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

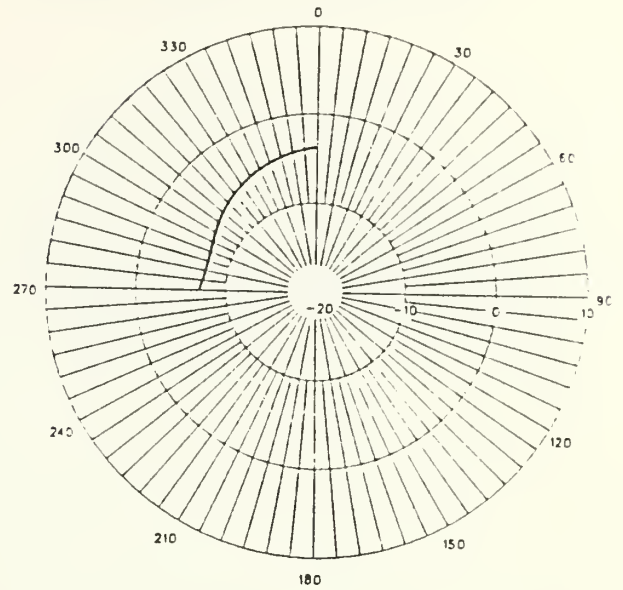

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

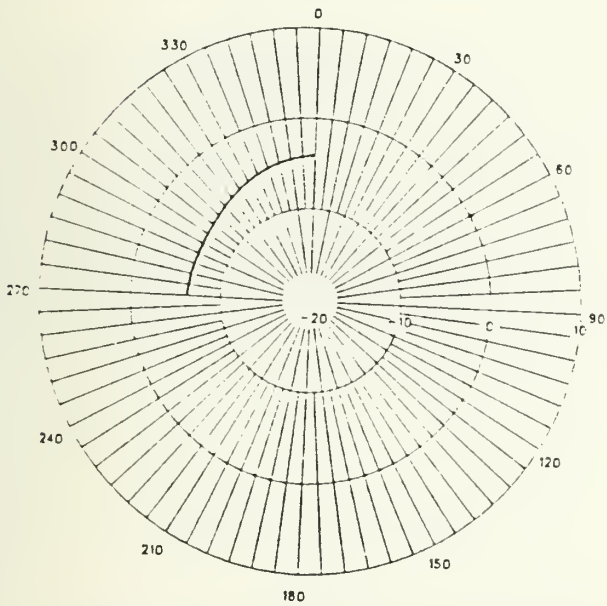

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



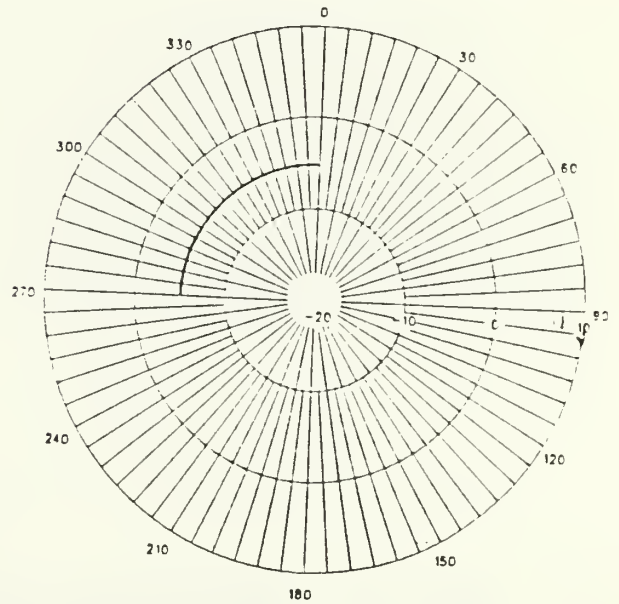


Figure 62. Azimuth patterns of the Army Lowband DD antenna over fair ground at 5 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

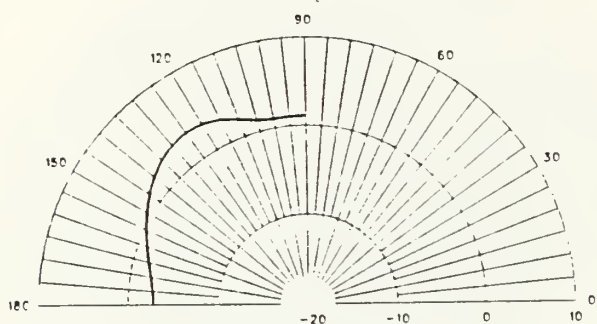

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

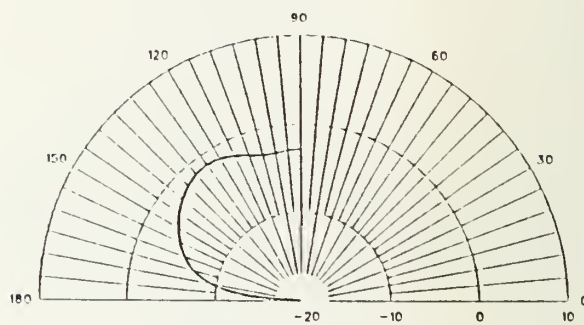

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

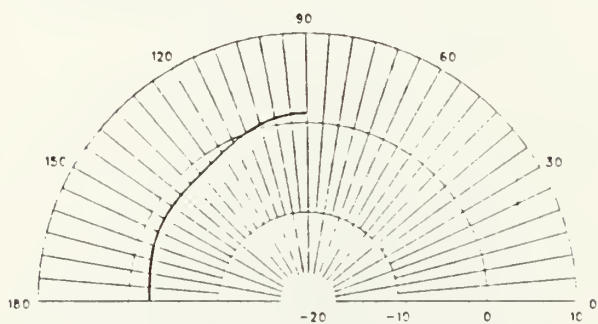

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



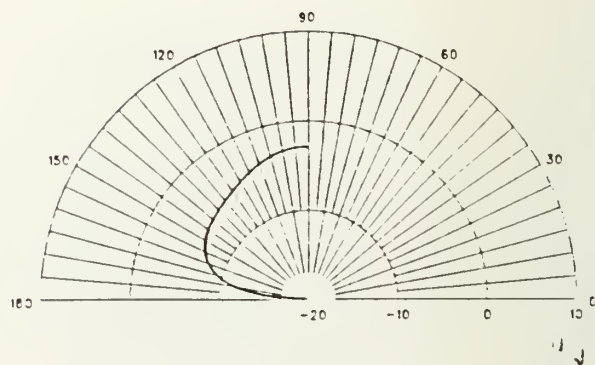


Figure 63. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 6 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

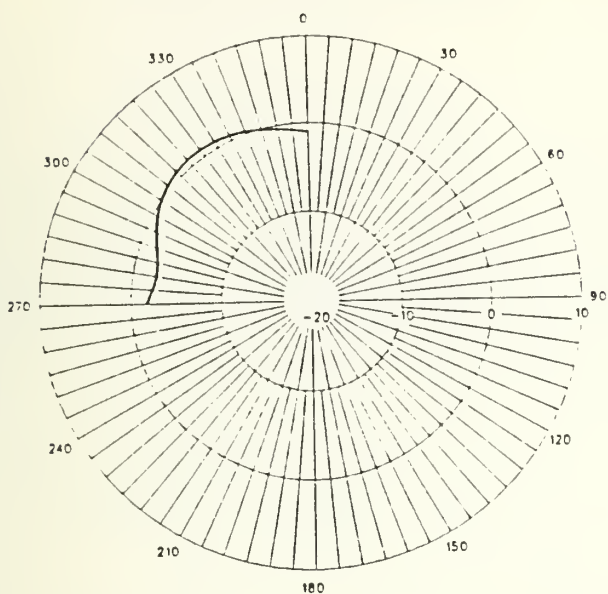

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

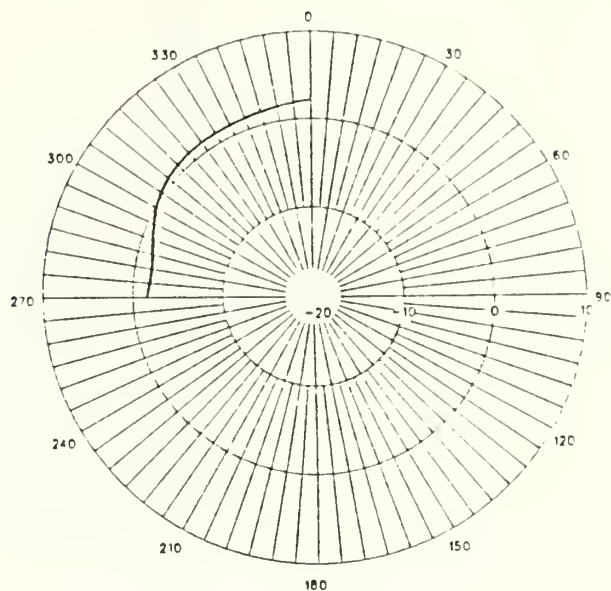

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

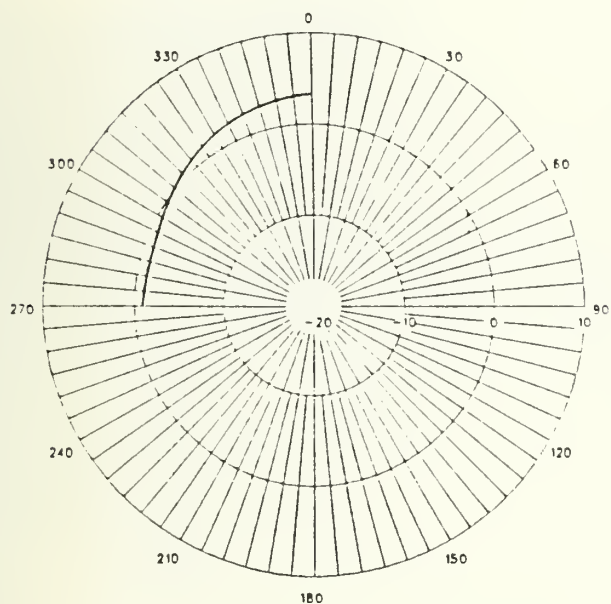

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



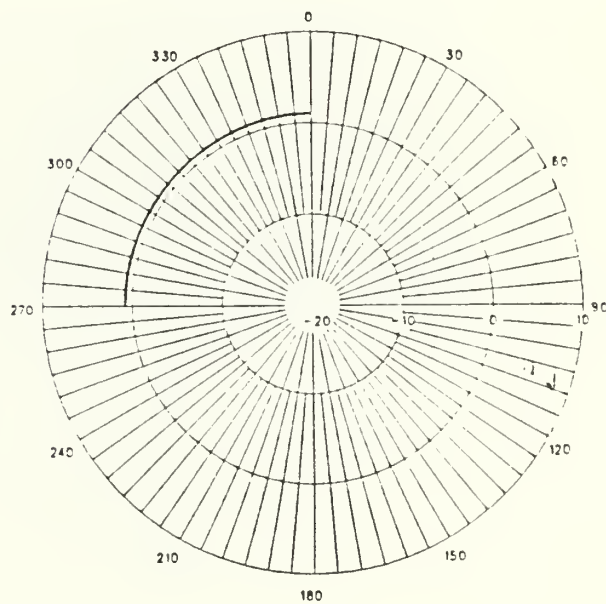


Figure 64. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 6 MHz


ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

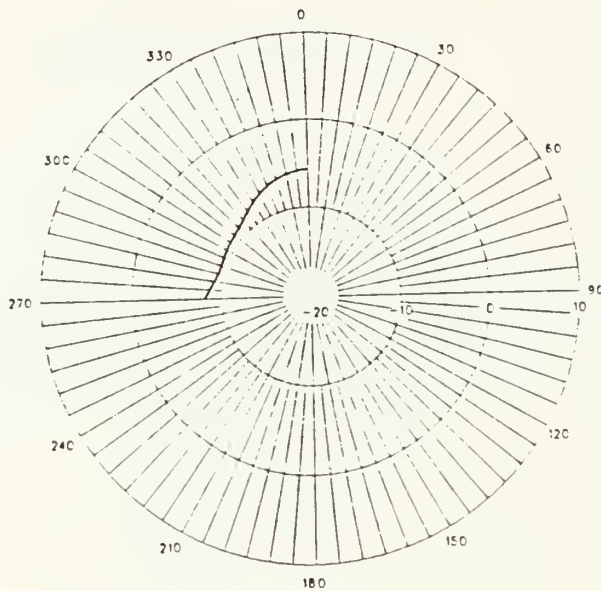

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

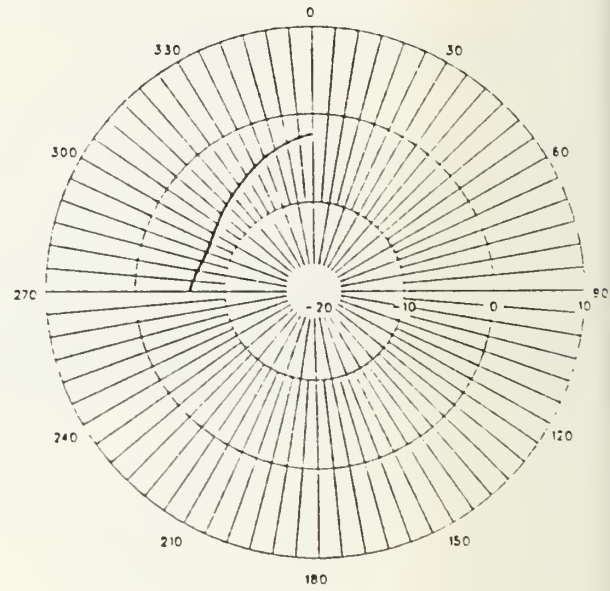

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

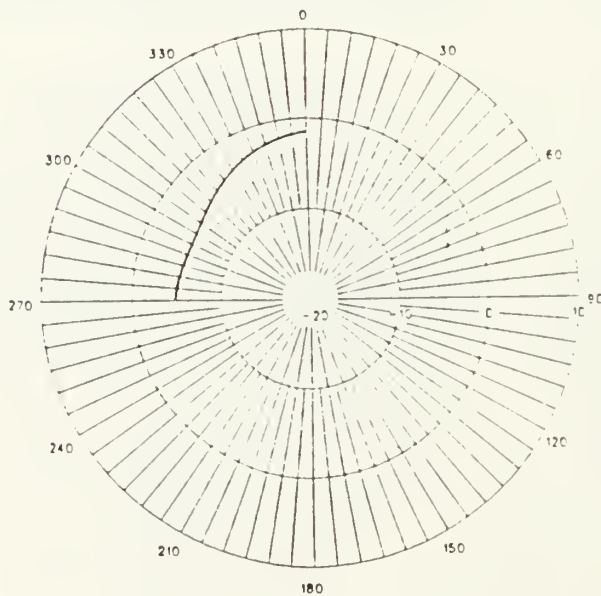

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



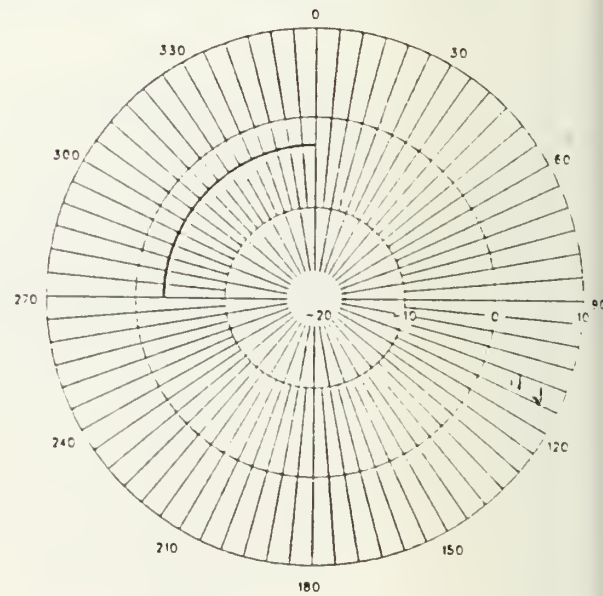


Figure 65. Azimuth patterns of the Army Lowband DD antenna over fair ground at 6 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

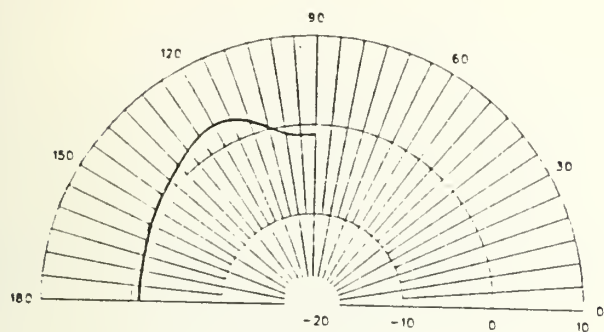

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

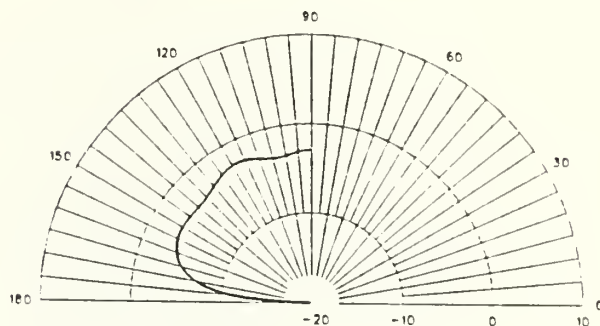

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

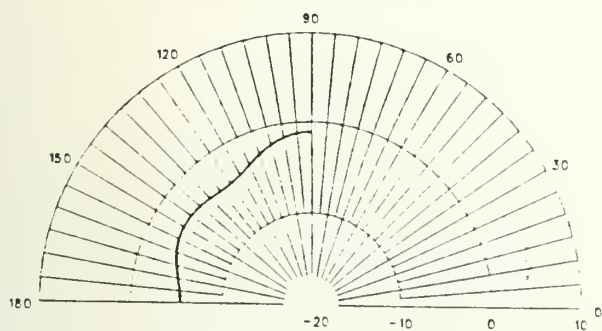

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



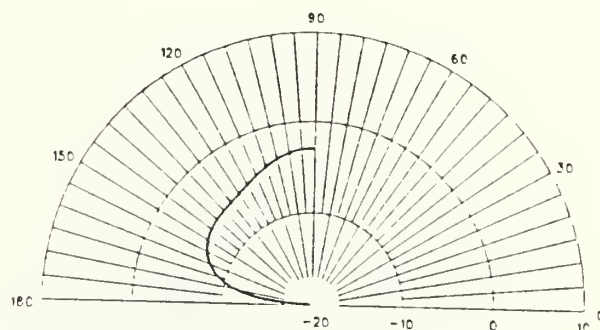


Figure 66. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 7 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

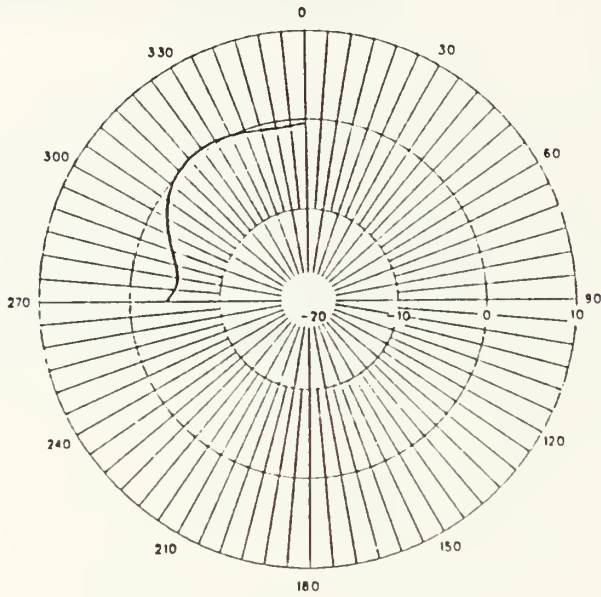

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

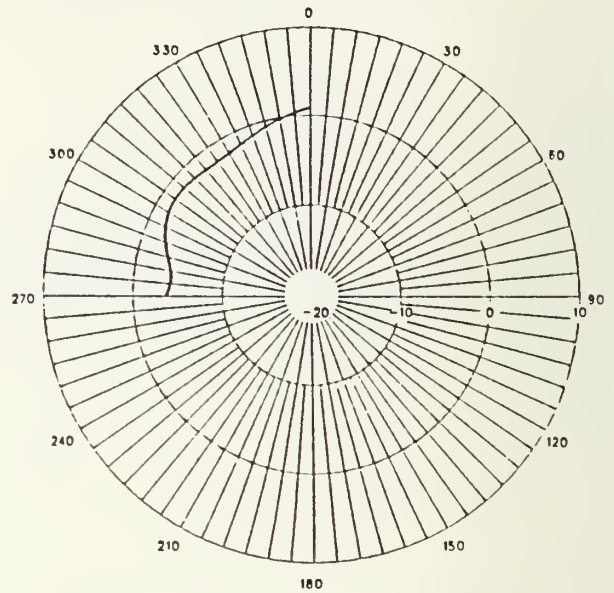

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

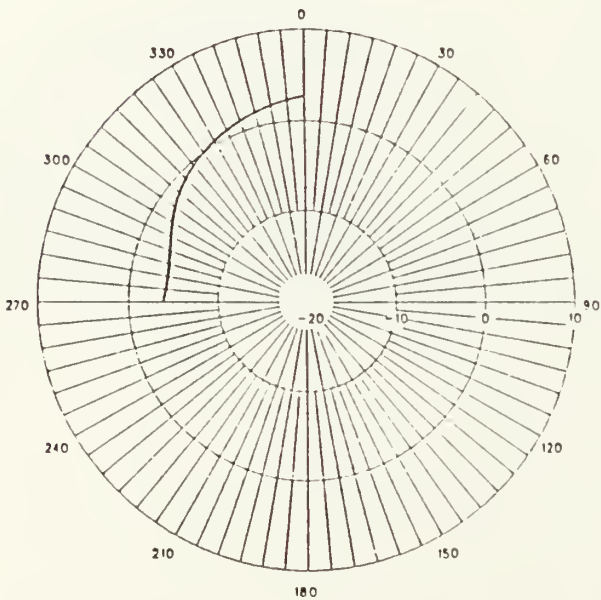

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



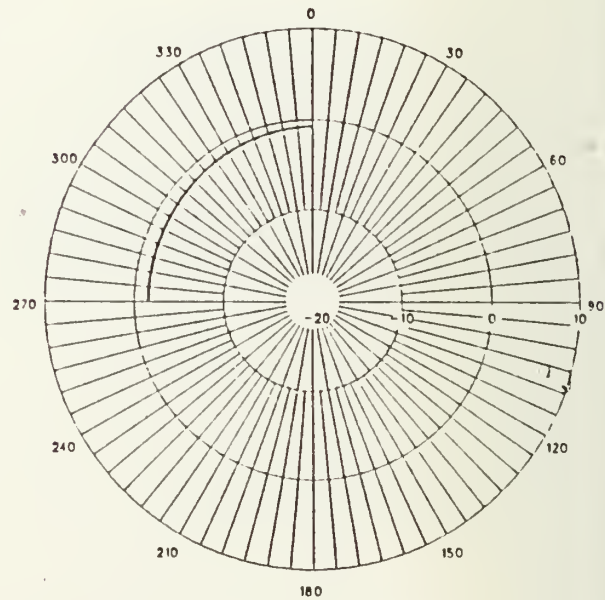


Figure 67. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 7 MHz


ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

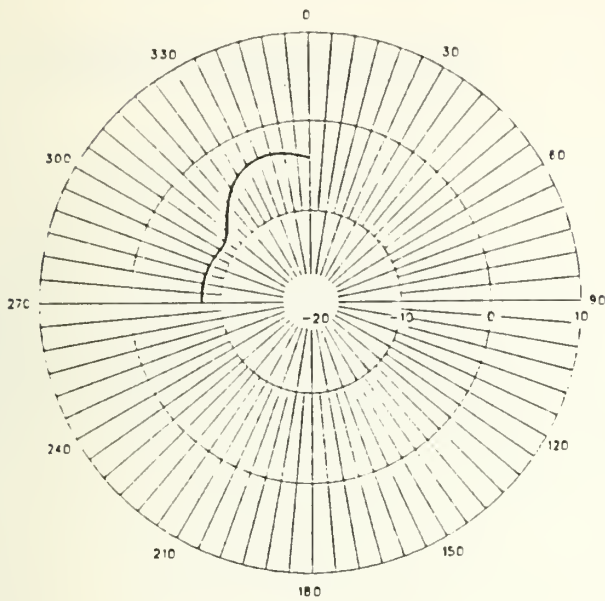

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

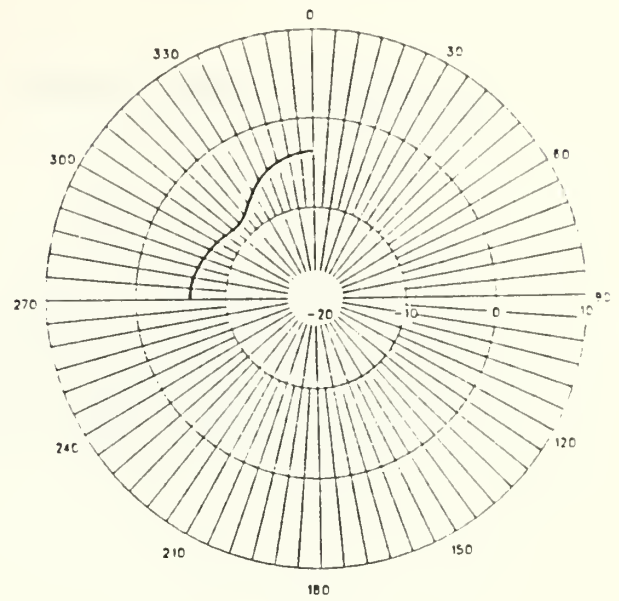

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

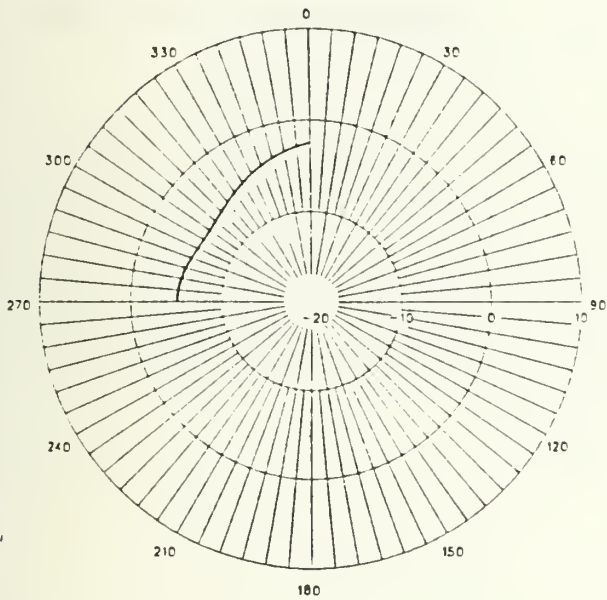

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



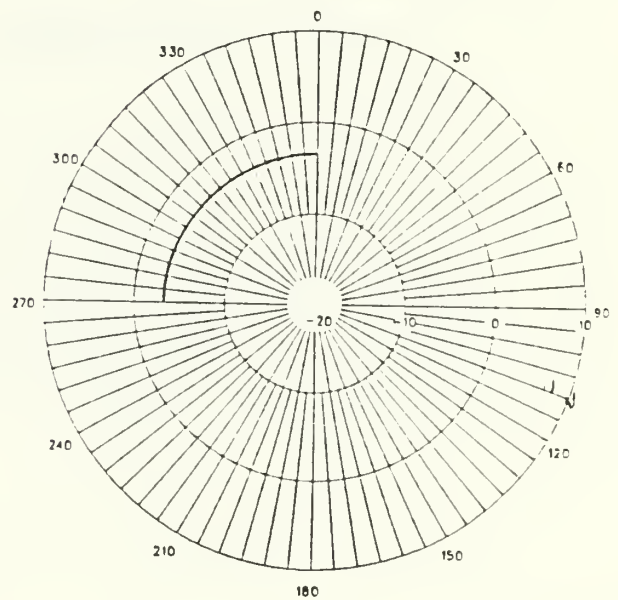


Figure 68. Azimuth patterns of the Army Lowband DD antenna over fair ground at 7 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

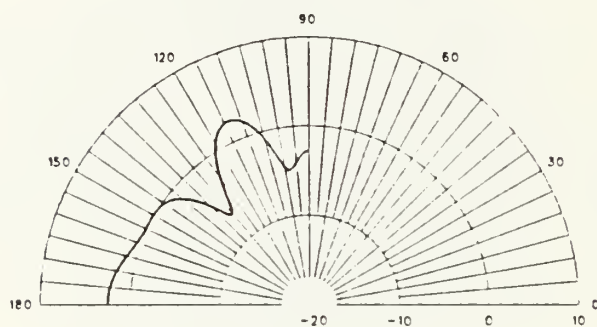

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

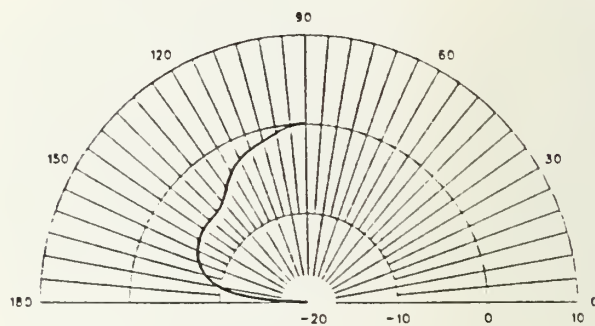

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

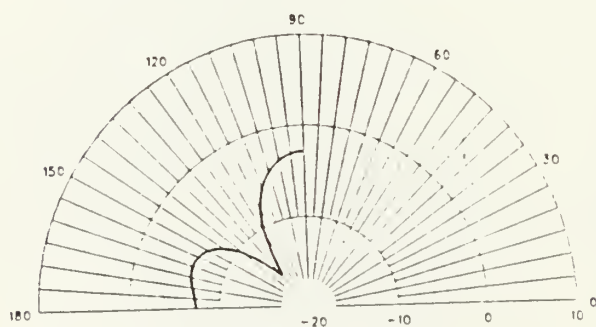

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



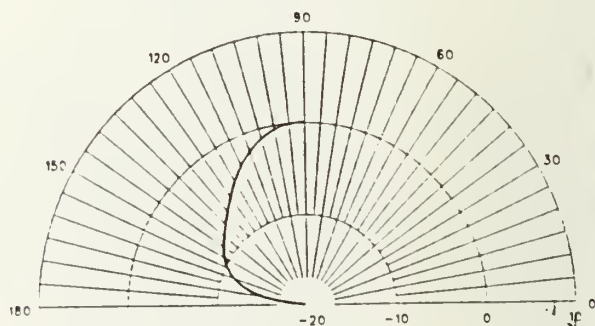


Figure 69. Elevation patterns of the Army Lowband DD antenna over perfect ground and fair ground at 8 MHz


ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

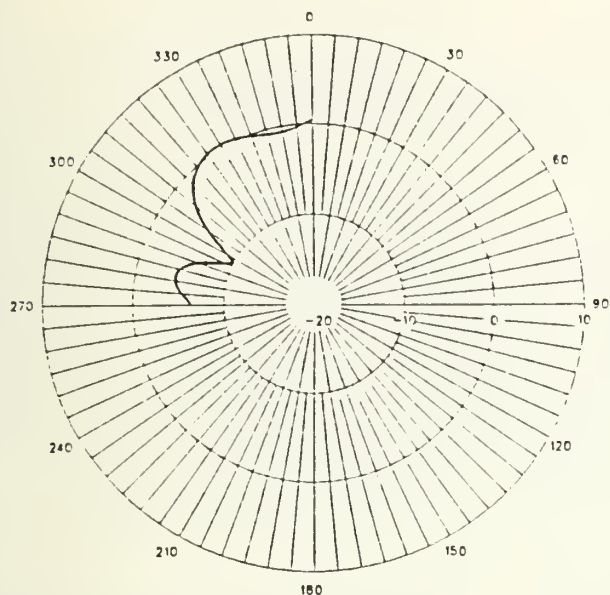

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

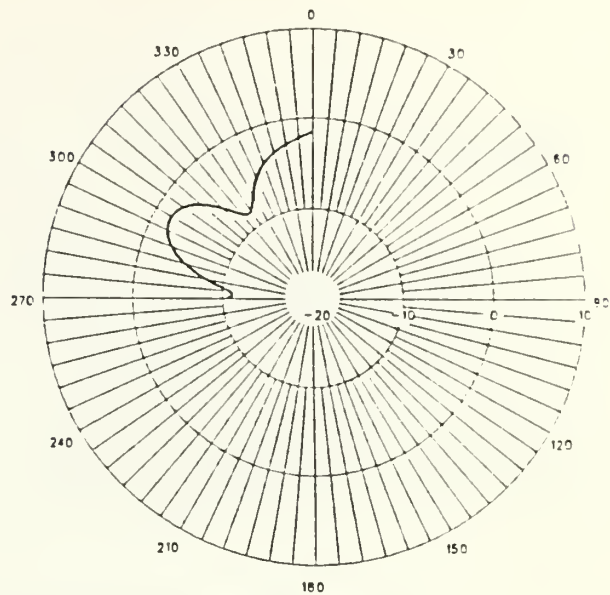

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

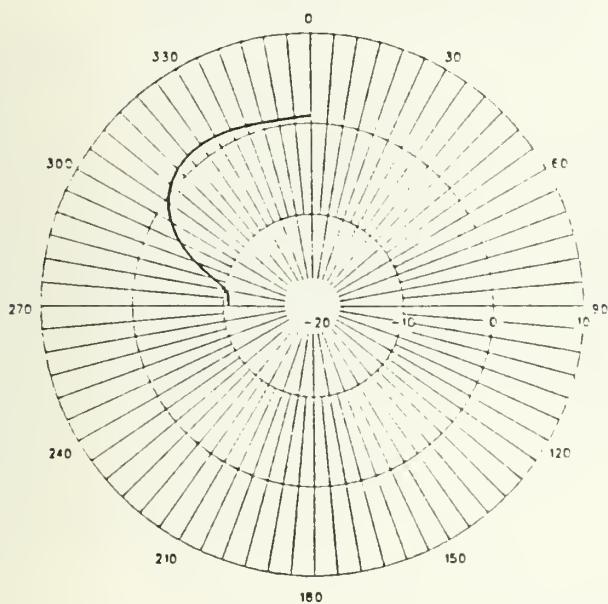

ARMY LO-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



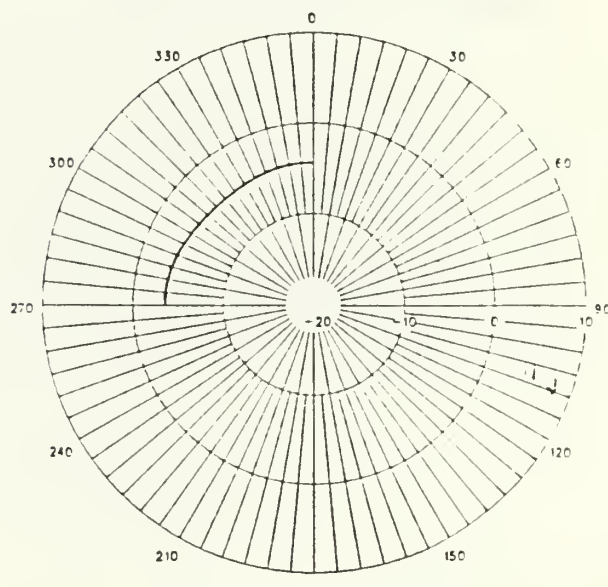


Figure 70. Azimuth patterns of the Army Lowband DD antenna over perfect ground at 8 MHz


ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

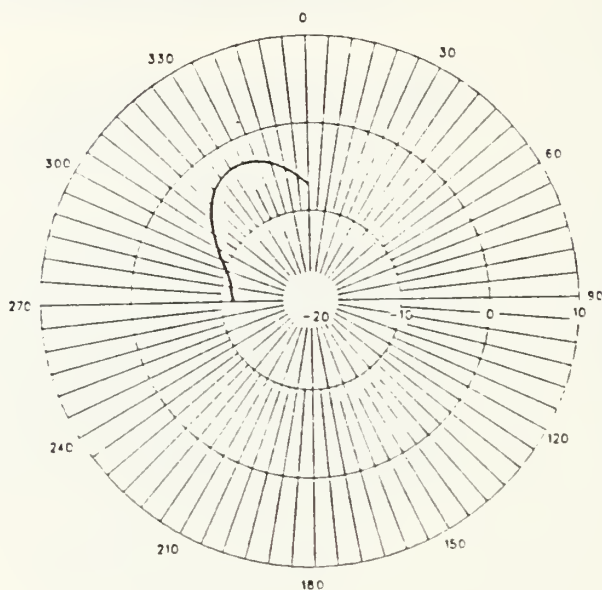

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

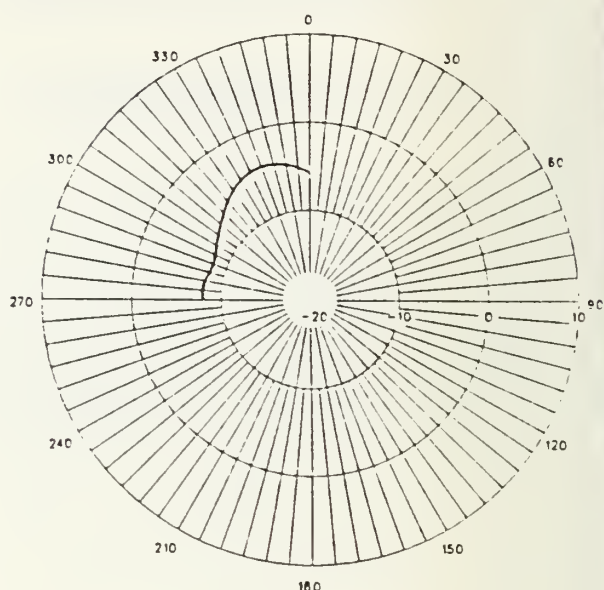

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80

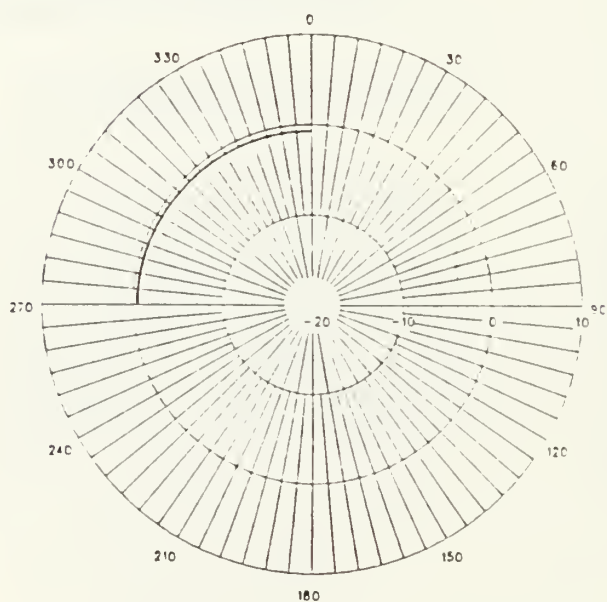

ARMY LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60



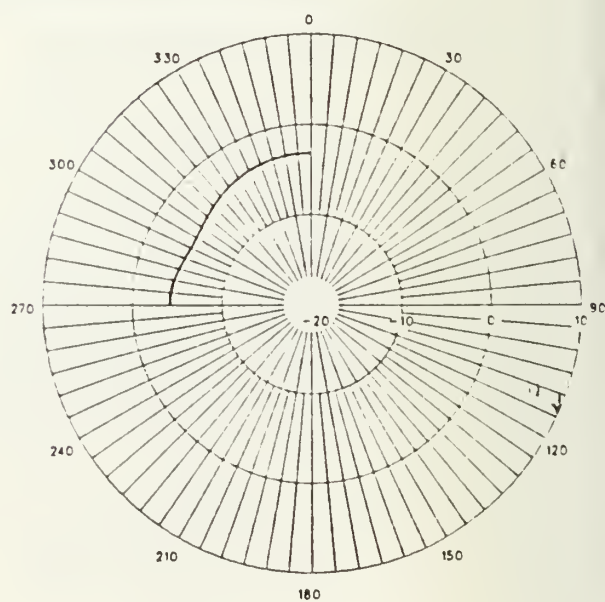


Figure 71. Azimuth patterns of the Army Lowband DD antenna over fair ground at 8 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

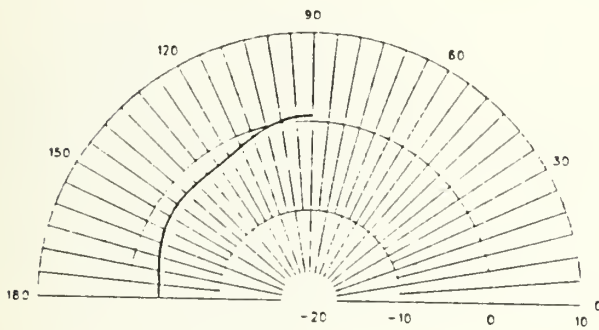

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

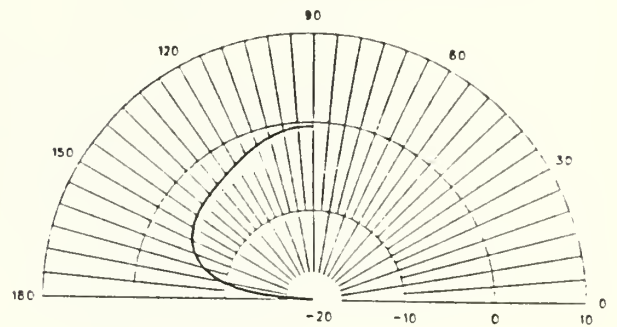

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

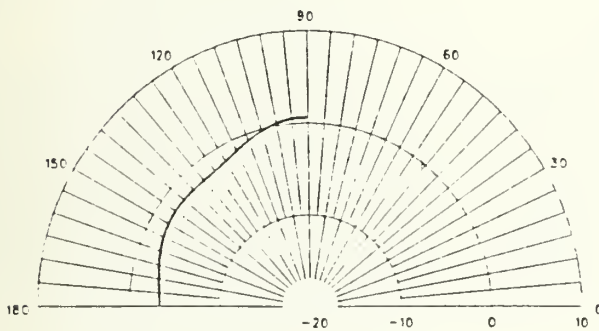

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



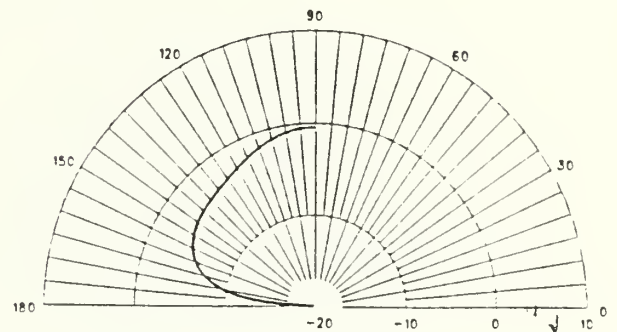


Figure 72. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 8 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

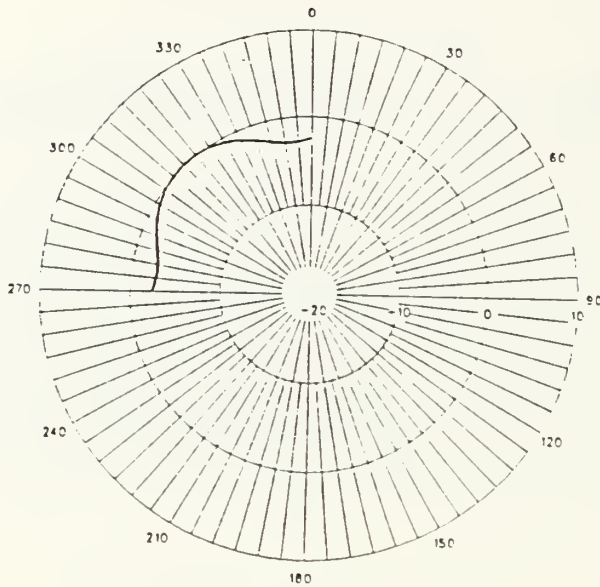

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

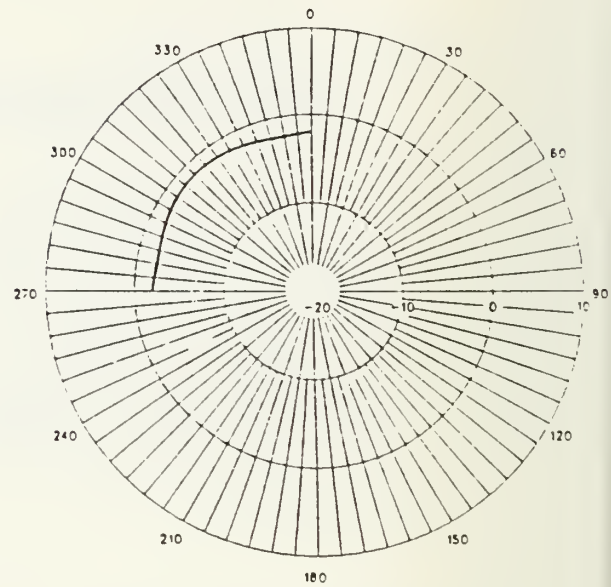

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

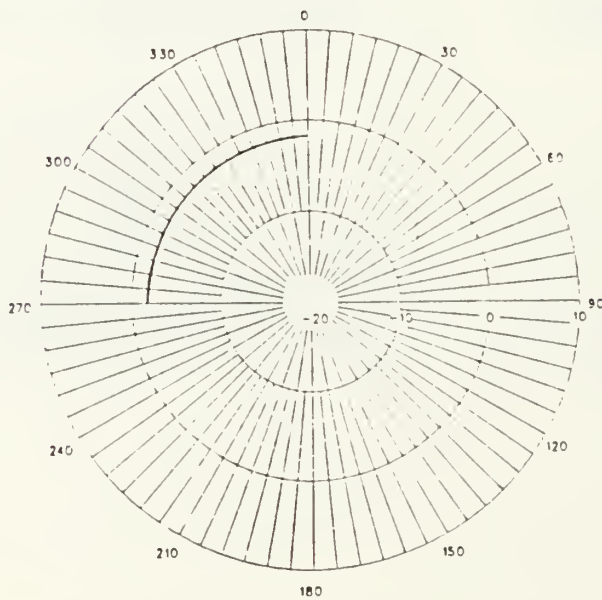

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



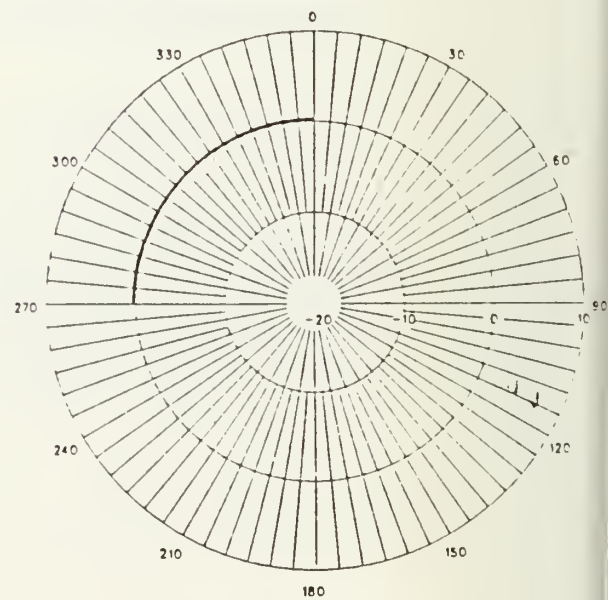


Figure 73. Azimuth patterns of the Army Highband DD antenna over perfect ground at 8 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

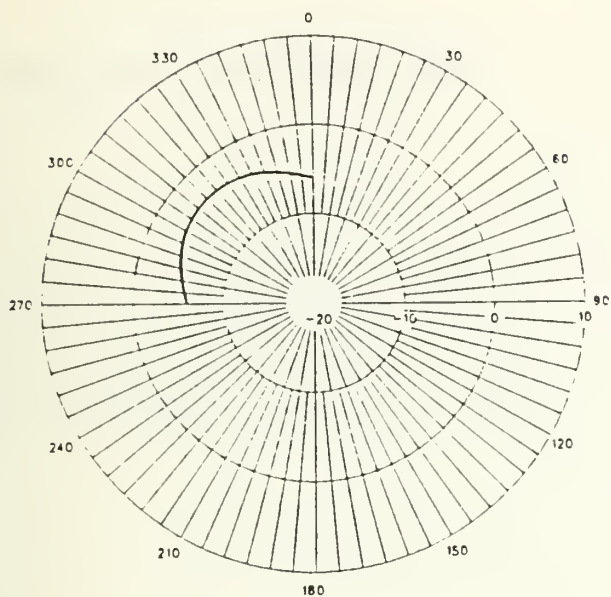

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

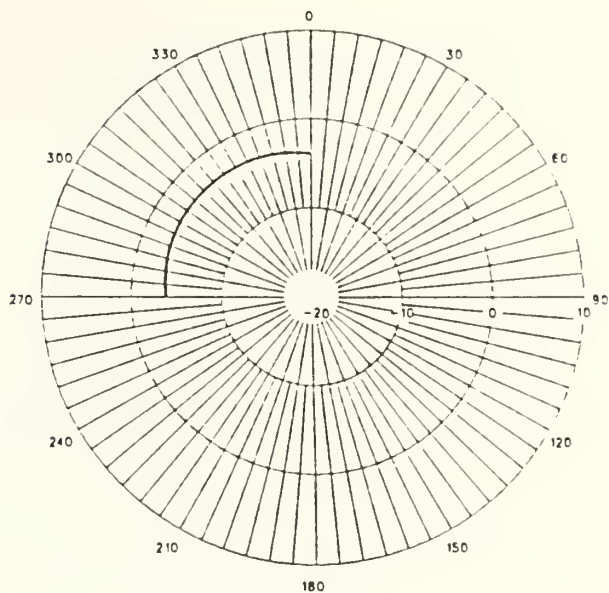

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

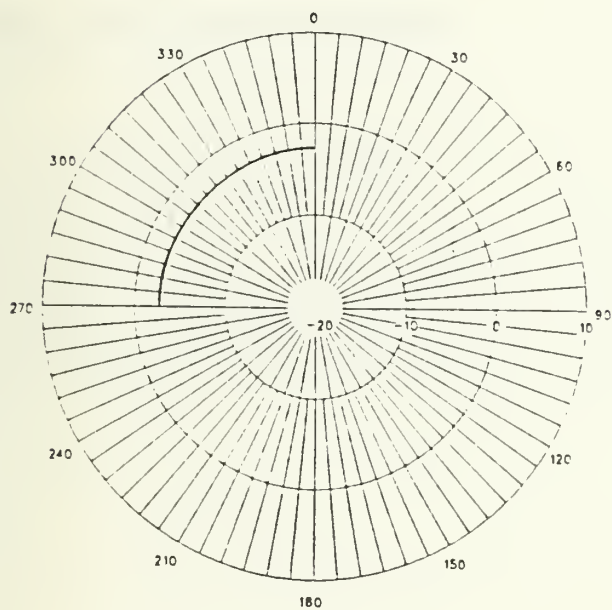

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



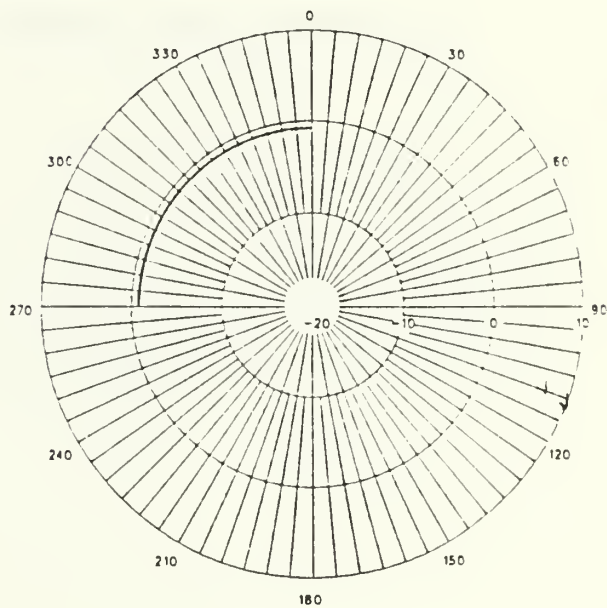


Figure 74. Azimuth patterns of the Army Highband DD antenna over fair ground at 8 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

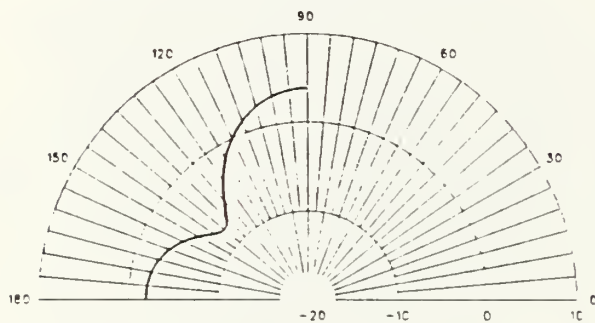

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

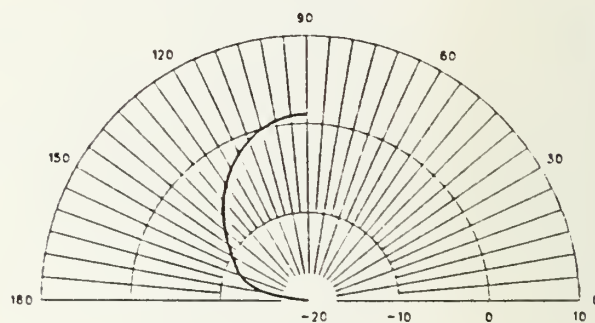

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

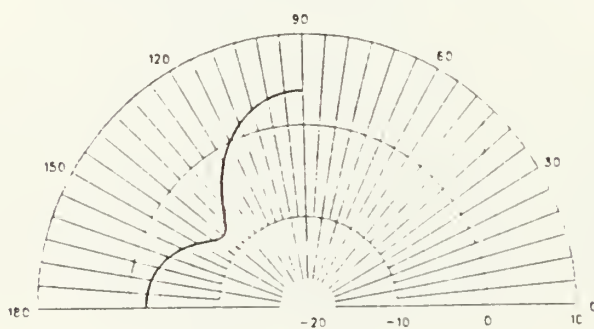

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



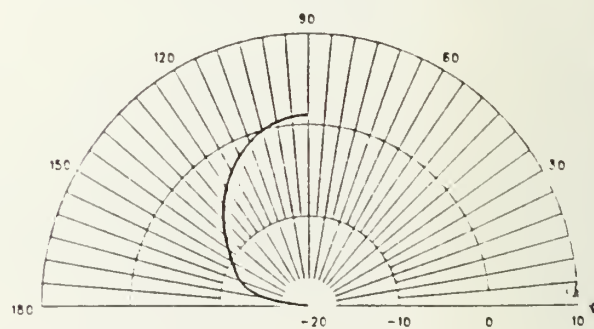


Figure 75. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 9 MHz


ARMY HI-BAND DOUBLE DELTA / FEFF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

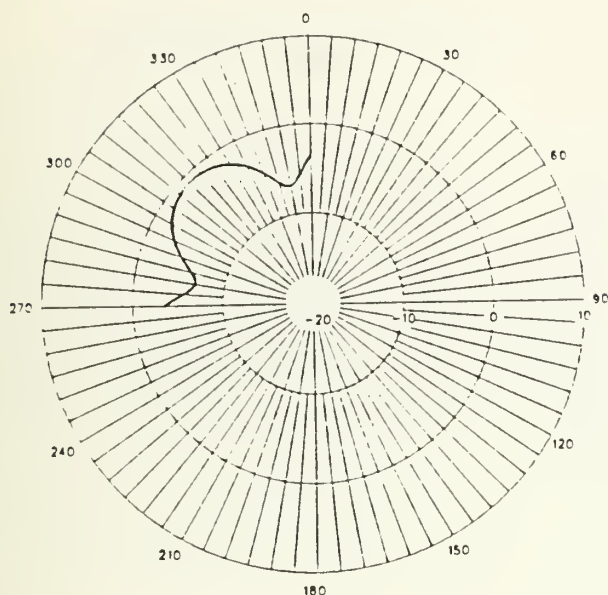

ARMY HI-BAND DOUBLE DELTA / FEFF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

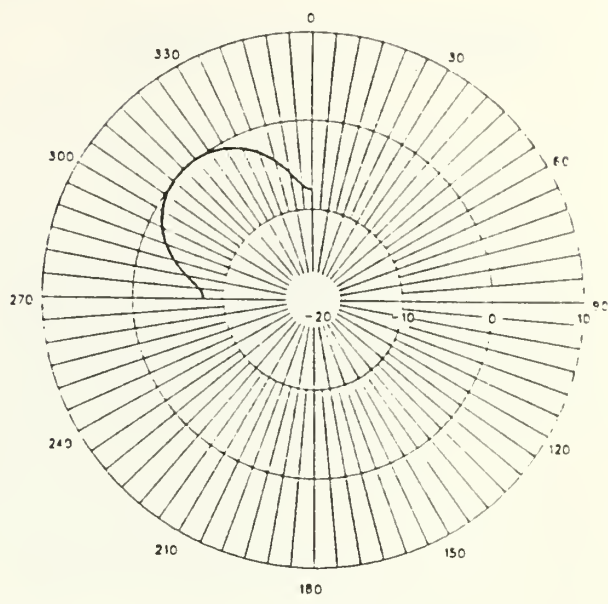

ARMY HI-BAND DOUBLE DELTA / FEFF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

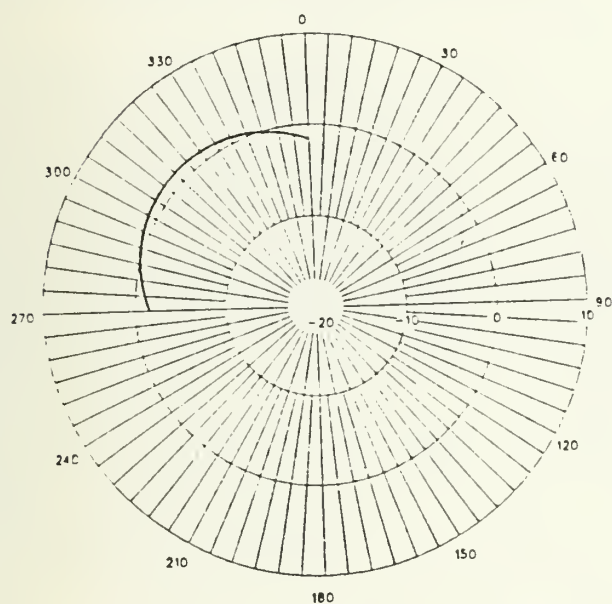

ARMY HI-BAND DOUBLE DELTA / FEFF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



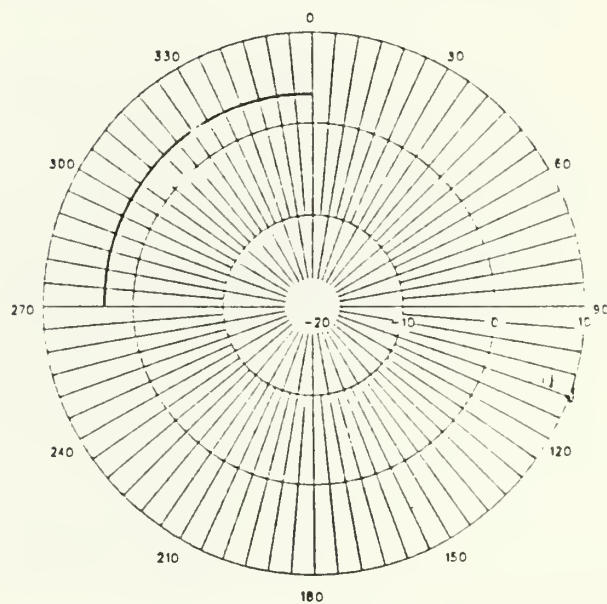


Figure 76. Azimuth patterns of the Army Highband DD antenna over perfect ground at 9 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

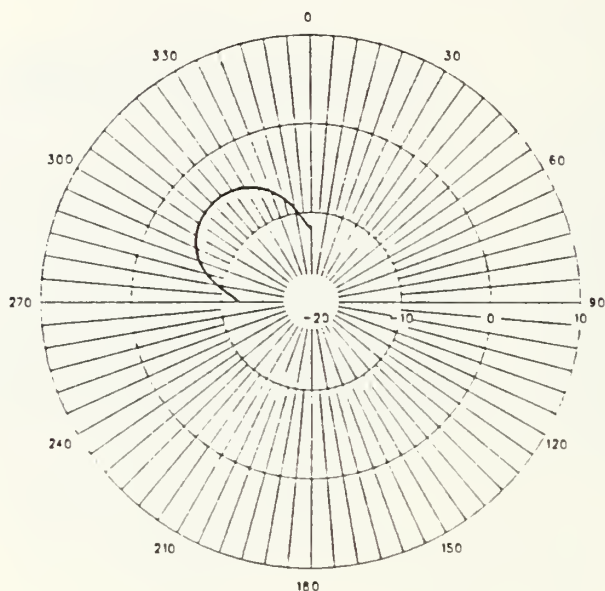

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

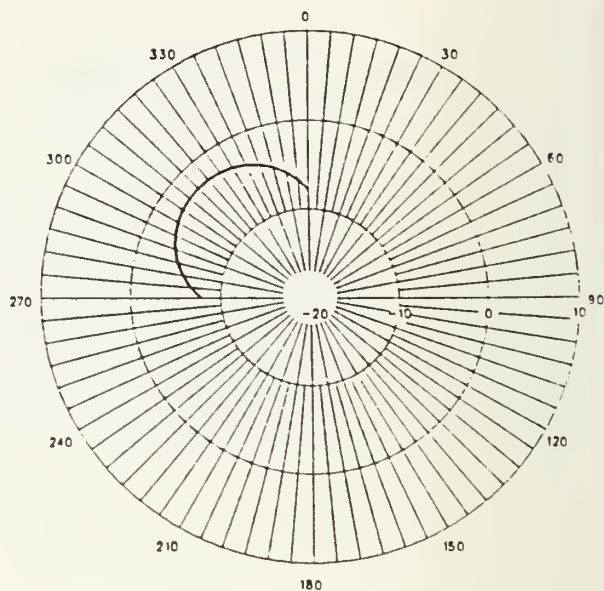

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

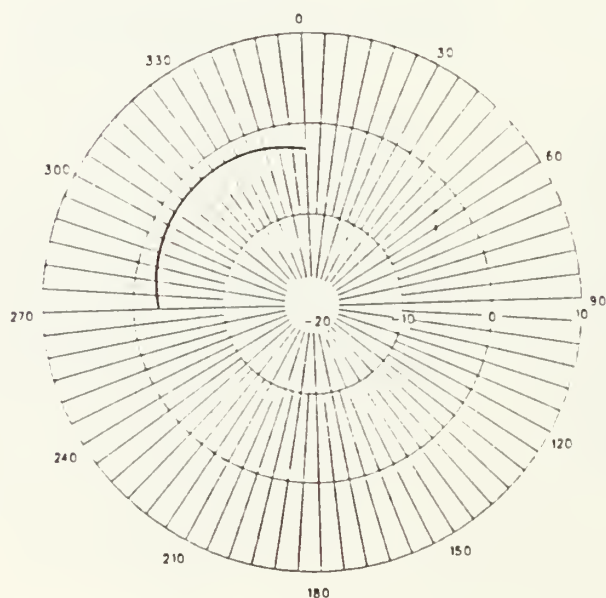

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



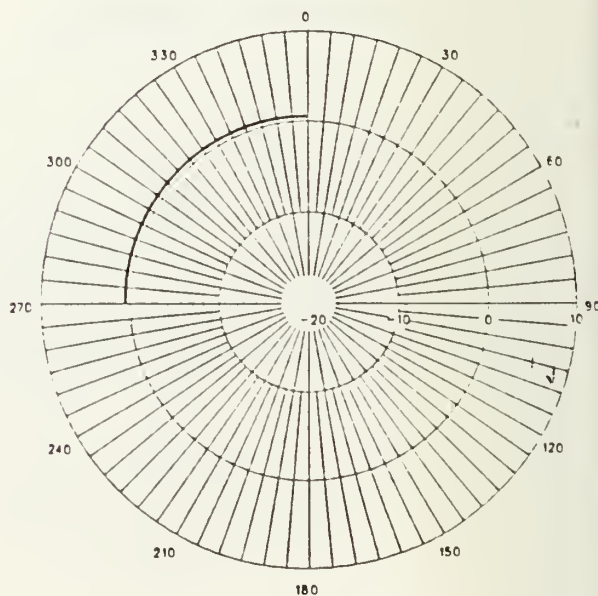


Figure 77. Azimuth patterns of the Army Highband DD antenna over fair ground at 9 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

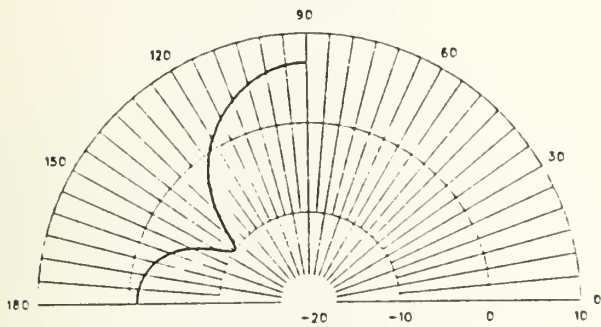

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

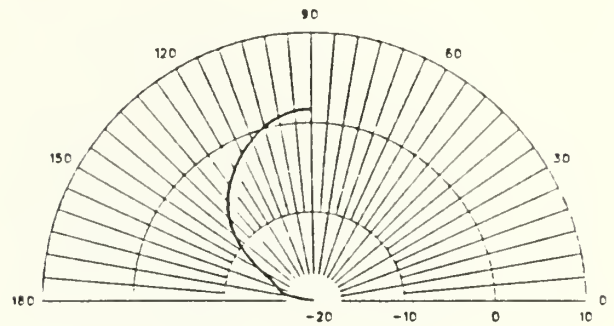

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

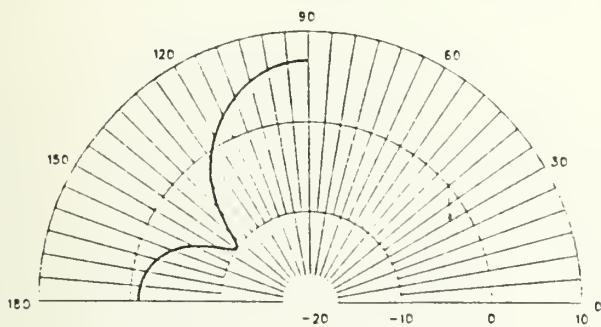

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



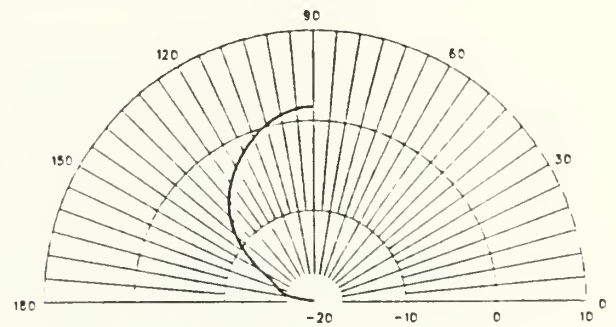


Figure 78. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 10 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

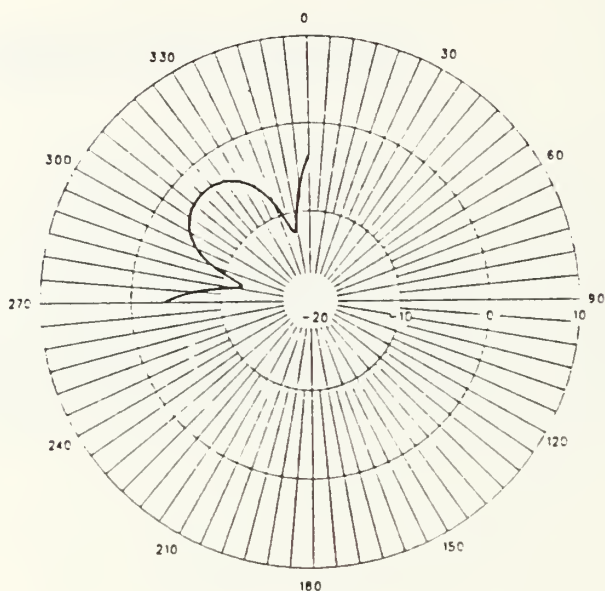

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

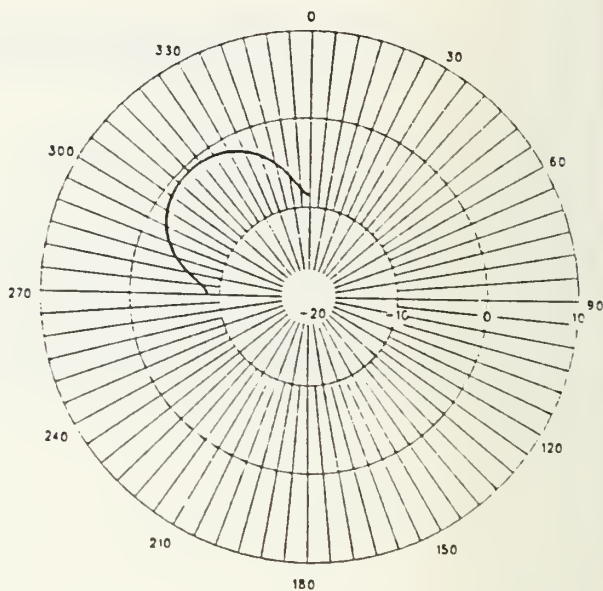

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

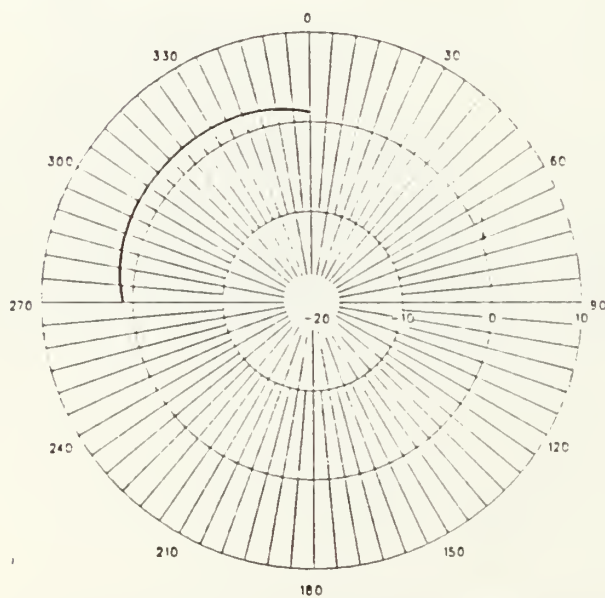

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



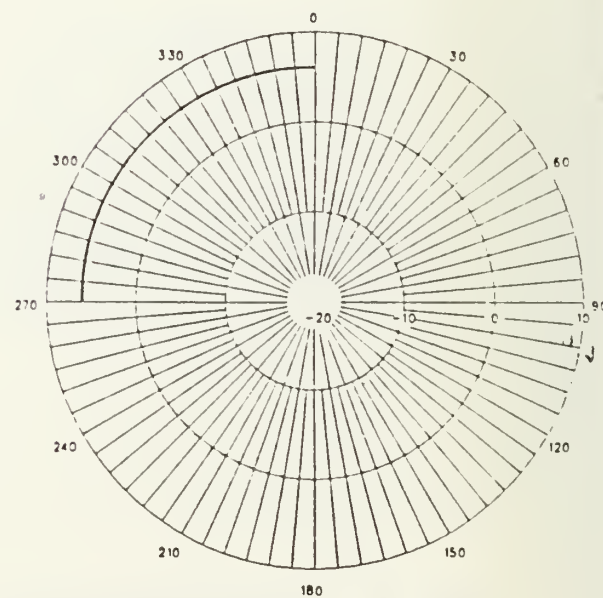


Figure 79. Azimuth patterns of the Army Highband DD antenna over perfect ground at 10 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

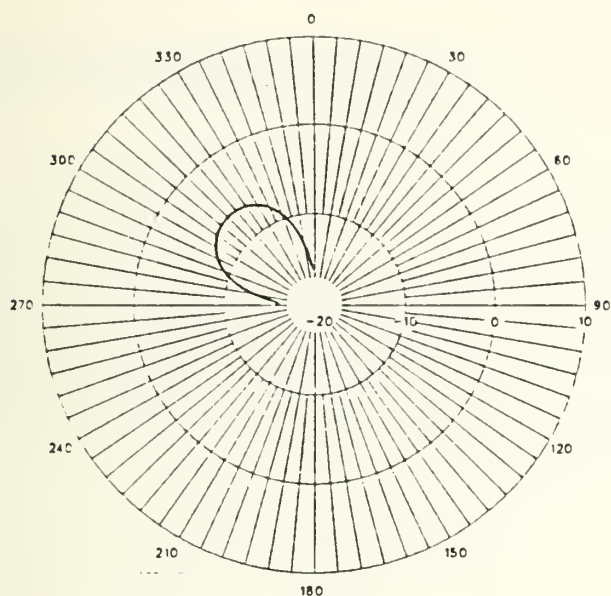

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

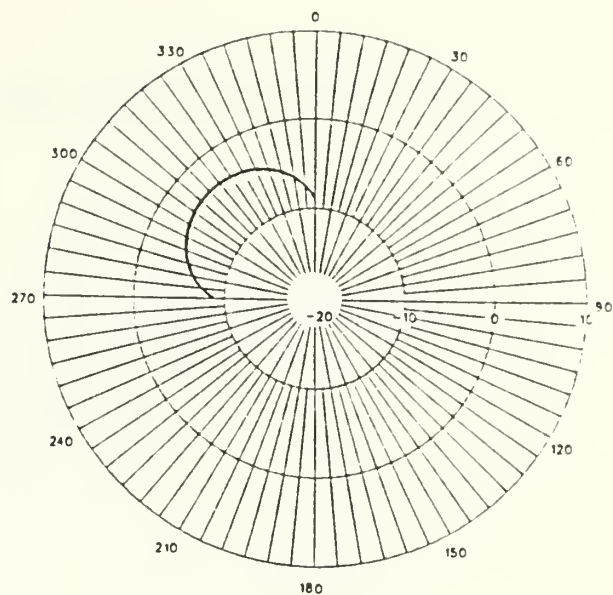

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

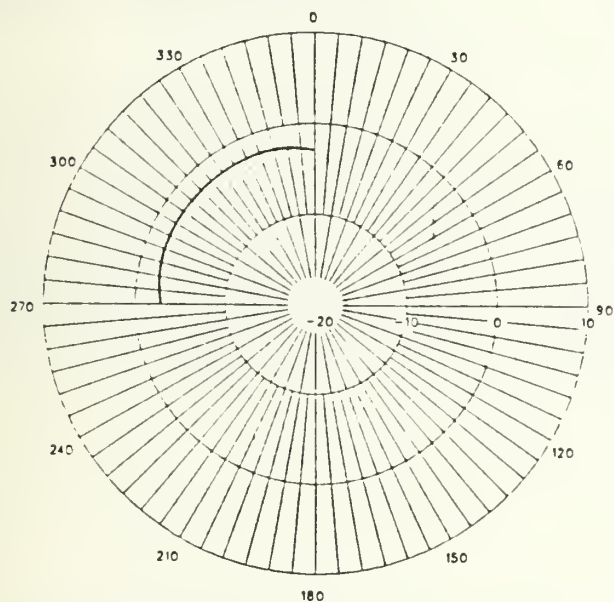

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



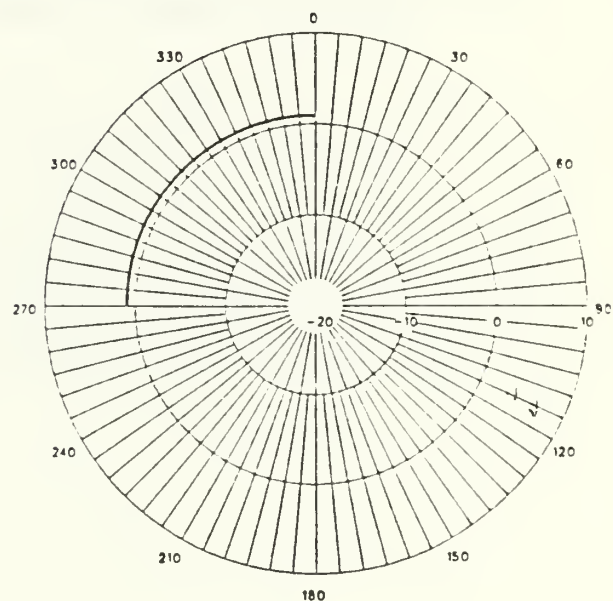


Figure 80. Azimuth patterns of the Army Highband DD antenna over fair ground at 10 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHz
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

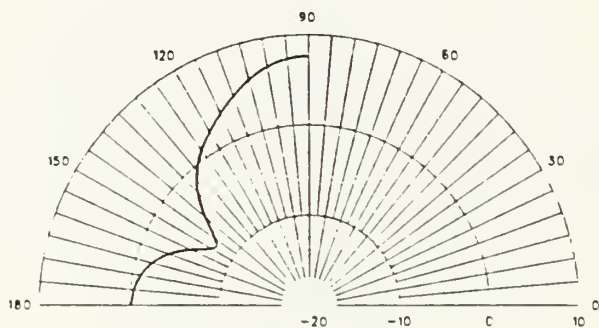

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHz
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

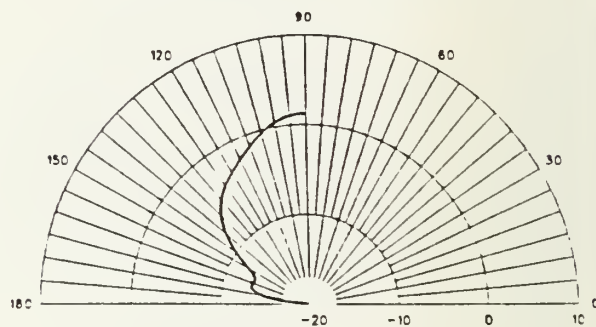

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHz
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

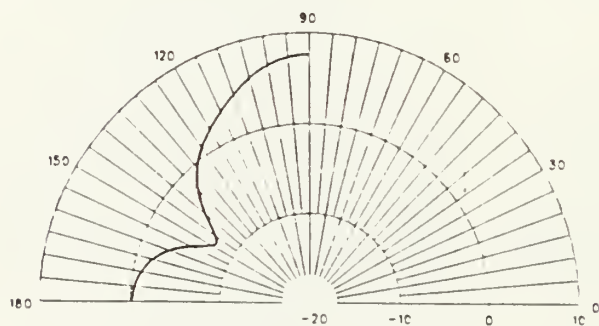

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHz
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



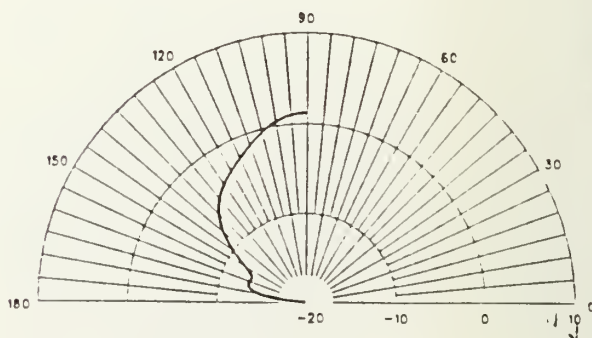


Figure 81. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 11 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

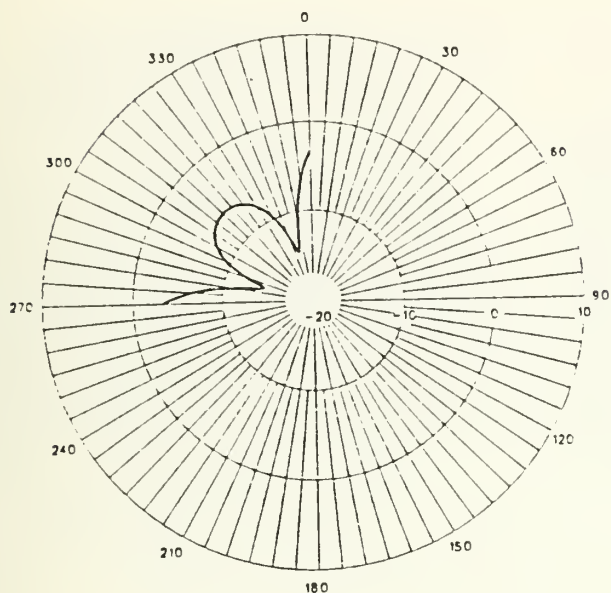

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

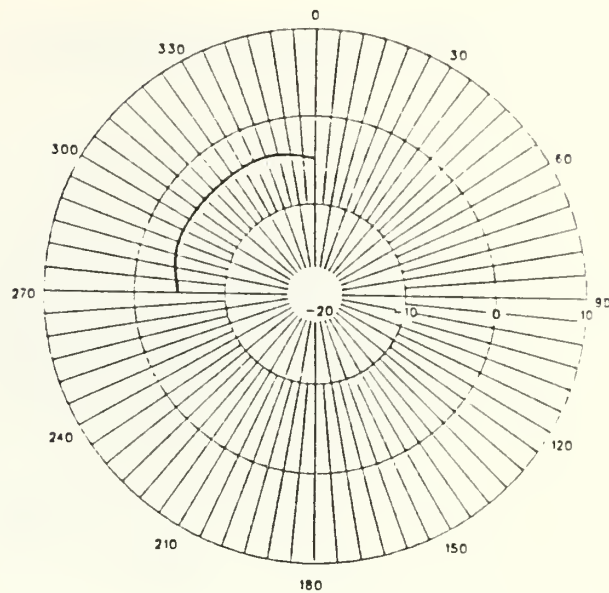

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

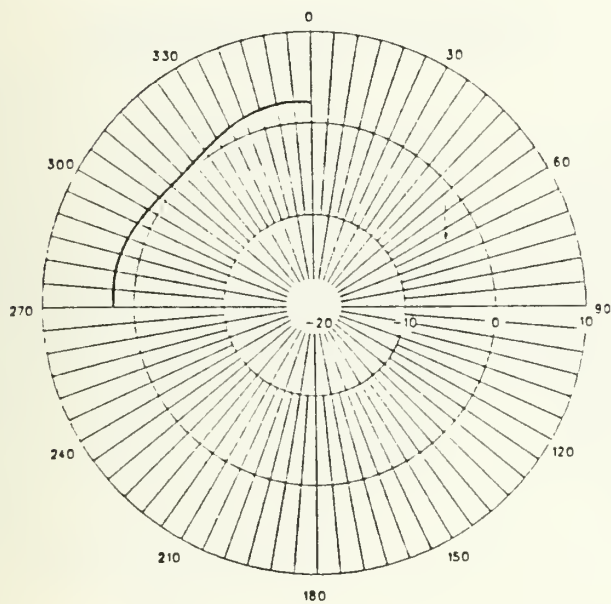

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



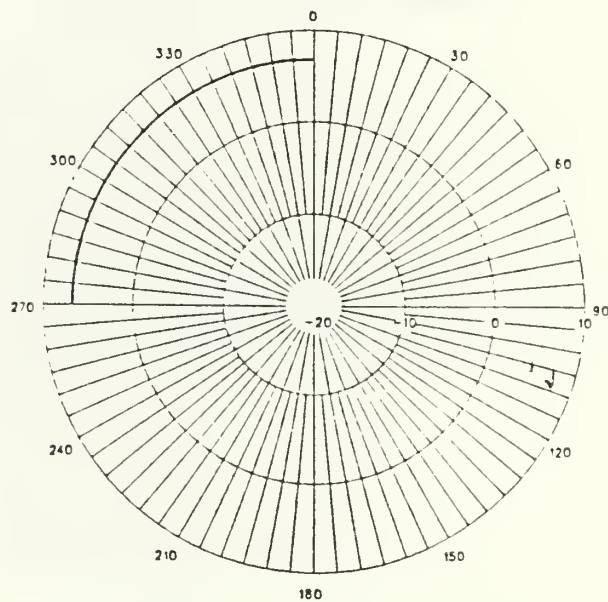


Figure 82. Azimuth patterns of the Army Highband DD antenna over perfect ground at 11 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

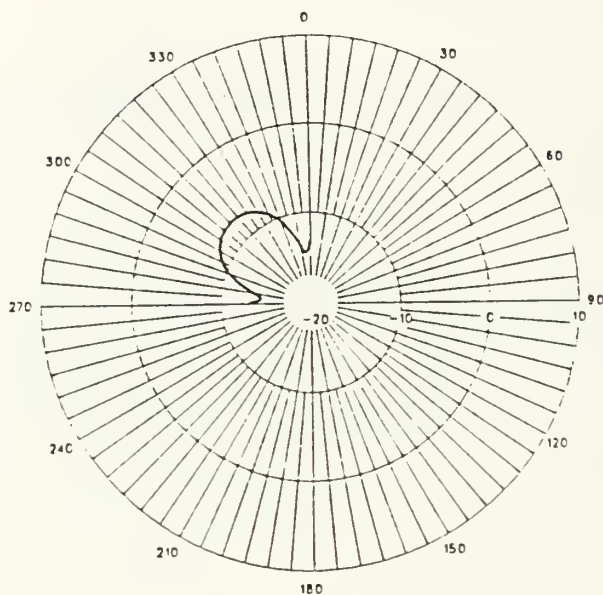

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

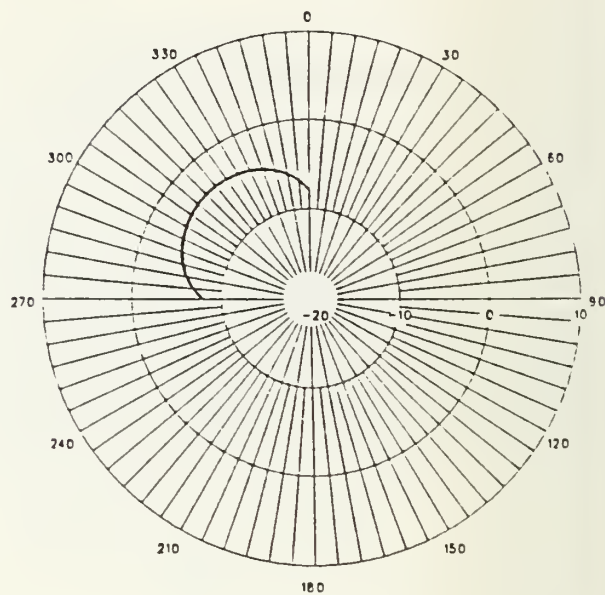

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

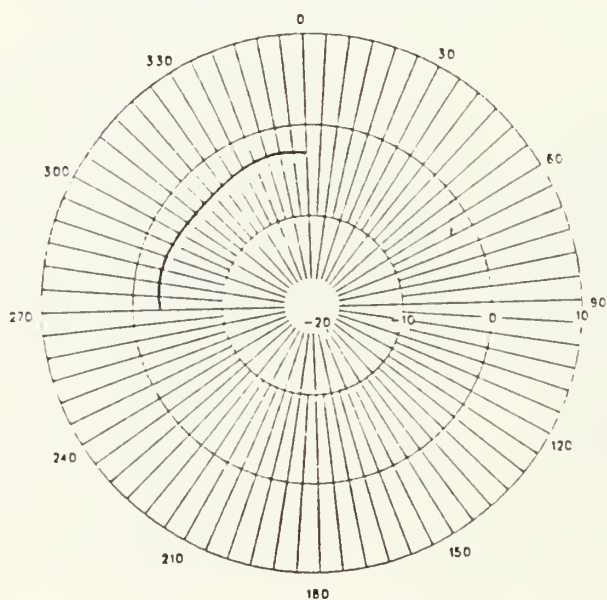

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



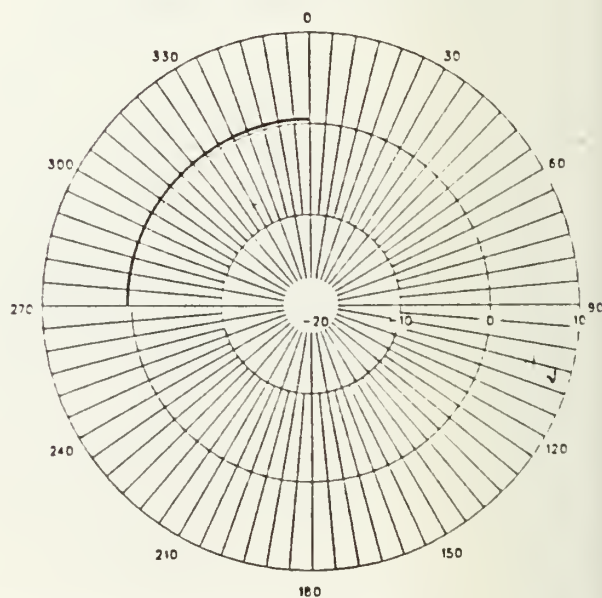


Figure 83. Azimuth patterns of the Army Highband DD antenna over fair ground at 11 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

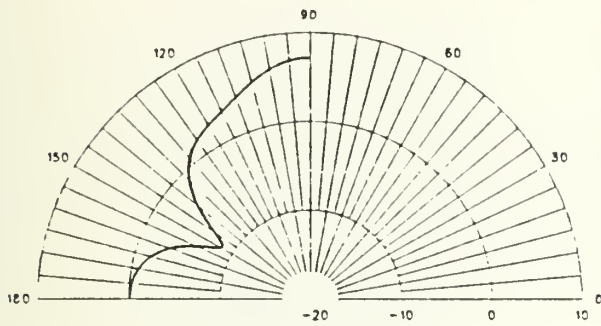

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

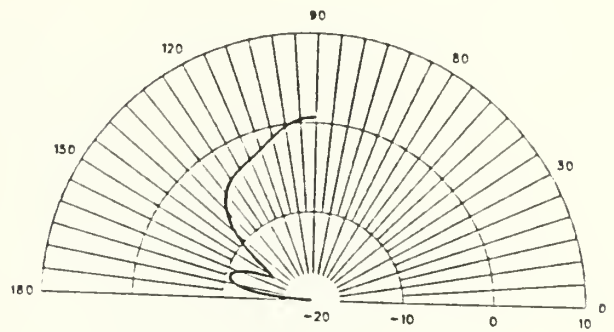

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

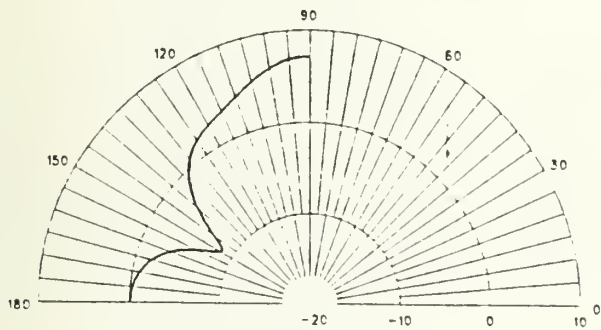

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



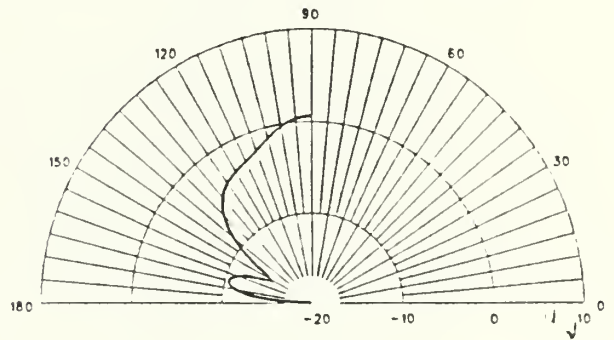


Figure 84. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 12 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

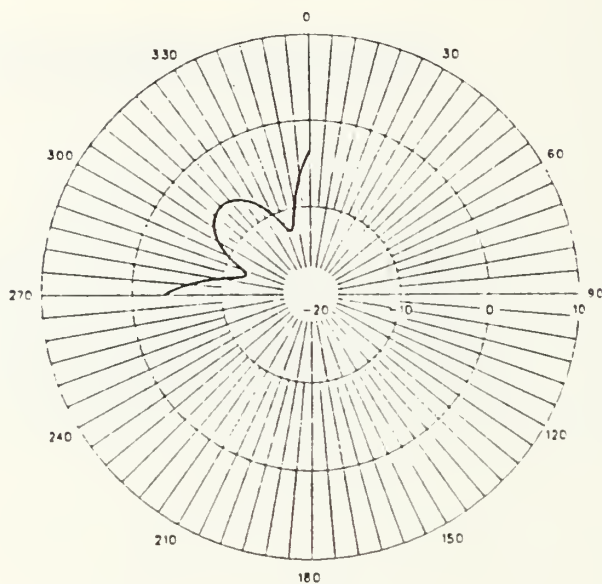

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

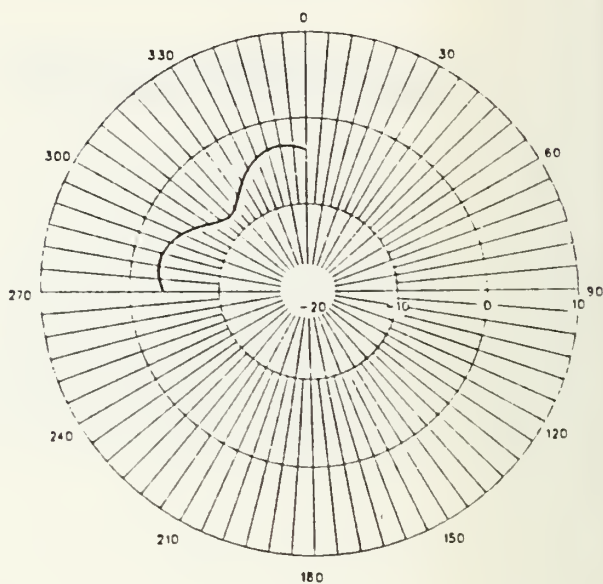

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

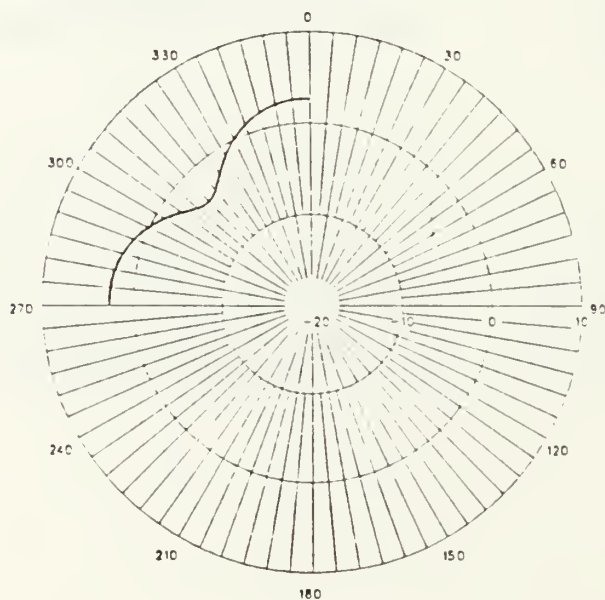

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



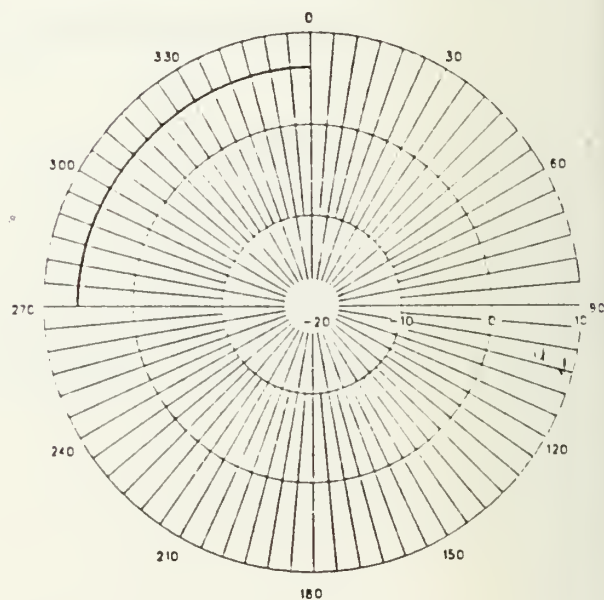


Figure 85. Azimuth patterns of the Army Highband DD antenna over perfect ground at 12 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

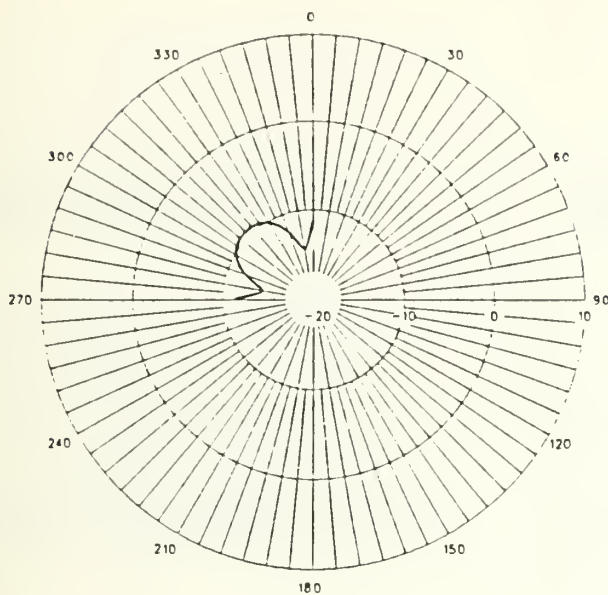

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

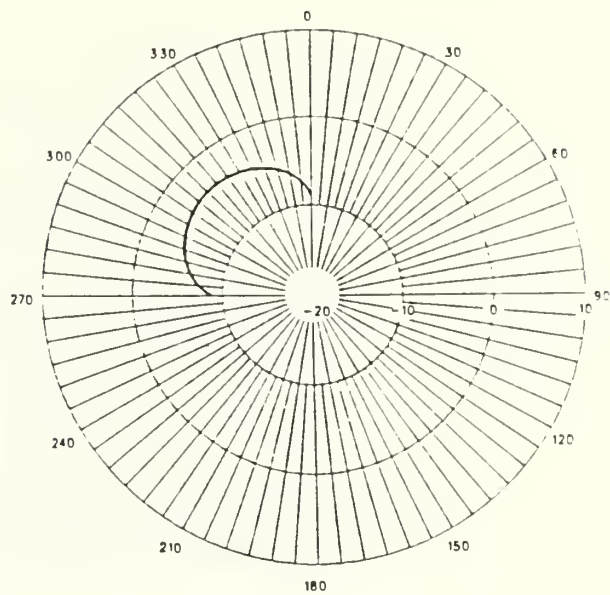

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

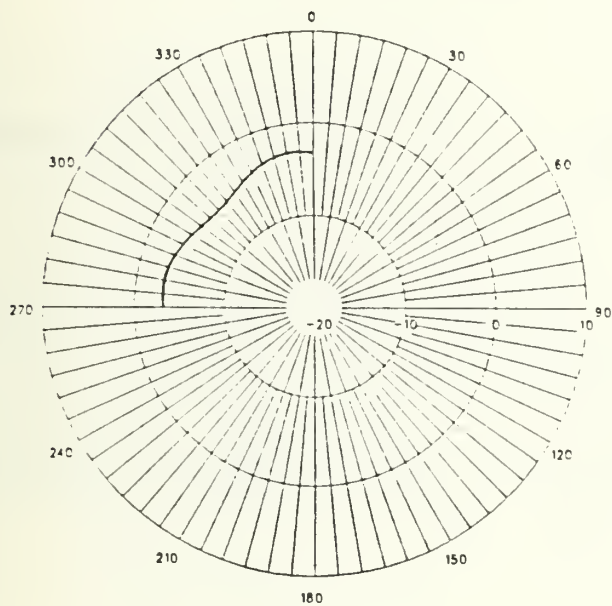

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



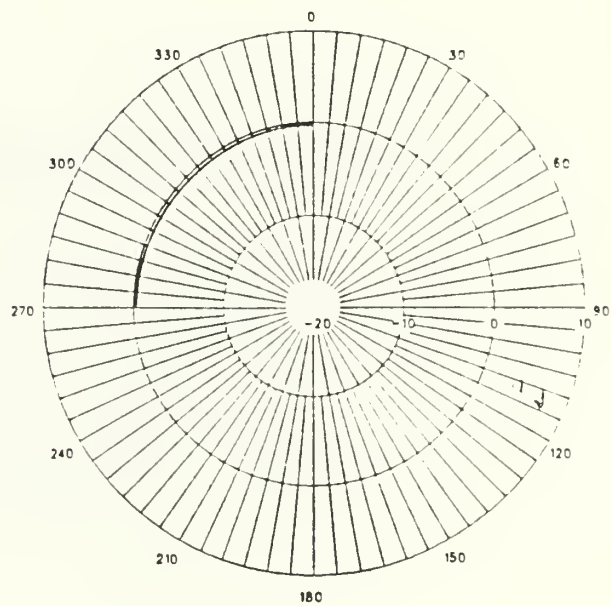


Figure 86. Azimuth patterns of the Army Highband DD antenna over fair ground at 12 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

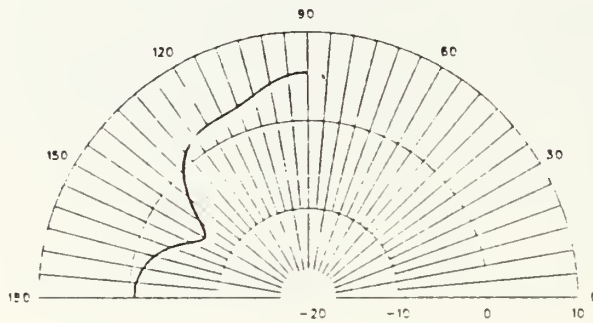

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

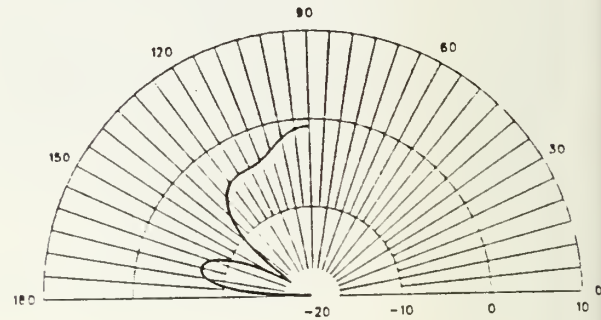

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

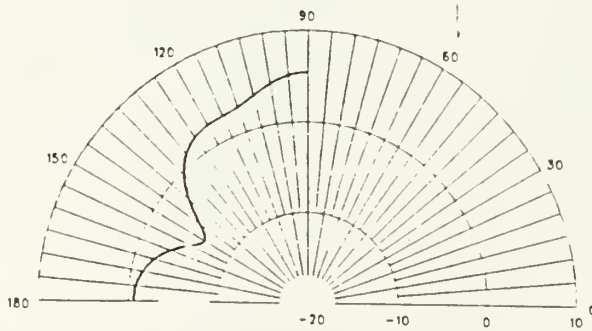

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



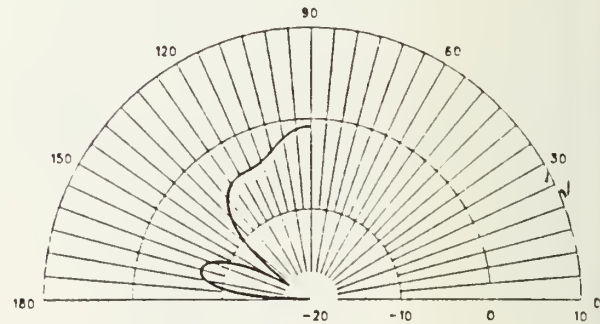


Figure 87. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 13 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

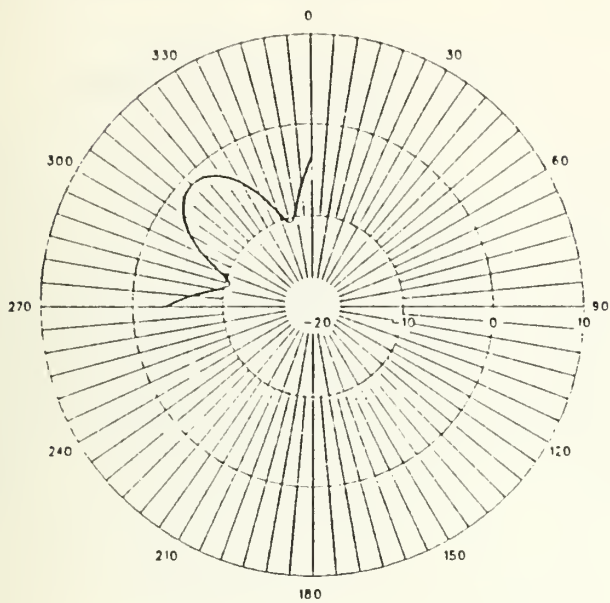

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

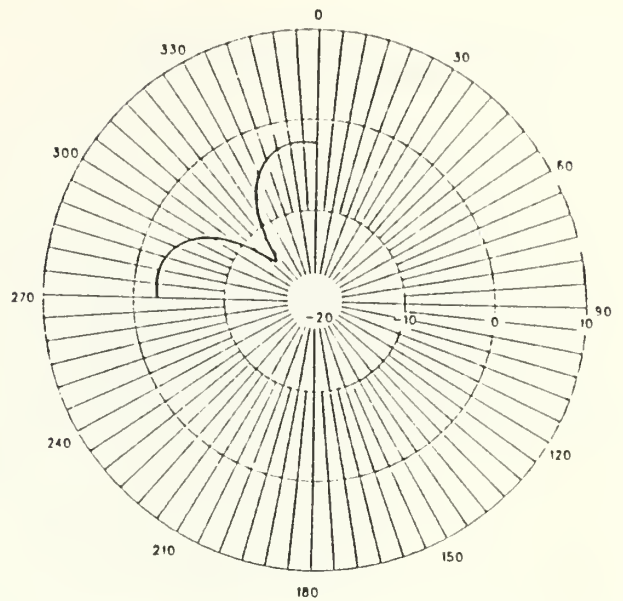

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

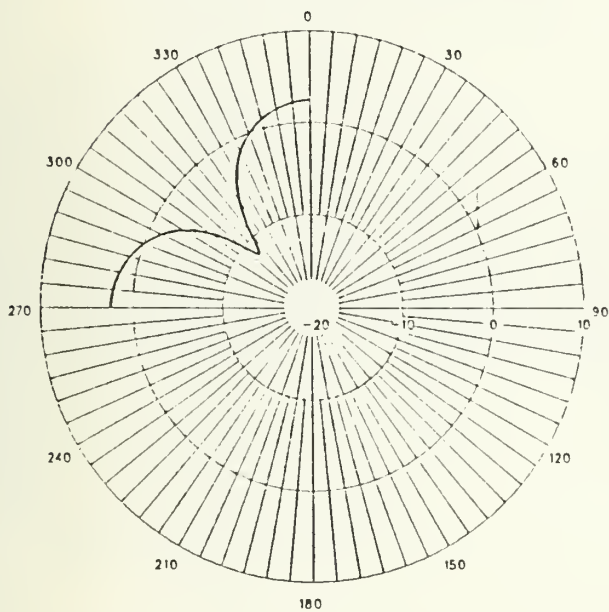

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



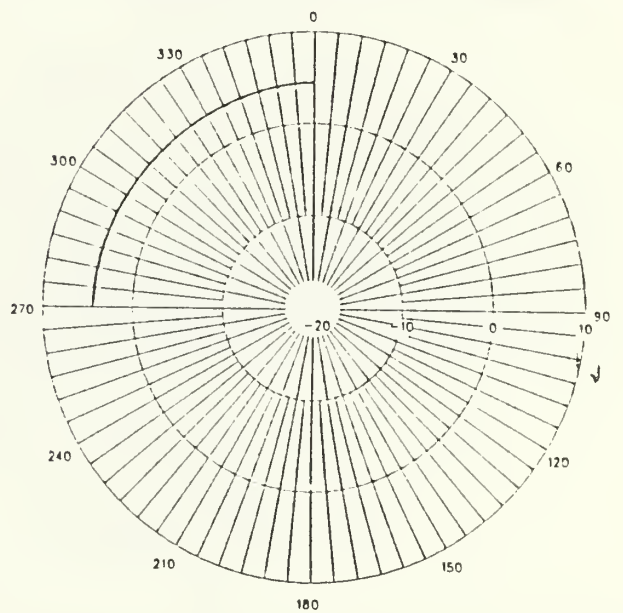


Figure 88. Azimuth patterns of the Army Highband DD antenna over perfect ground at 13 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

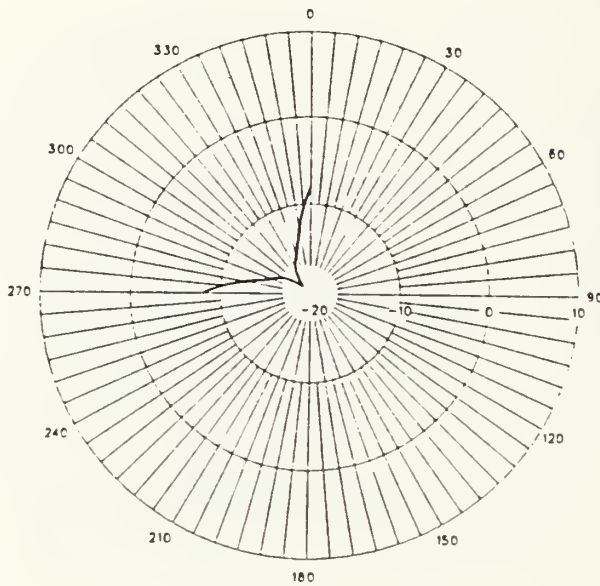

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

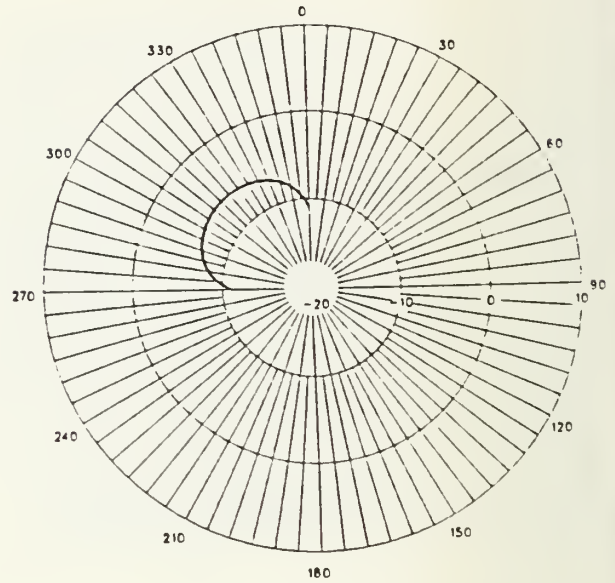

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

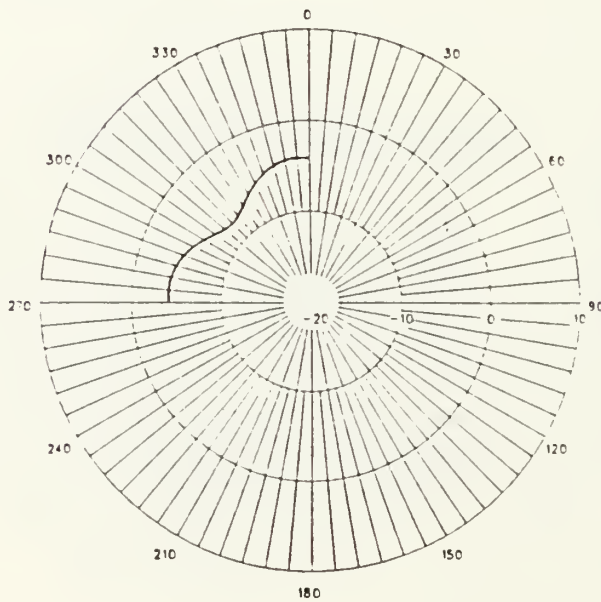

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



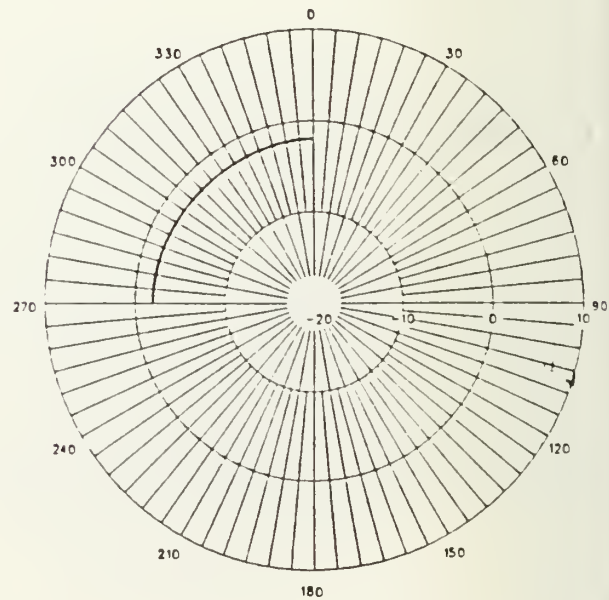


Figure 89. Azimuth patterns of the Army Highband DD antenna over fair ground at 13 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

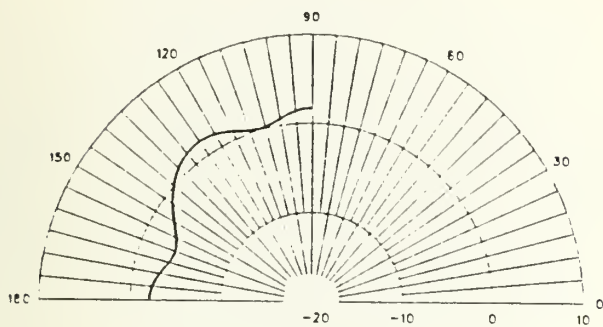

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

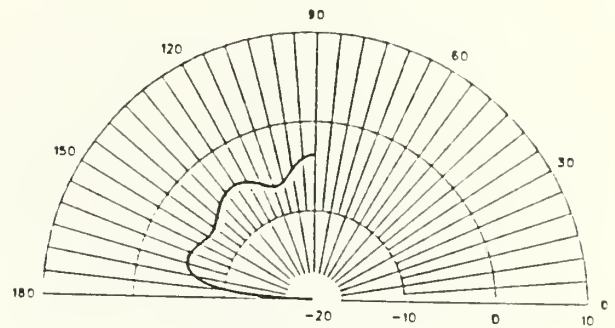

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

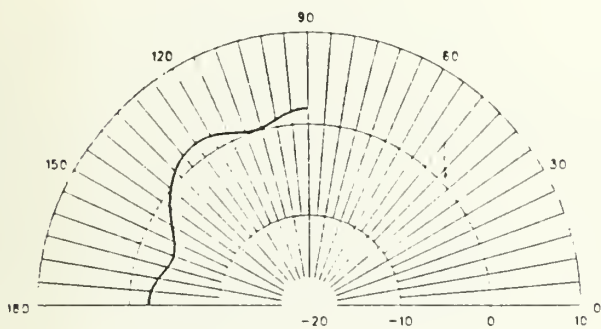

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



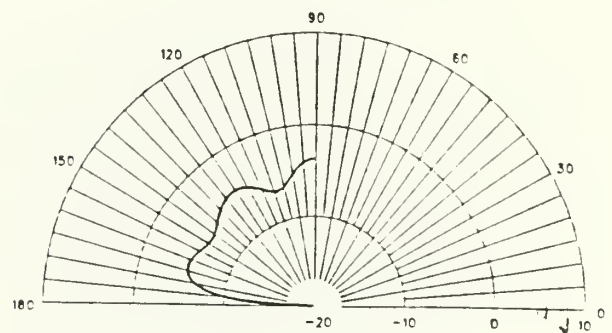


Figure 90. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 14 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

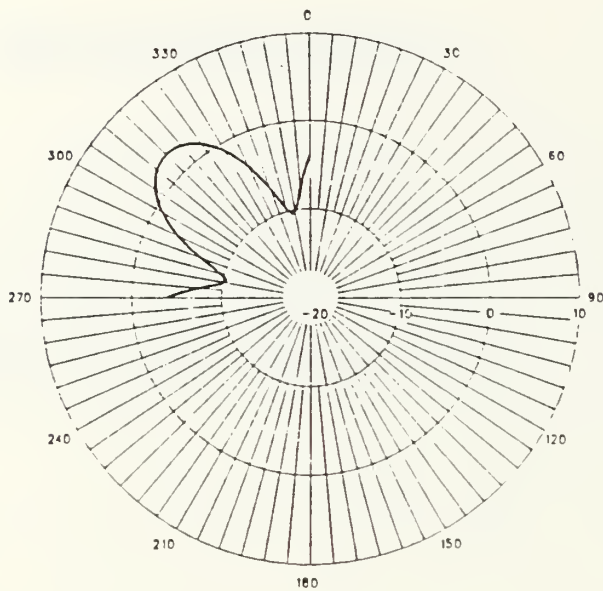

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

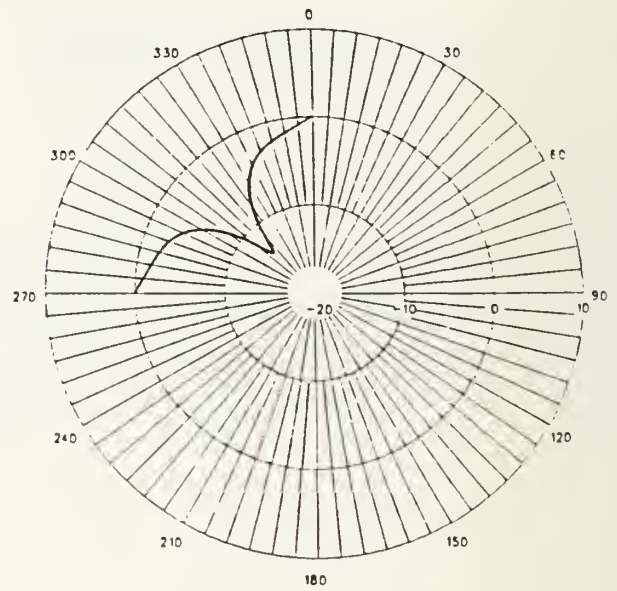

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

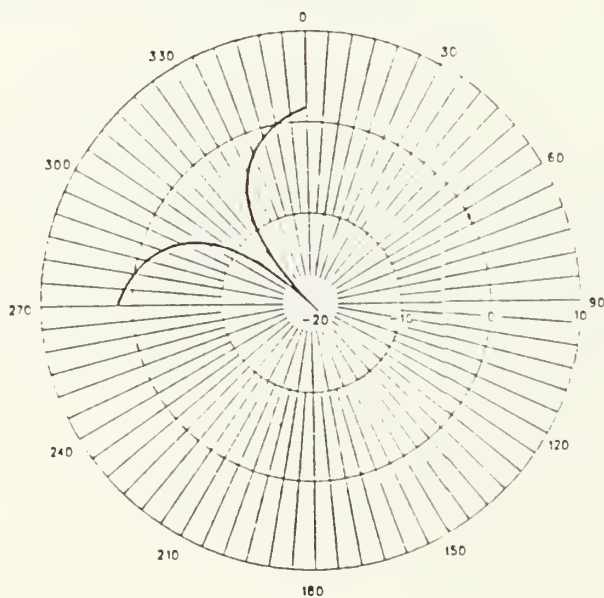

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



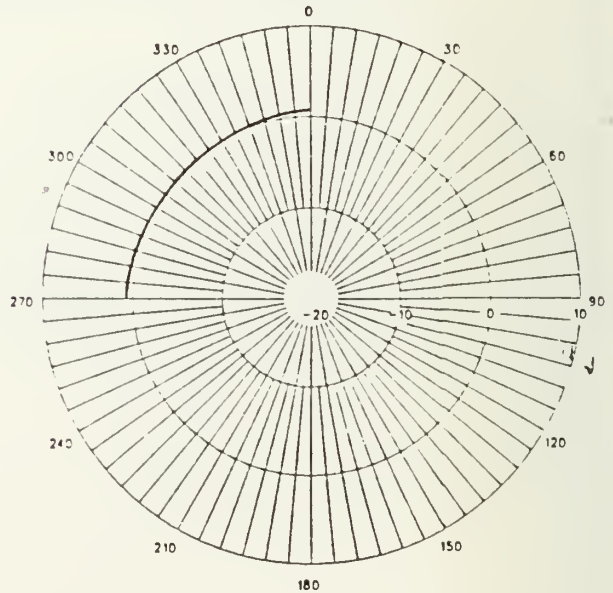


Figure 91. Azimuth patterns of the Army Highband DD antenna over perfect ground at 14 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

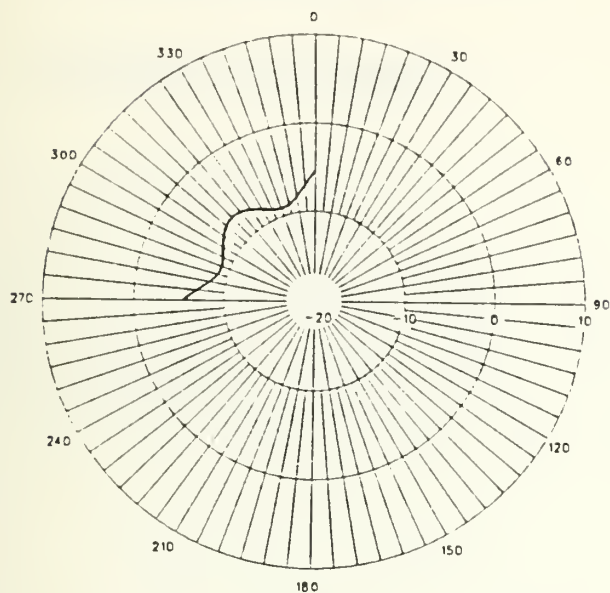

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

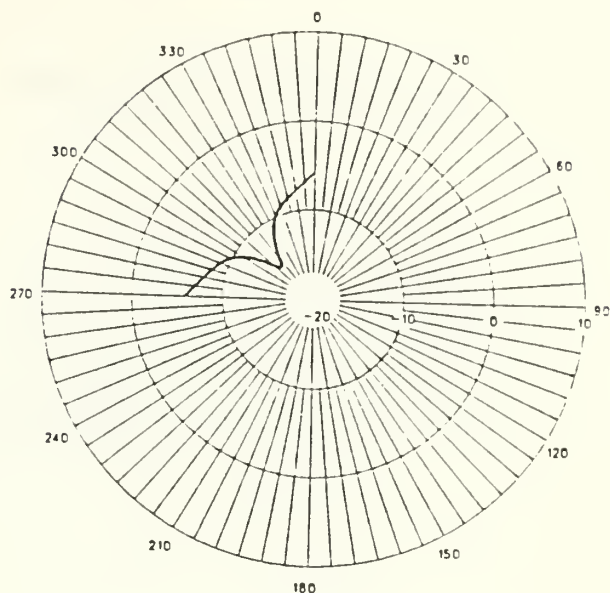

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

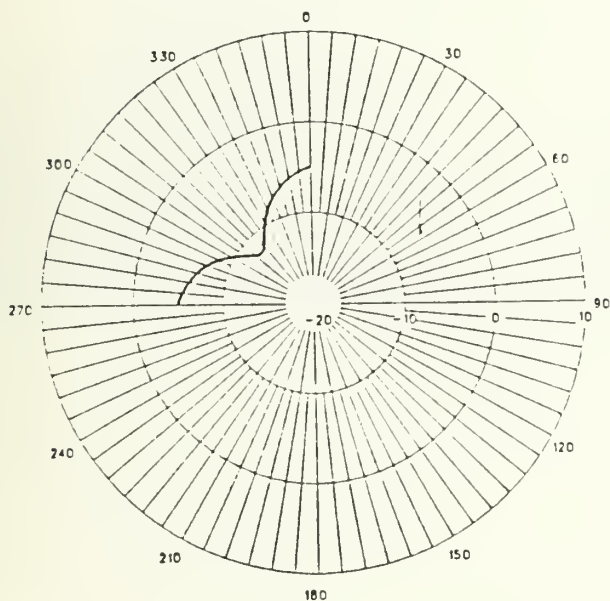

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



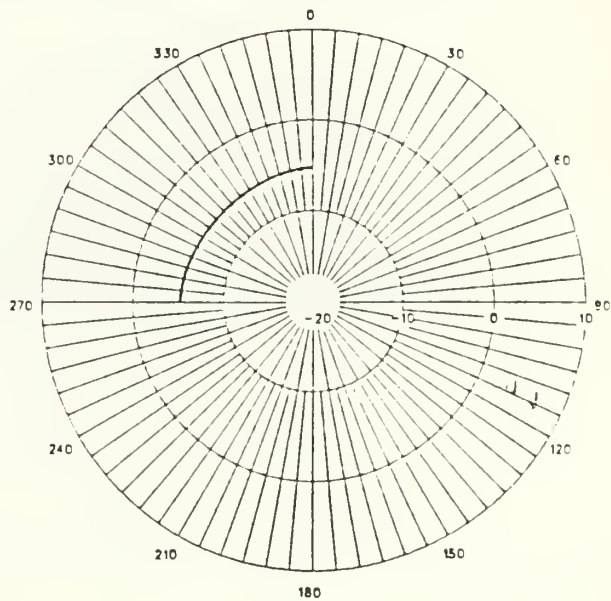


Figure 92. Azimuth patterns of the Army Highband DD antenna over fair ground at 14 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

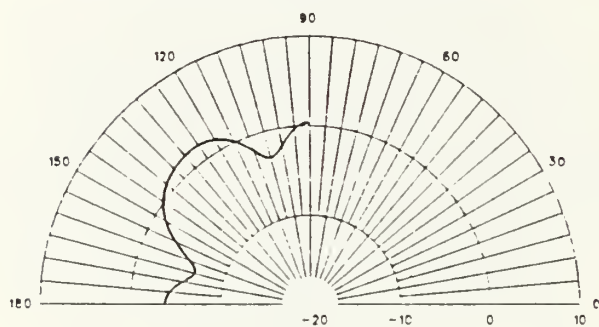

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

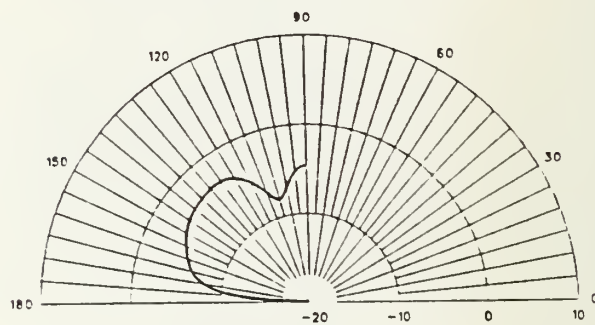

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

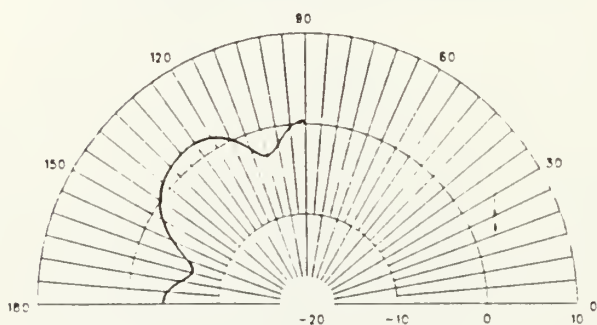

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



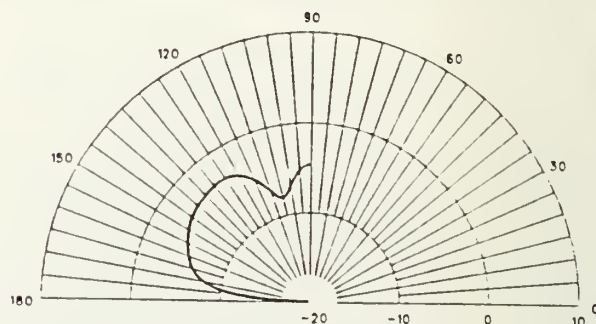


Figure 93. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 15 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

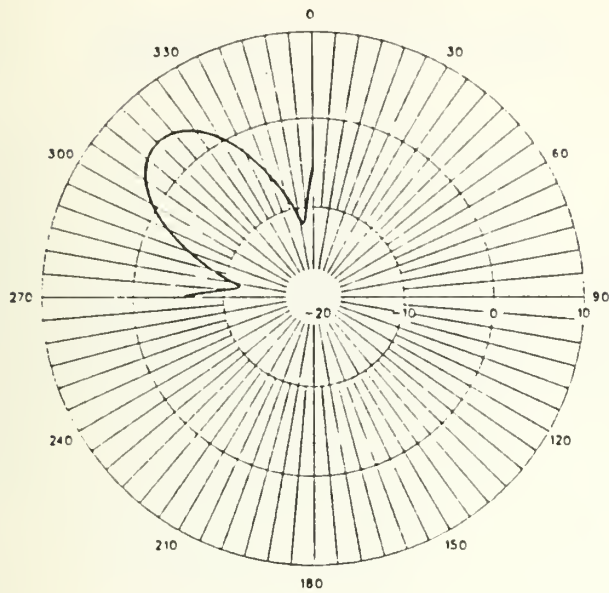

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

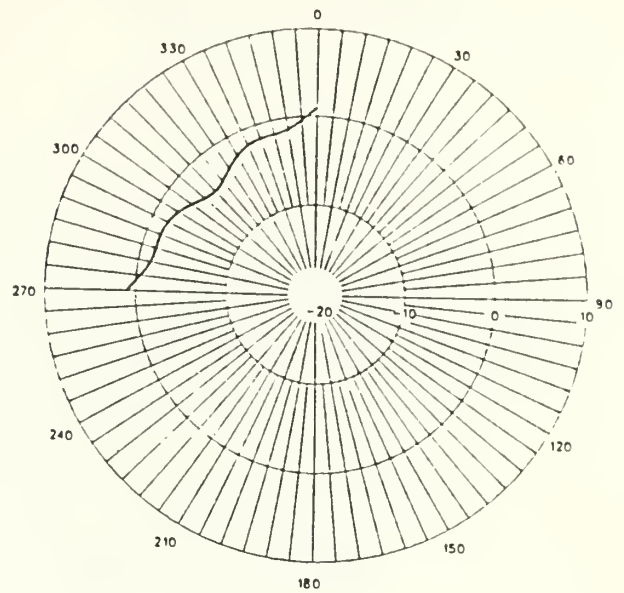

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

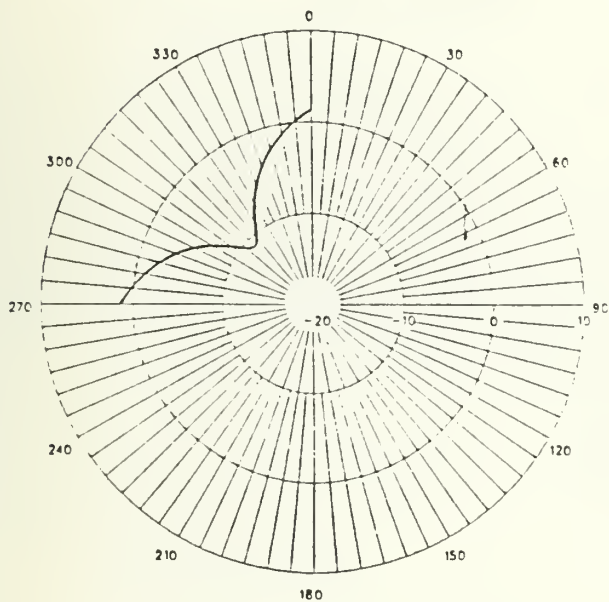

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



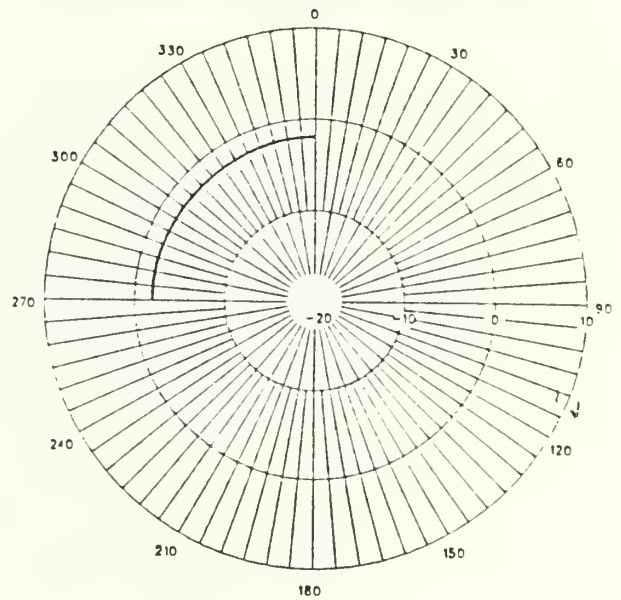


Figure 94. Azimuth patterns of the Army Highband DD antenna over perfect ground at 15 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

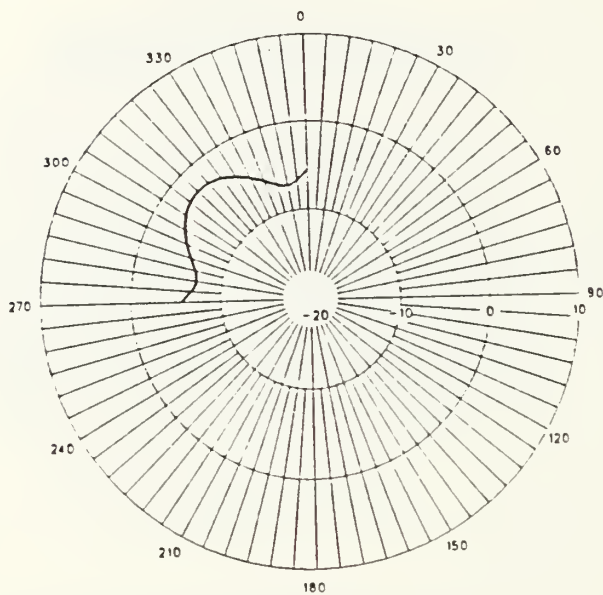

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

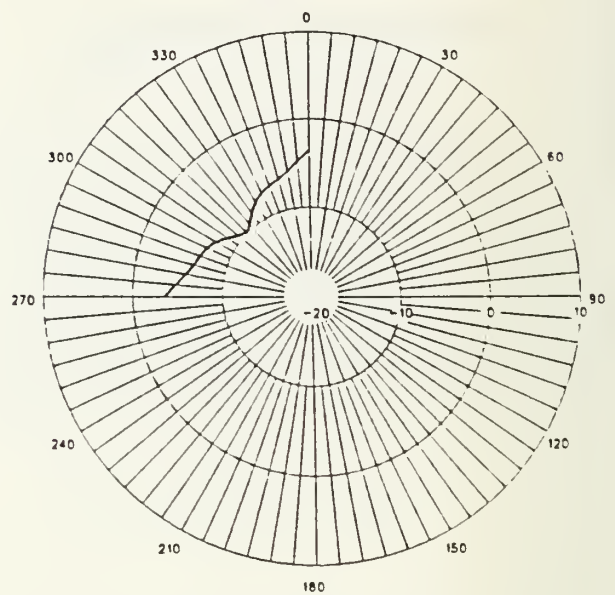

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

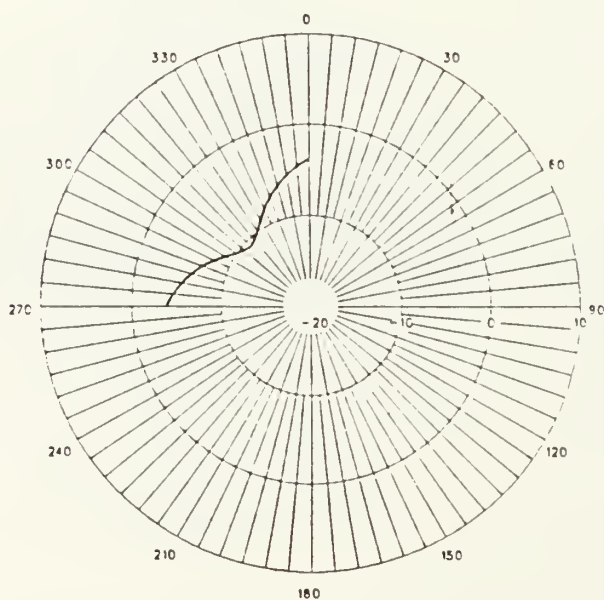

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



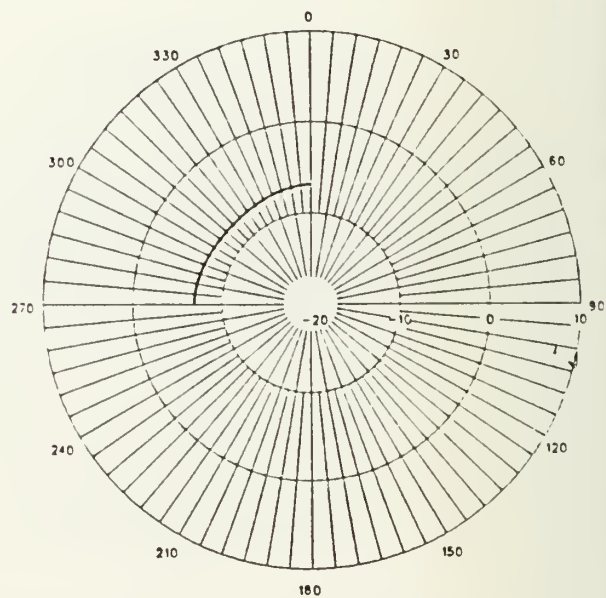


Figure 95. Azimuth patterns of the Army Highband DD antenna over fair ground at 15 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

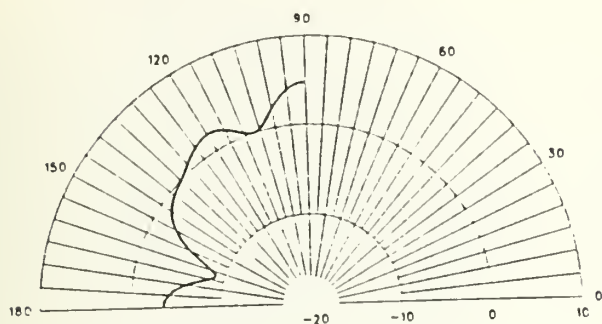

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

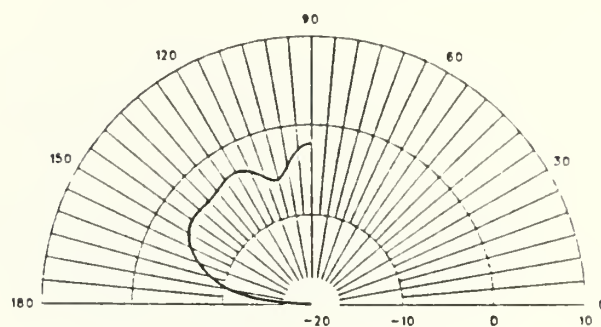

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

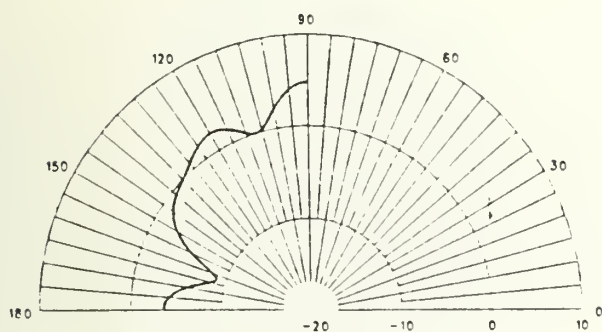

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



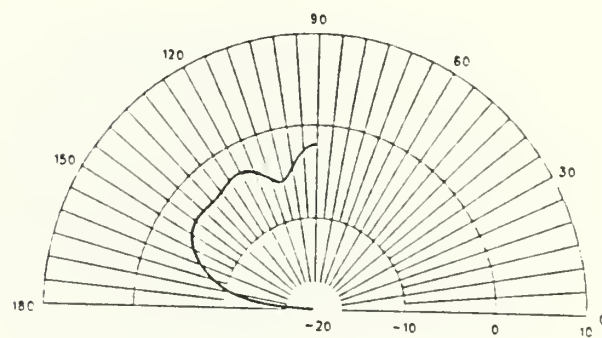


Figure 96. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 16 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

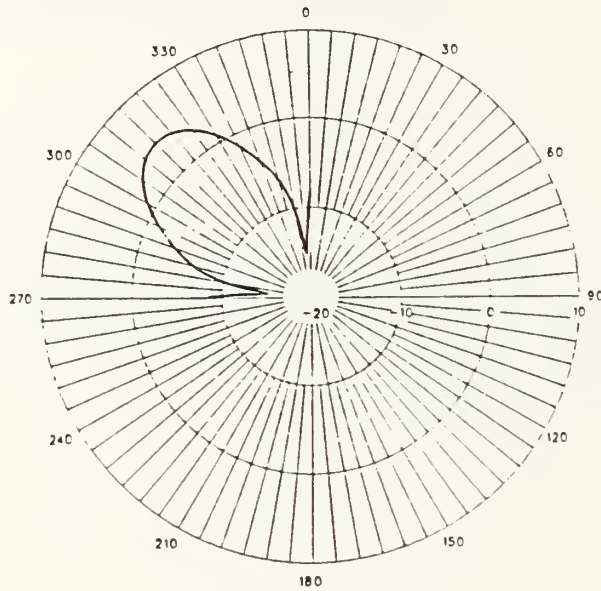

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

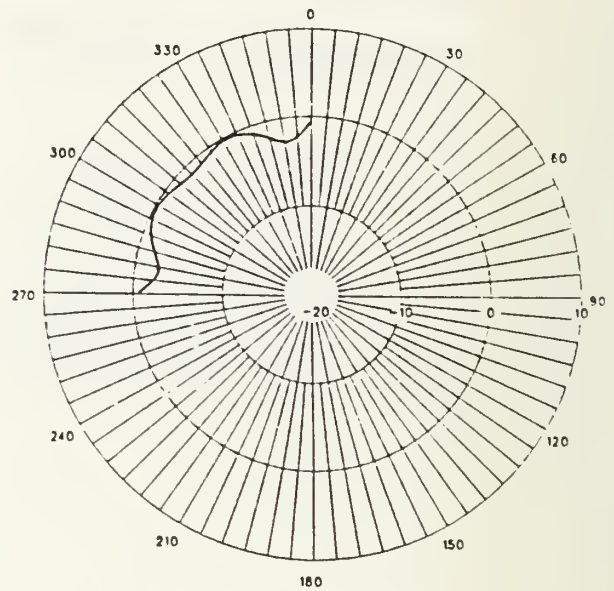

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

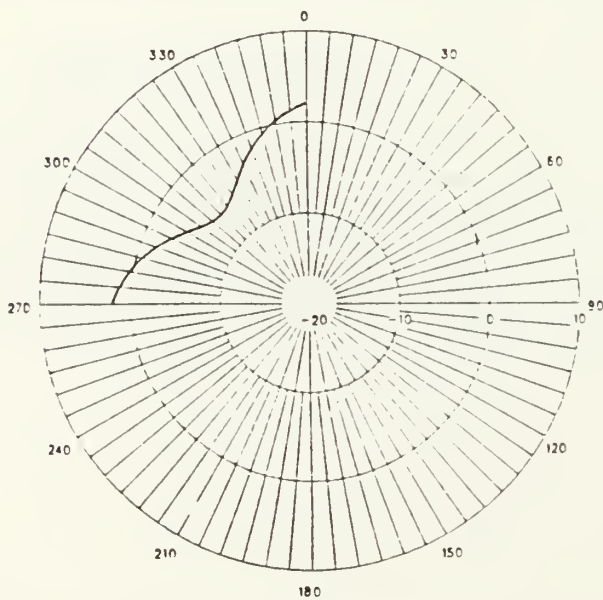

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



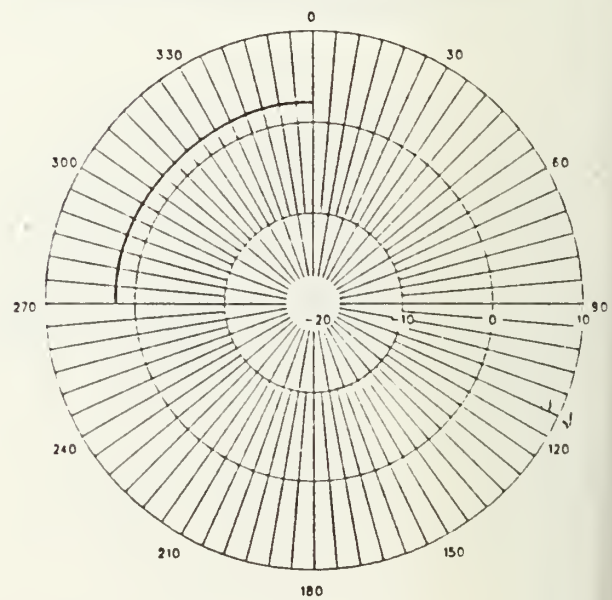


Figure 97. Azimuth patterns of the Army Highband DD antenna over perfect ground at 16 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

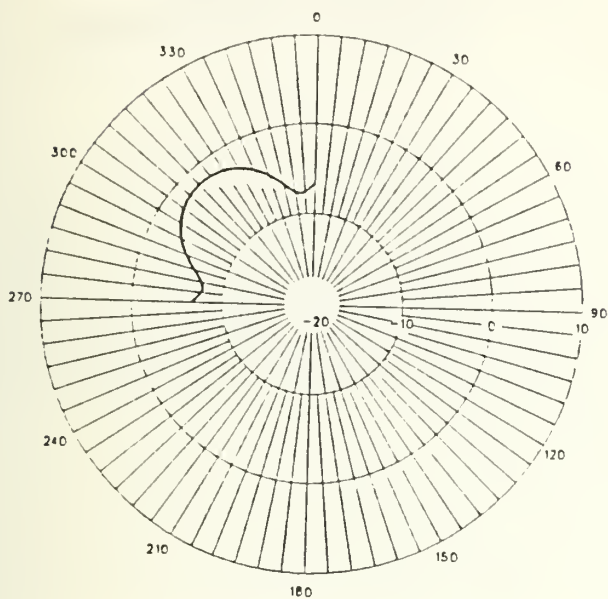

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

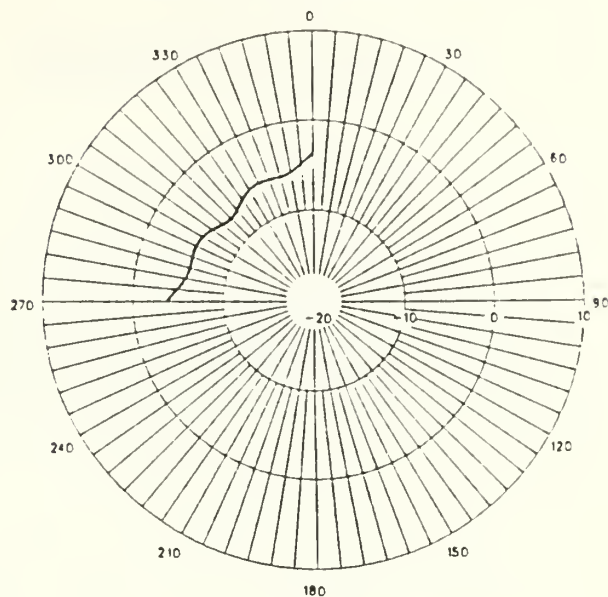

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

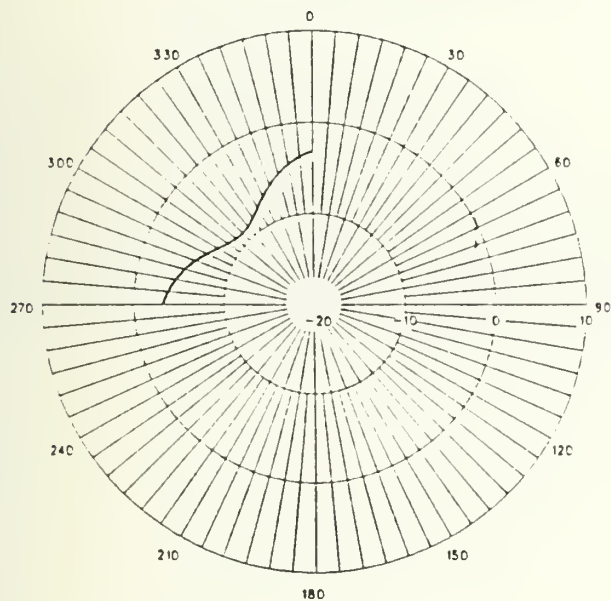

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



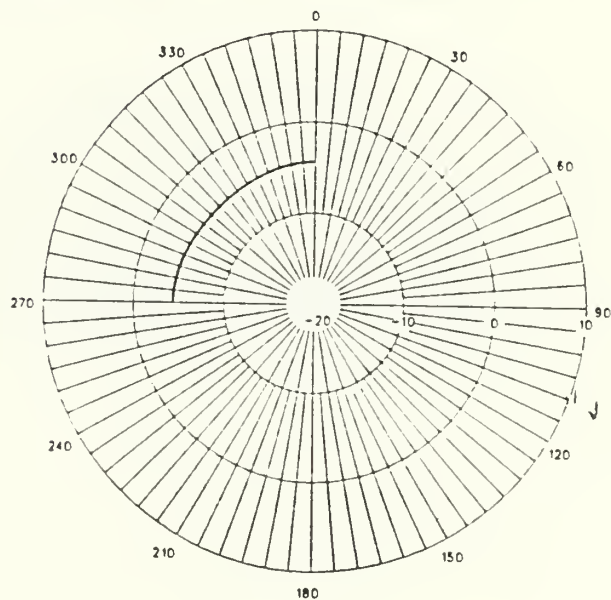


Figure 98. Azimuth patterns of the Army Highband DD antenna over fair ground at 16 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

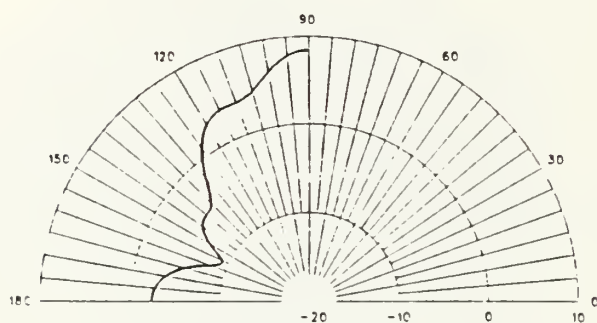

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

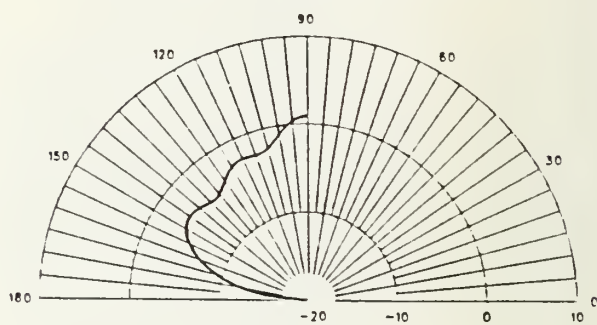

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

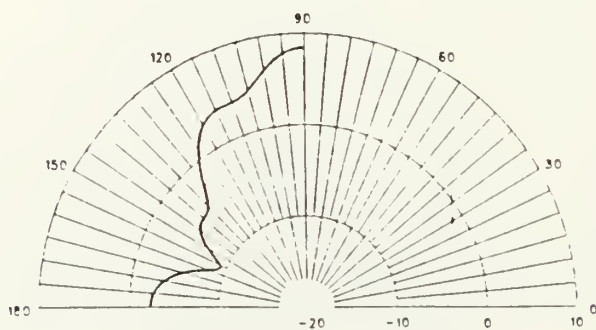

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



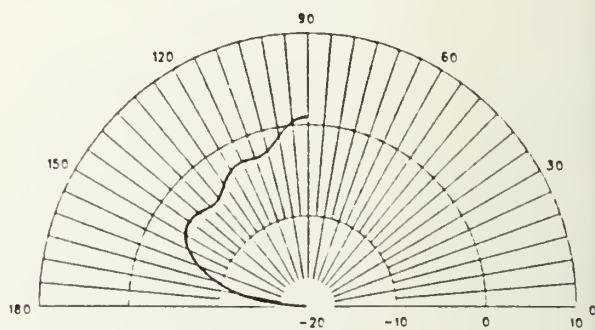


Figure 99. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 17 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

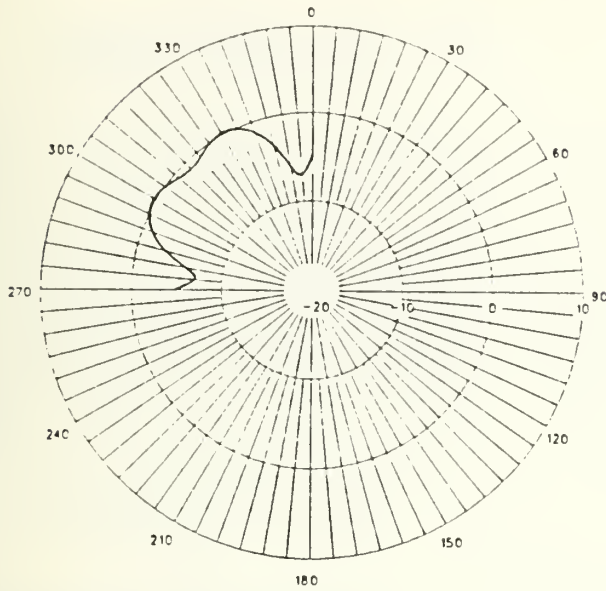

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

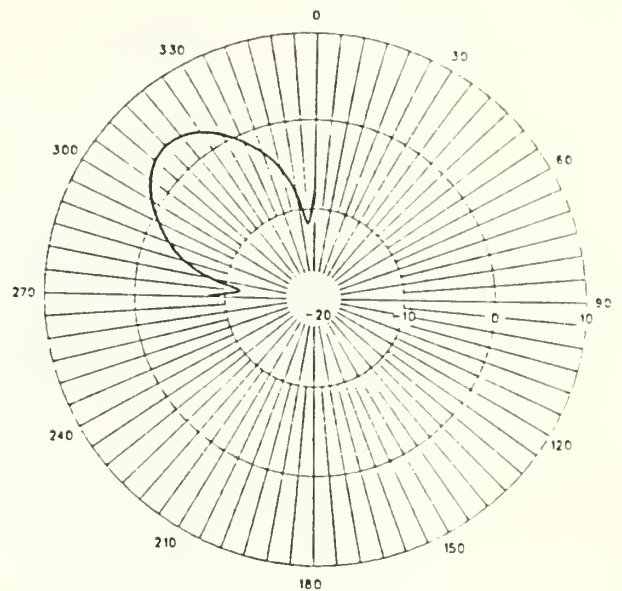

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

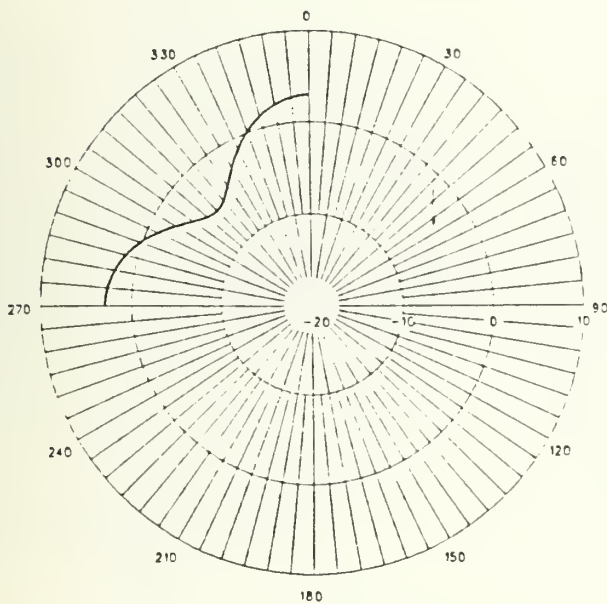

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



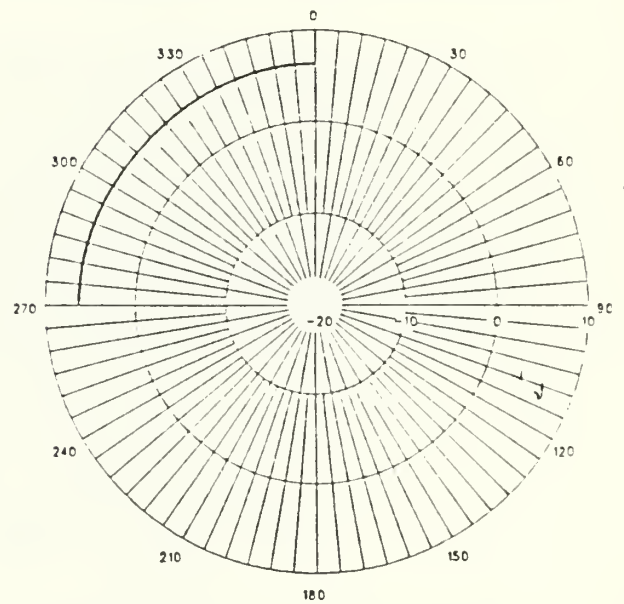


Figure 100. Azimuth patterns of the Army Highband DD antenna over perfect ground at 17 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

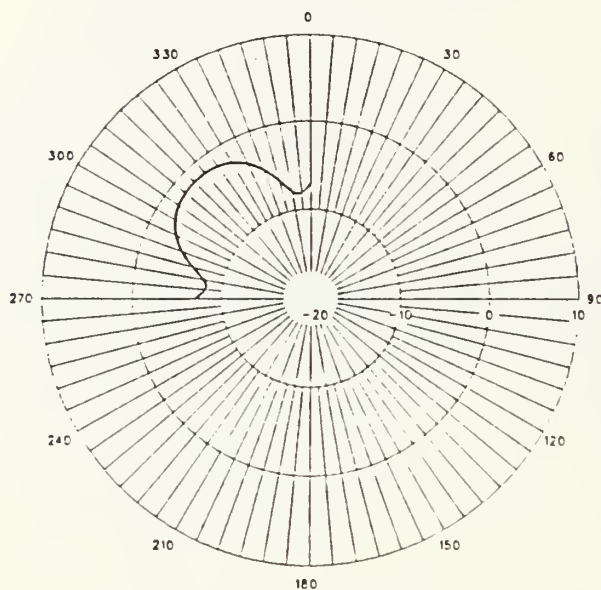

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

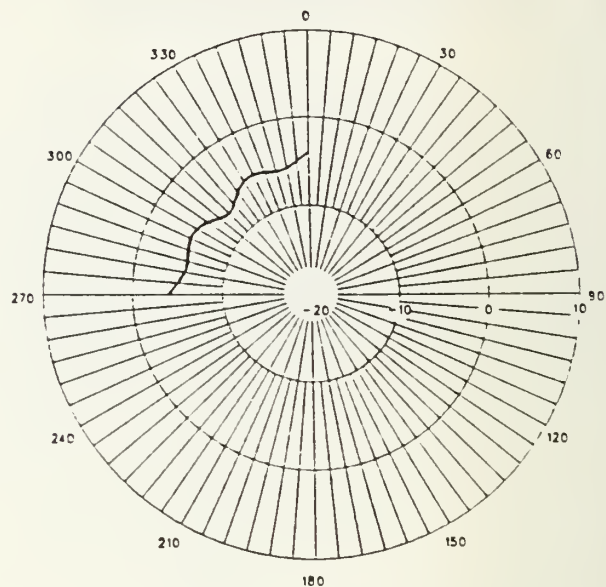

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

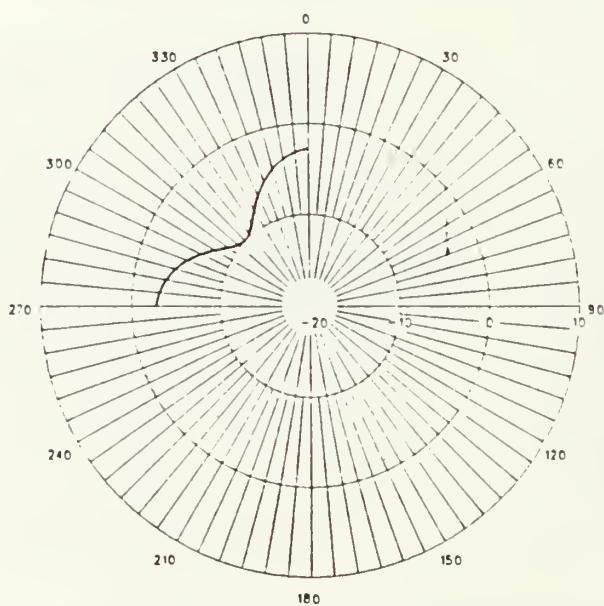

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



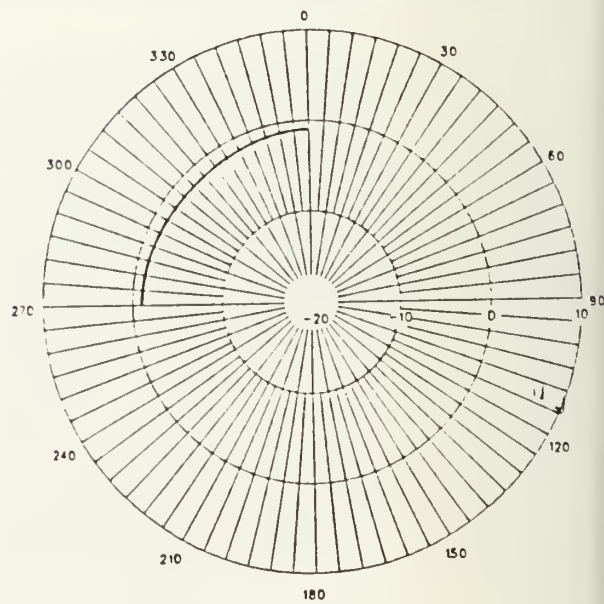


Figure 101. Azimuth patterns of the Army Highband DD antenna over fair ground at 17 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

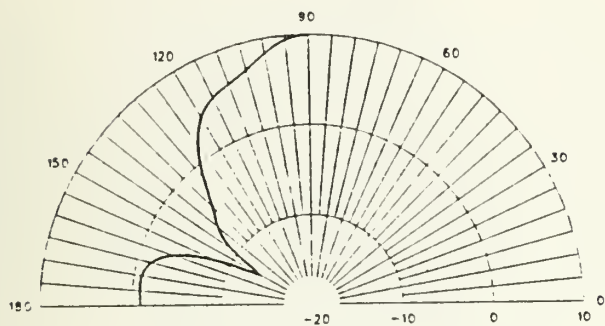

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

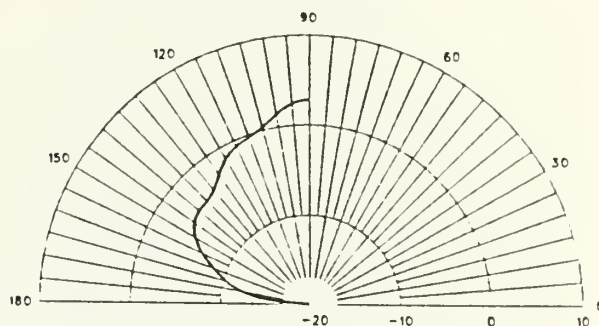

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

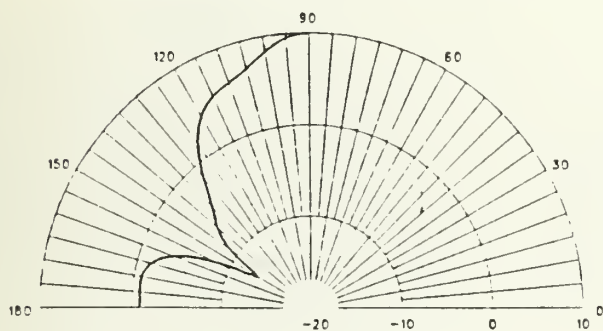

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



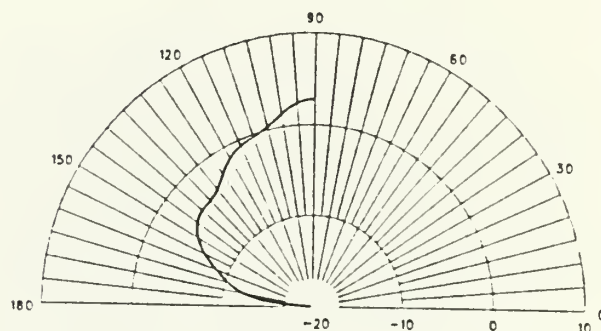


Figure 102. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 18 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

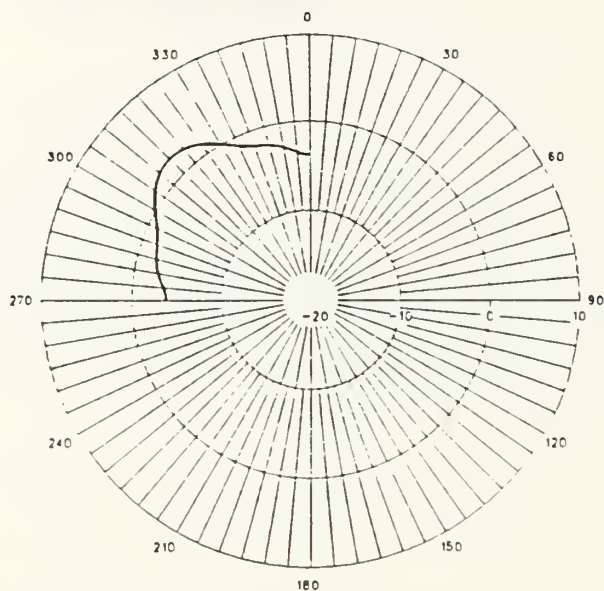

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

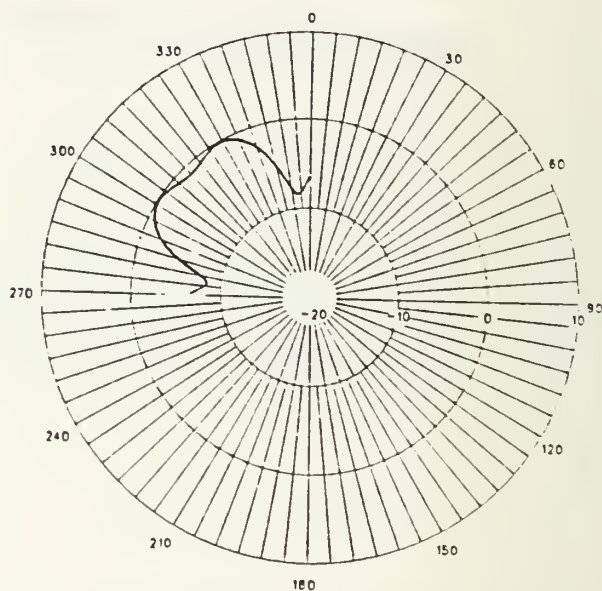

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

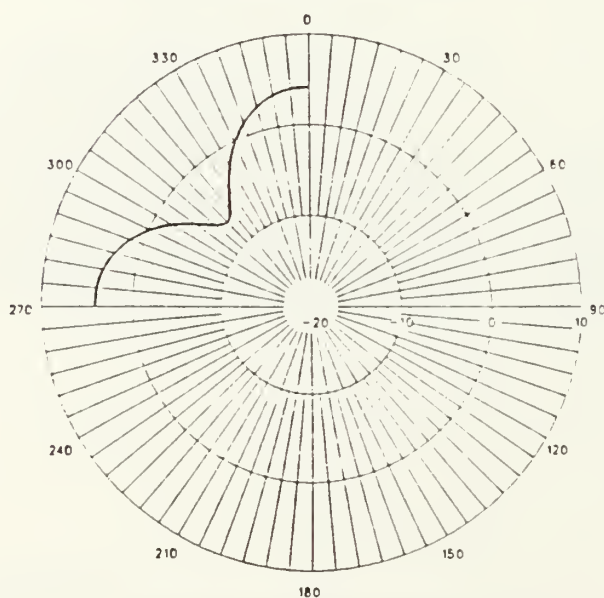

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



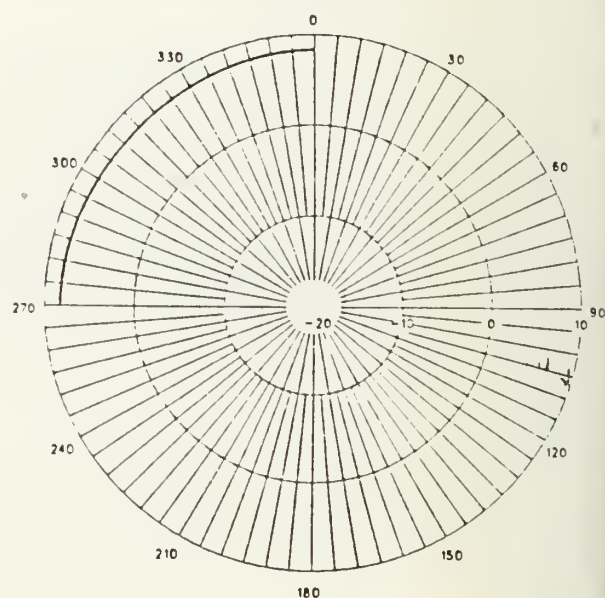


Figure 103. Azimuth patterns of the Army Highband DD antenna over perfect ground at 18 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

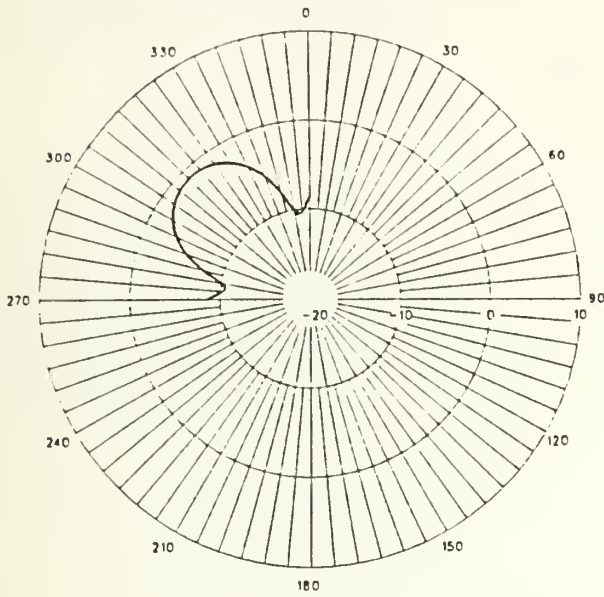

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

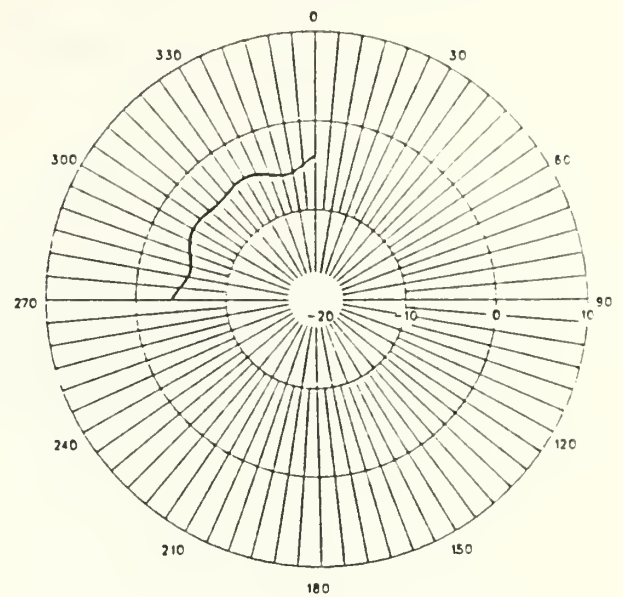

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

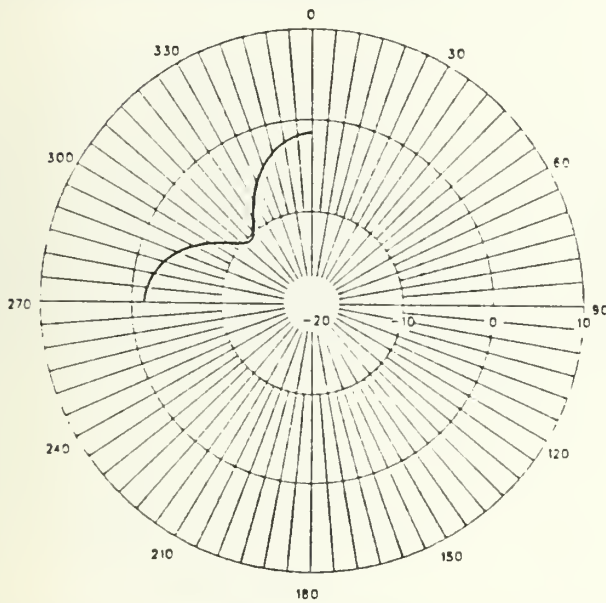

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



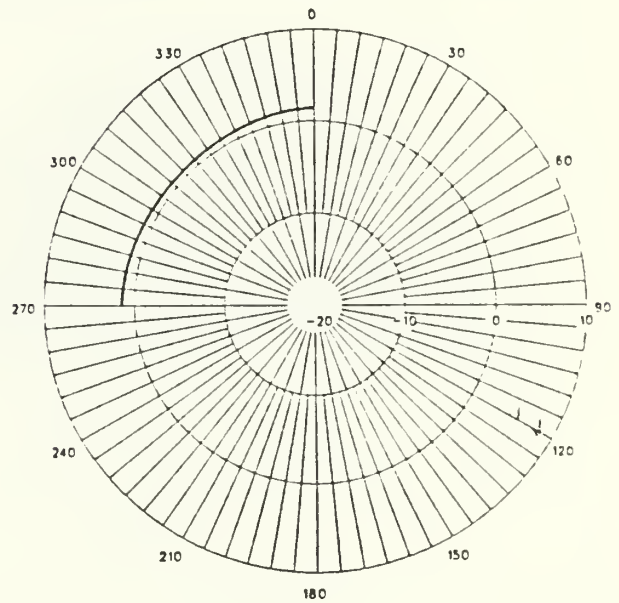


Figure 104. Azimuth patterns of the Army Highband DD antenna over fair ground at 18 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

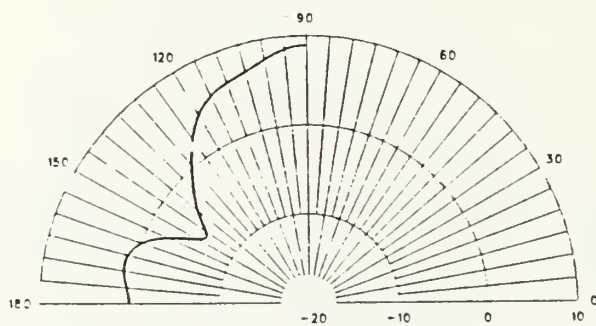

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

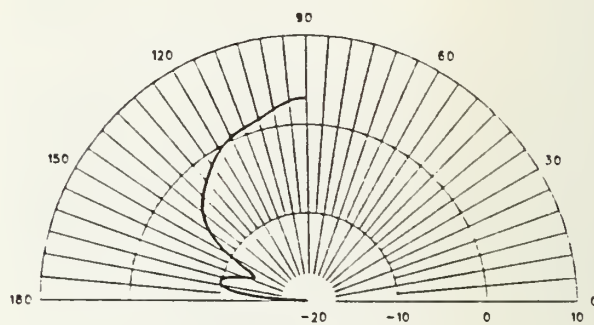

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

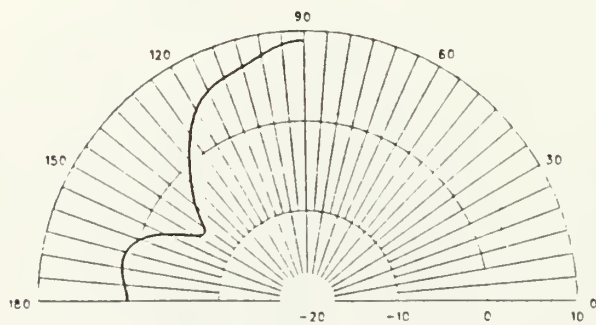

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



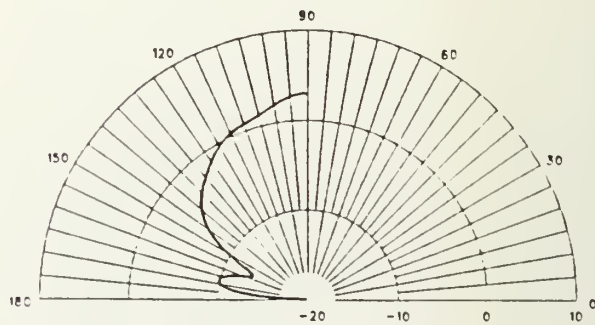


Figure 105. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 19 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

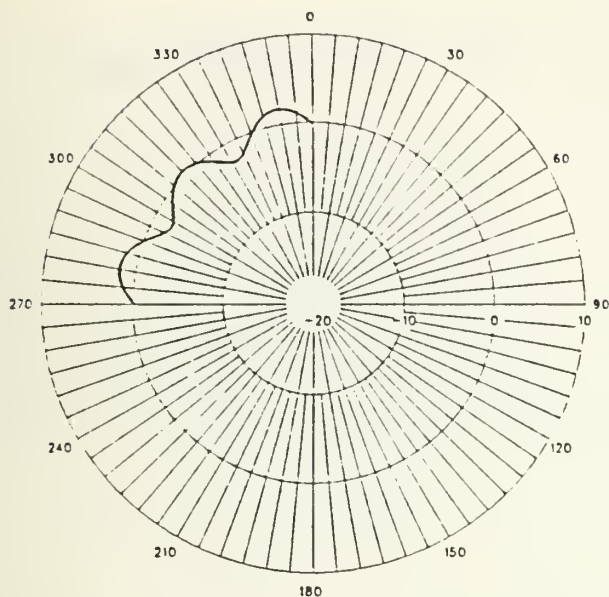

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

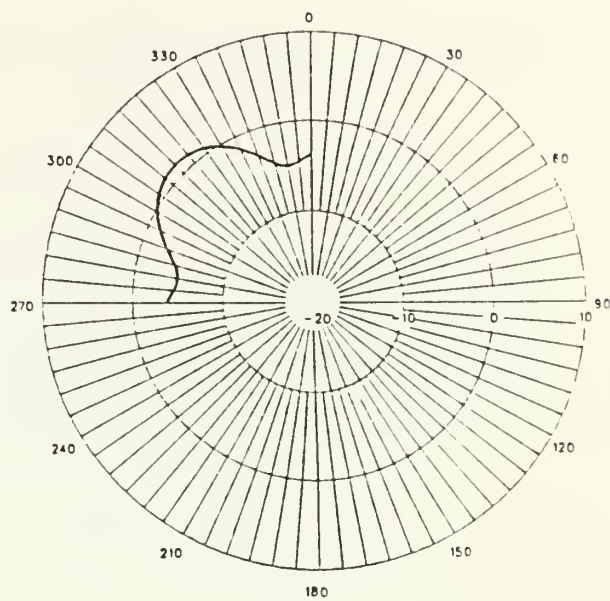

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

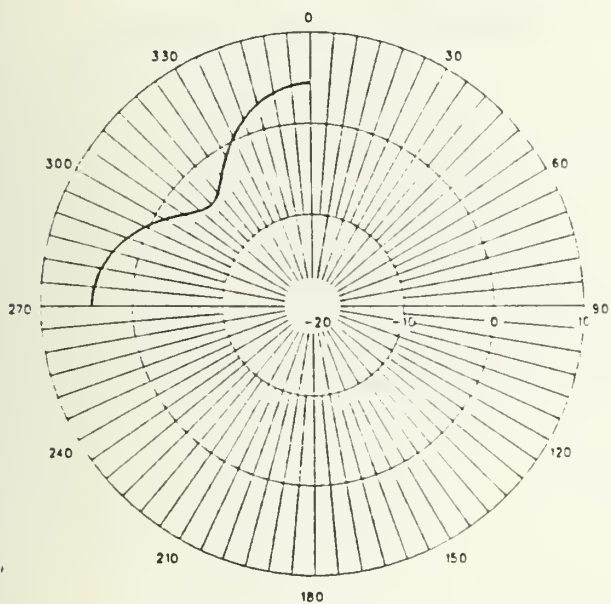

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



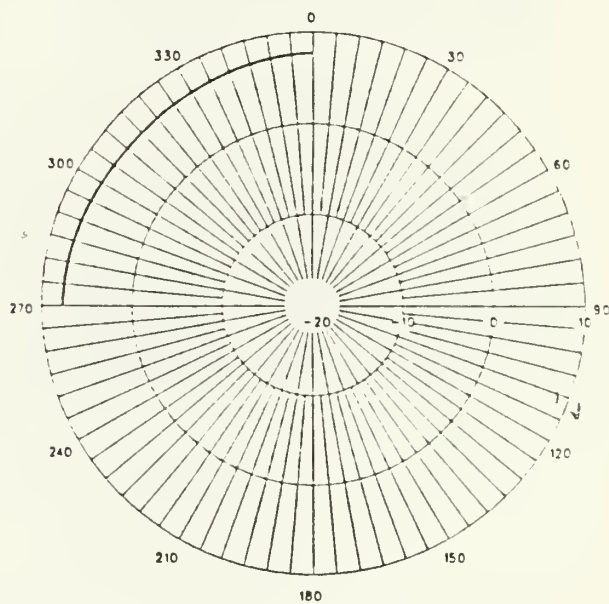


Figure 106. Azimuth patterns of the Army Highband DD antenna over perfect ground at 19 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

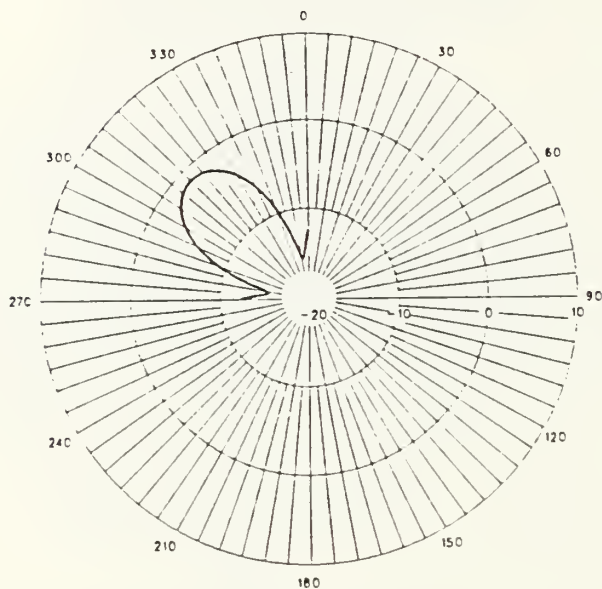

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

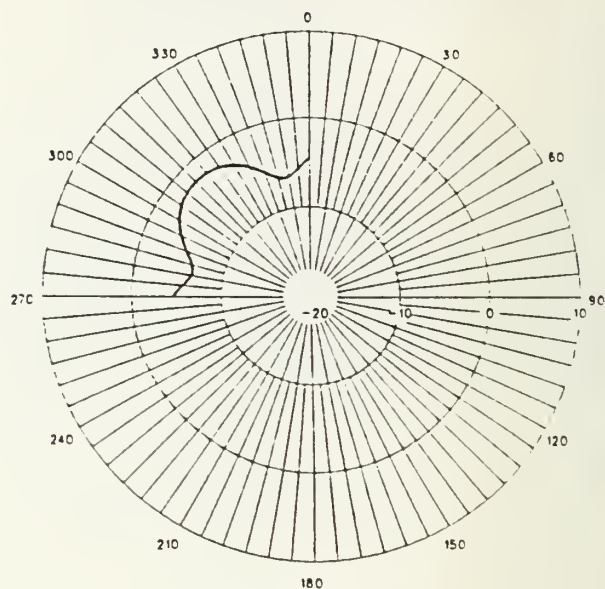

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

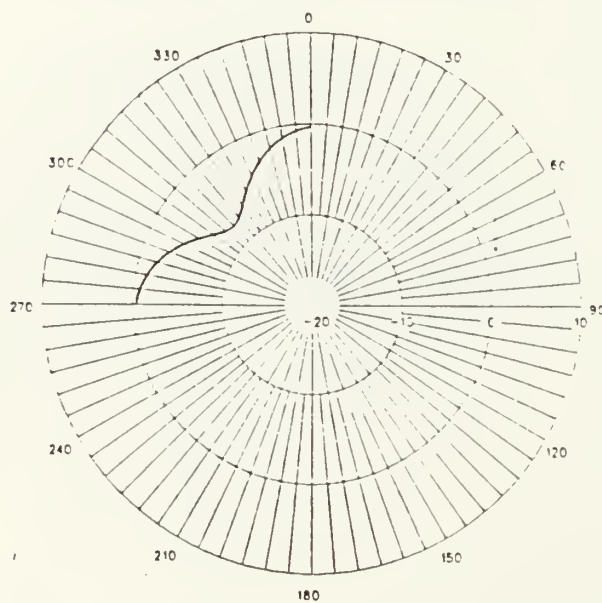

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



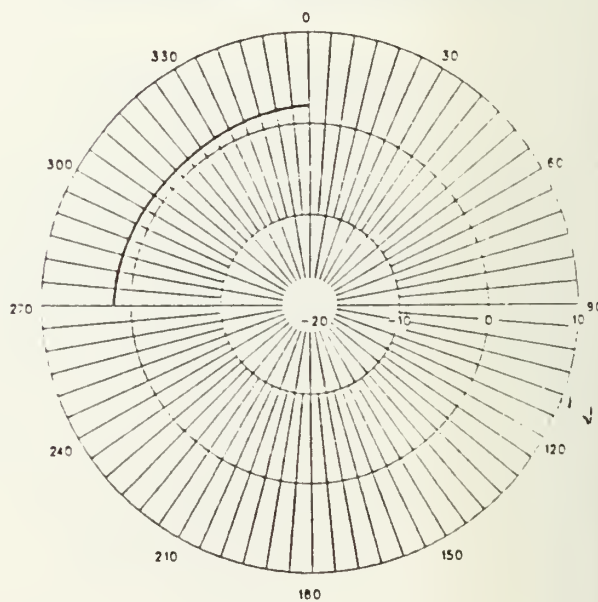


Figure 107. Azimuth patterns of the Army Highband DD antenna over fair ground at 19 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

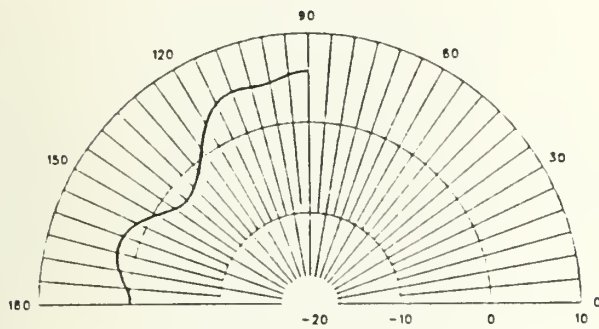

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

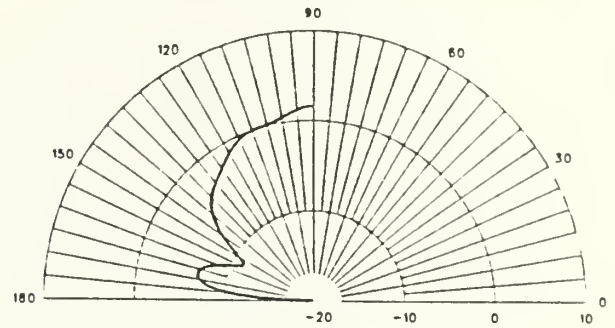

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

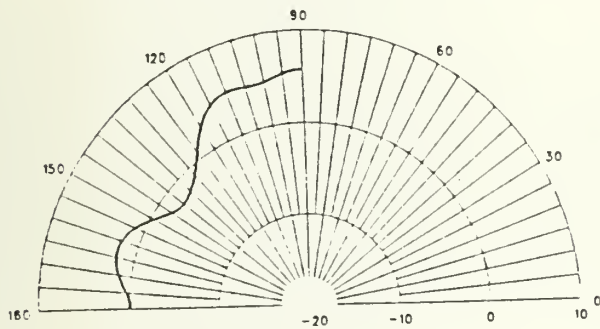

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



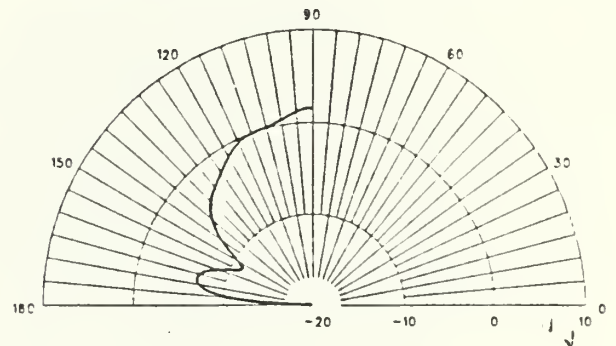


Figure 108. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 20 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

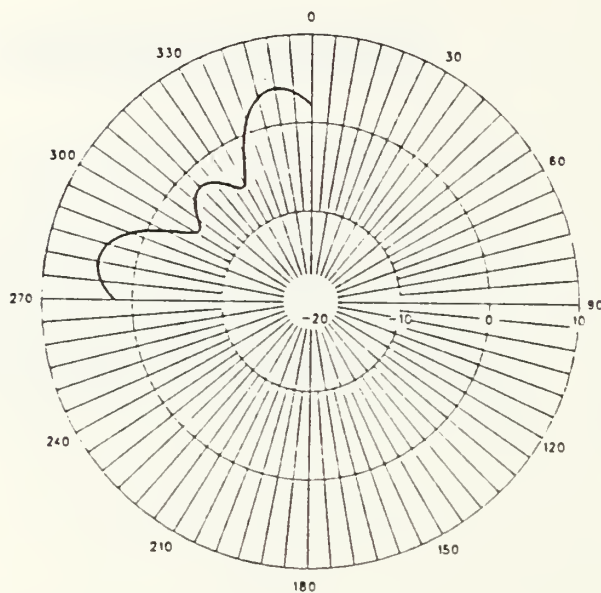

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

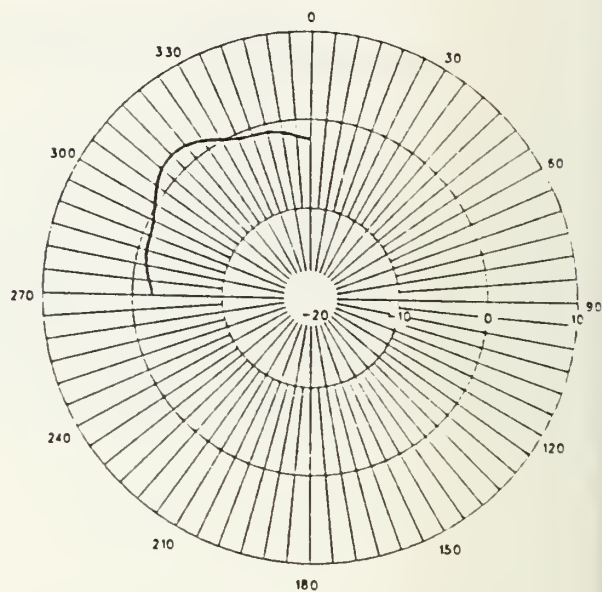

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

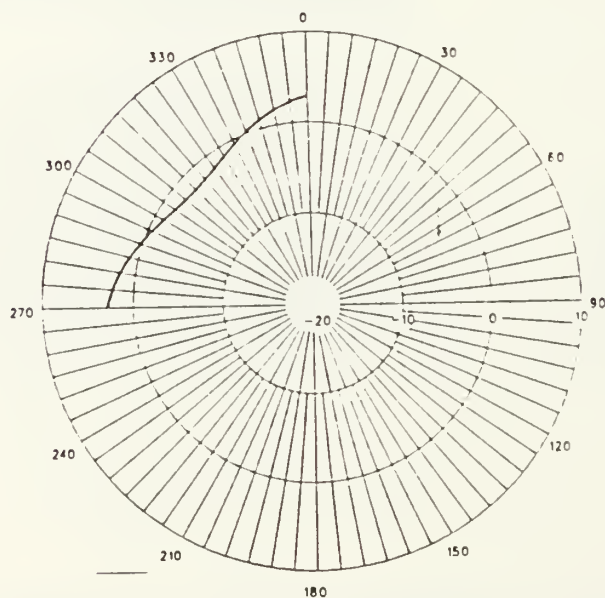

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



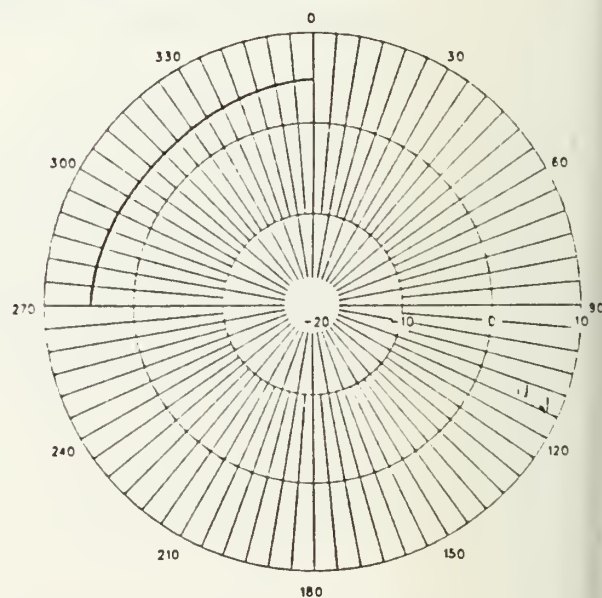


Figure 109. Azimuth patterns of the Army Highband DD antenna over perfect ground at 20 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

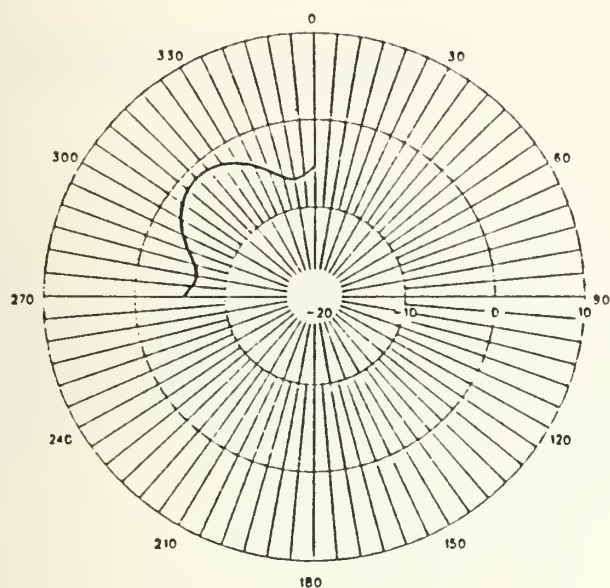

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

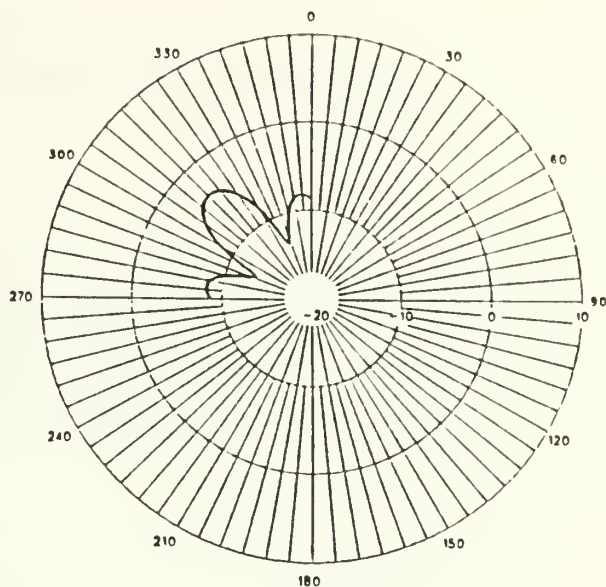

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

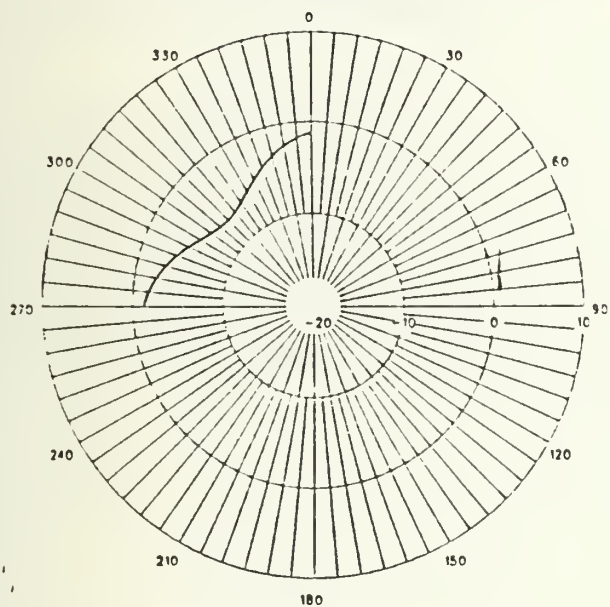

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



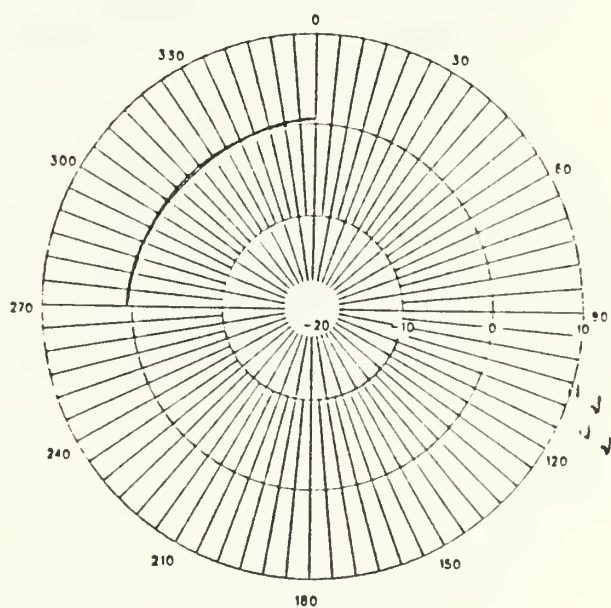


Figure 110. Azimuth patterns of the Army Highband DD antenna over fair ground at 20 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

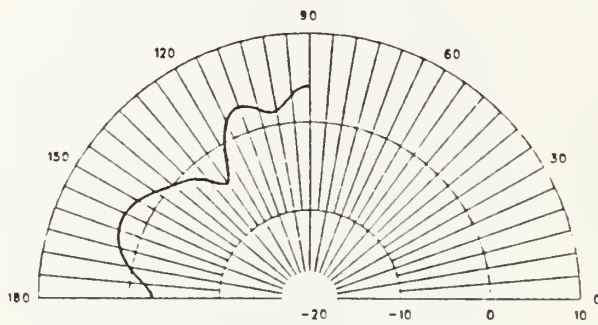

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

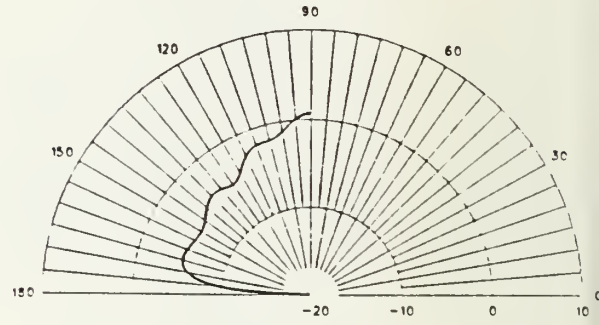

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

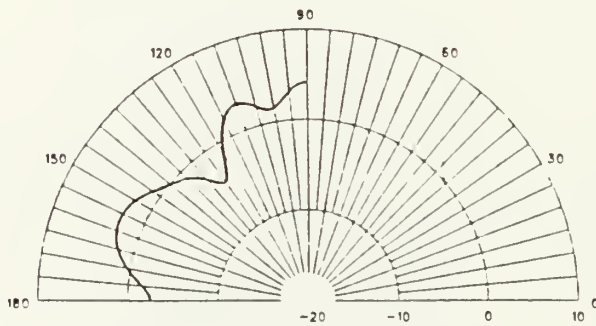

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



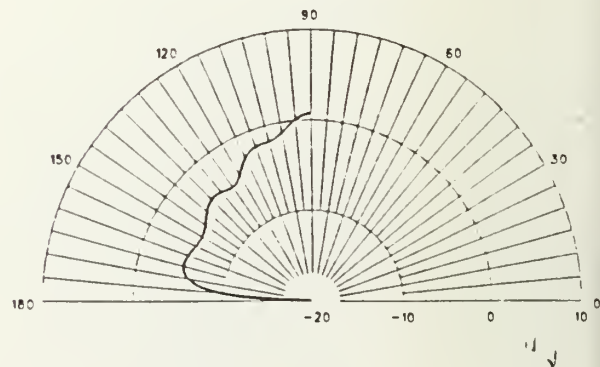


Figure 111. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 21 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

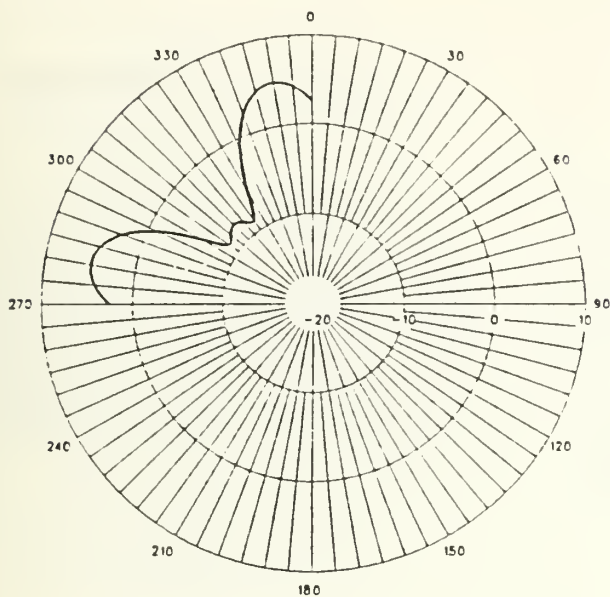

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

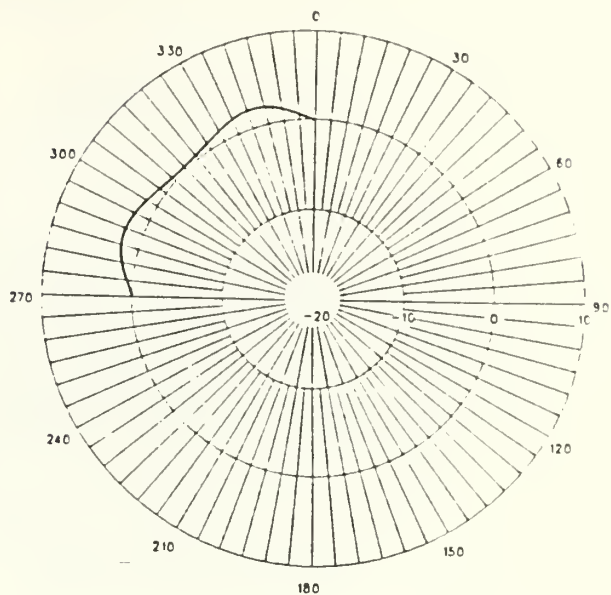

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

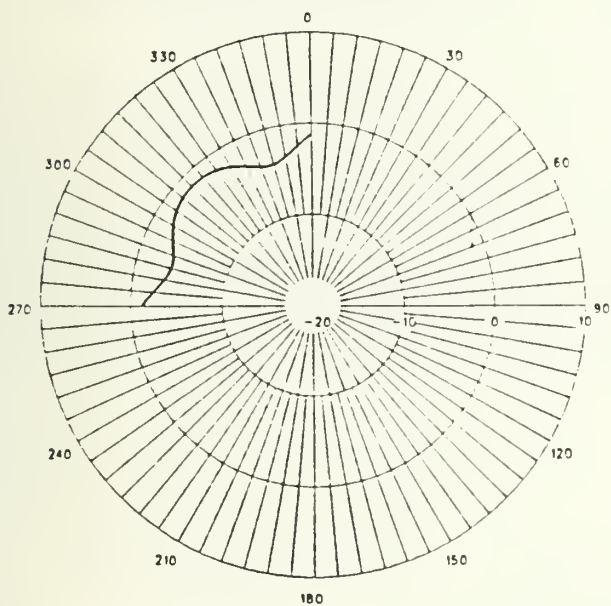

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



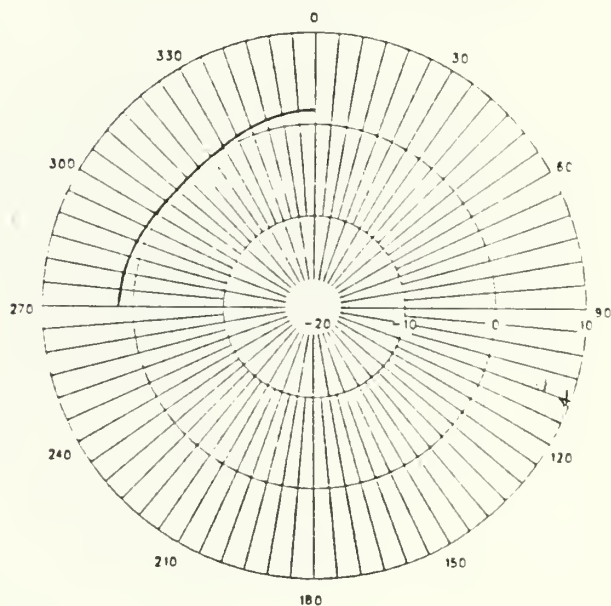


Figure 112. Azimuth patterns of the Army Highband DD antenna over perfect ground at 21 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

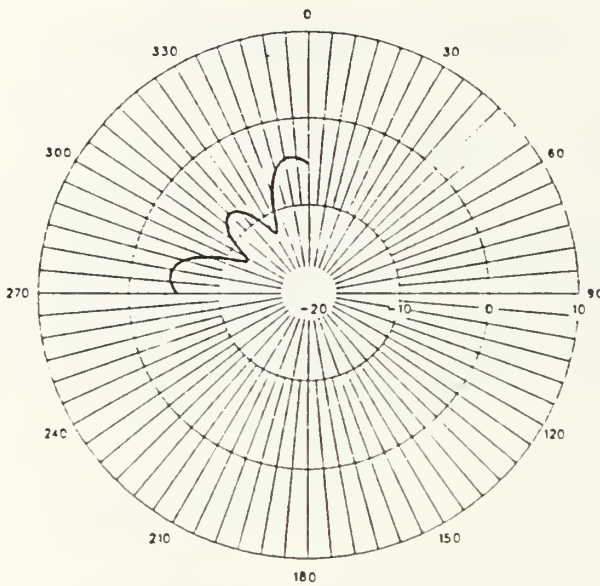

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

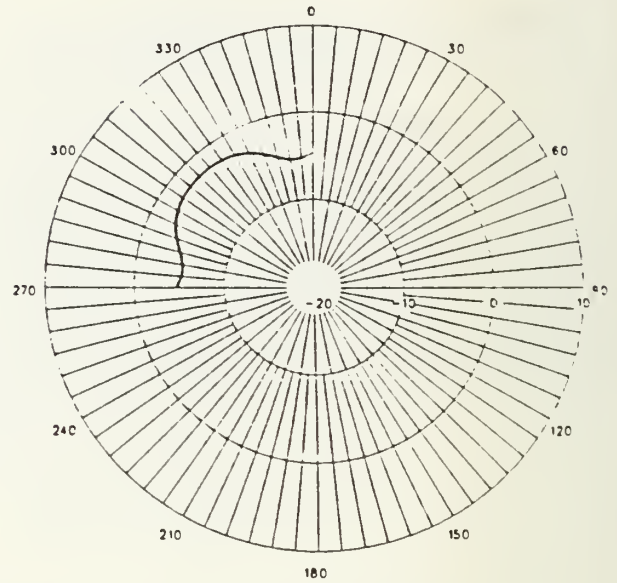

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

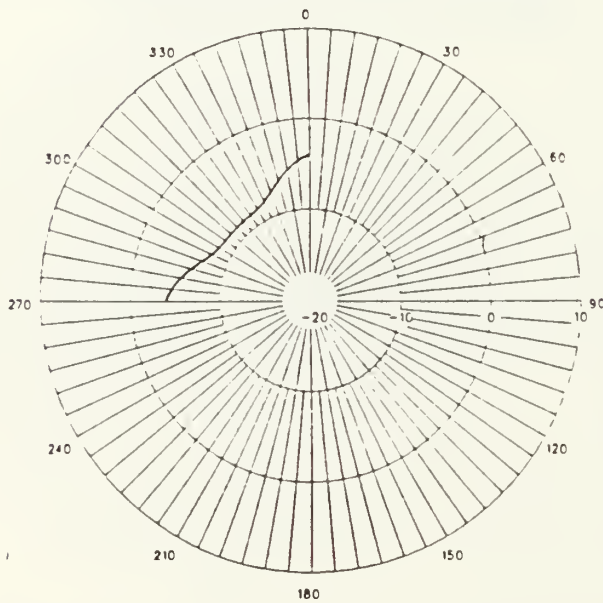

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



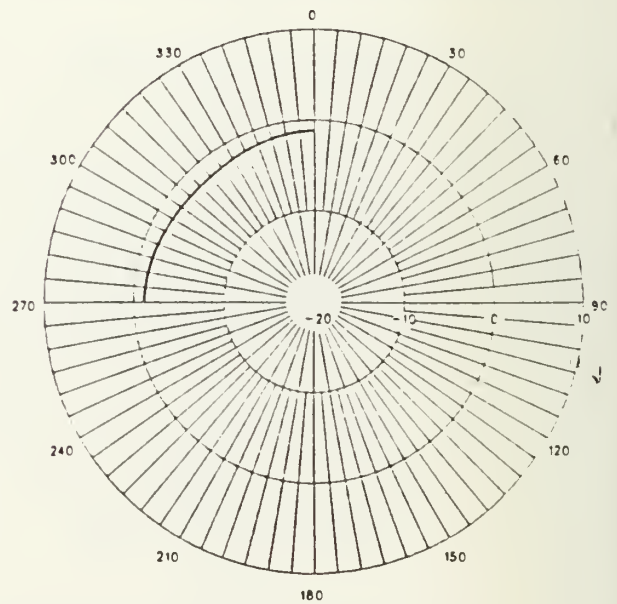


Figure 113. Azimuth patterns of the Army Highband DD antenna over fair ground at 21 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

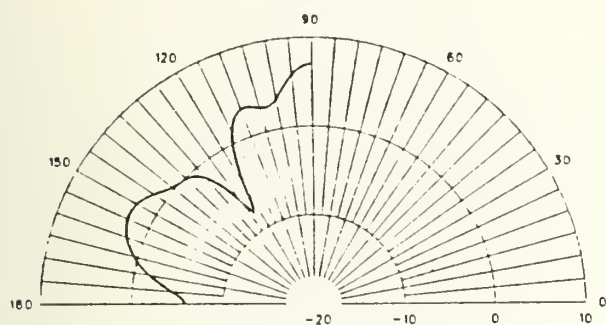

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

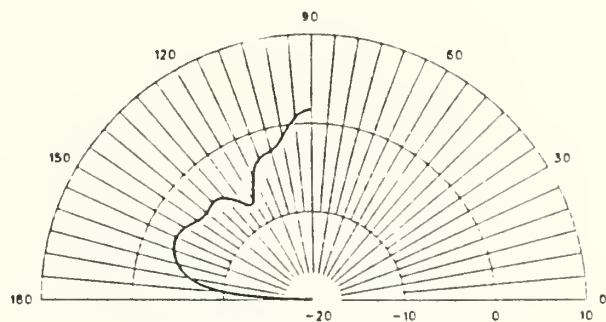

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

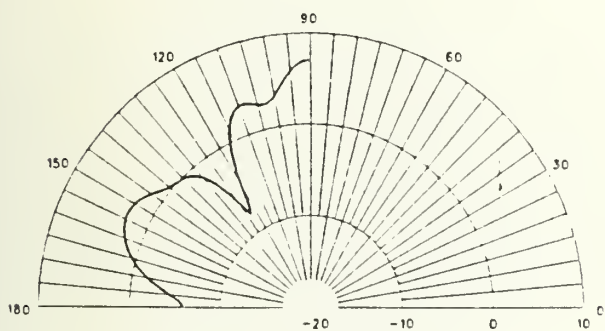

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



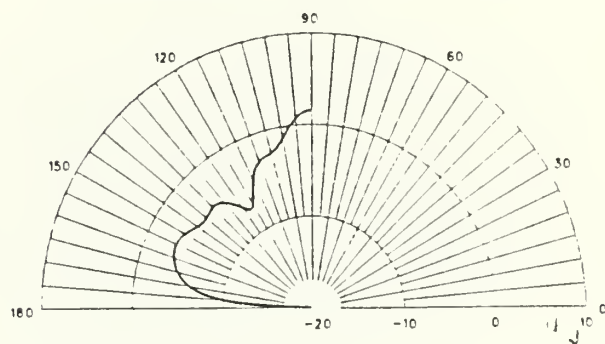


Figure 114. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 22 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

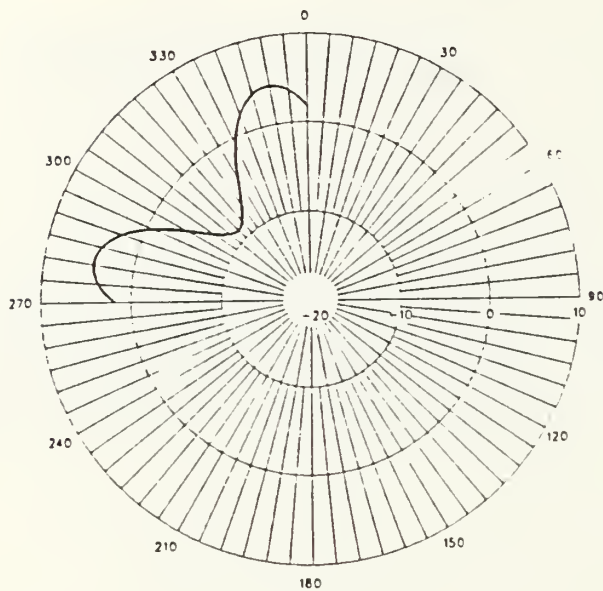

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

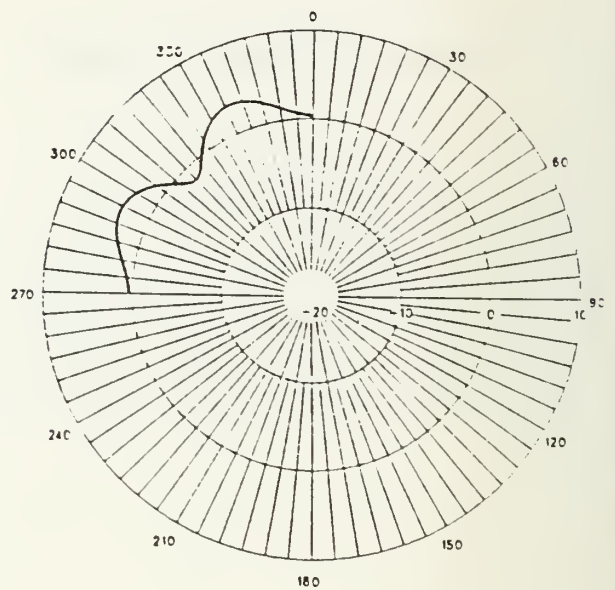

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

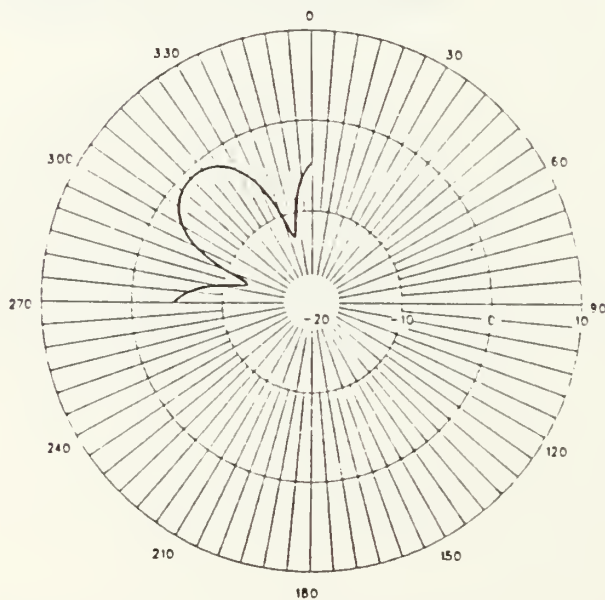

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



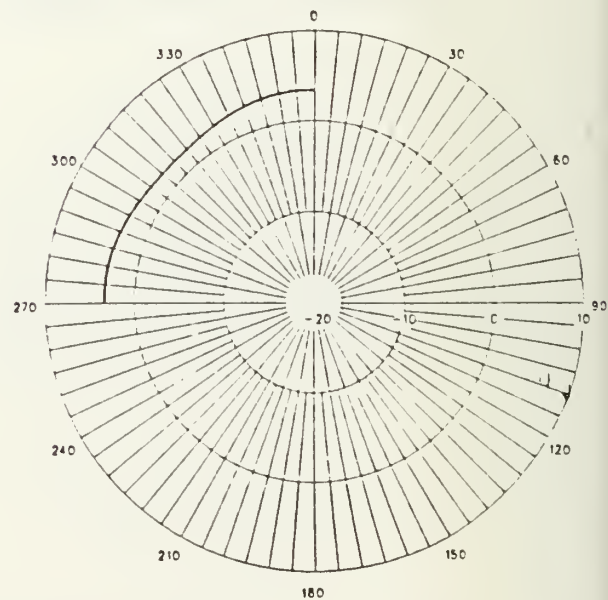


Figure 115. Azimuth patterns of the Army Highband DD antenna over perfect ground at 22 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

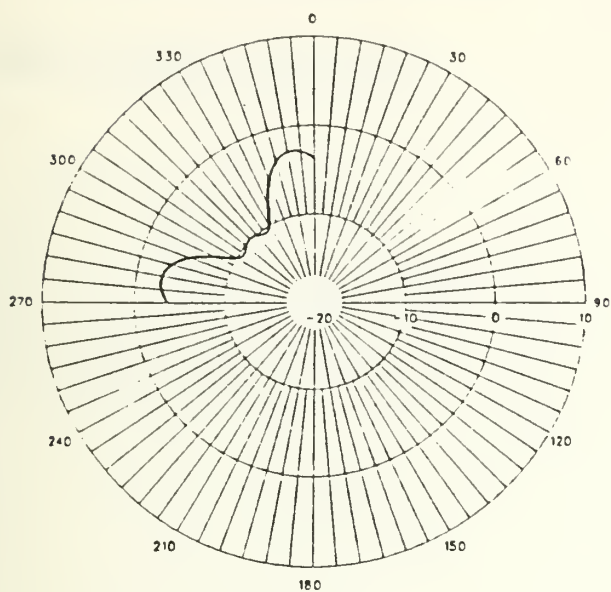

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

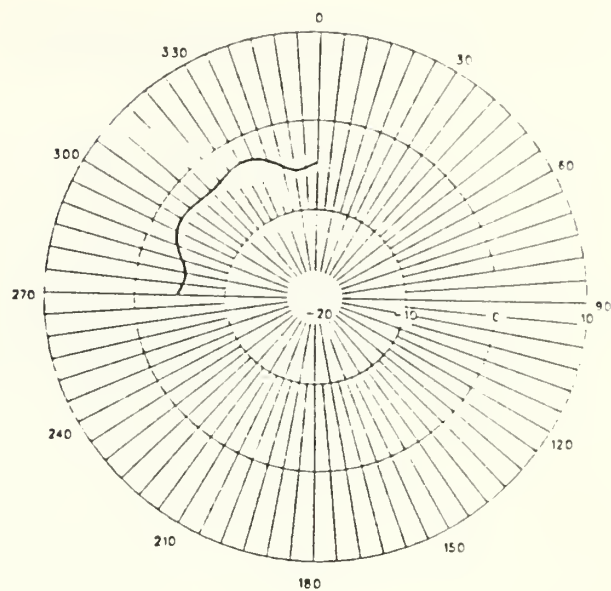

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

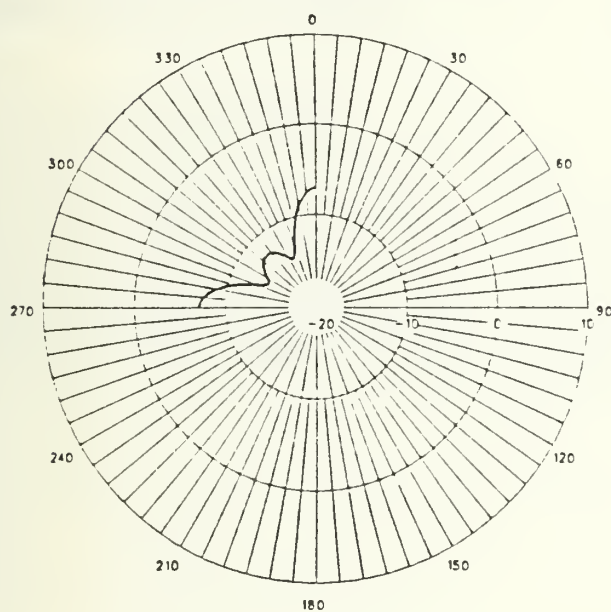

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



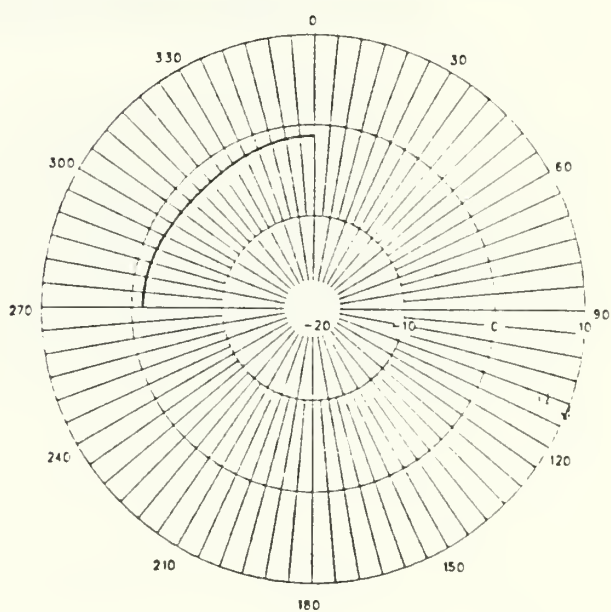


Figure 116. Azimuth patterns of the Army Highband DD antenna over fair ground at 22 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

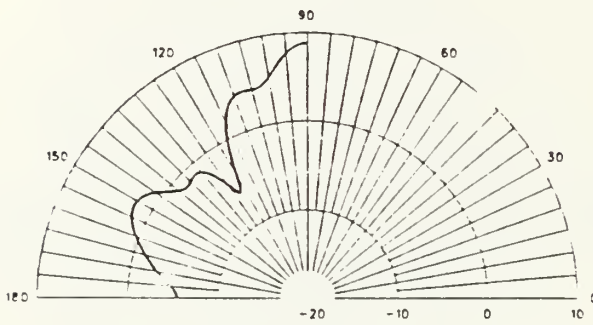

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

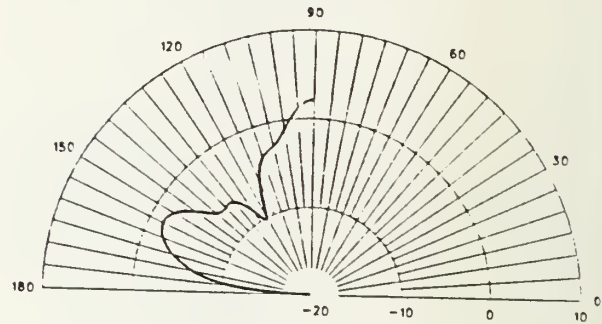

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

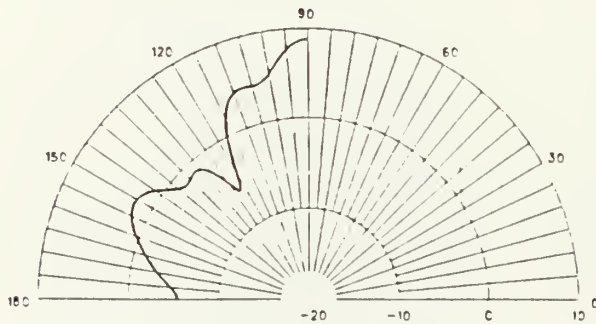

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



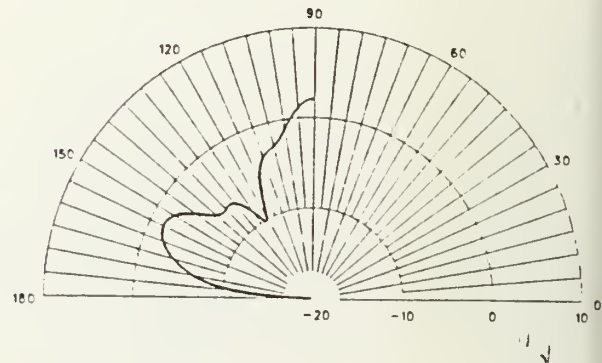


Figure 117. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 23 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

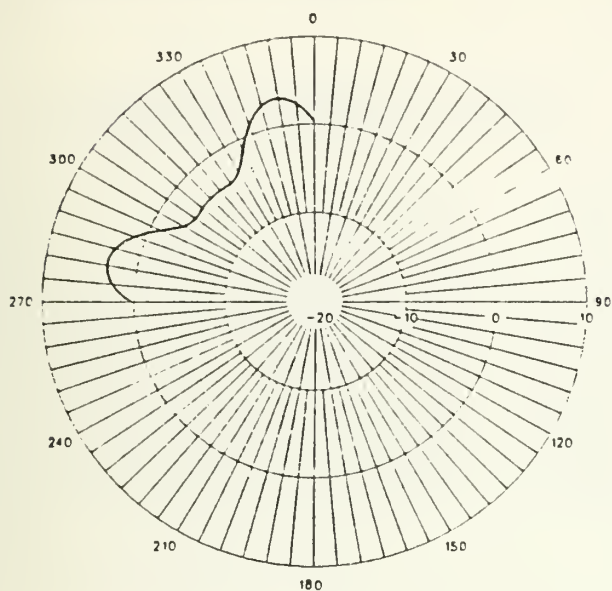

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

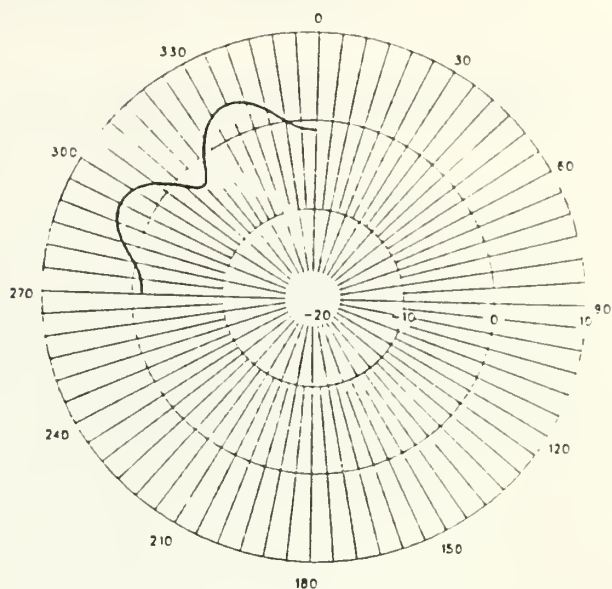

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

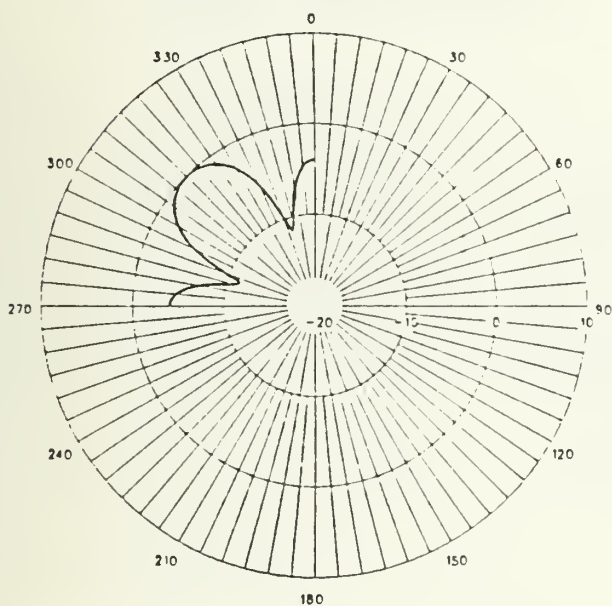

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



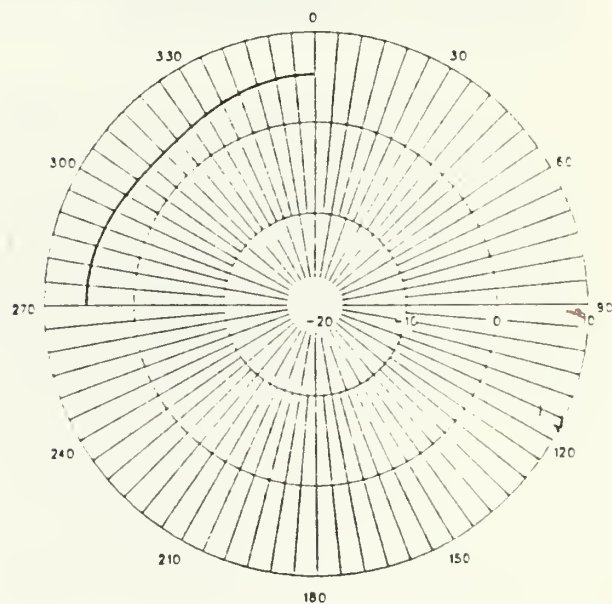


Figure 118. Azimuth patterns of the Army Highband DD antenna over perfect ground at 23 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

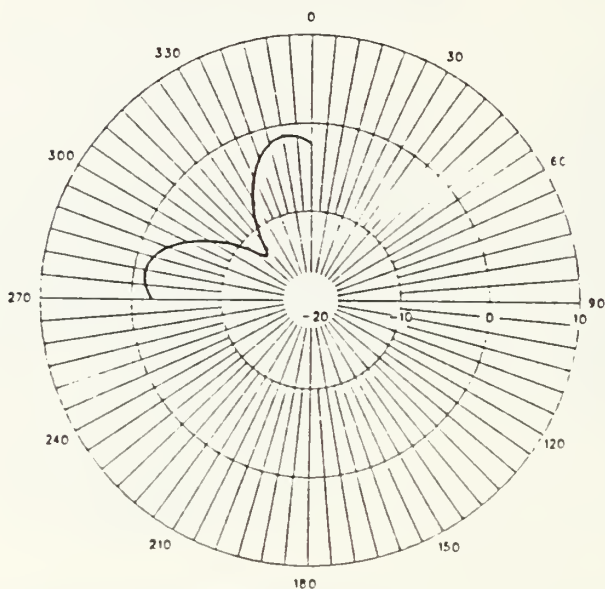

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

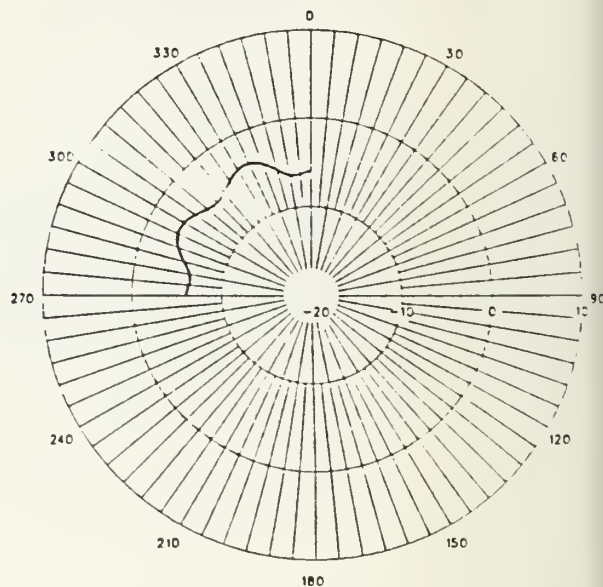

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

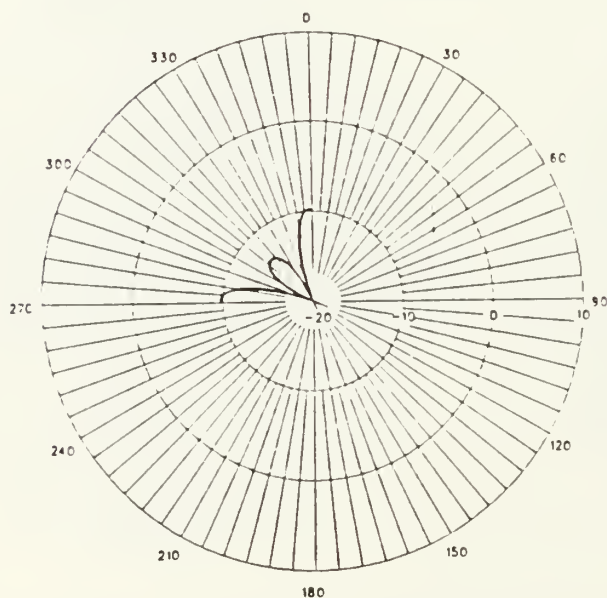

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



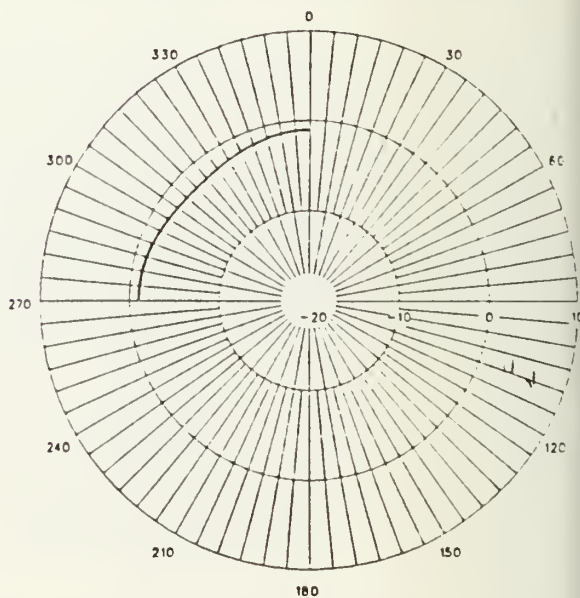


Figure 119. Azimuth patterns of the Army Highband DD antenna over fair ground at 23 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

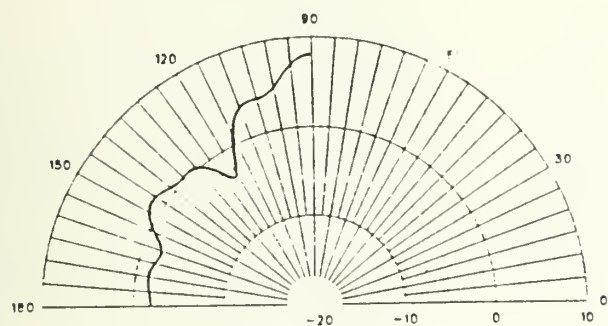

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

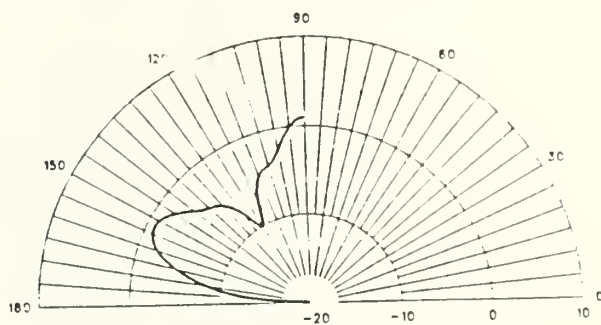

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

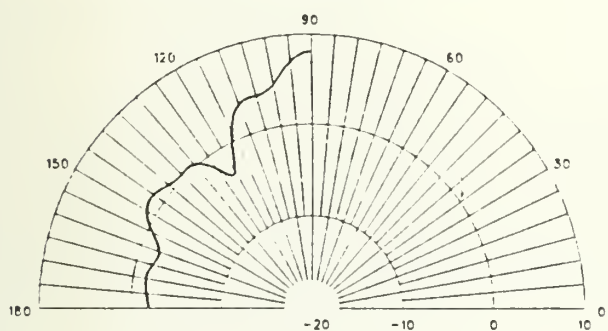

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



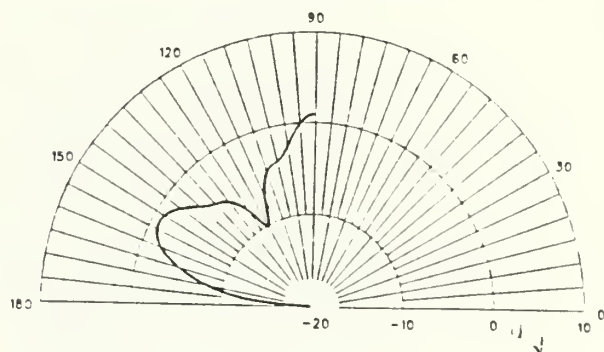


Figure 120. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 24 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

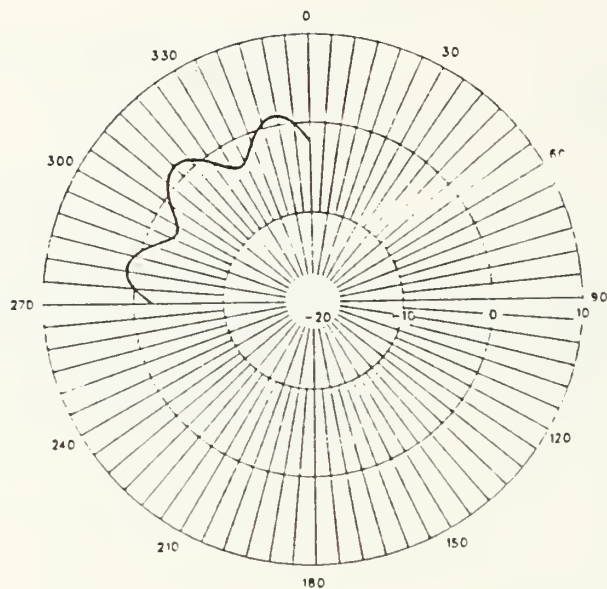

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

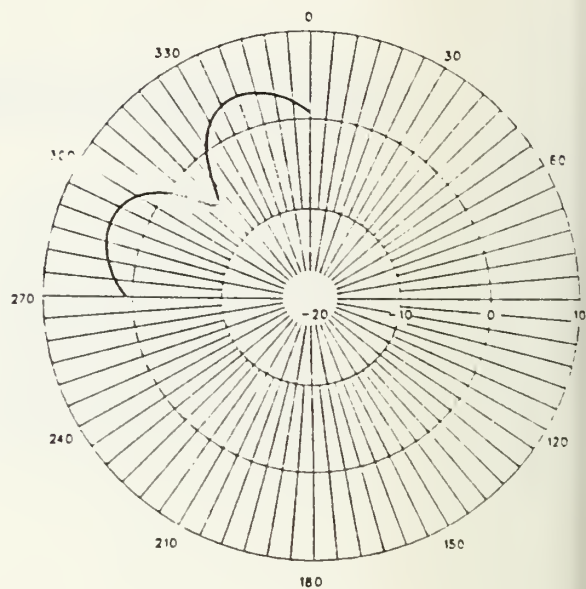

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

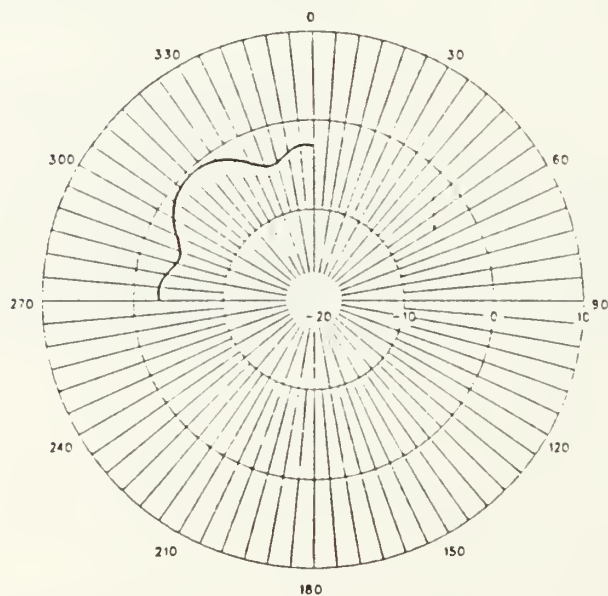

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



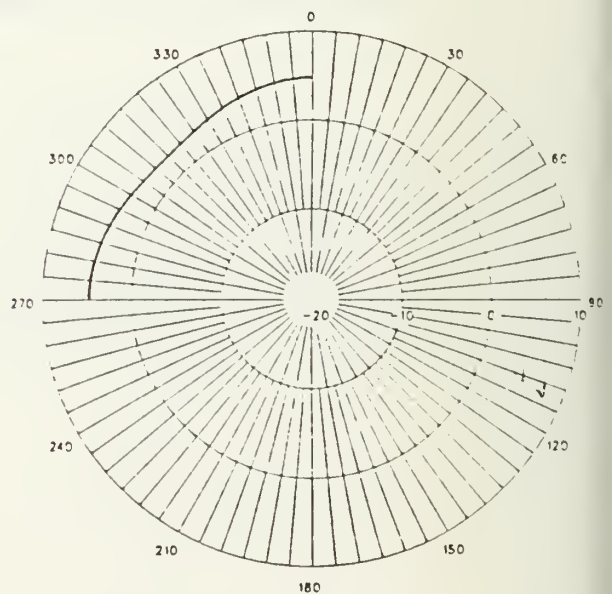


Figure 121. Azimuth patterns of the Army Highband DD antenna over perfect ground at 24 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

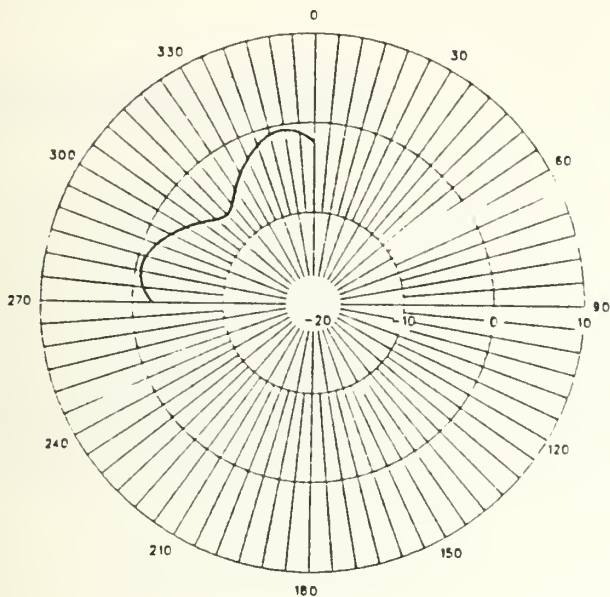

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

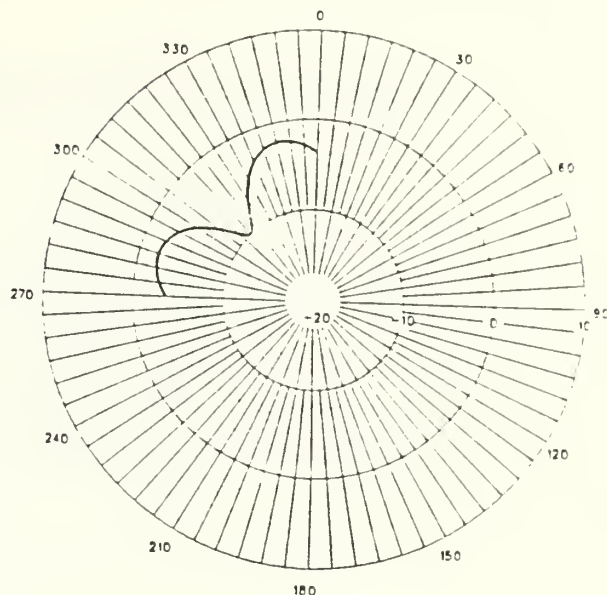

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

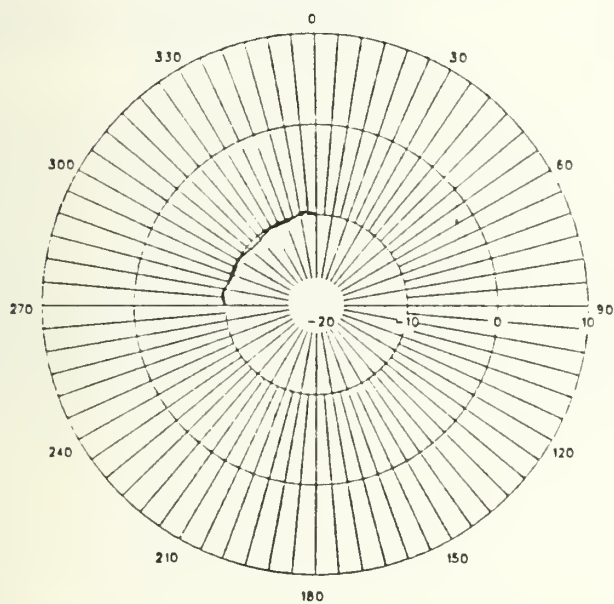

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



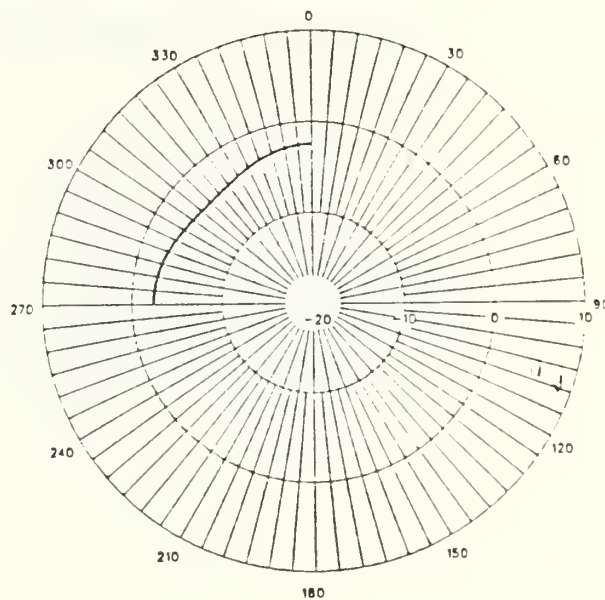


Figure 122. Azimuth patterns of the Army Highband DD antenna over fair ground at 24 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

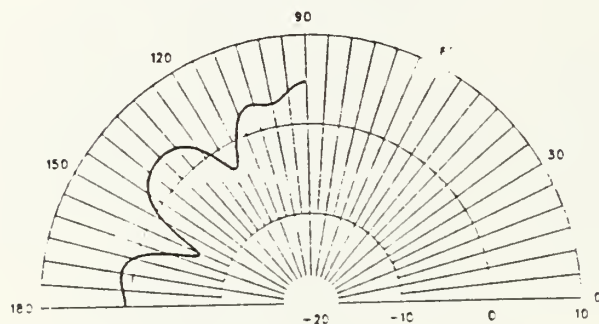

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

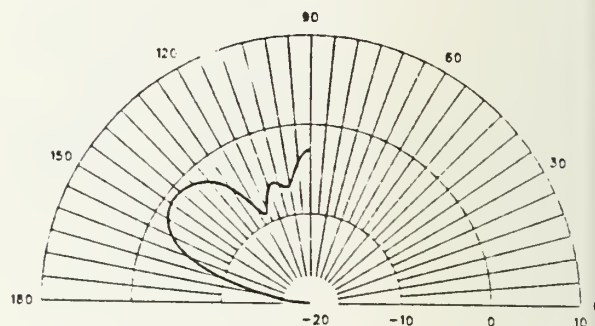

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

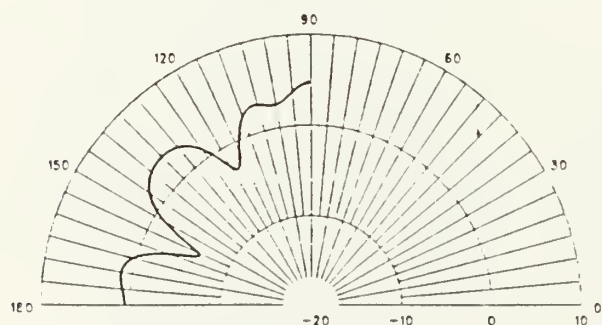

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



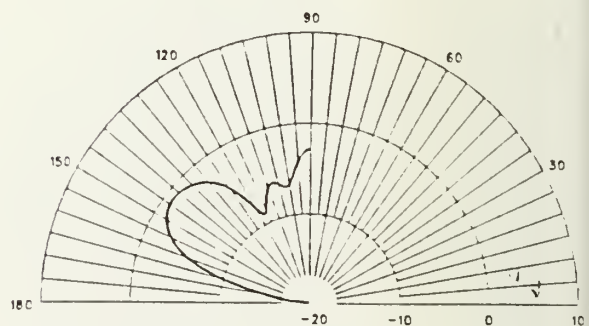


Figure 123. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 25 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

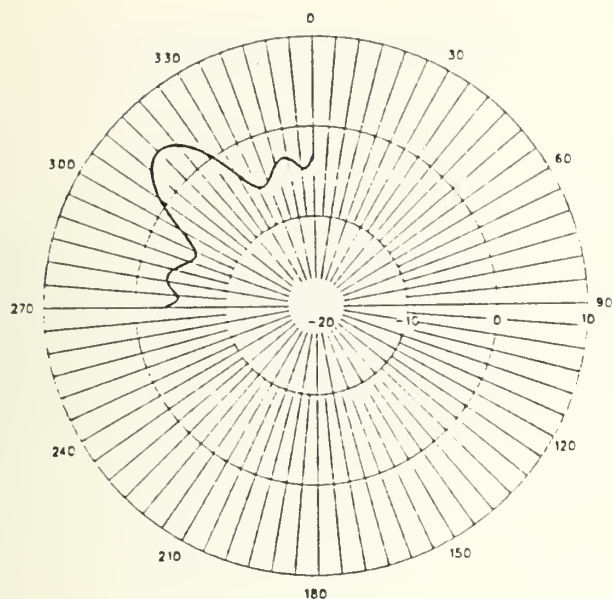

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

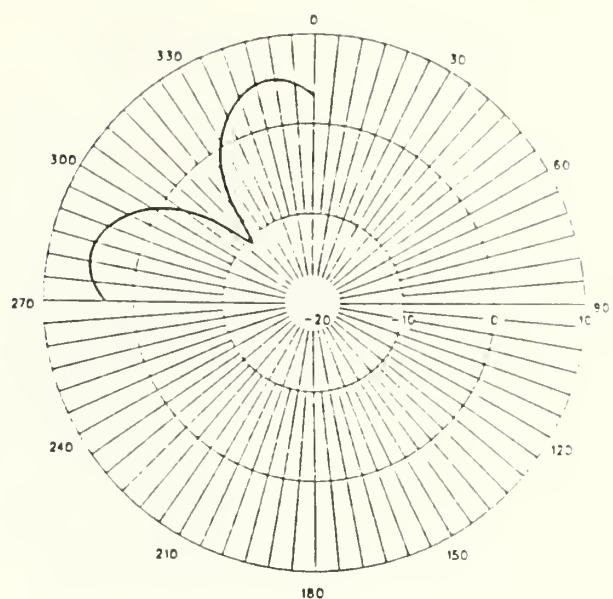

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

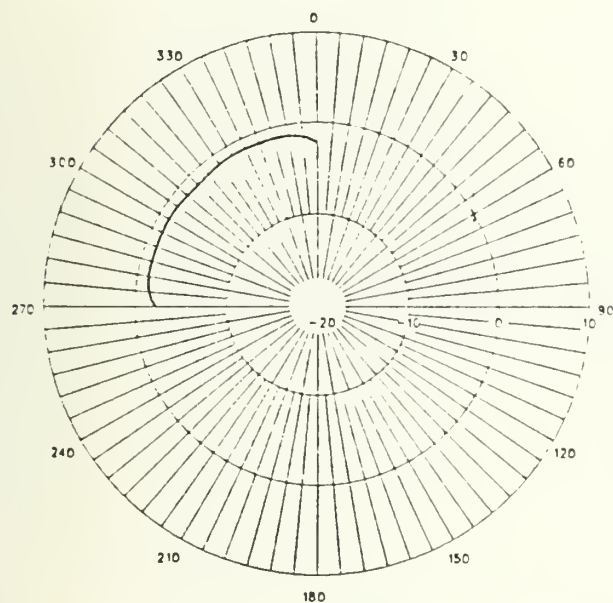

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



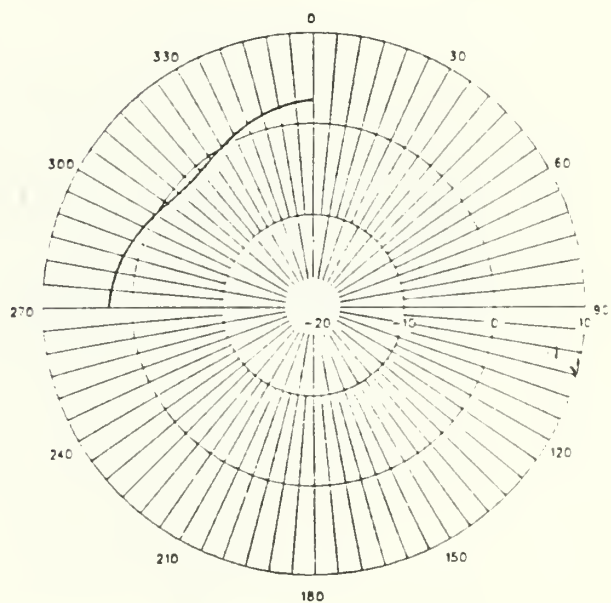


Figure 124. Azimuth patterns of the Army Highband DD antenna over perfect ground at 25 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

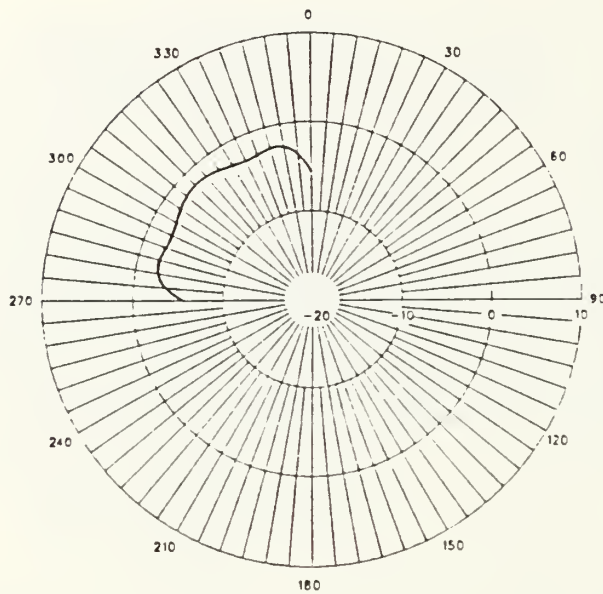

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

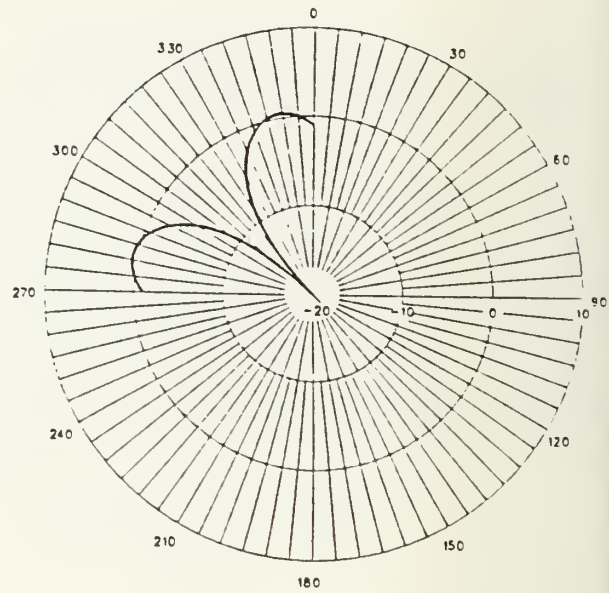

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

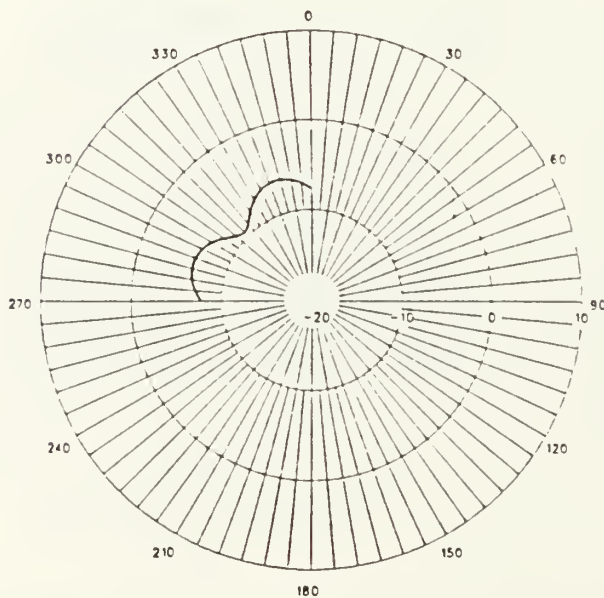

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



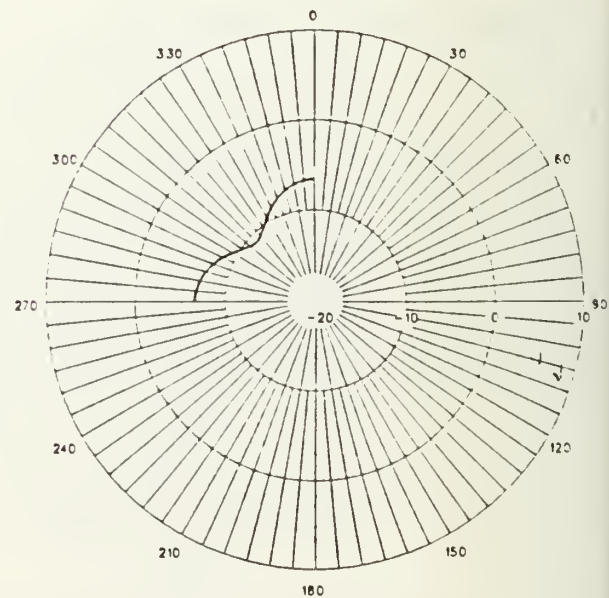


Figure 125. Azimuth patterns of the Army Highband DD antenna over fair ground at 25 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

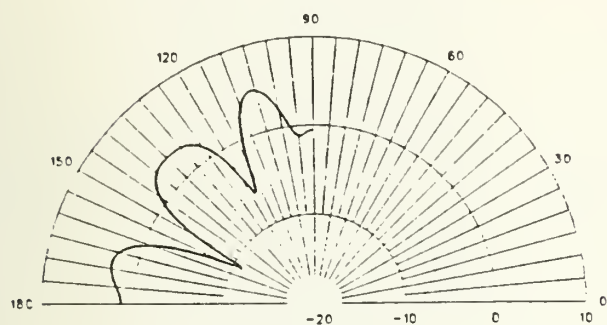

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

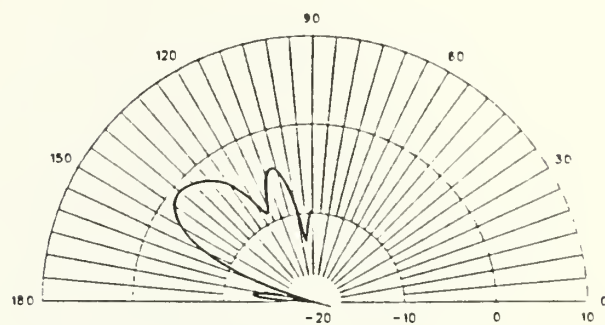

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

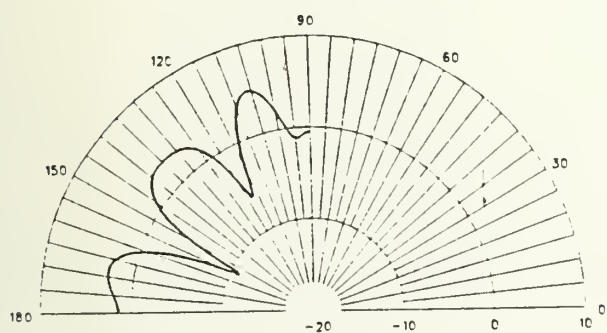

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



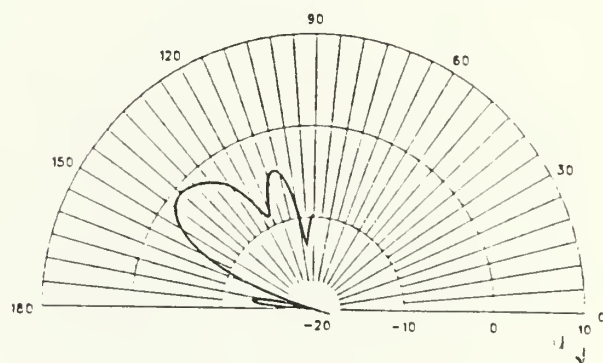


Figure 126. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 26 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

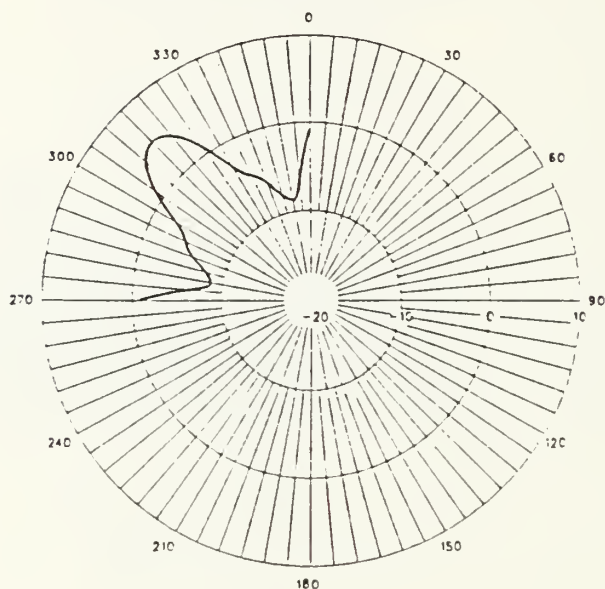

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

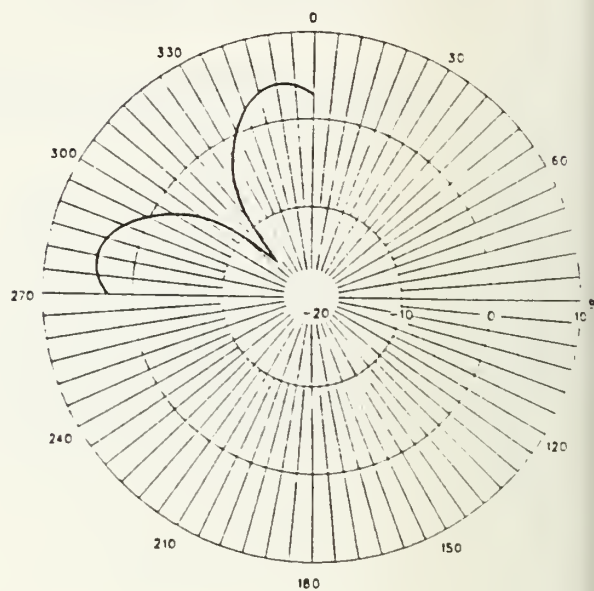

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

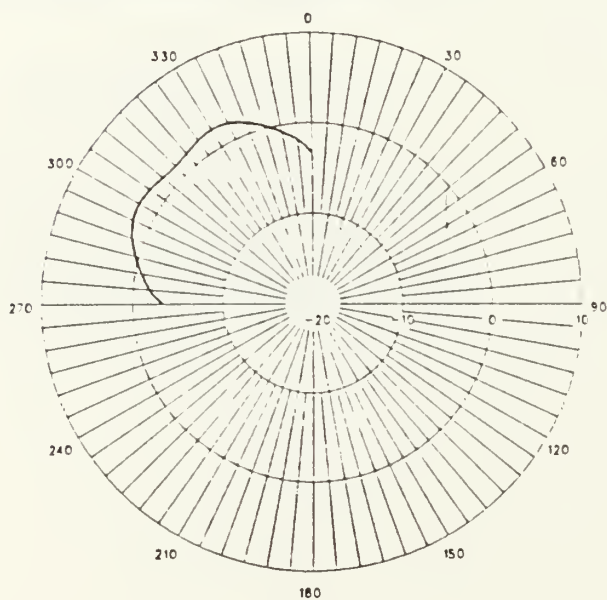

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



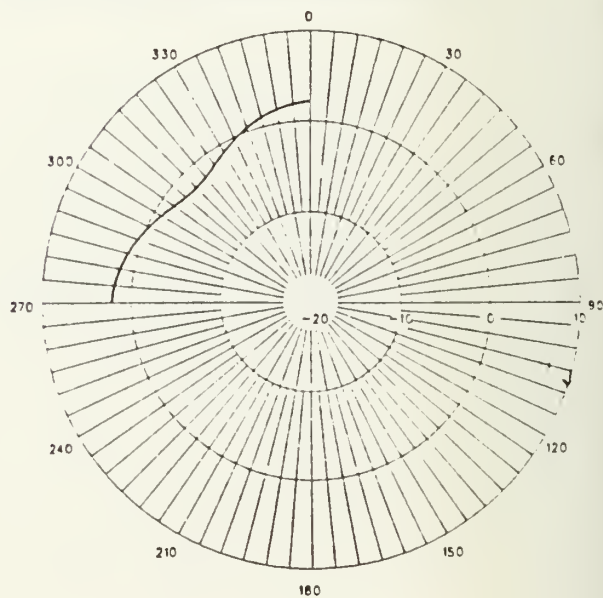


Figure 127. Azimuth patterns of the Army Highband DD antenna over perfect ground at 26 MHz.


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

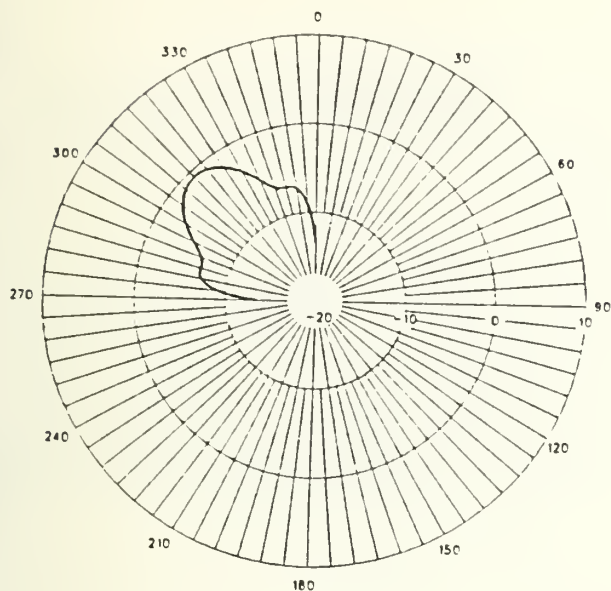

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

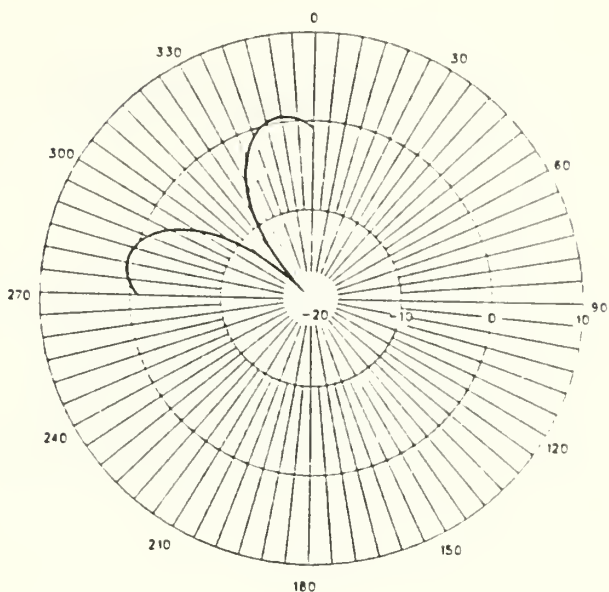

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

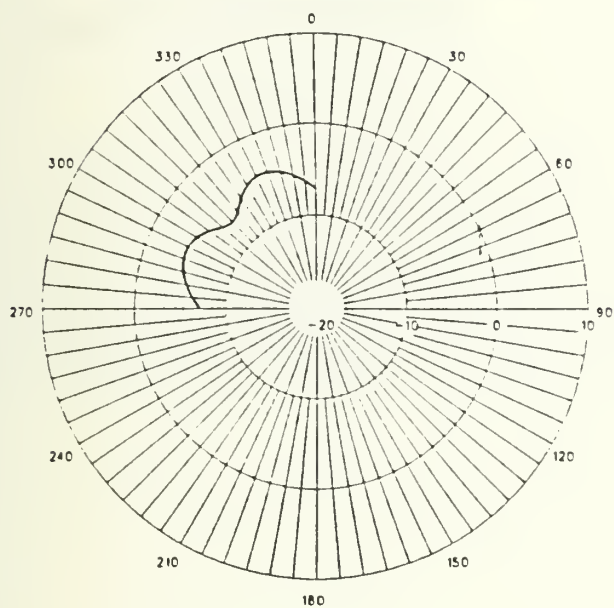

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



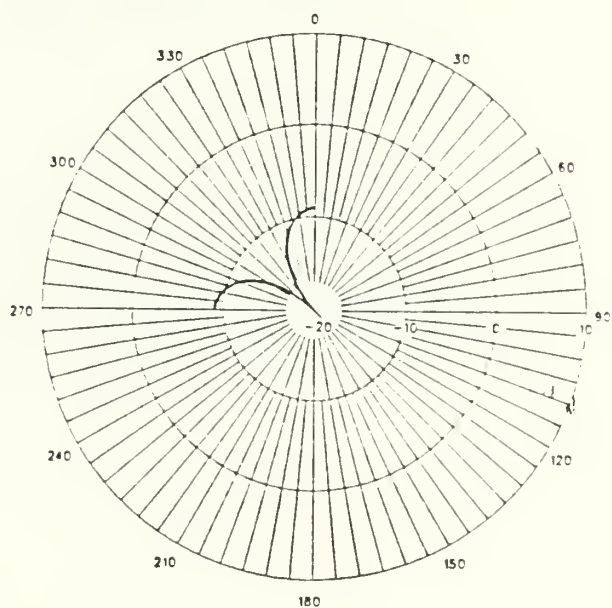


Figure 128. Azimuth patterns of the Army Highband DD antenna over fair ground at 26 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

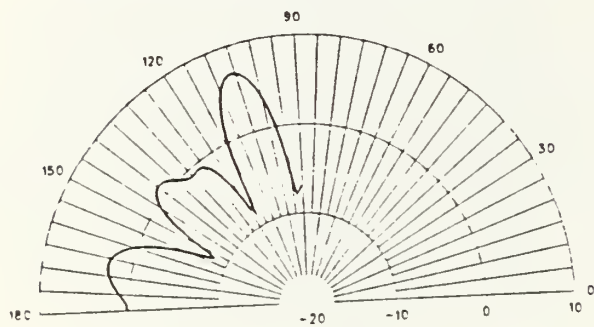

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

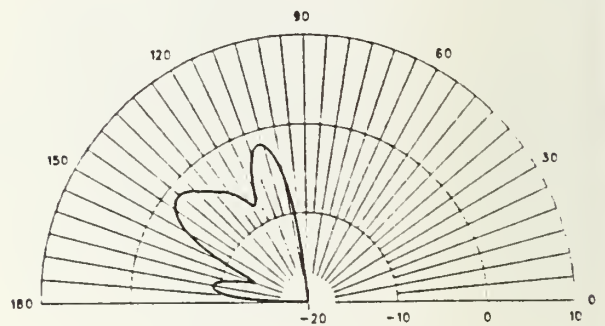

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

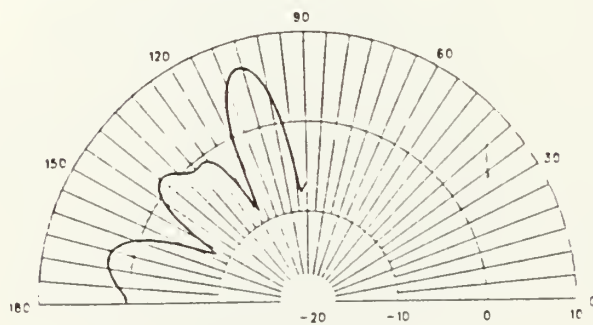

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



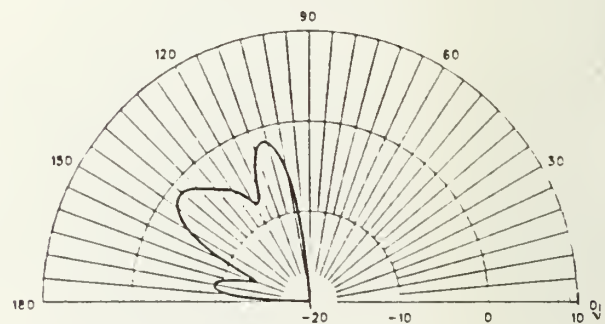


Figure 129. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 27 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

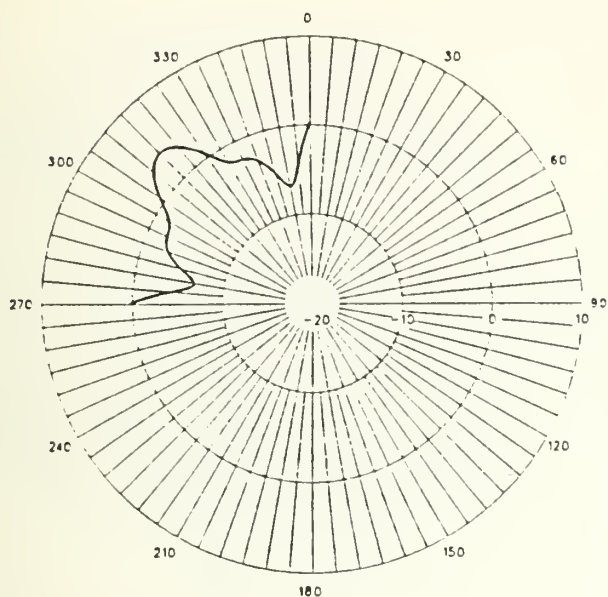

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

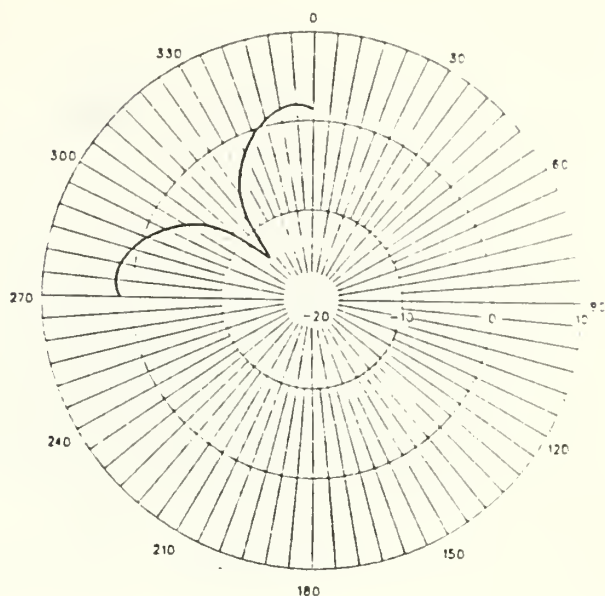

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

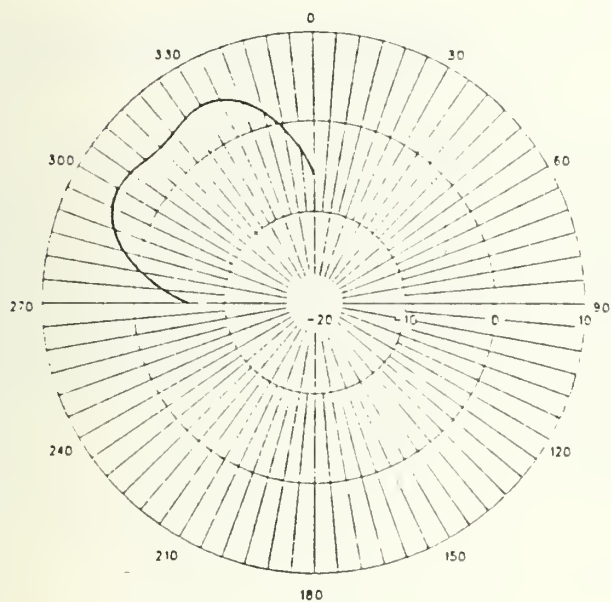

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



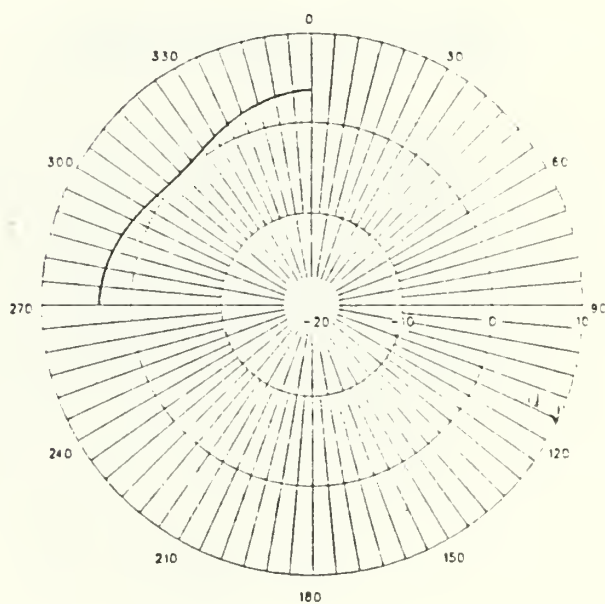


Figure 130. Azimuth patterns of the Army Highband DD antenna over perfect ground at 27 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

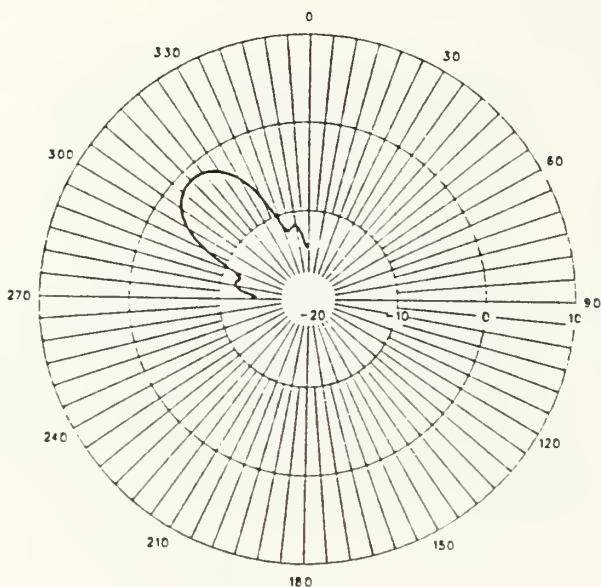

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

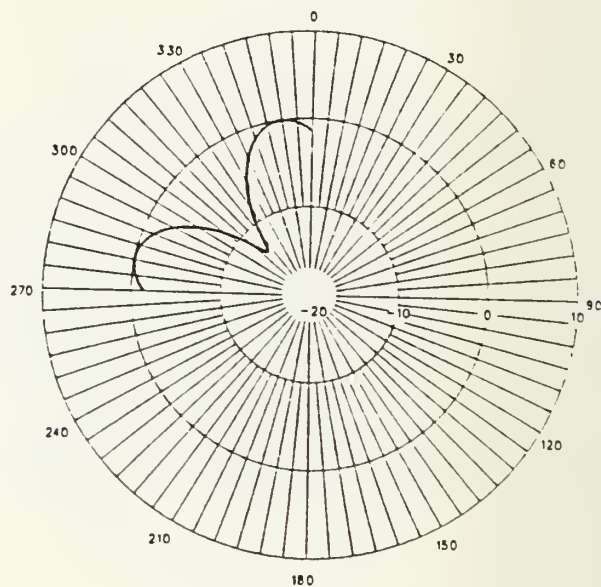

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

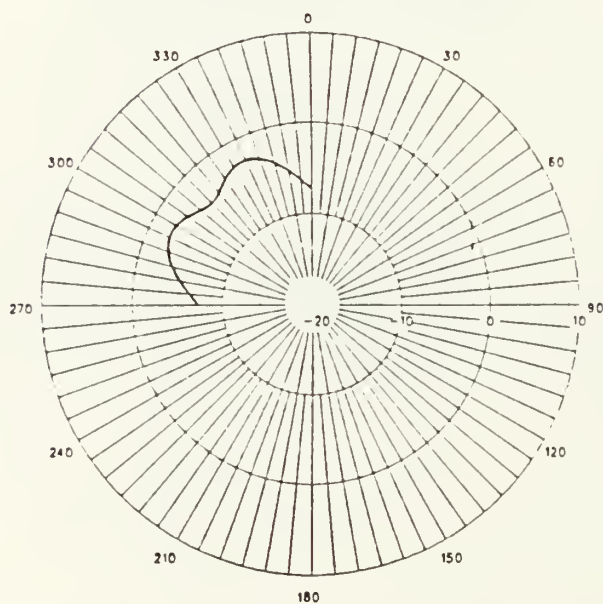

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



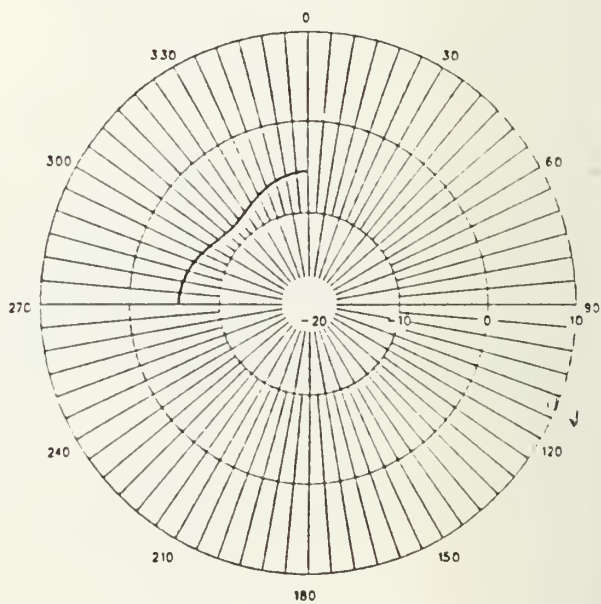


Figure 131. Azimuth patterns of the Army Highband DD antenna over fair ground at 27 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

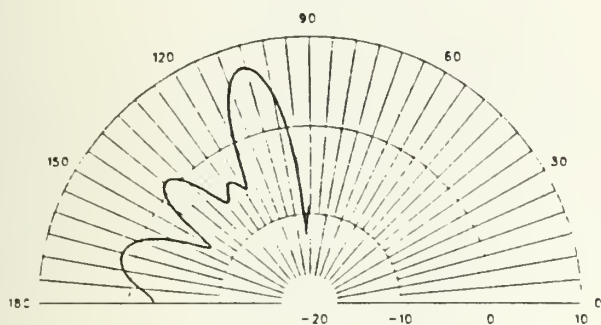

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

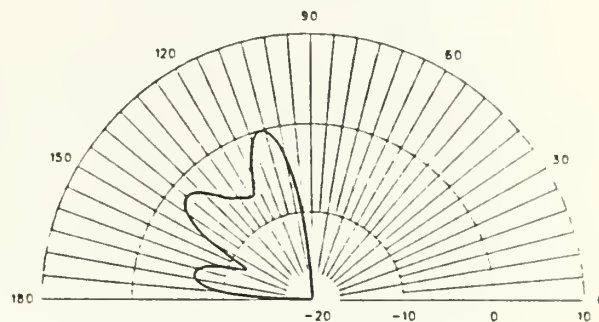

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

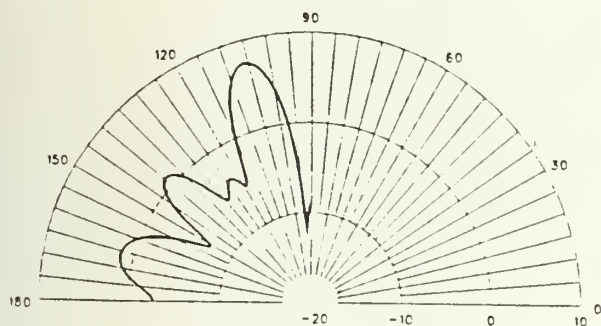

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



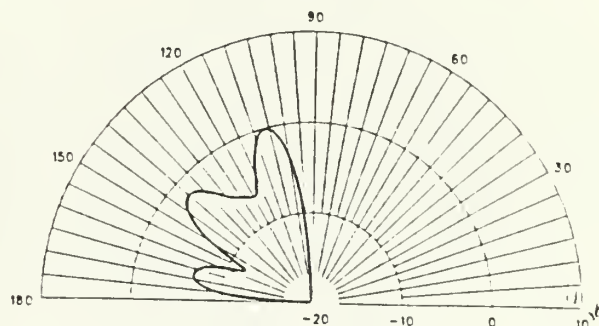


Figure 132. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 28 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

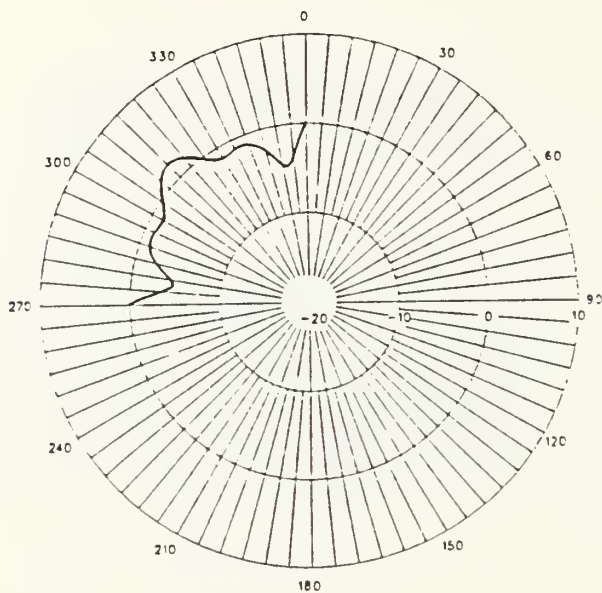

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

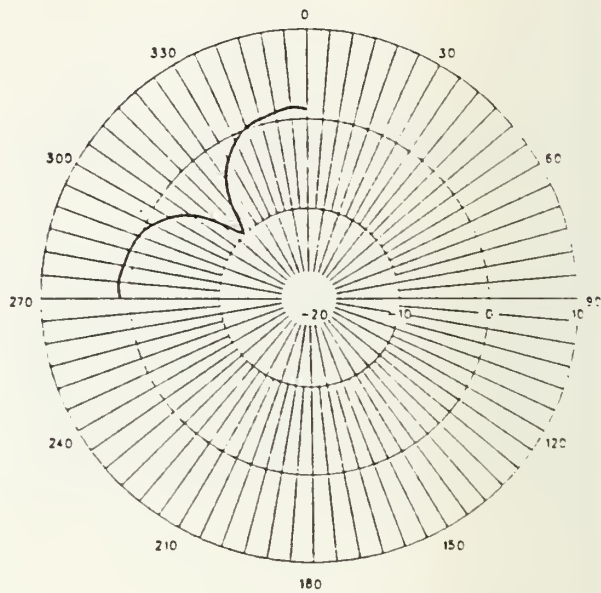

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

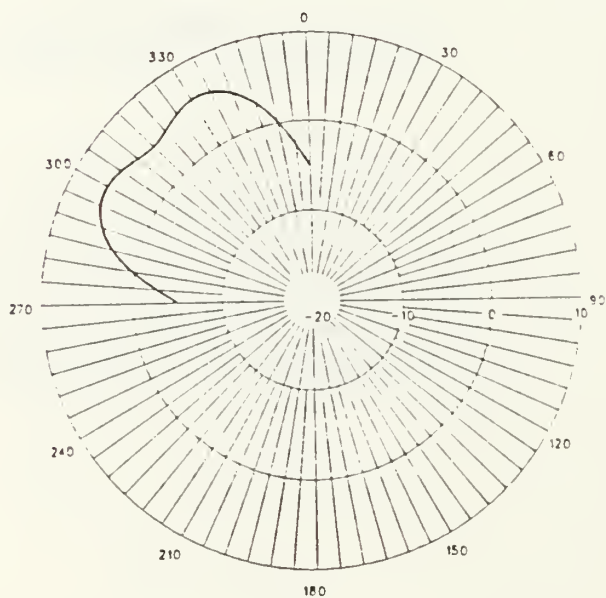

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



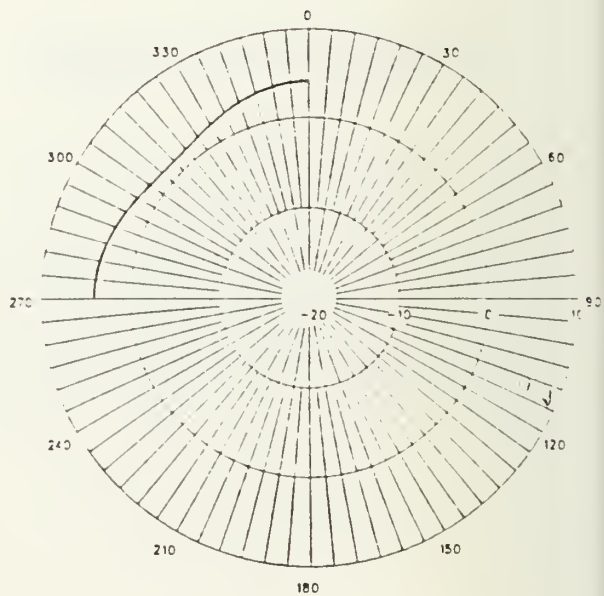


Figure 133. Azimuth patterns of the Army Highband DD antenna over perfect ground at 28 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 20

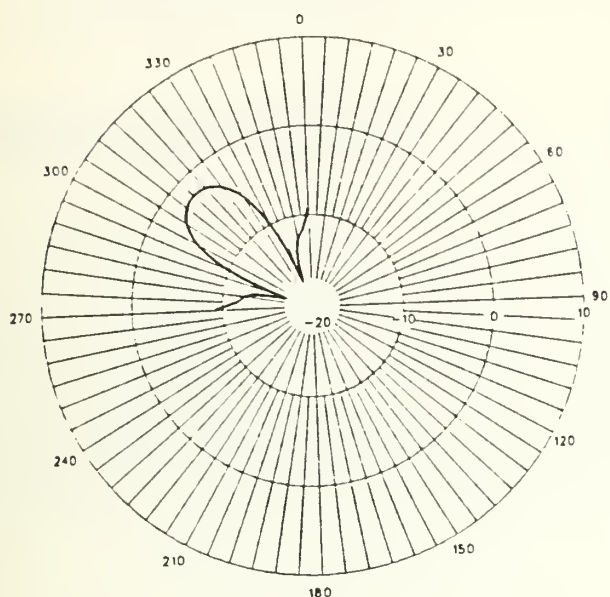

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 40

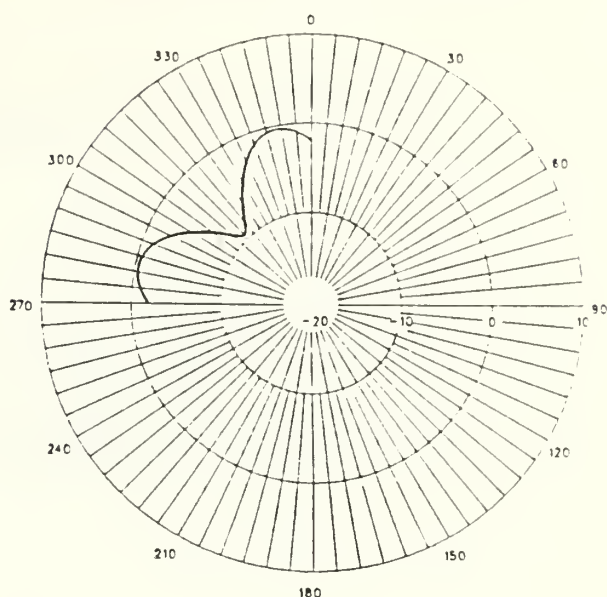

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 60

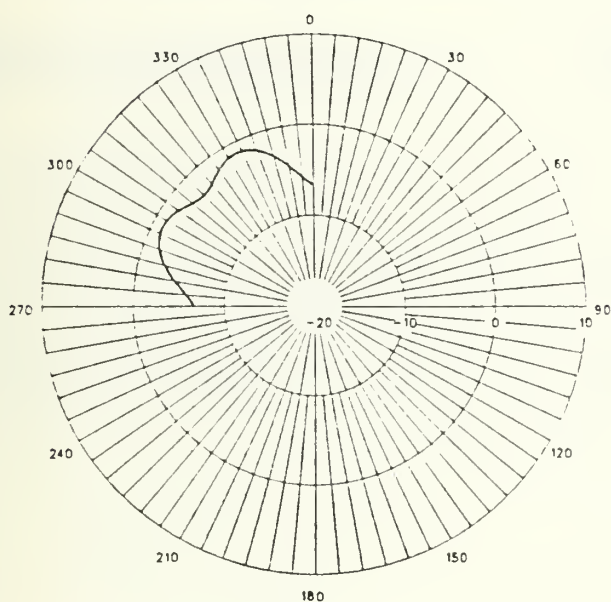

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 80



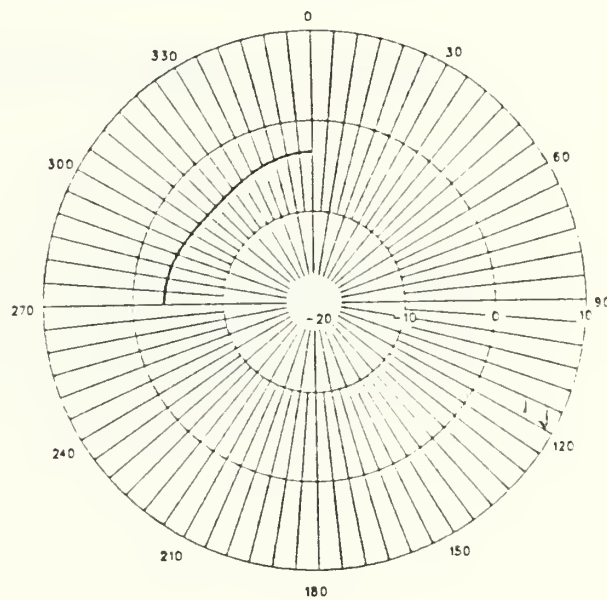


Figure 134. Azimuth patterns of the Army Highband DD antenna over fair ground at 28 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

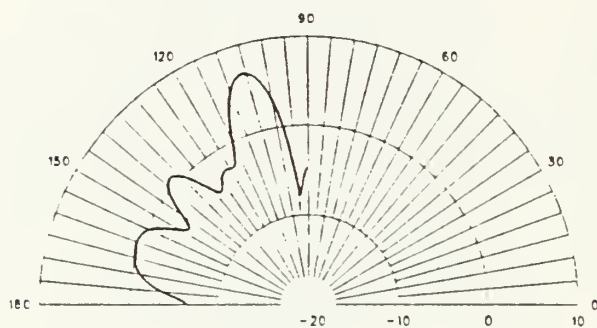

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

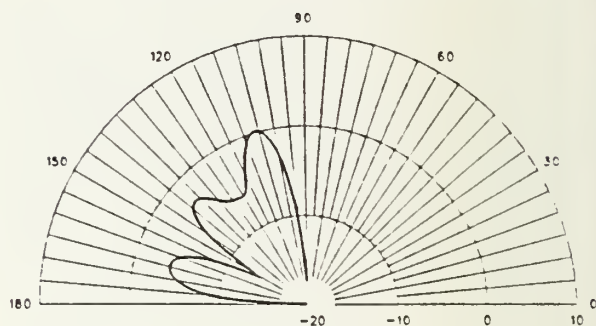

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

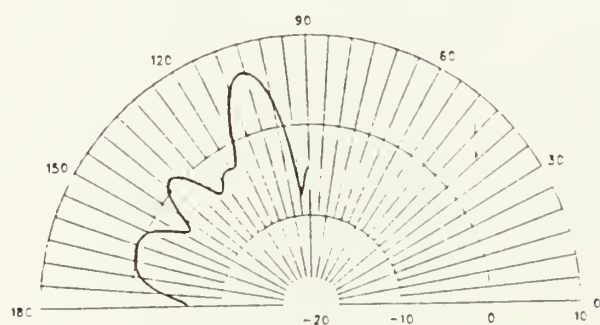

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



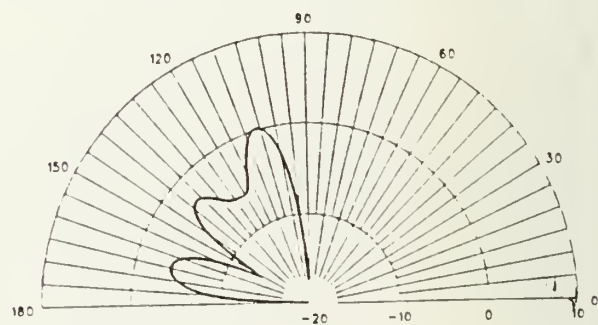


Figure 135. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 29 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

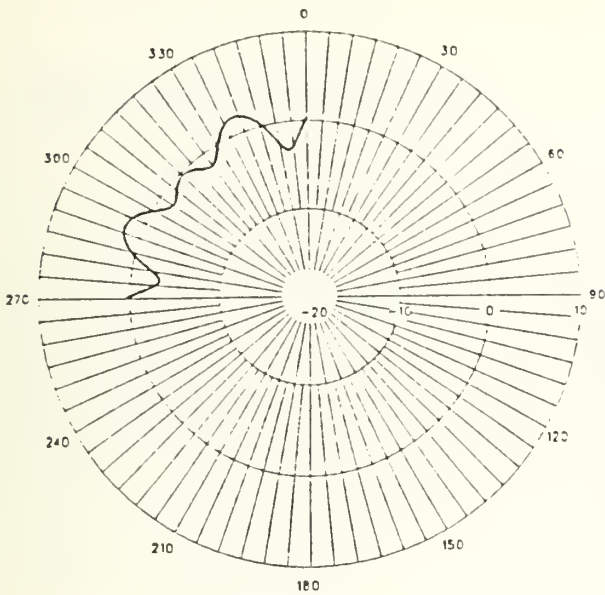

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

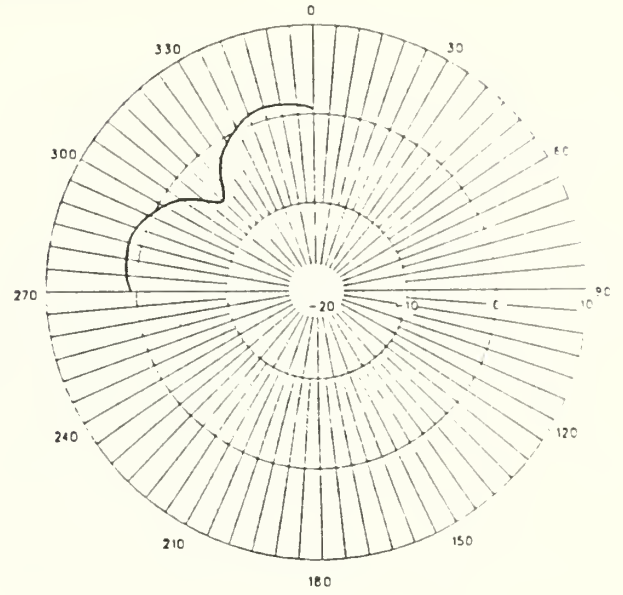

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

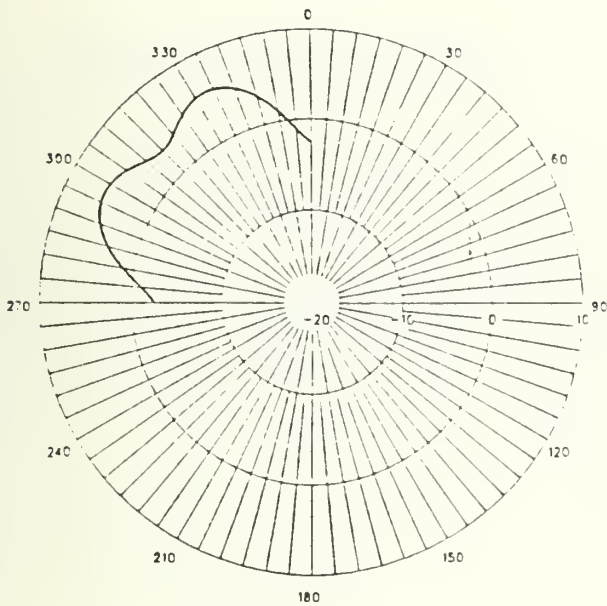

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



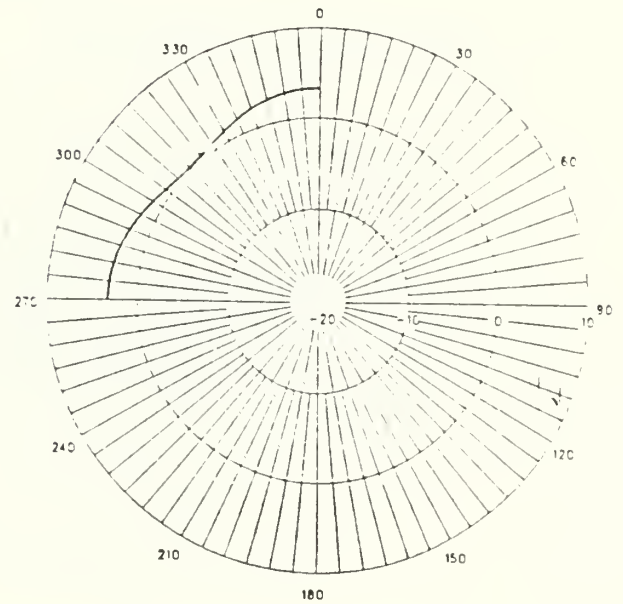


Figure 136. Azimuth patterns of the Army Highband DD antenna over perfect ground at 29 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

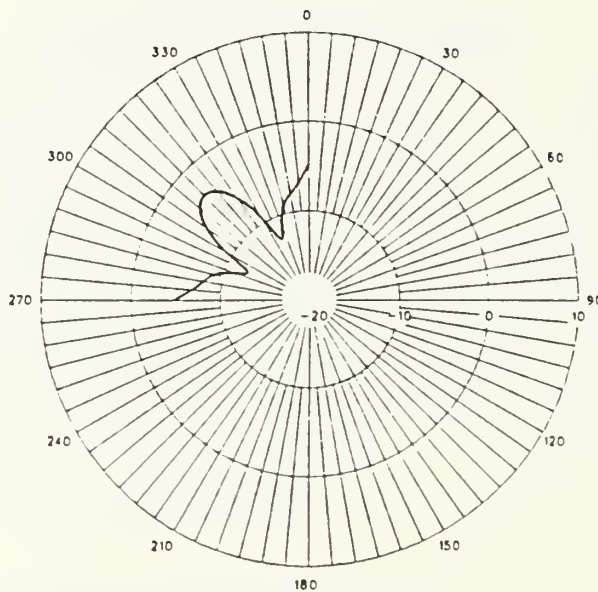

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

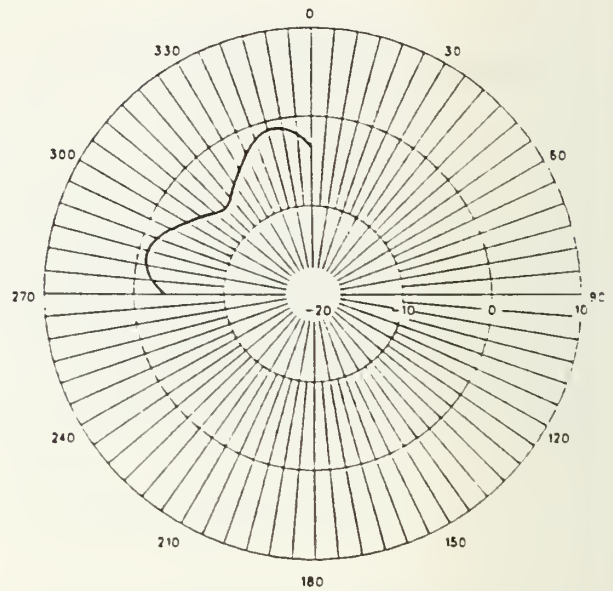

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

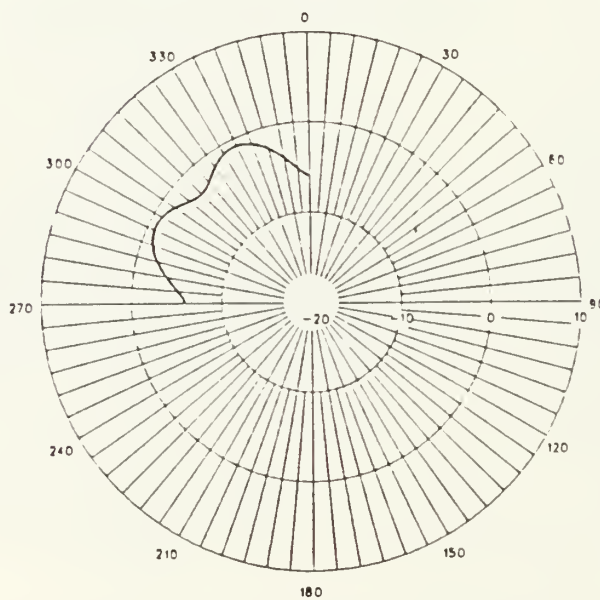

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



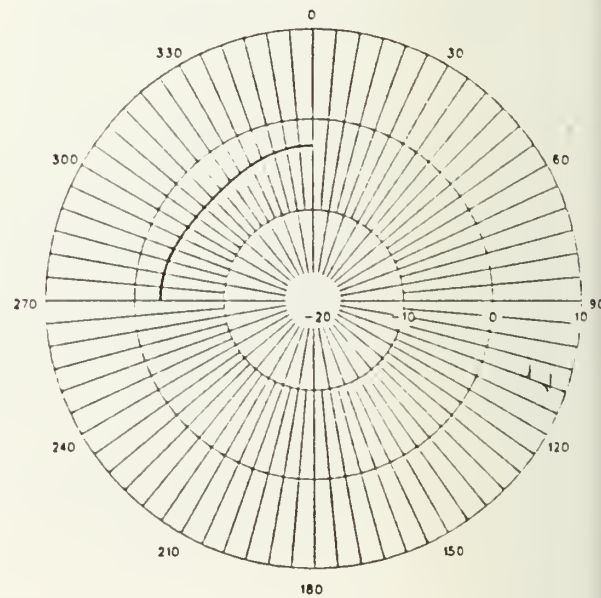


Figure 137. Azimuth patterns of the Army Highband DD antenna over fair ground at 29 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

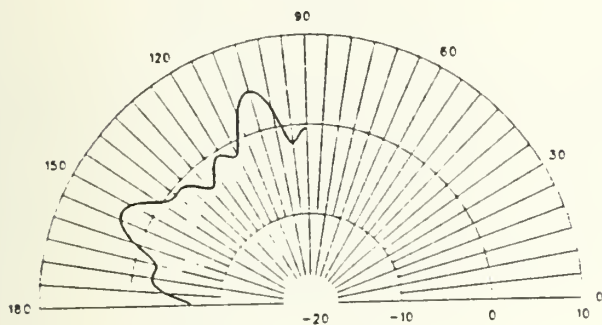

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

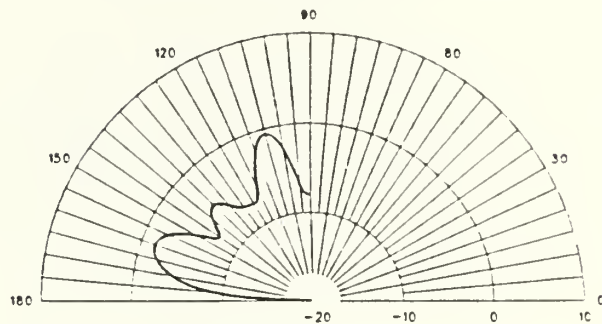

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

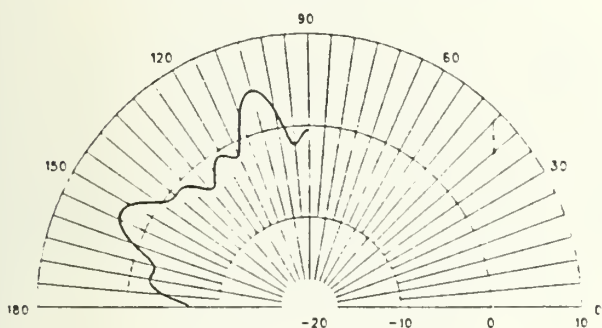

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



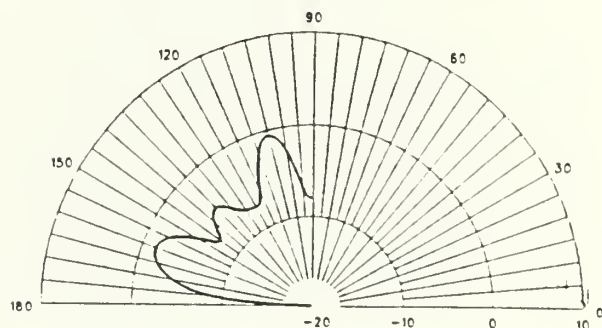


Figure 138. Elevation patterns of the Army Highband DD antenna over perfect ground and fair ground at 30 MHz


ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 20

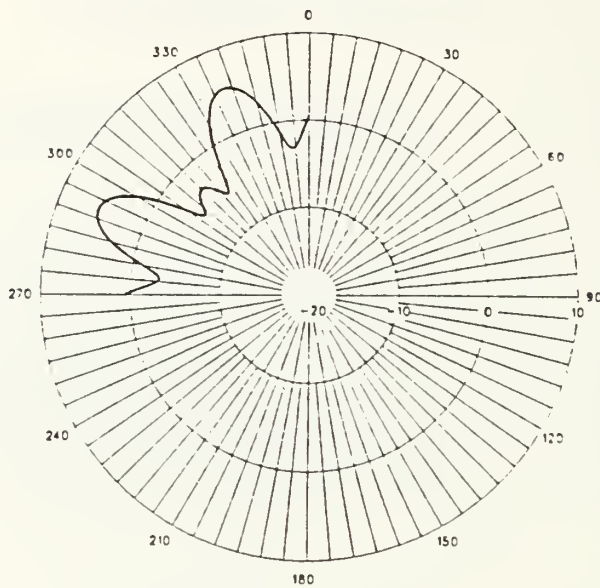

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 40

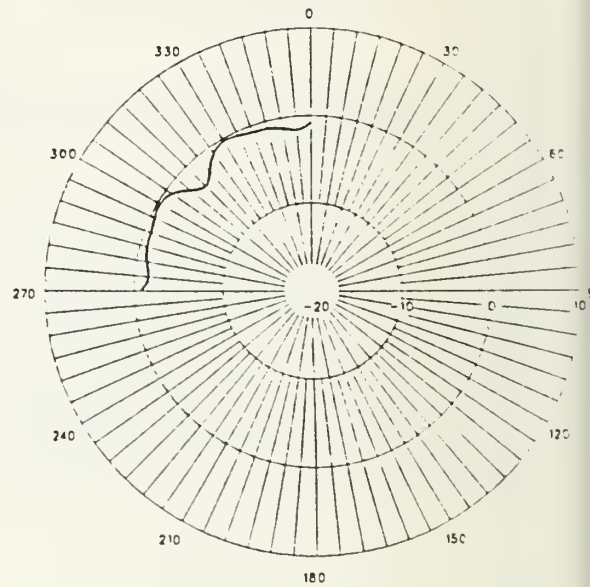

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 60

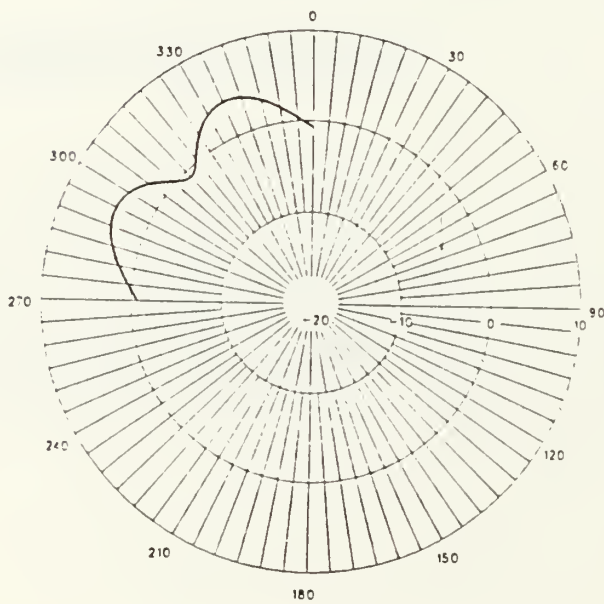

ARMY HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 80



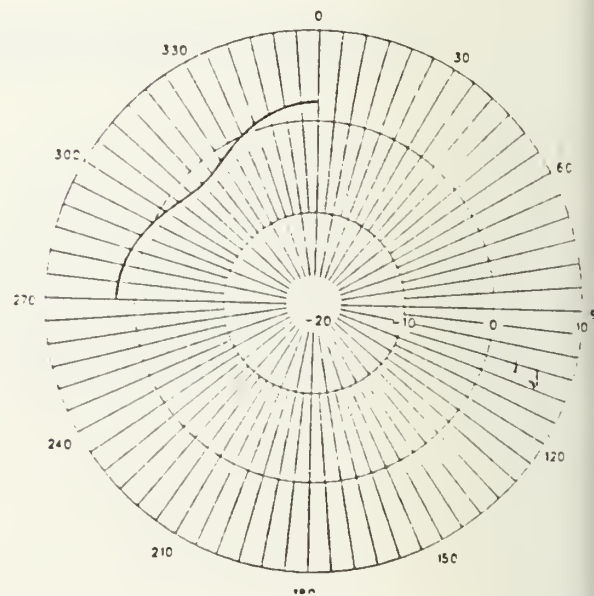


Figure 139. Azimuth patterns of the Army Highband DD antenna over perfect ground at 30 MHz


ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

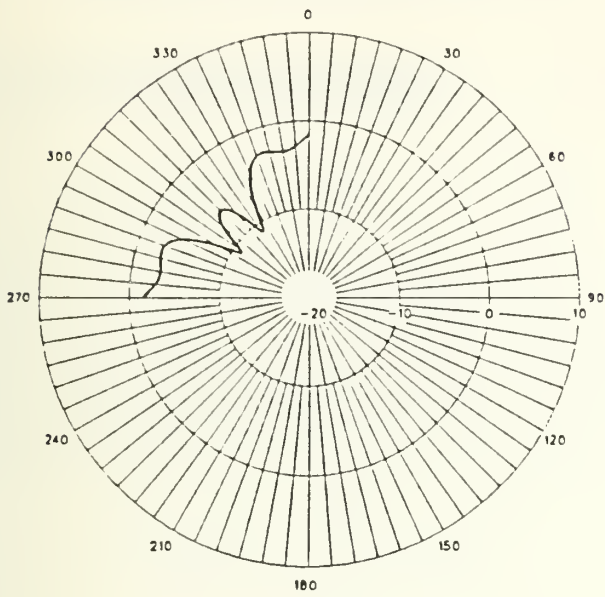

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

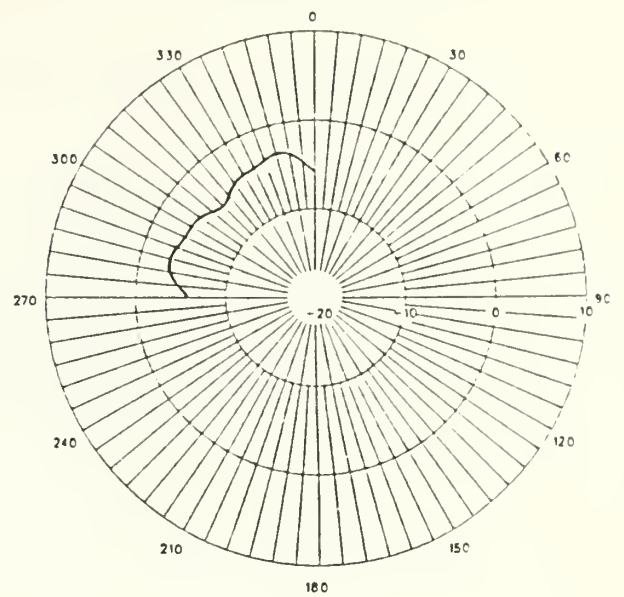

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

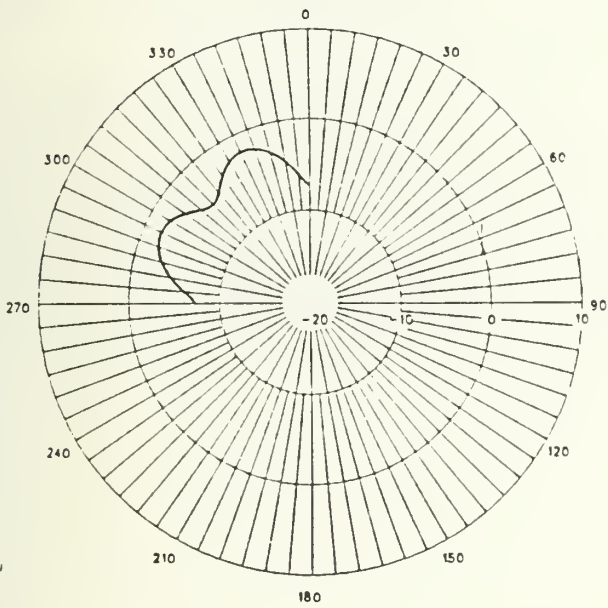

ARMY HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



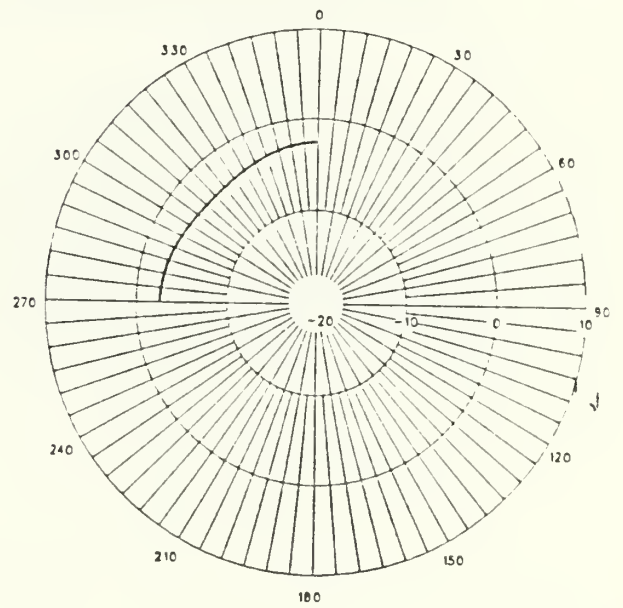


Figure 140. Azimuth patterns of the Army Highband DD antenna over fair ground at 30 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

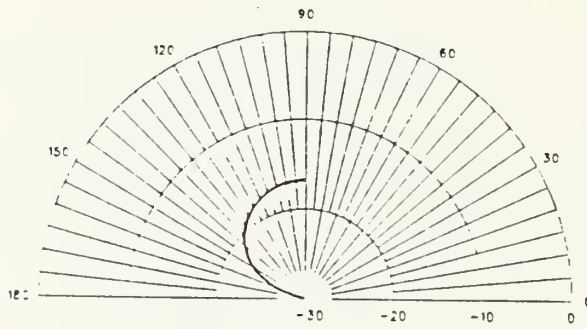

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

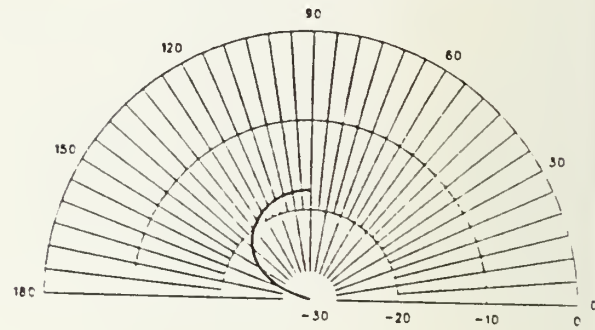

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

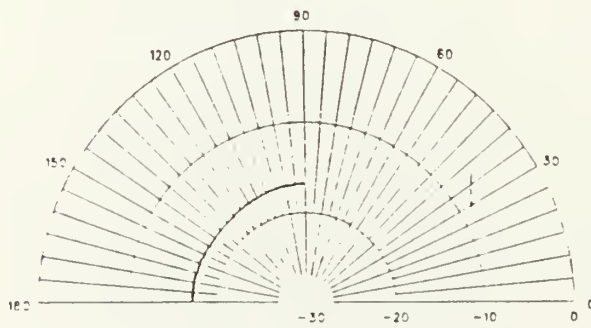

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



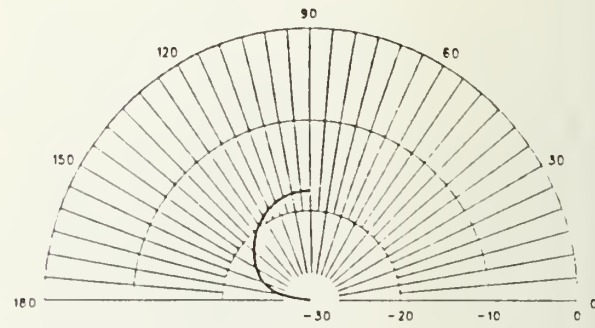


Figure 141. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 2 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

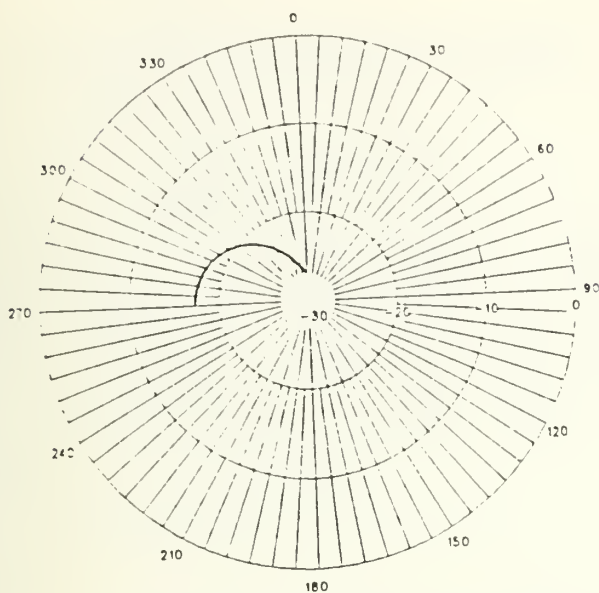

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

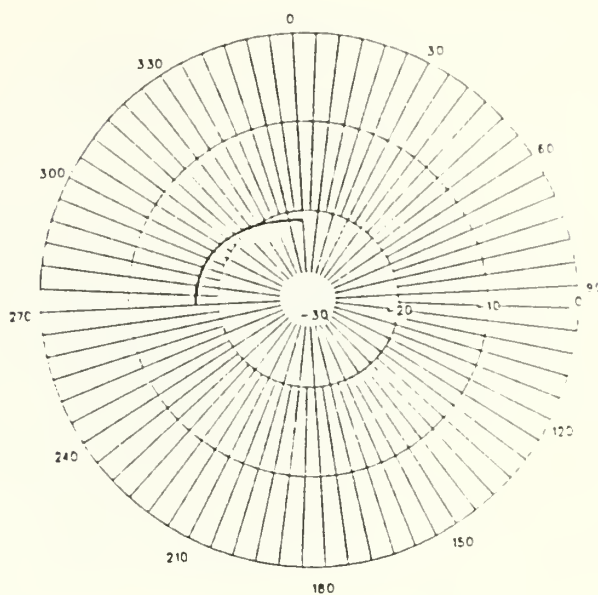

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

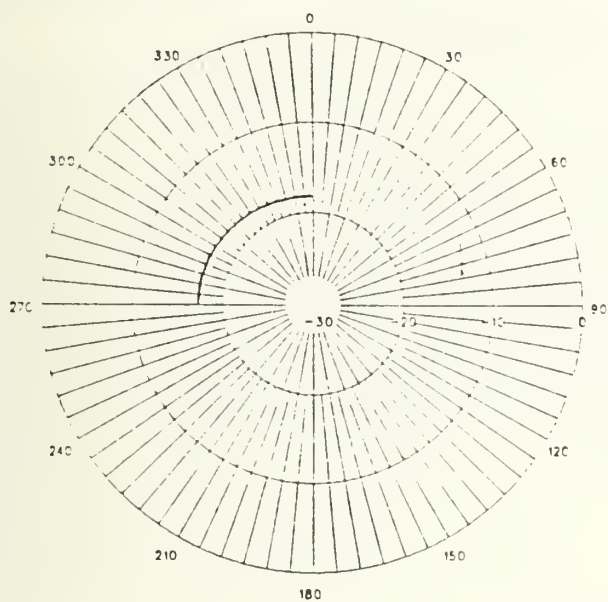

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



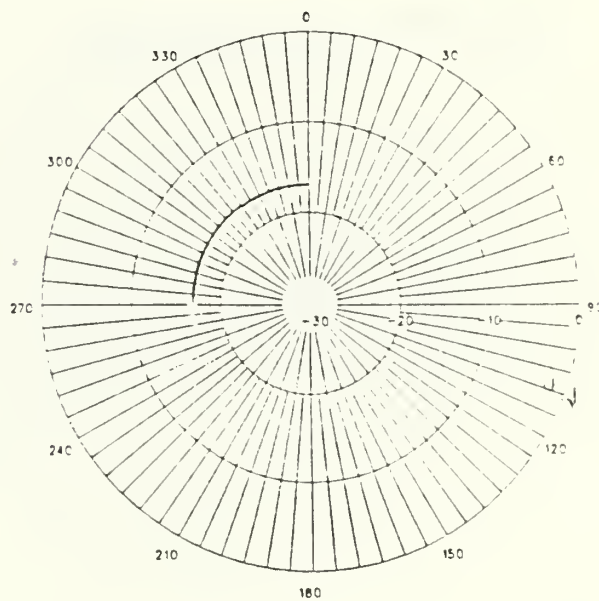


Figure 142. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 2 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

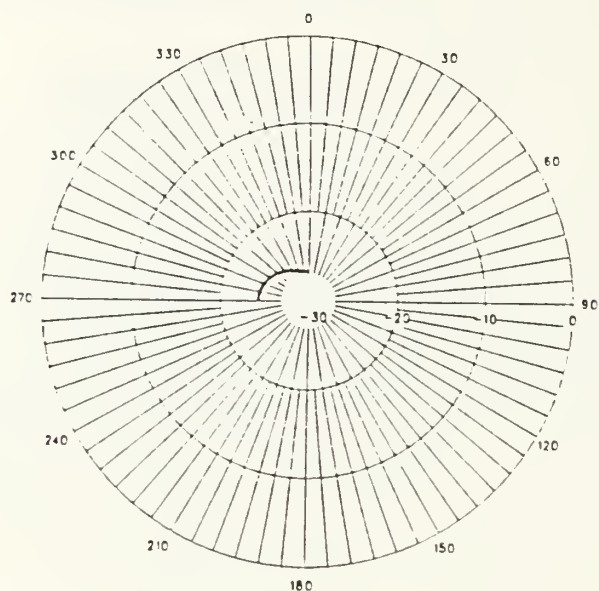

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

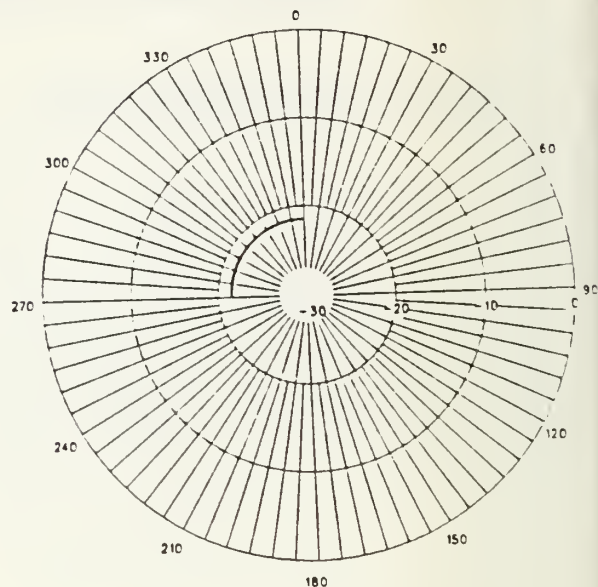

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

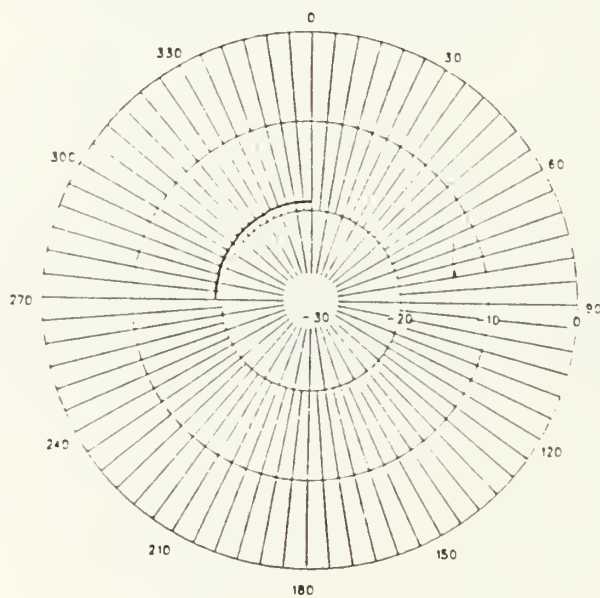

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



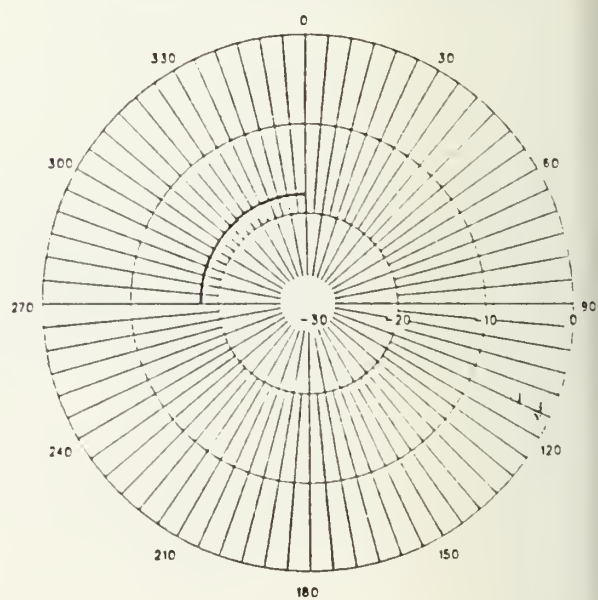


Figure 143. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 2 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

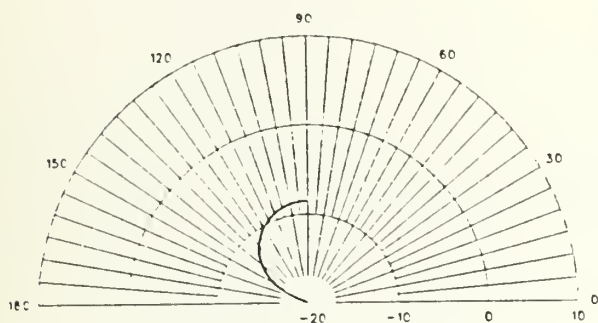

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

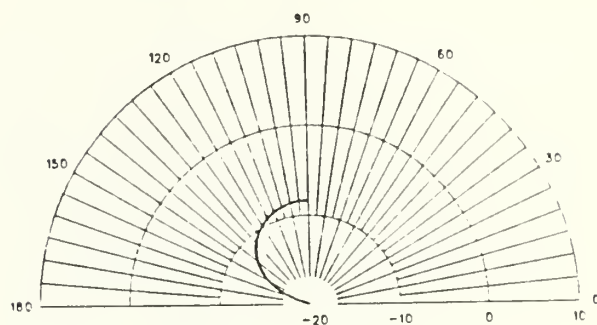

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

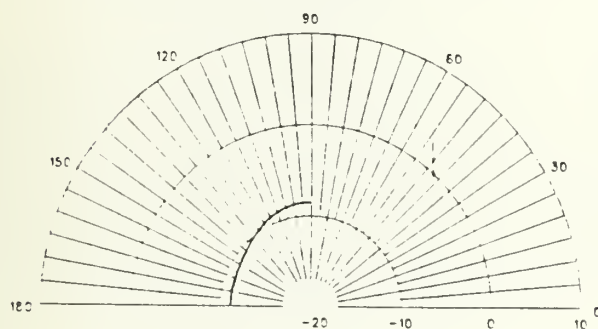

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



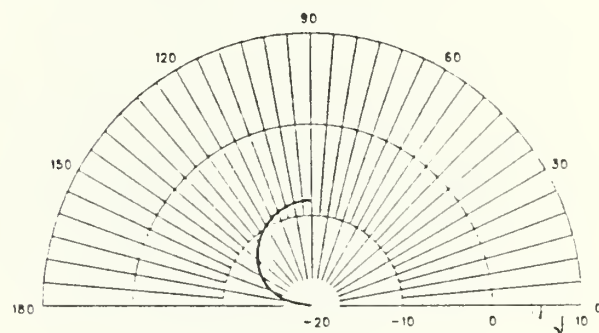


Figure 144. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 3 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

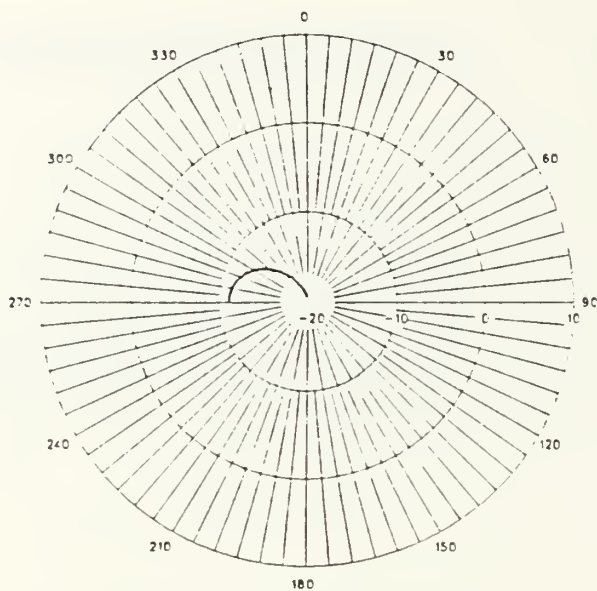

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

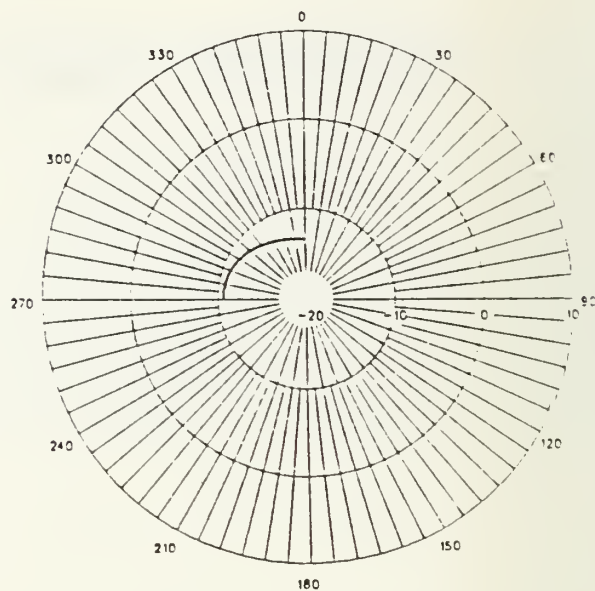

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

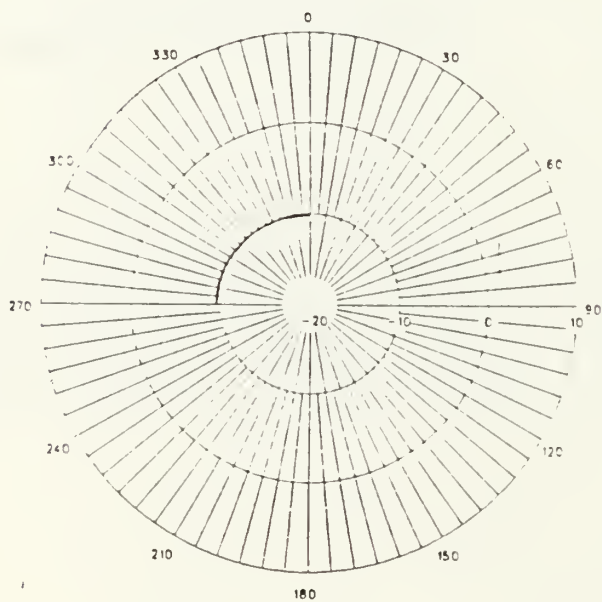

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



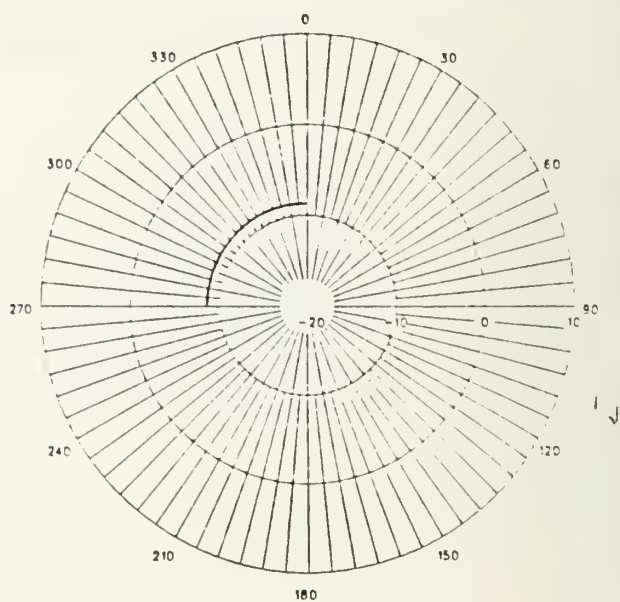


Figure 145. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 3 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

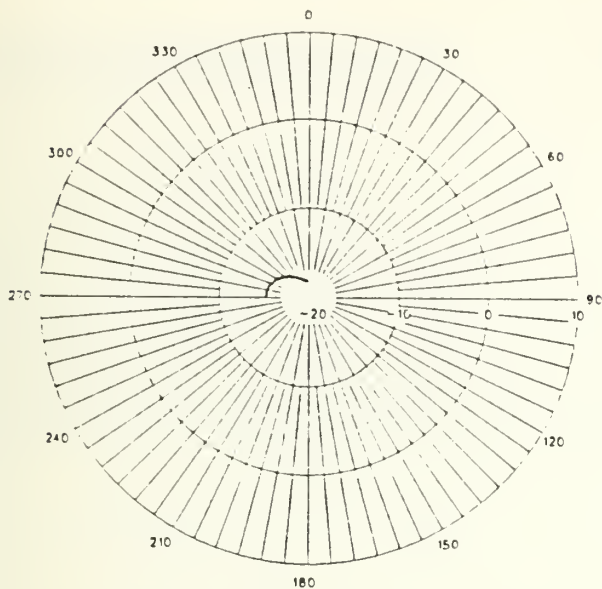

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

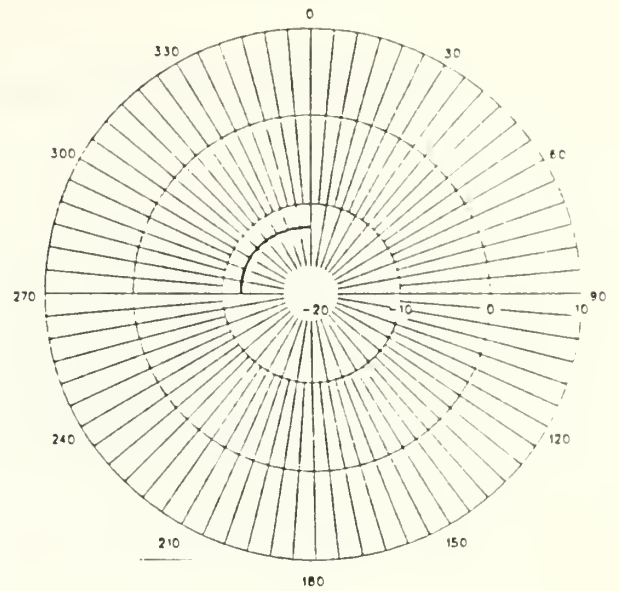

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

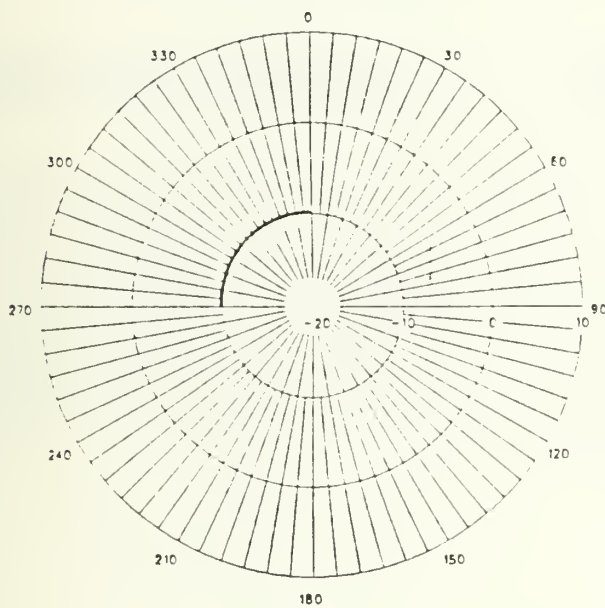

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



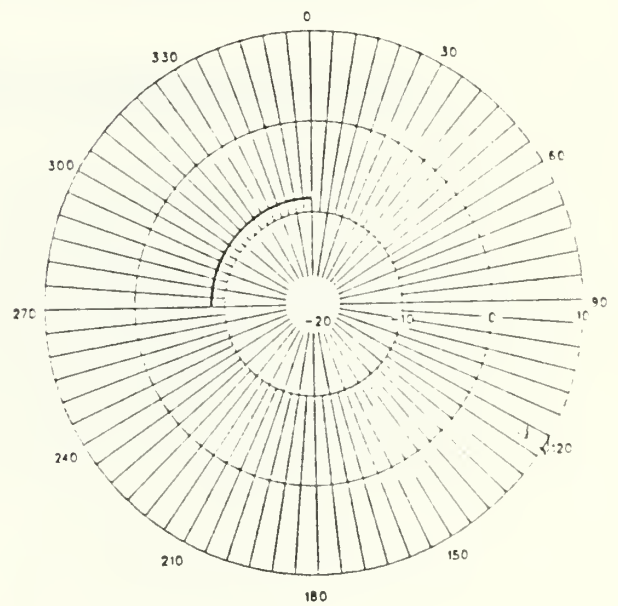


Figure 146. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 3 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

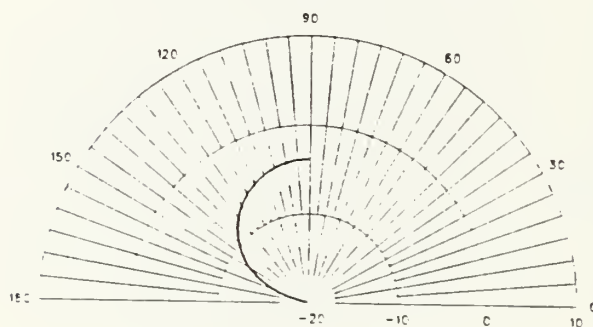

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

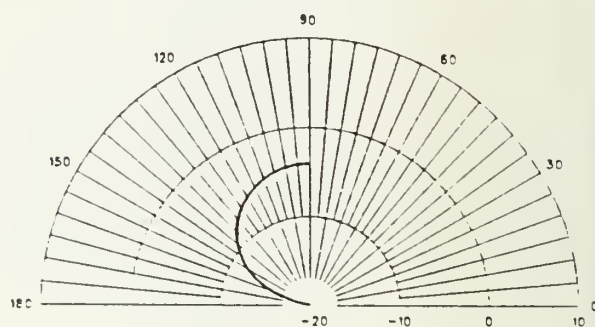

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

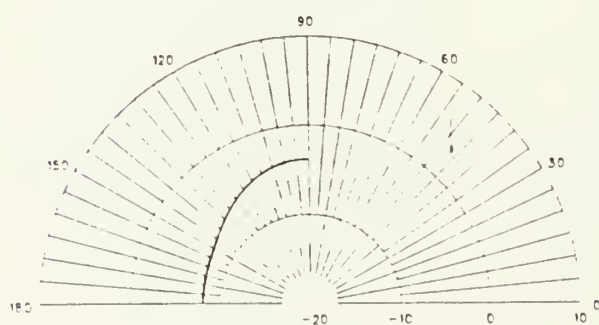

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



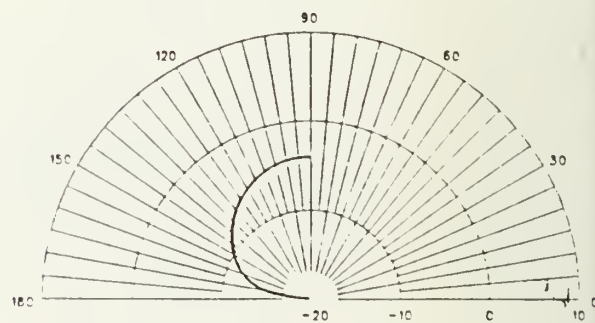


Figure 147. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 4 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

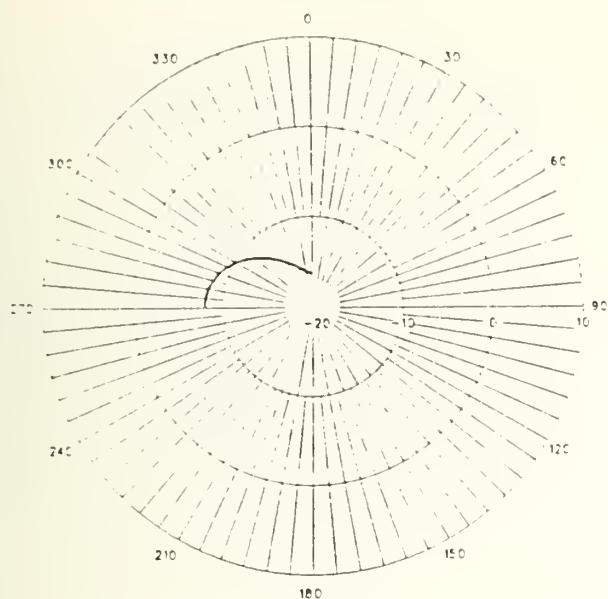

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

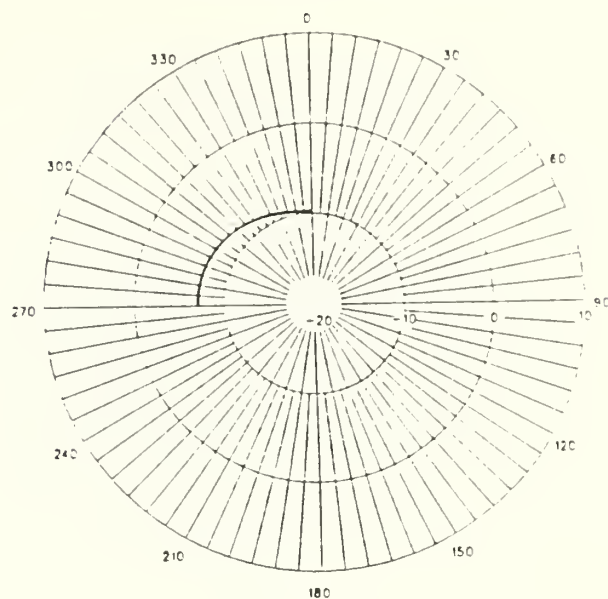

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

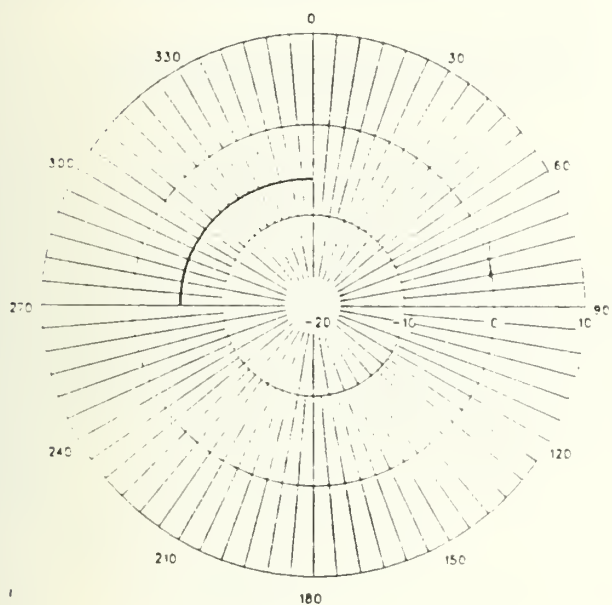

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



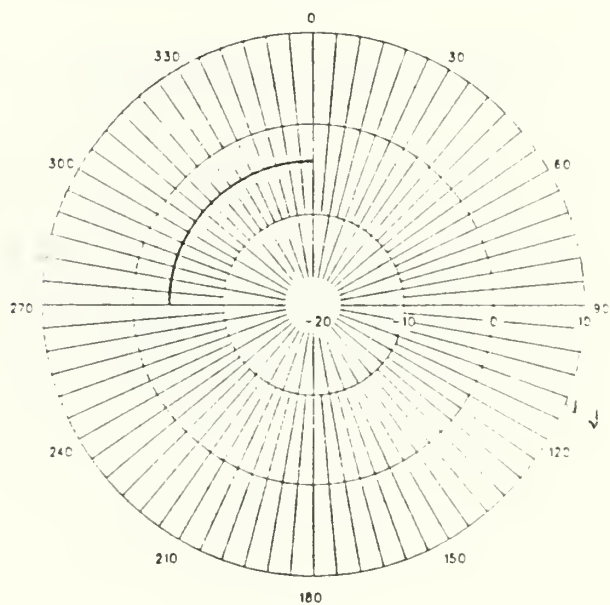


Figure 148. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 4 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

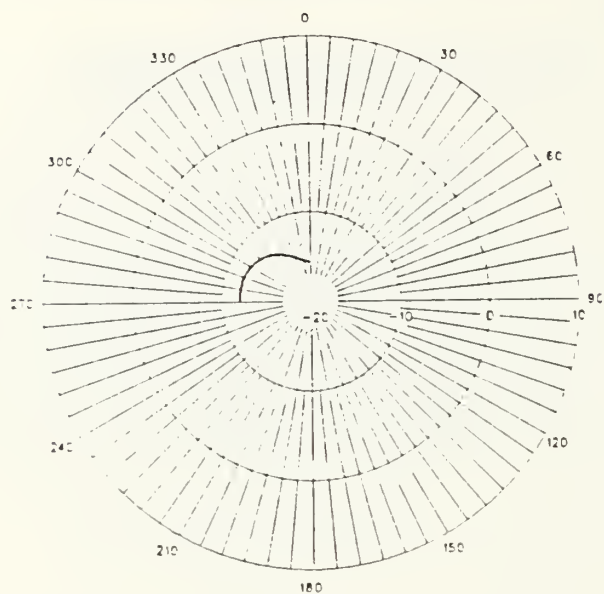

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

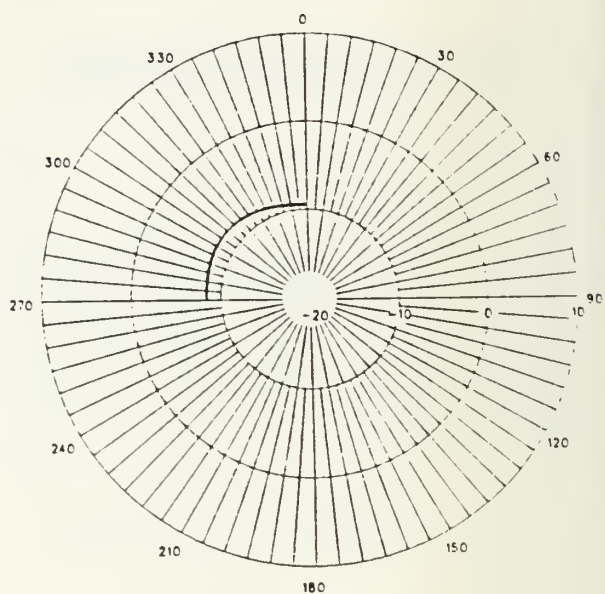

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

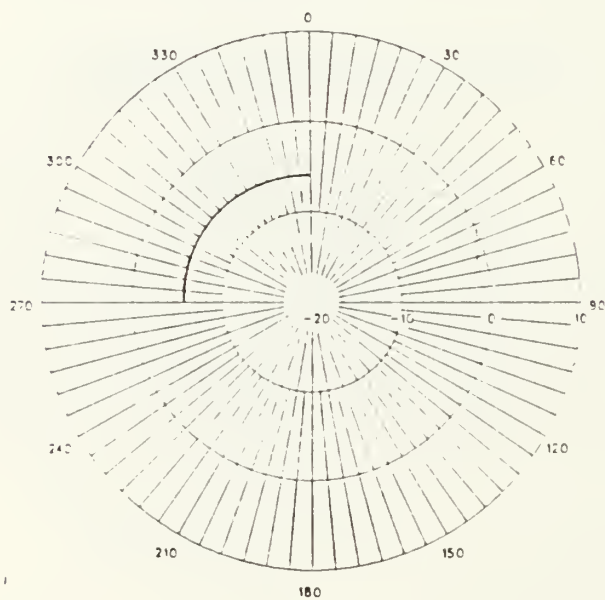

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



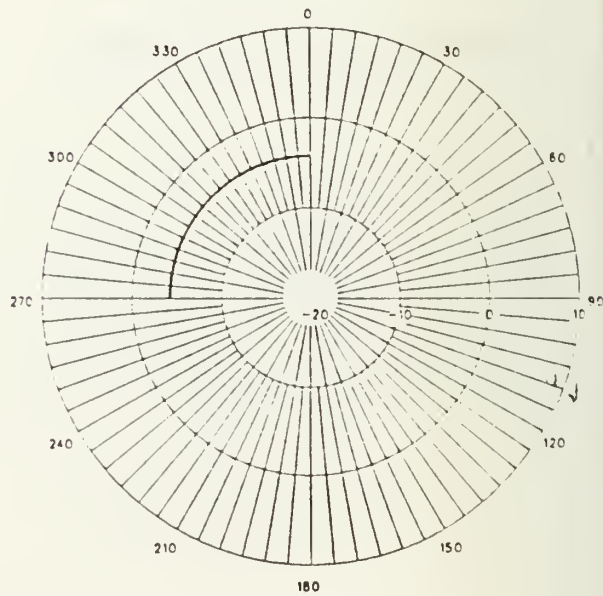


Figure 149. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 4 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

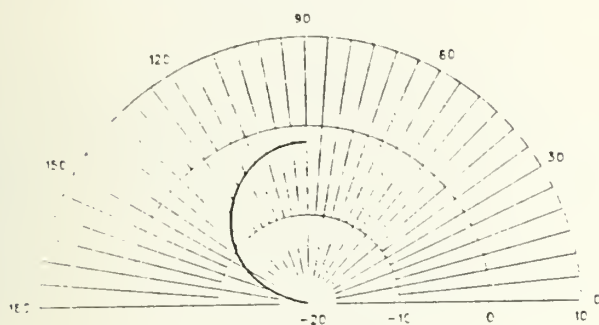

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

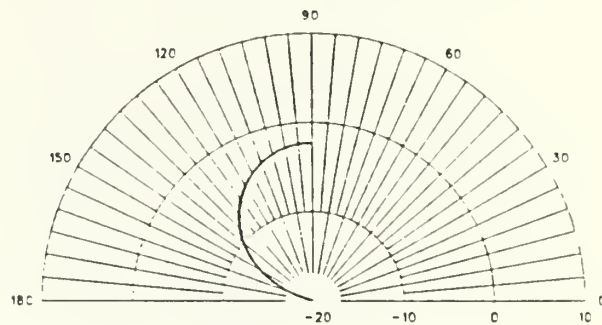

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

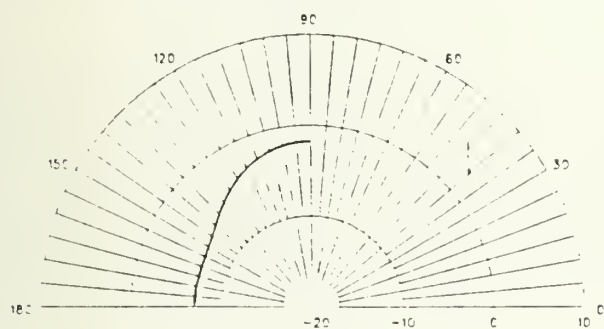

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



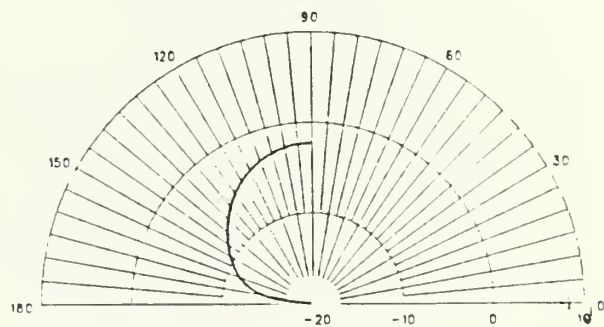


Figure 150. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 5 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

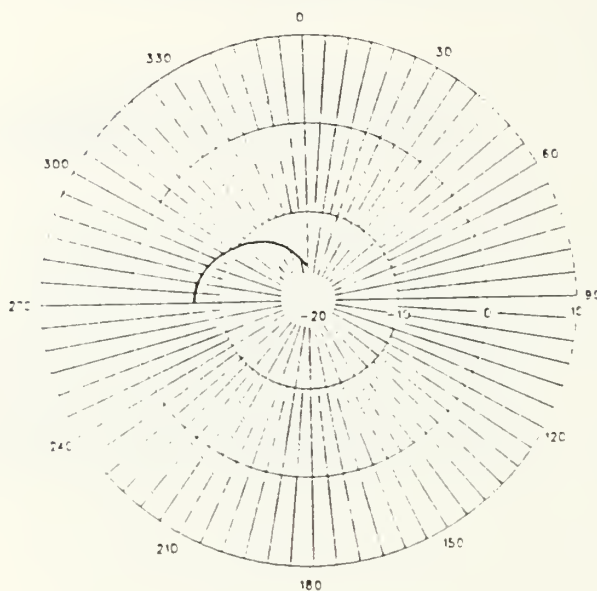

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

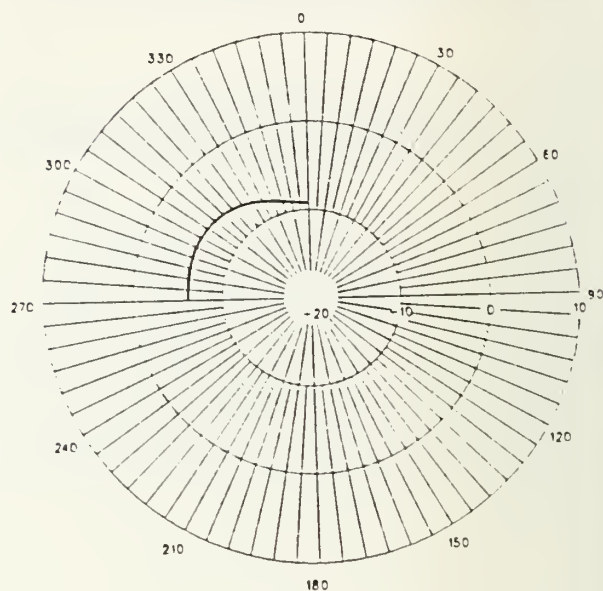

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

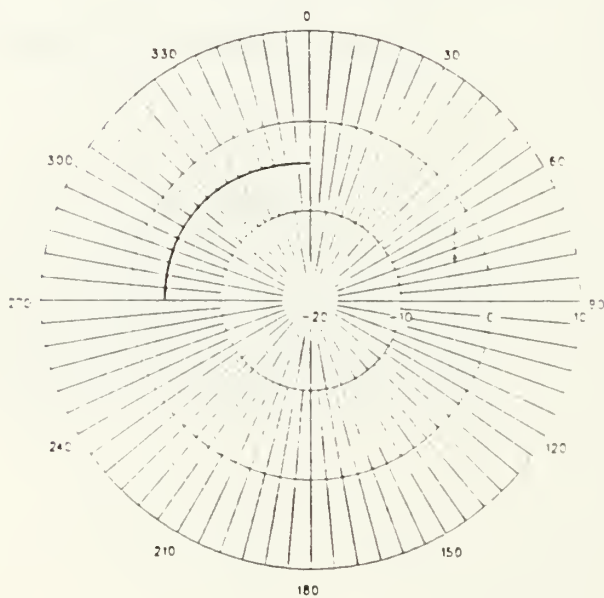

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



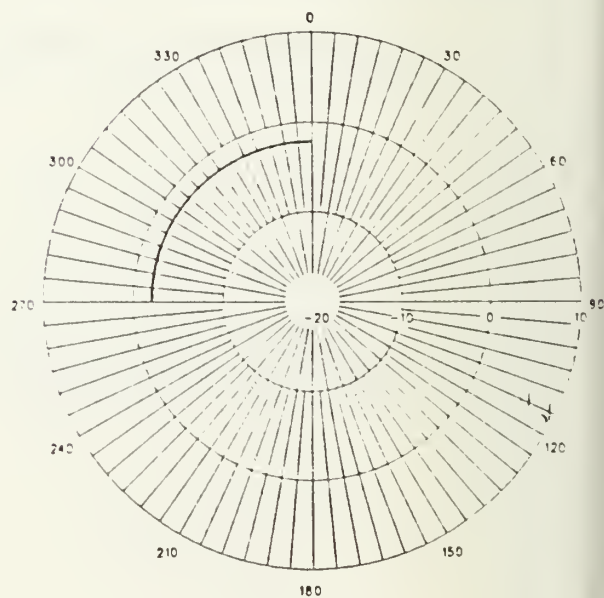


Figure 151. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 5 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

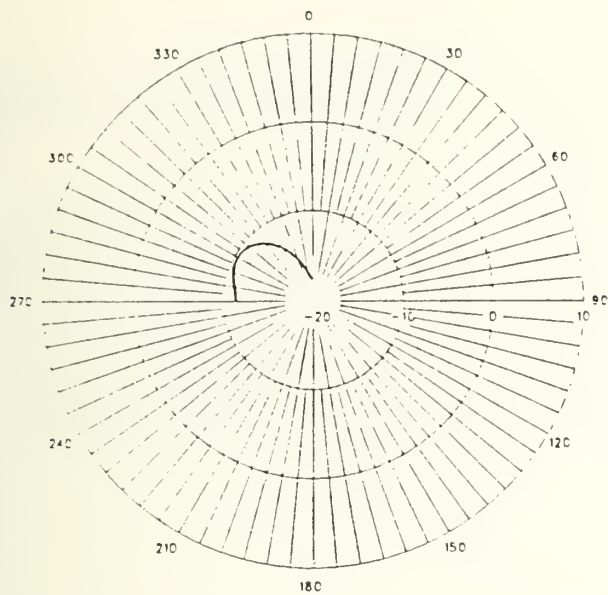

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

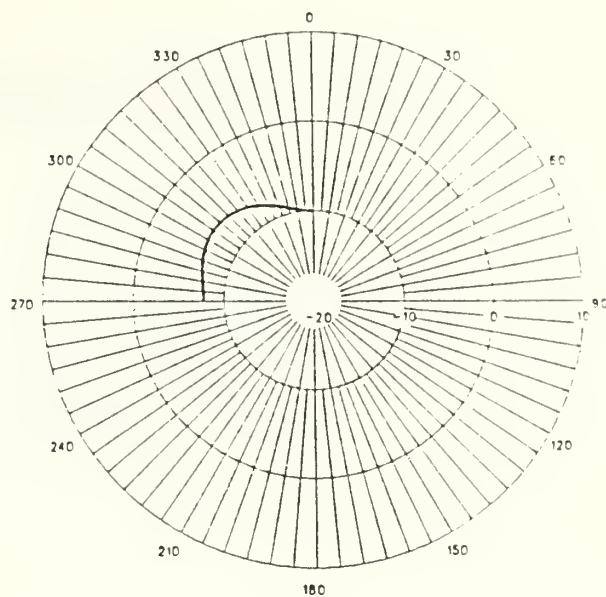

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

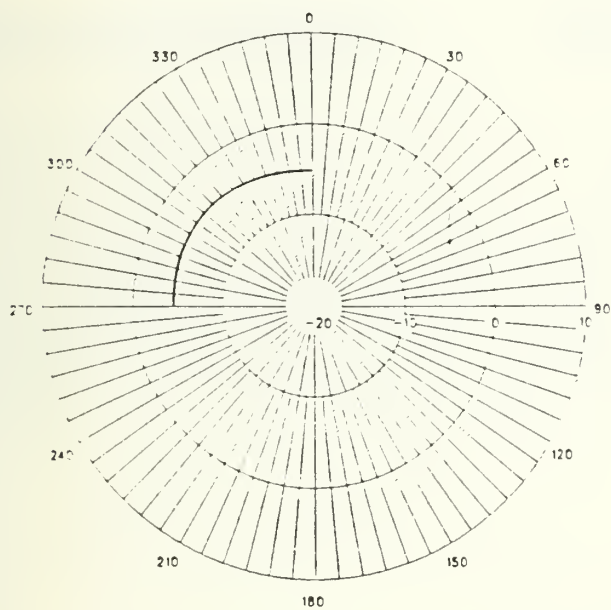

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



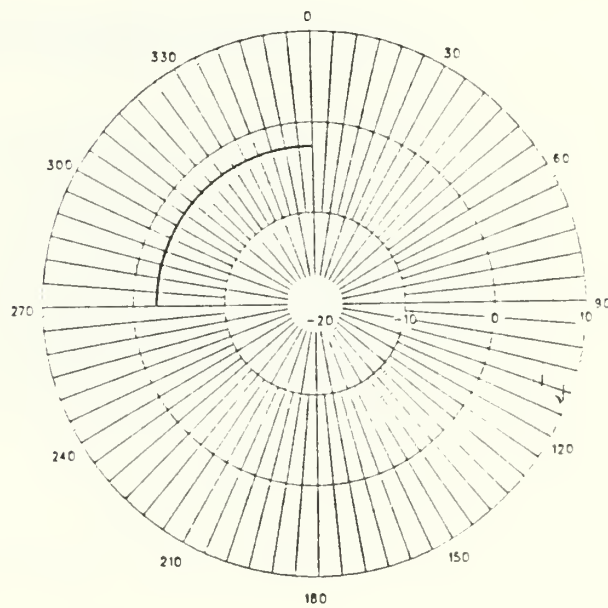


Figure 152. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 5 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

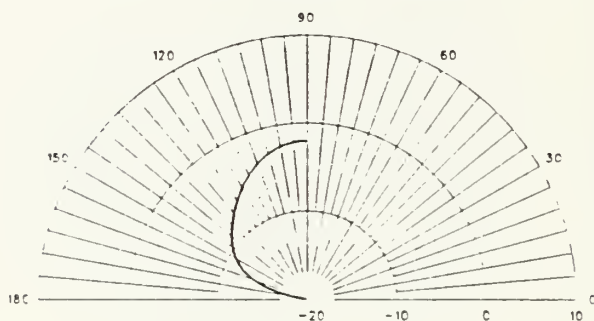

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

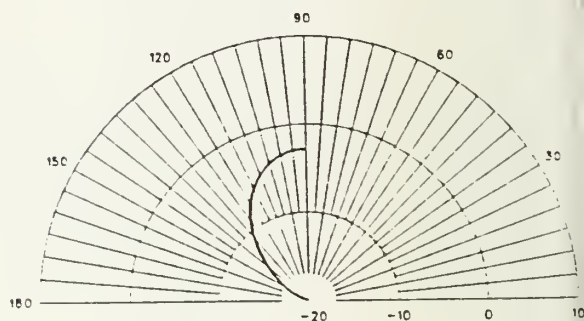

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

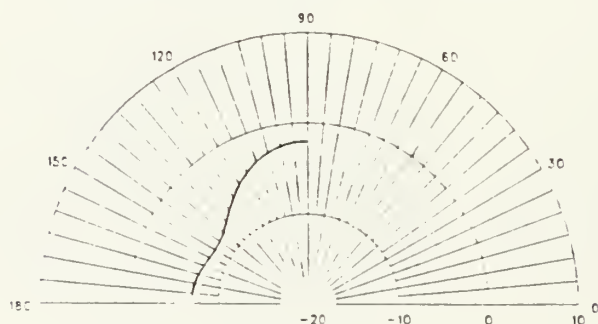

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



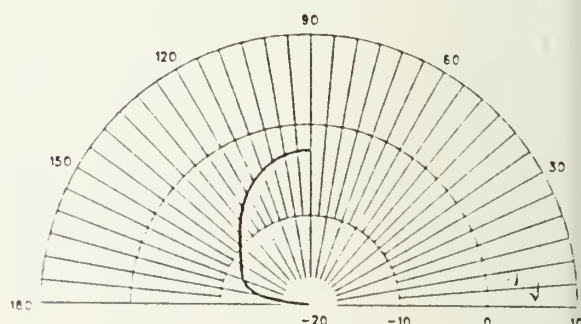


Figure 153. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 6 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

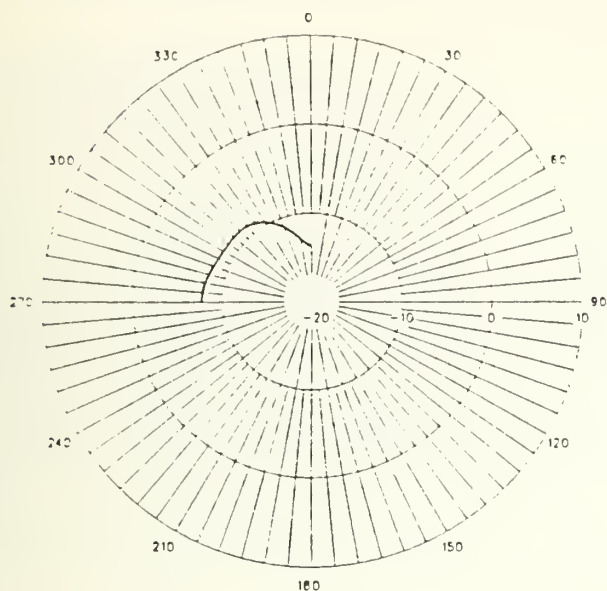

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

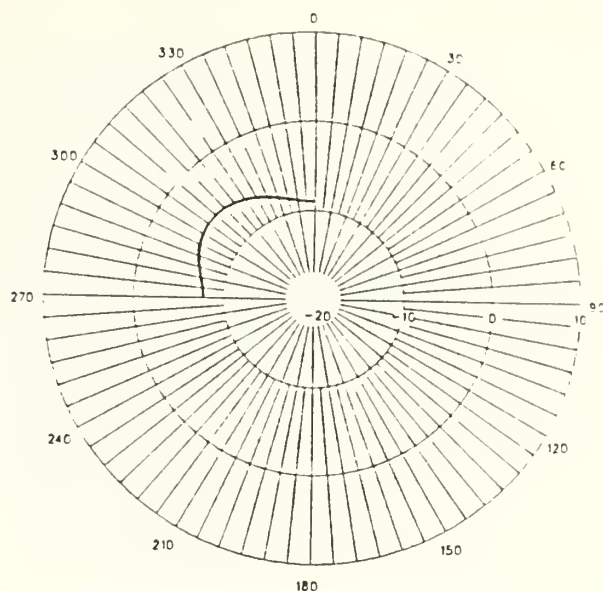

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

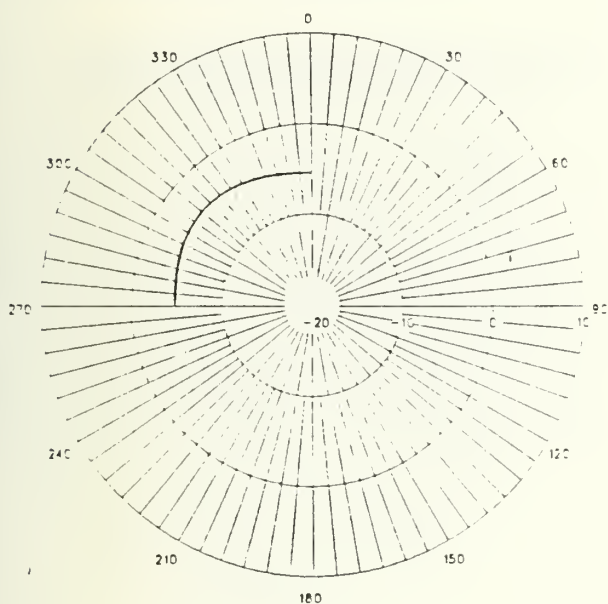

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



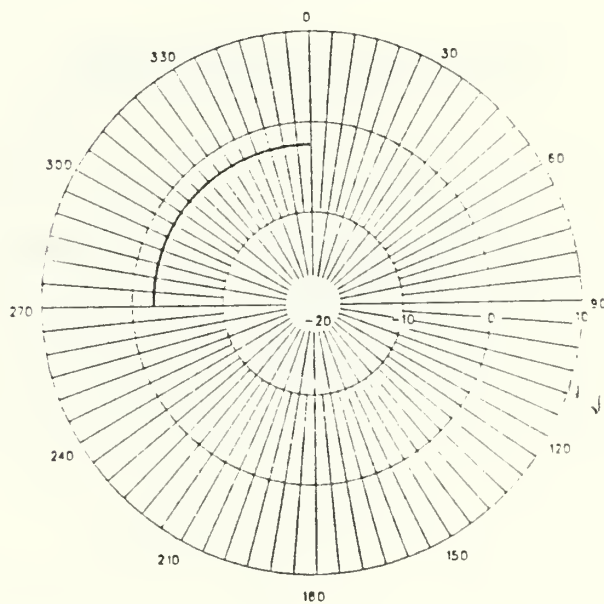


Figure 154. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 6 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

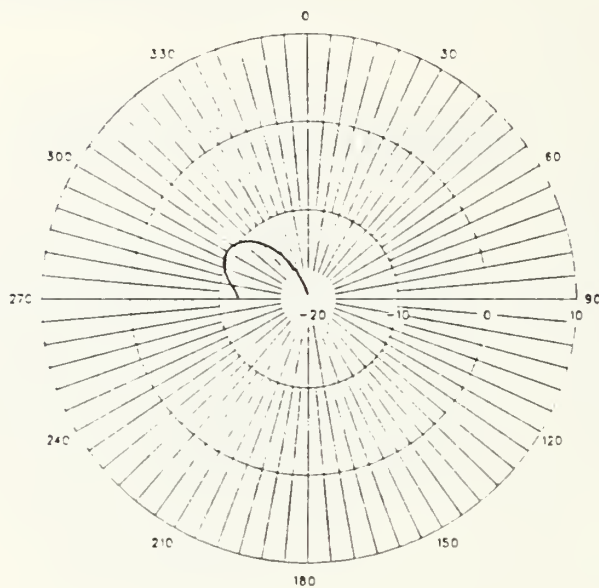

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

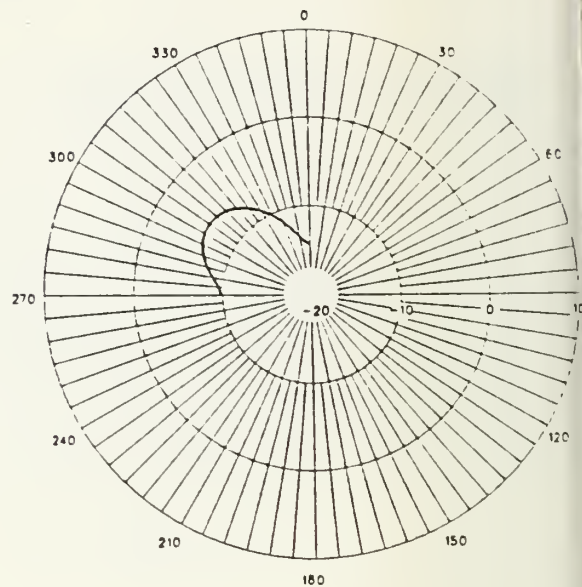

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

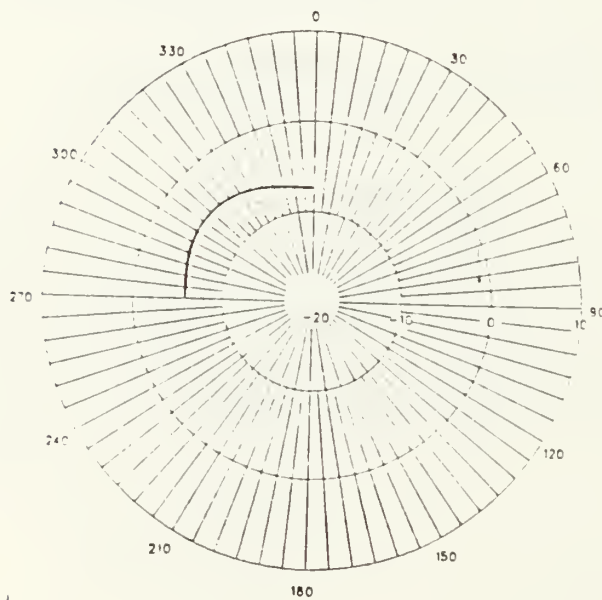

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



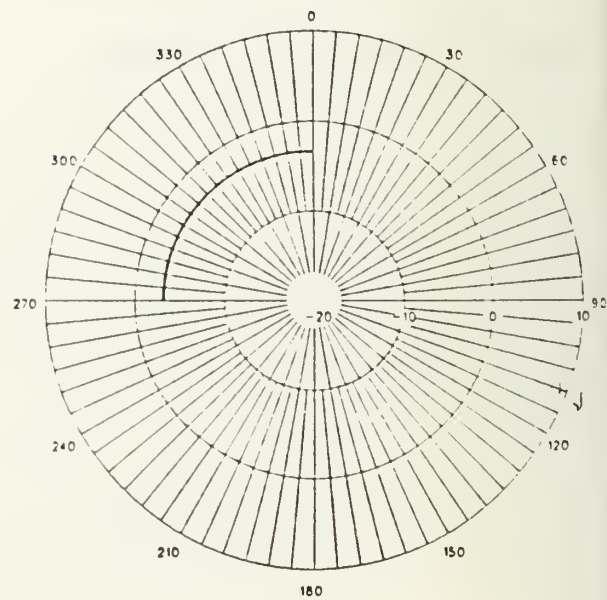


Figure 155. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 6 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

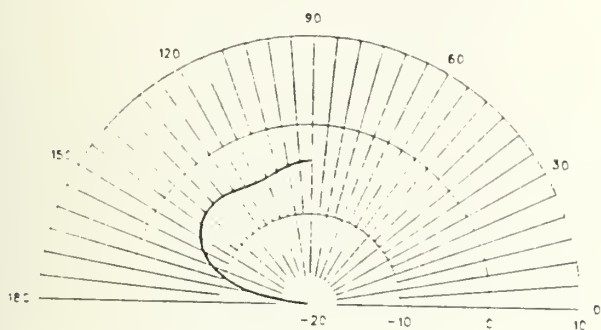

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

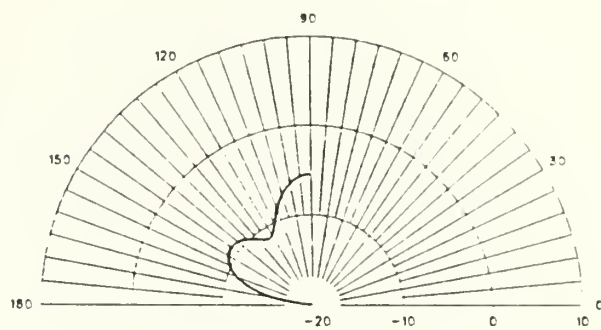

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

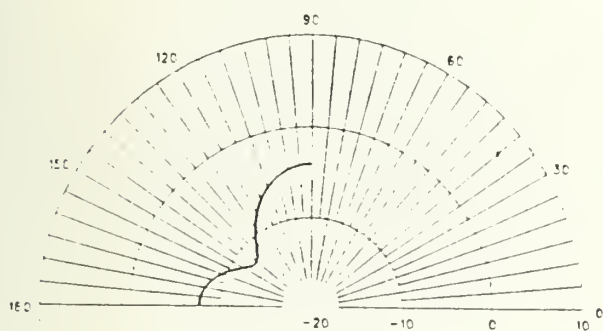

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



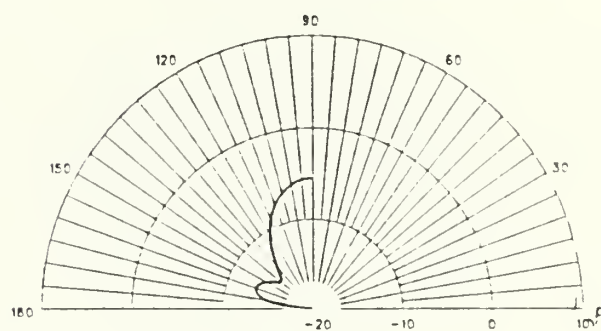


Figure 156. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 7 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

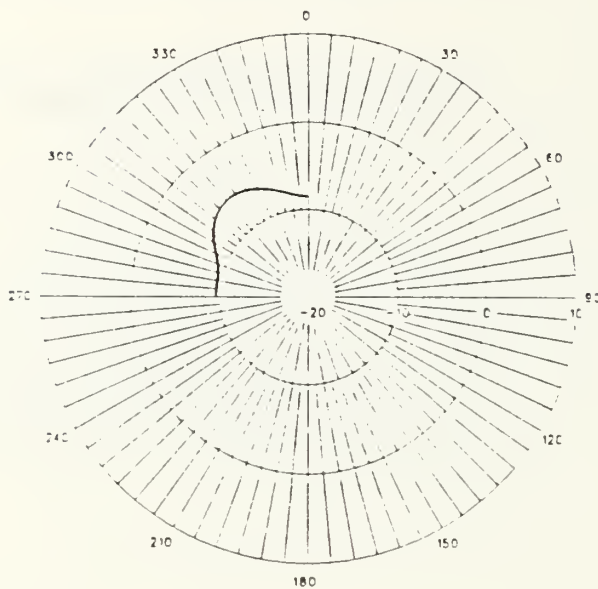

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

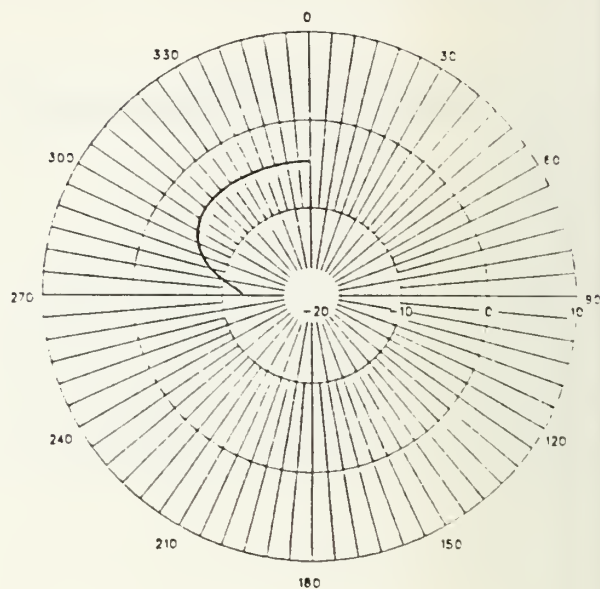

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

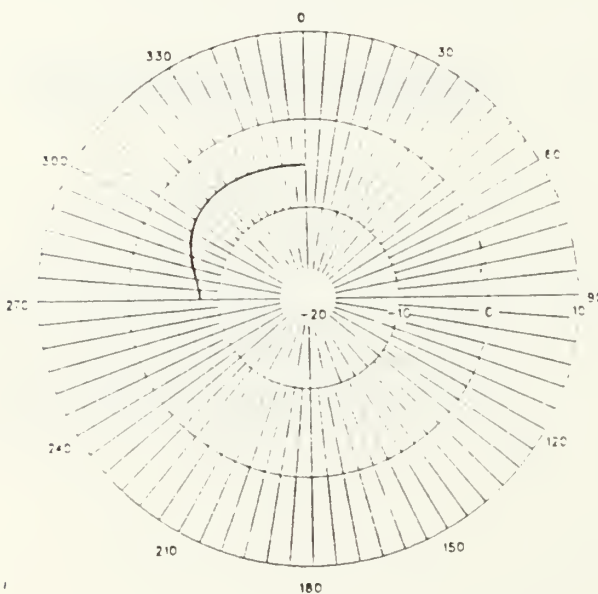

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



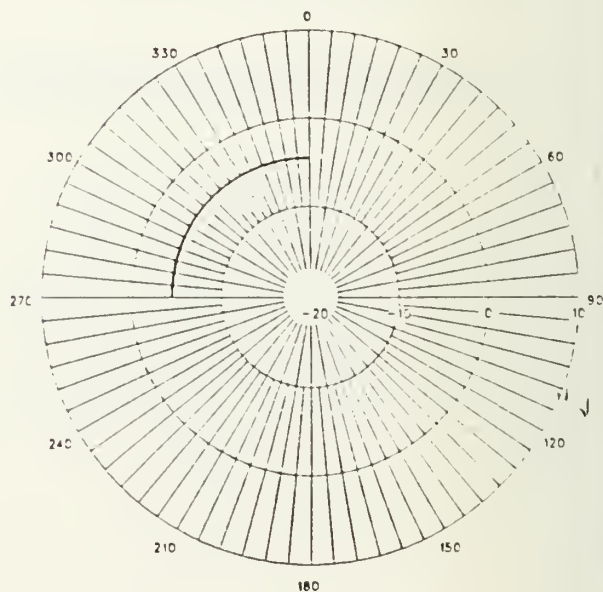


Figure 157. Azimuth patterns of the Air Force Lowband DD antenna over perfect ground at 7 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

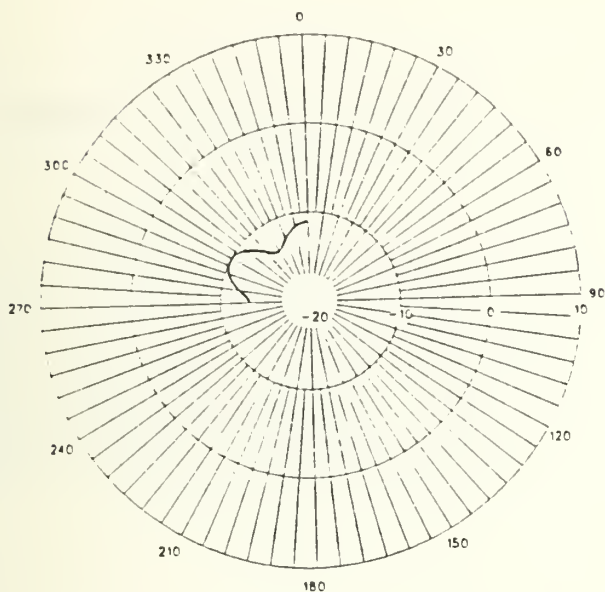

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

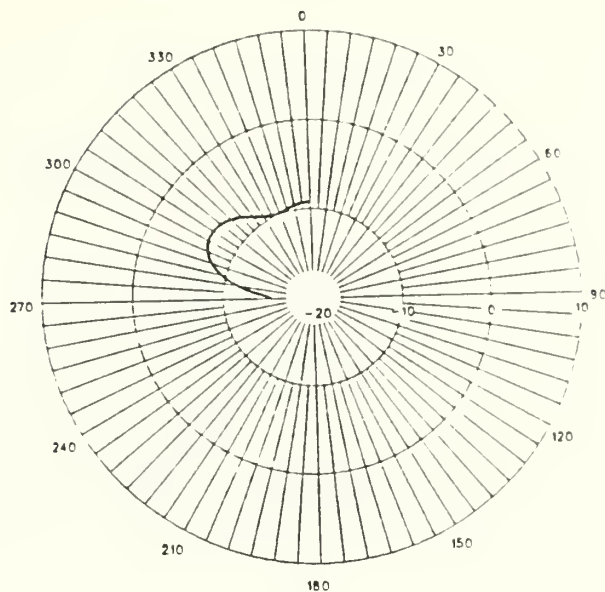

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

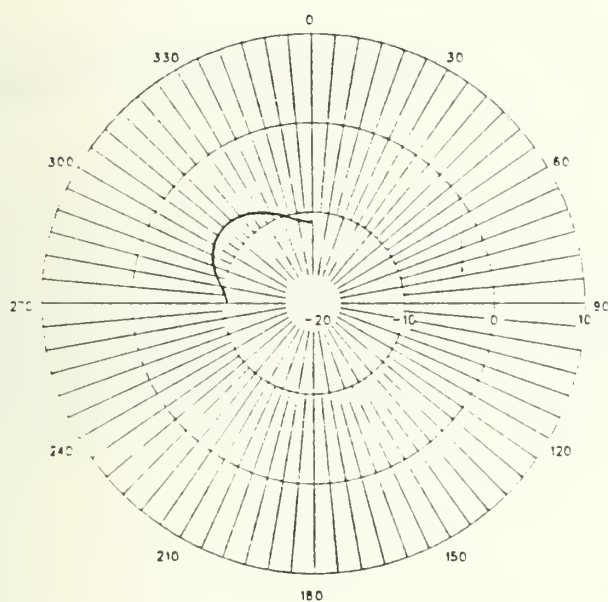

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



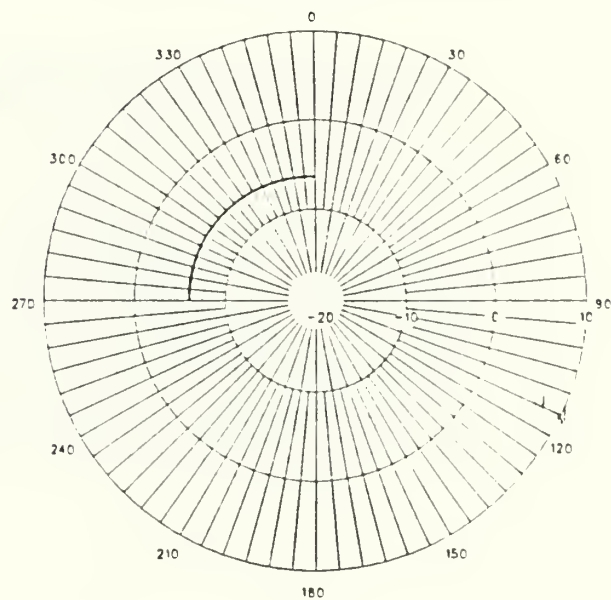


Figure 158. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 7 MHz


AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

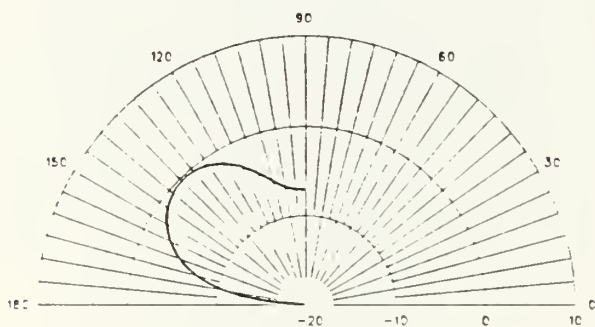

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

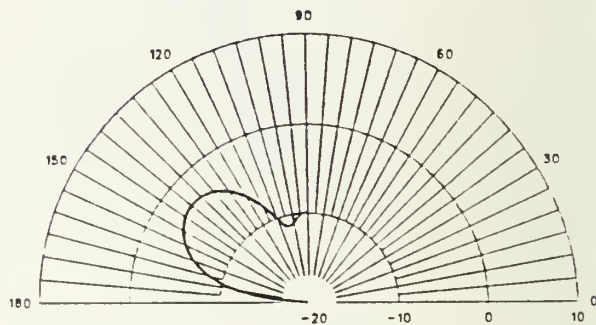

AIR FORCE LO-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

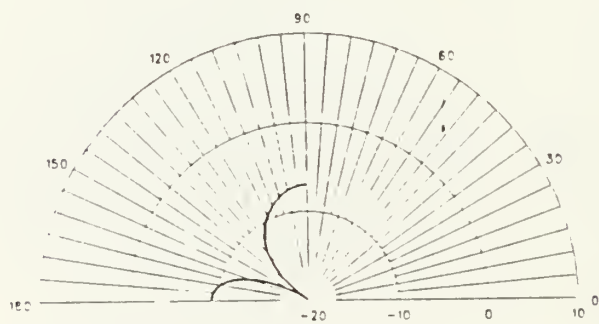

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



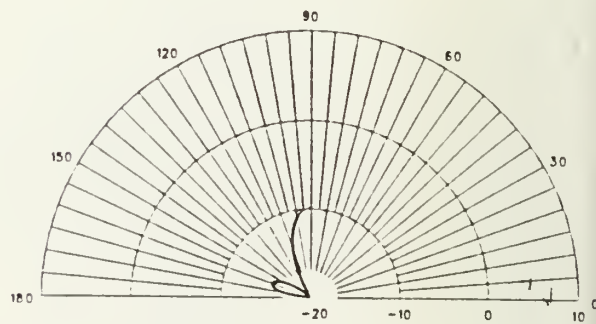


Figure 159. Elevation patterns of the Air Force Lowband DD antenna over perfect ground and fair ground at 8 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

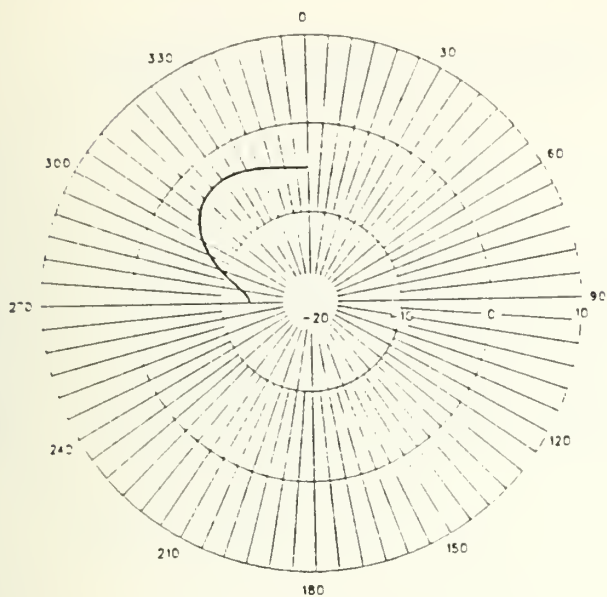

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

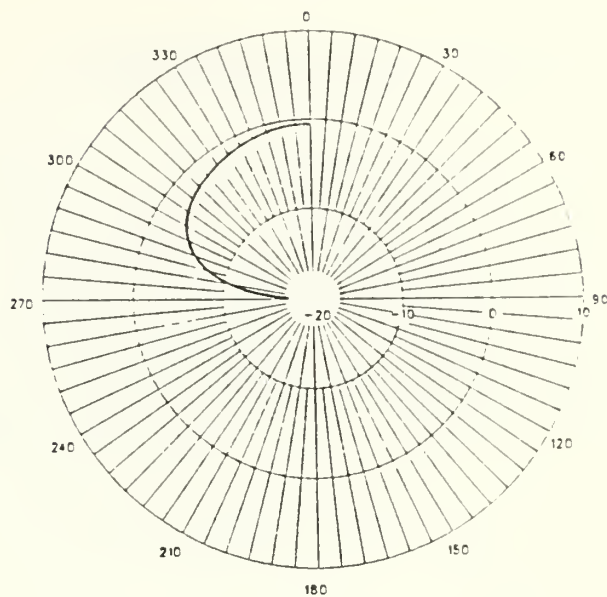

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

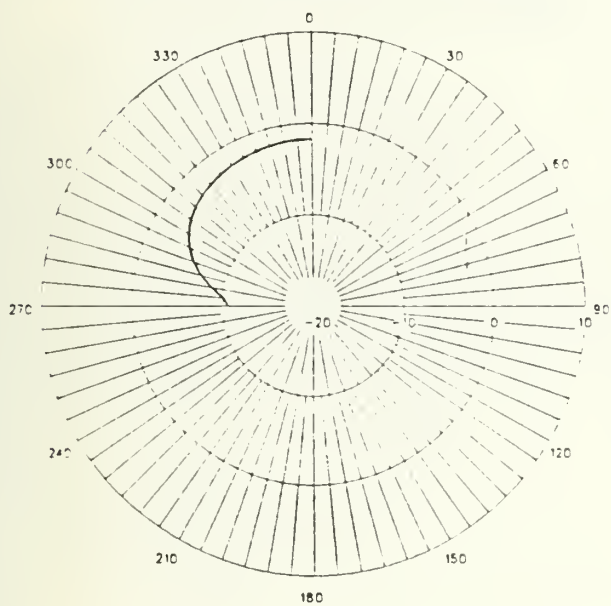

AIR FORCE LO-BAND DOUBLE DELTA / FEFF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



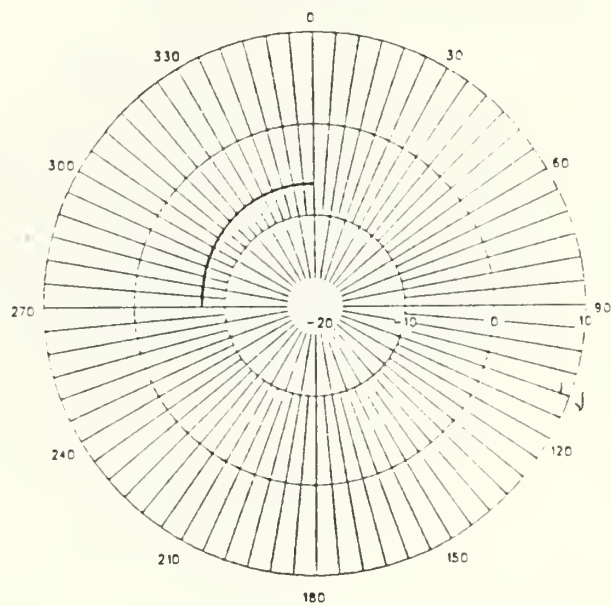


Figure 160. Azimuth patterns of The Air Force Lowband DD antenna over perfect ground at 8 MHz


AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

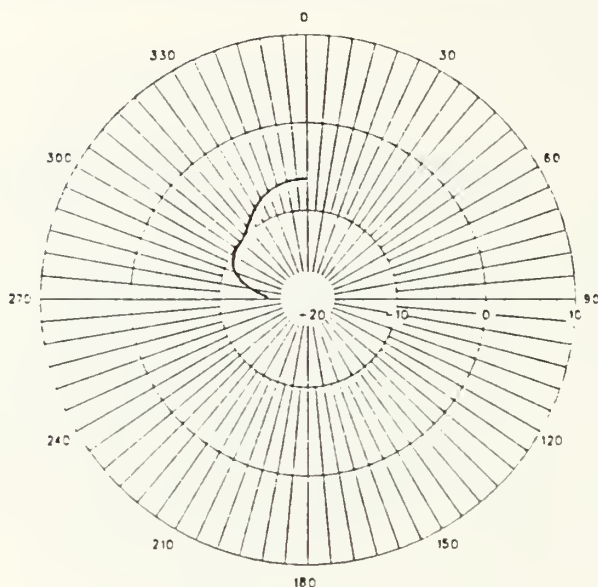

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

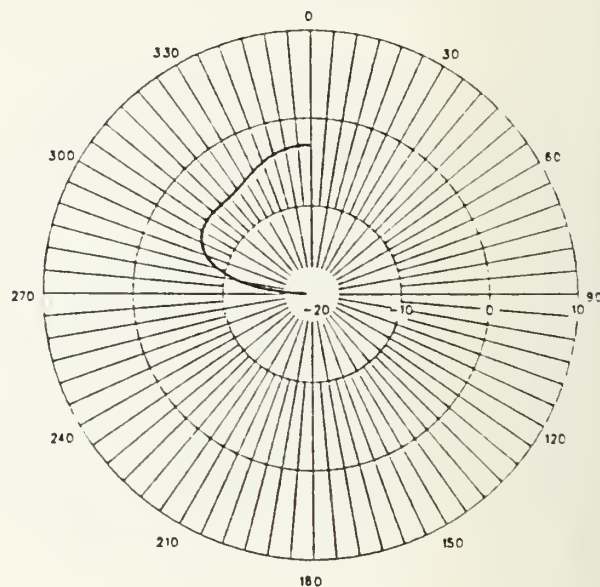

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

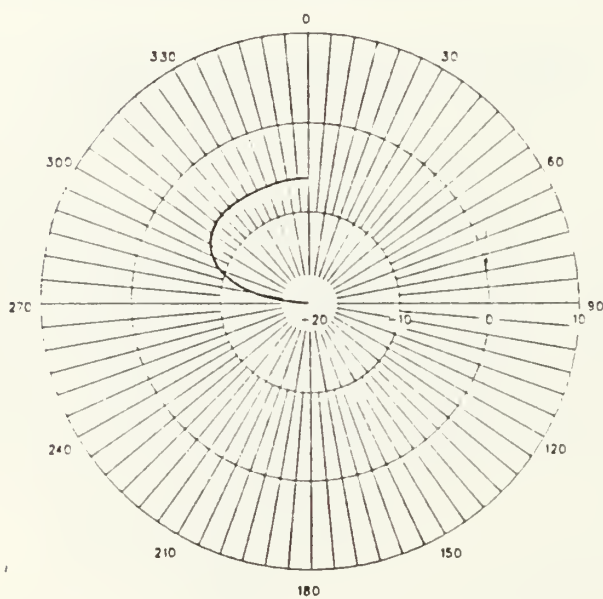

AIR FORCE LO-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



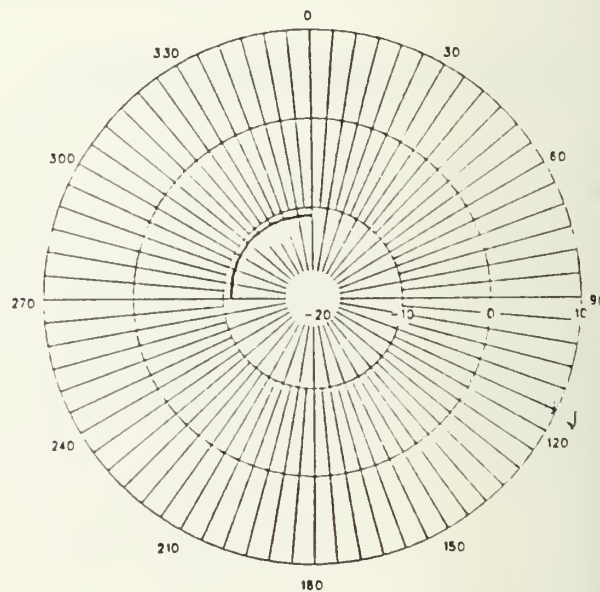


Figure 161. Azimuth patterns of the Air Force Lowband DD antenna over fair ground at 8 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

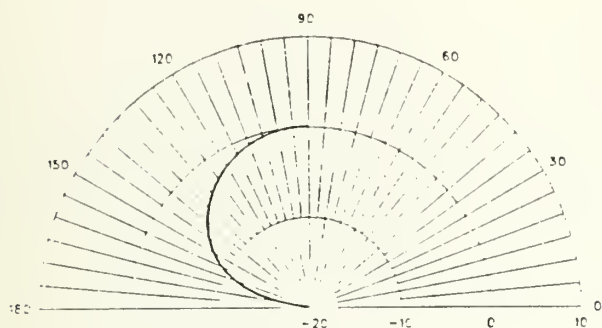

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

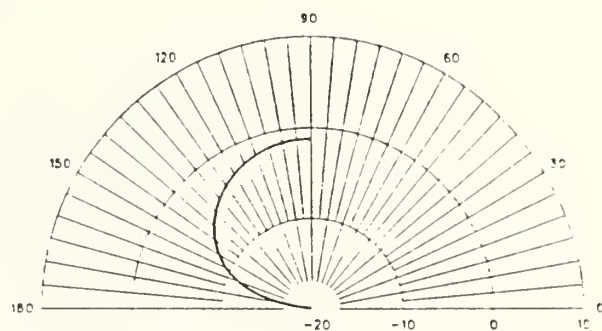

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

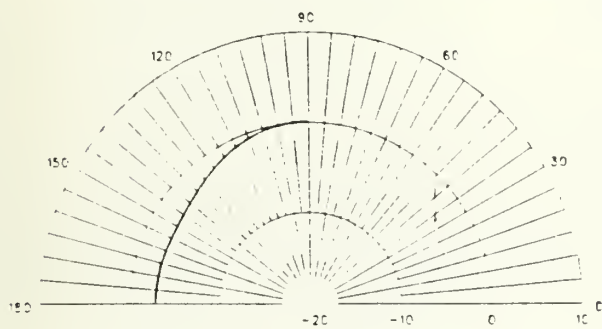

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



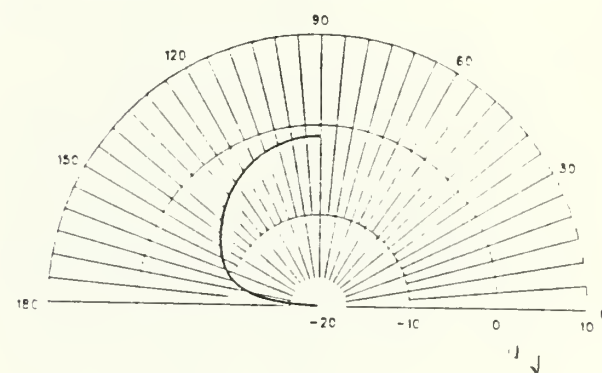


Figure 162. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 8 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

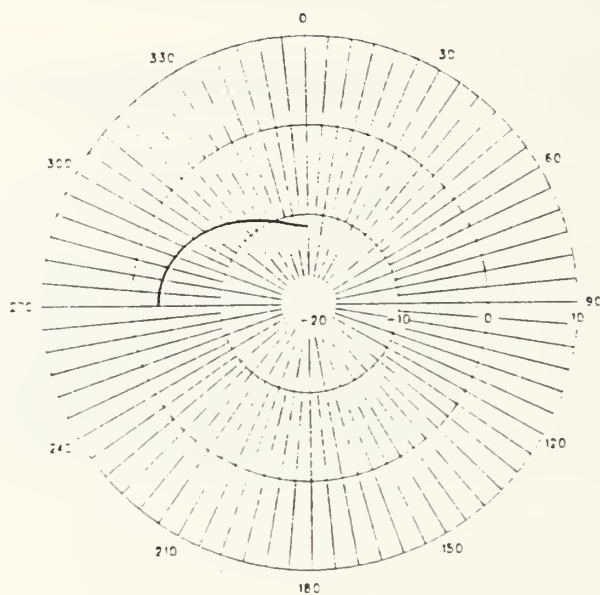

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

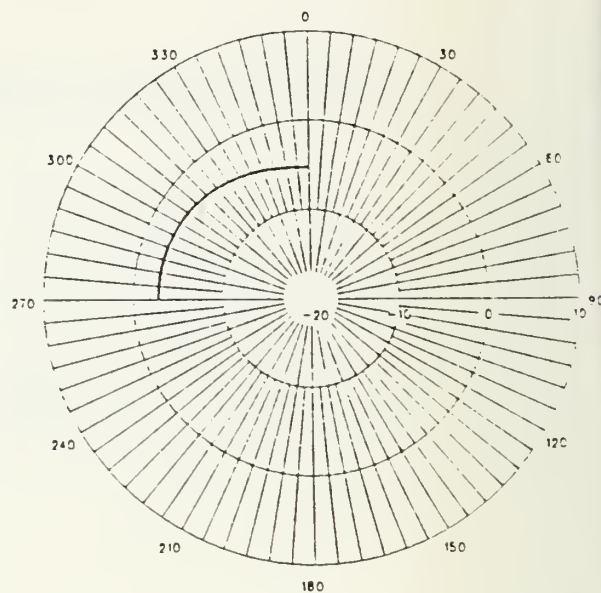

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

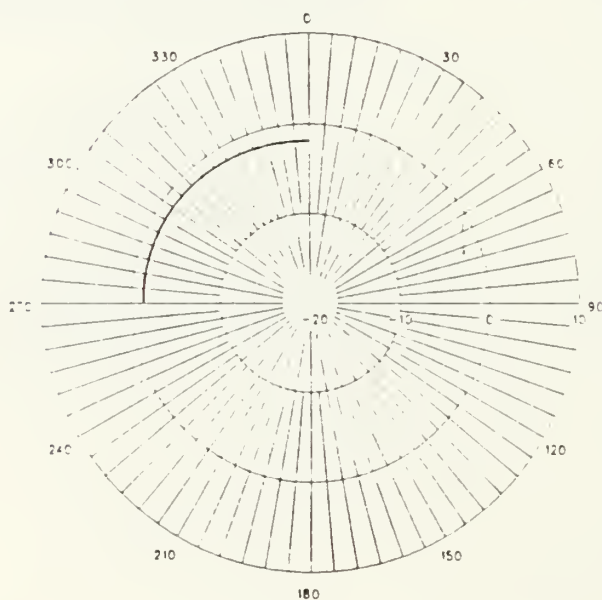

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



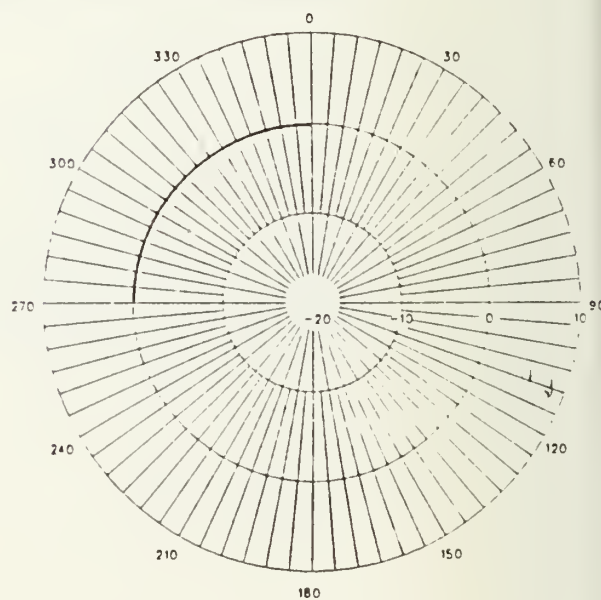


Figure 163. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 8 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

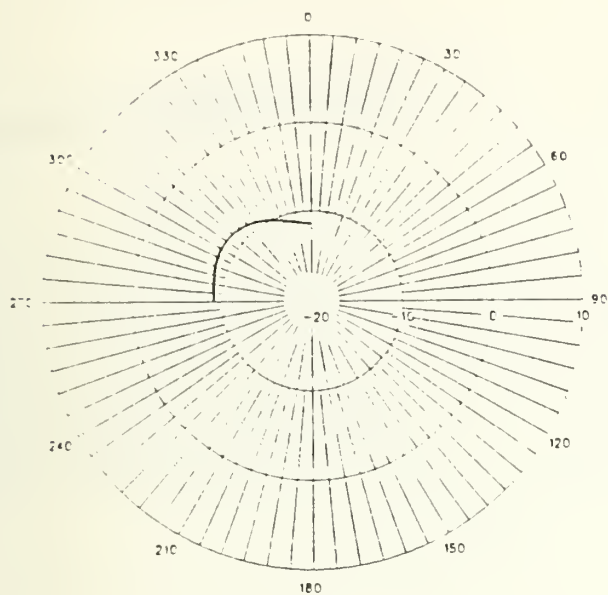

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

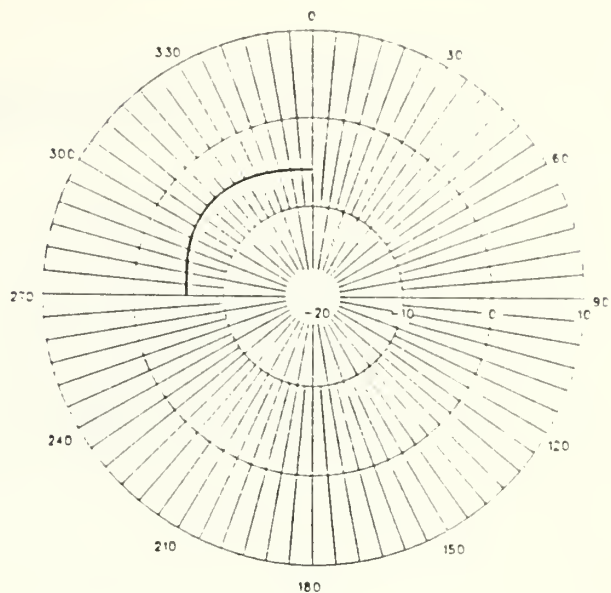

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

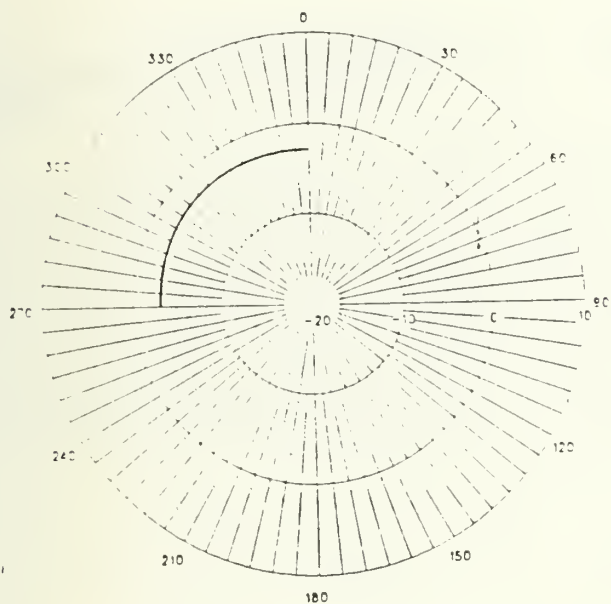

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



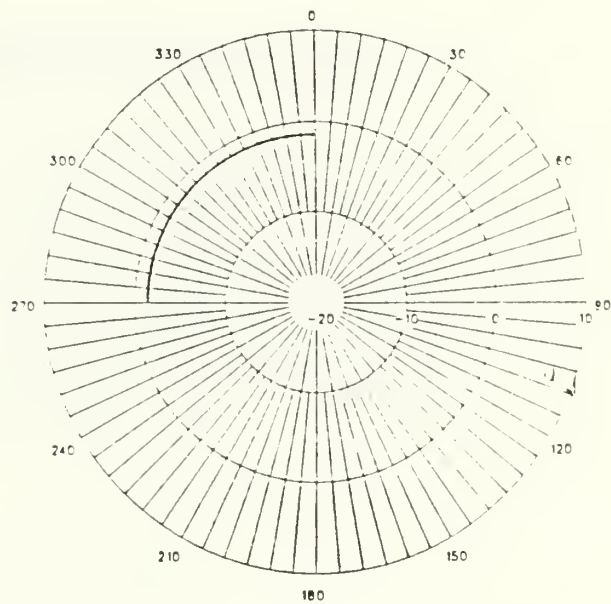


Figure 164. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 8 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

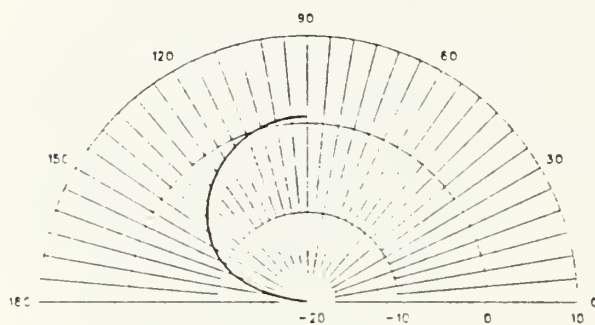

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

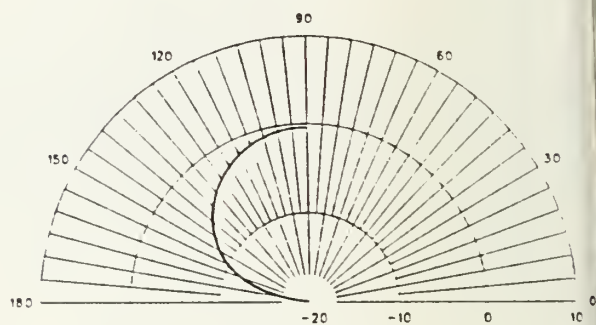

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

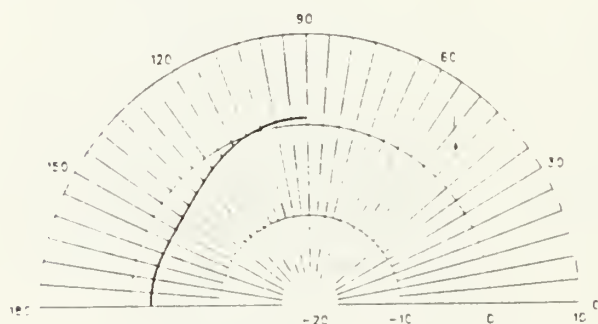

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



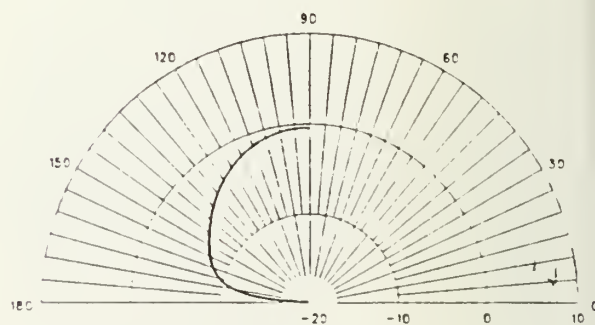


Figure 165. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 9 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

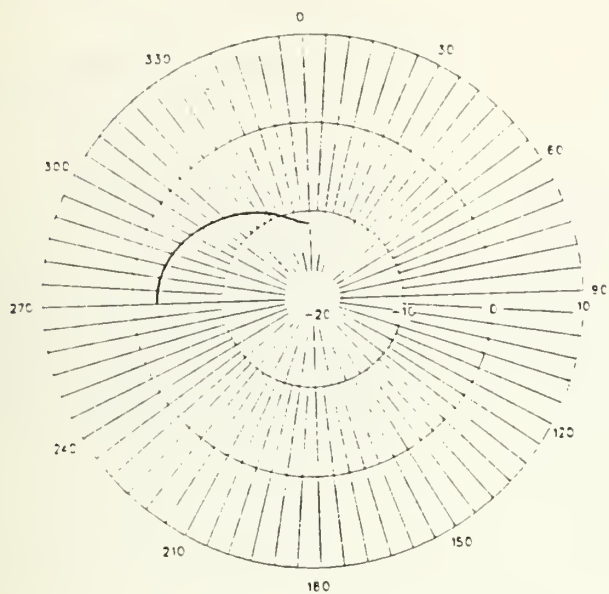

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

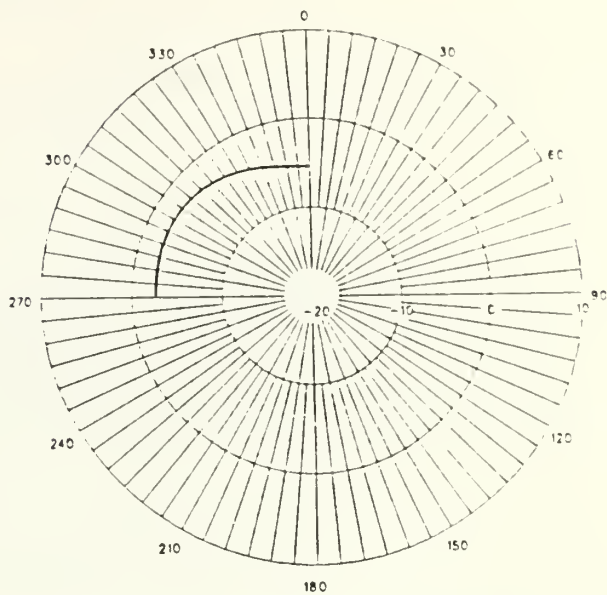

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

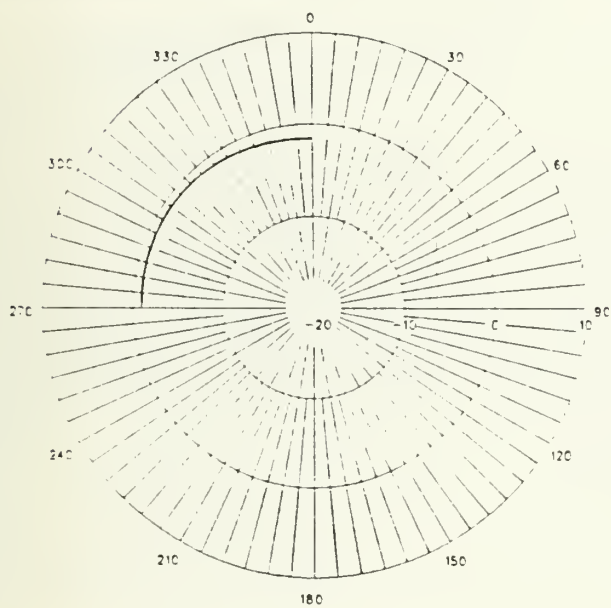

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



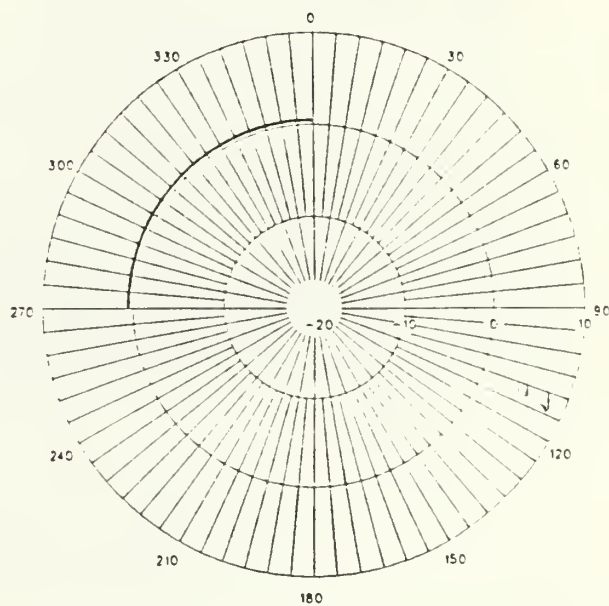


Figure 166. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 9 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

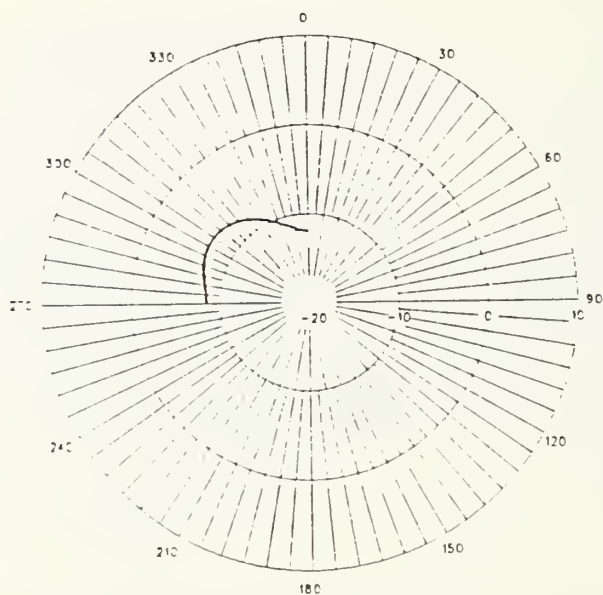

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

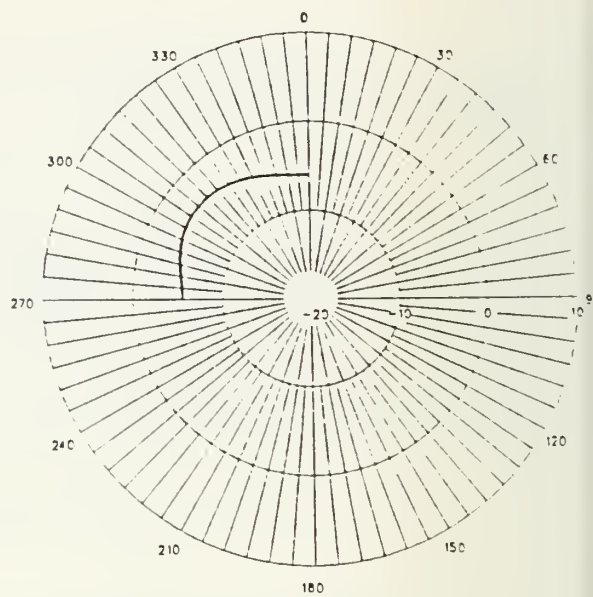

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

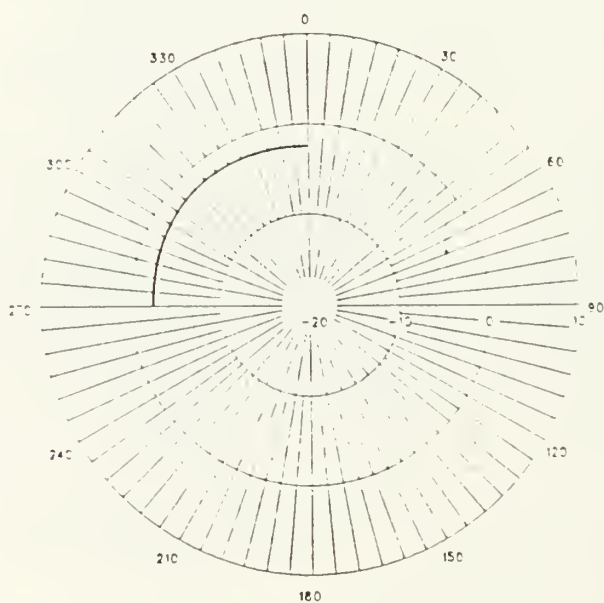

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



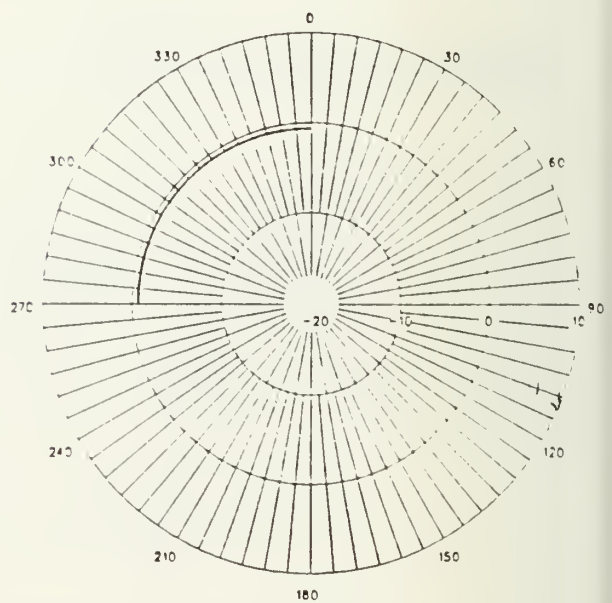


Figure 167. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 9 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BOPESIGHT

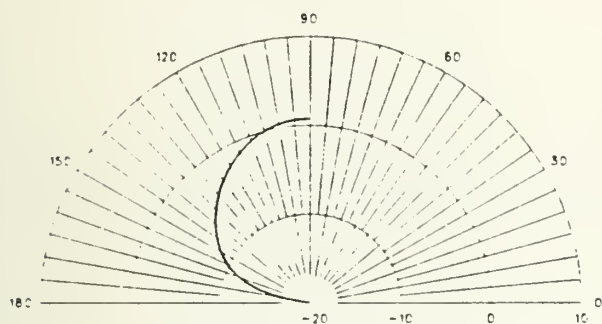

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BOPESIGHT

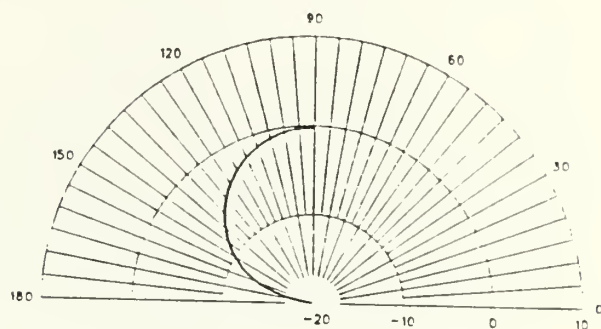

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

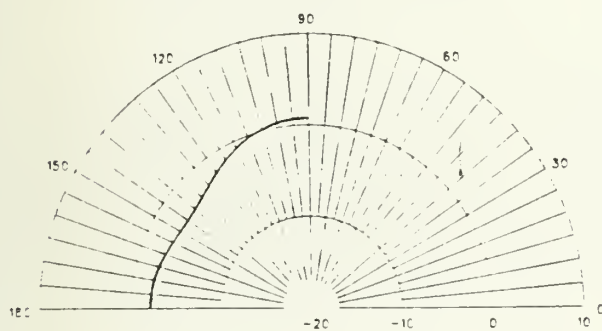

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



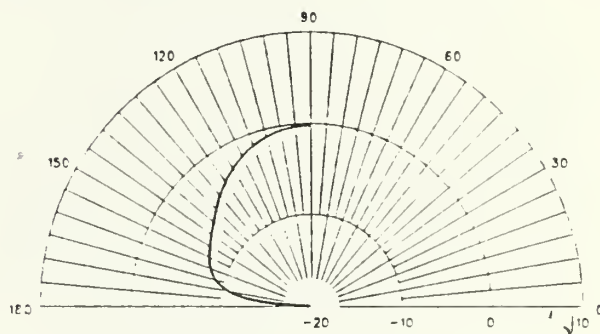


Figure 168. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 10 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

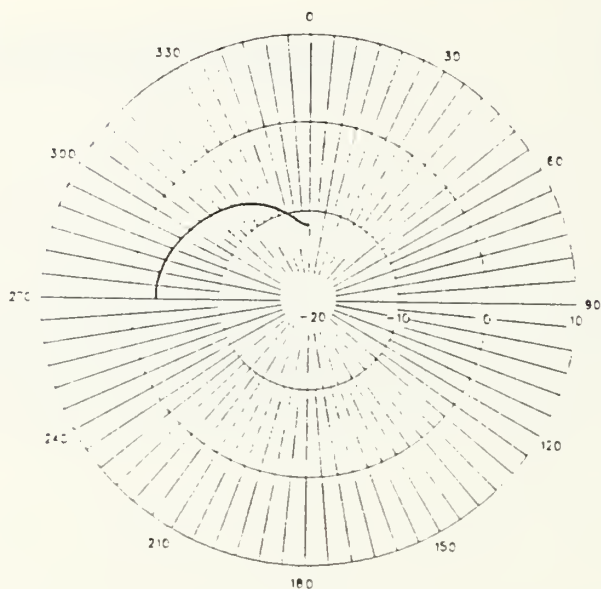

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

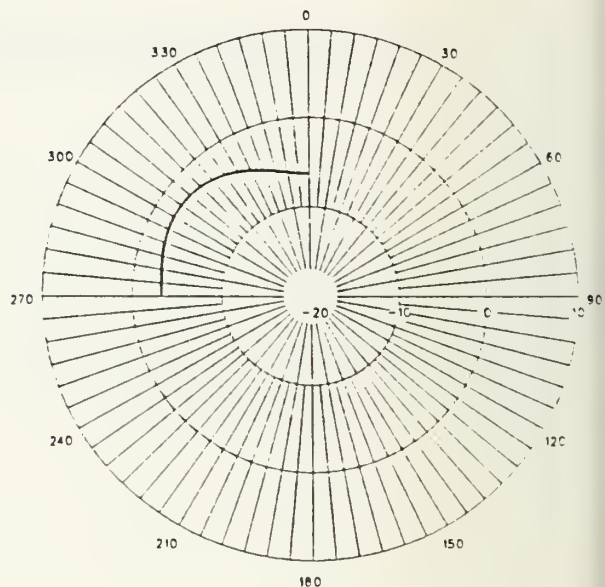

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

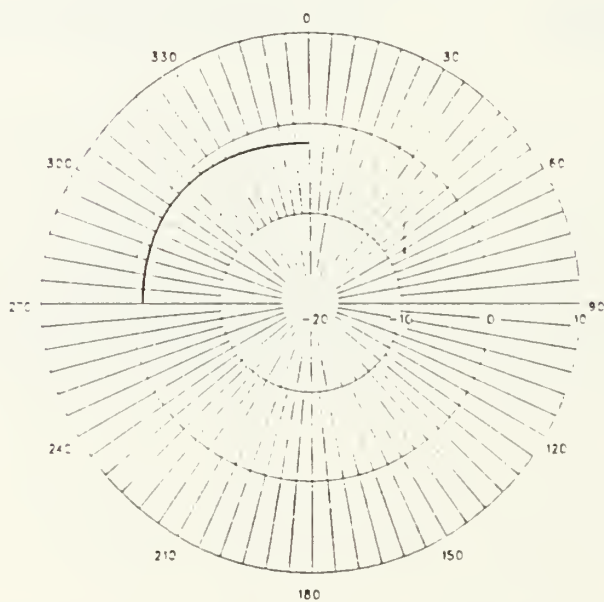

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



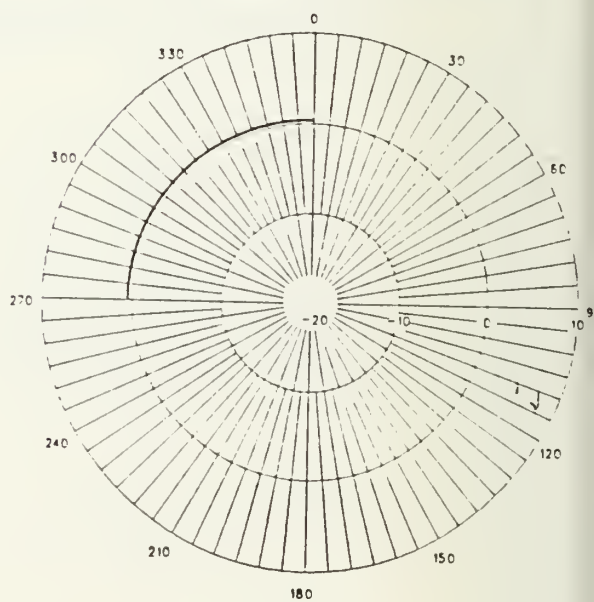


Figure 169. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 10 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

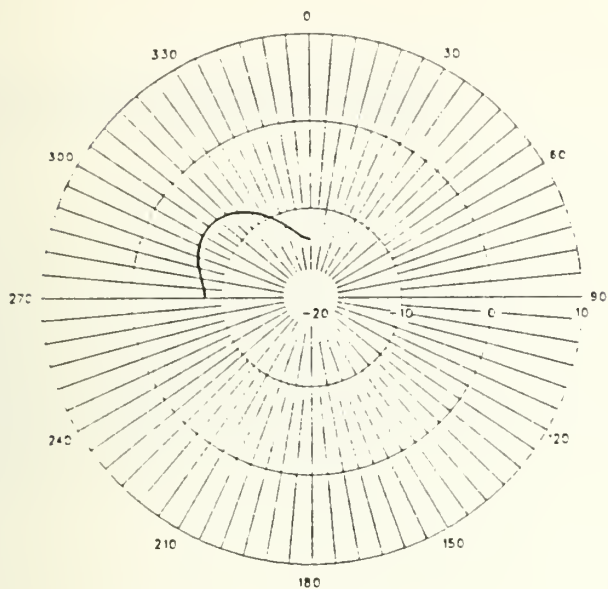

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

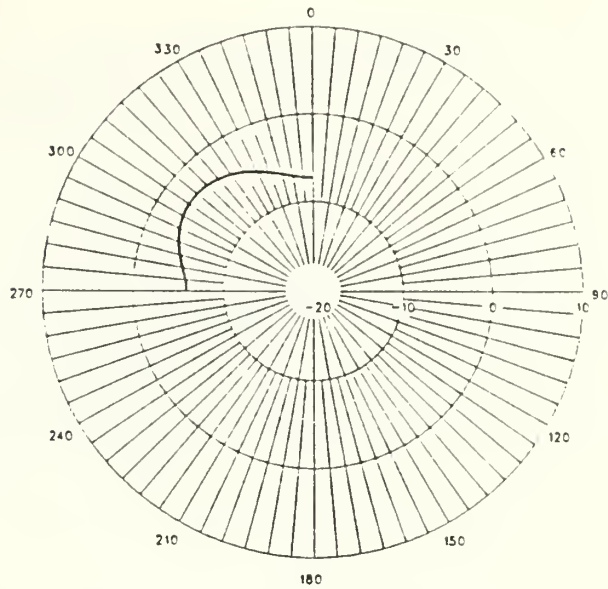

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

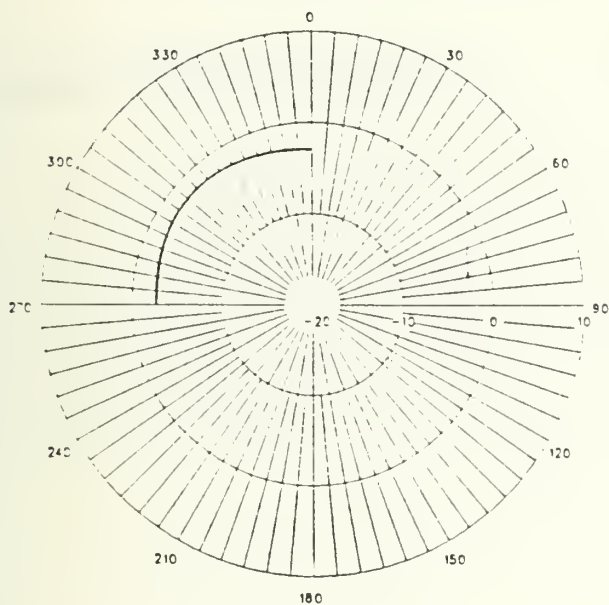

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



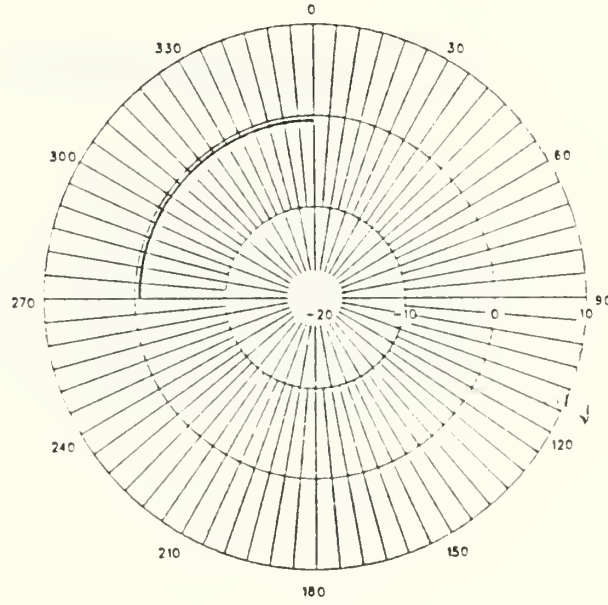


Figure 170. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 10 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

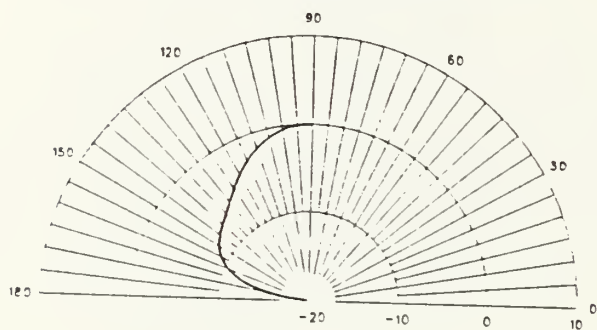

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

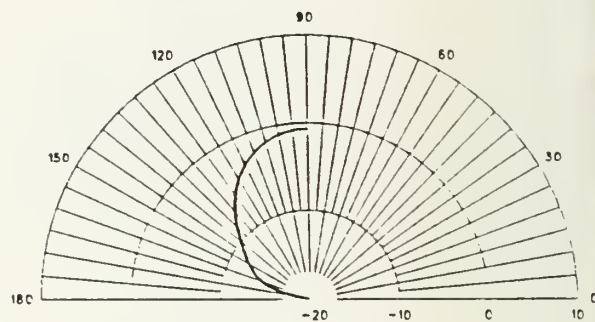

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

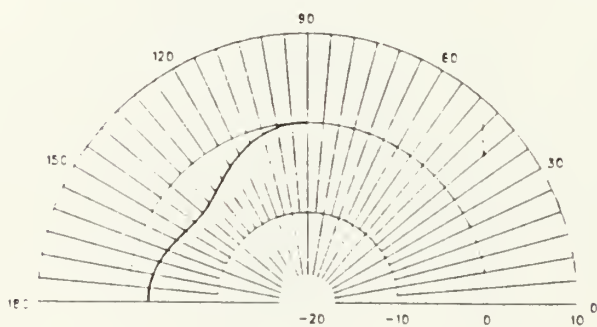

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



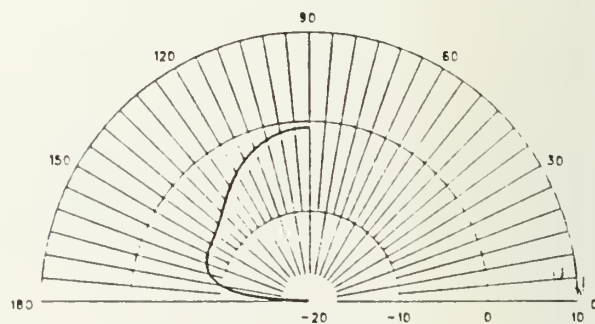


Figure 171. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 11 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

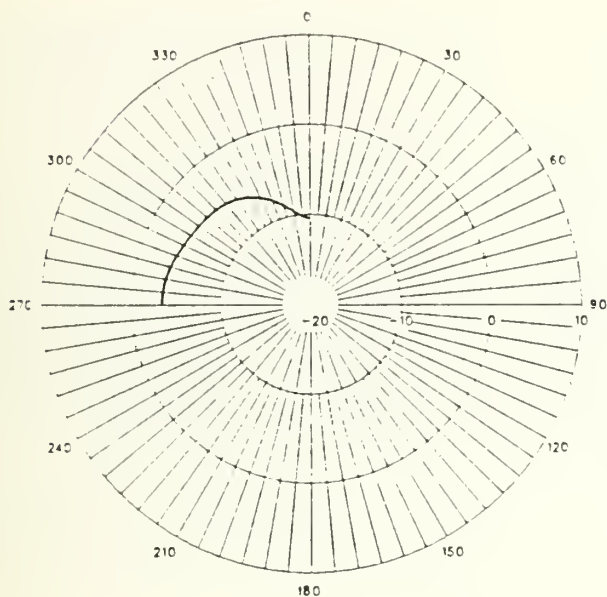

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

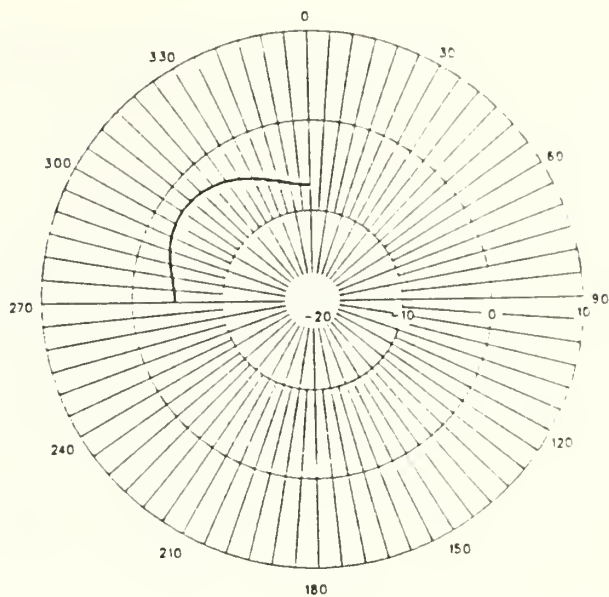

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

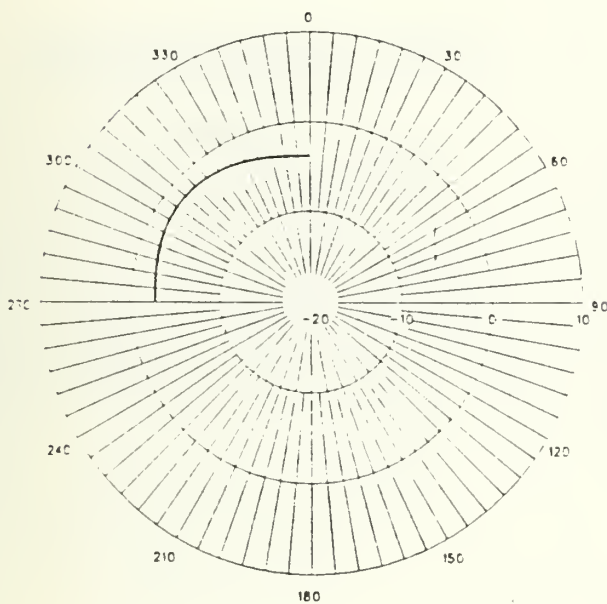

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



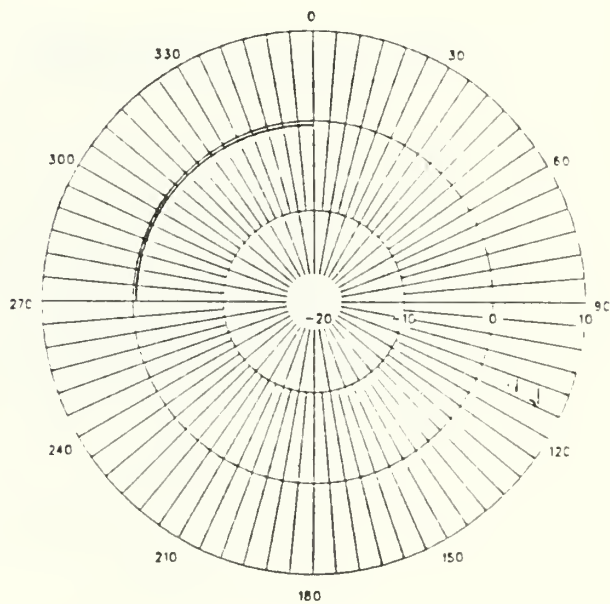


Figure 172. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 11 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

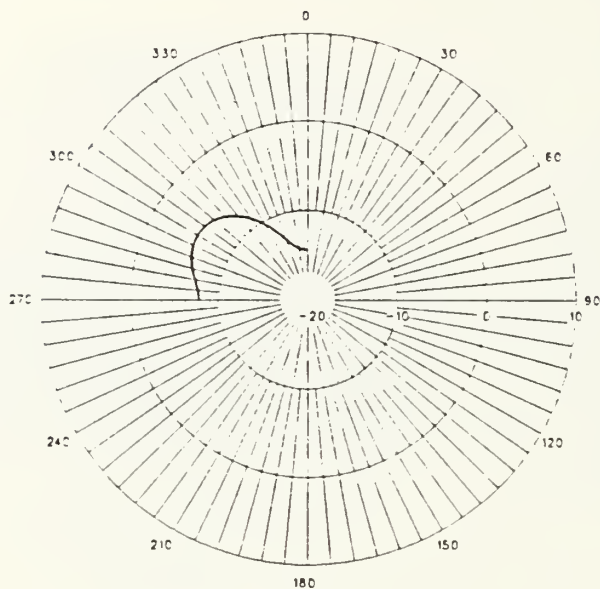

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

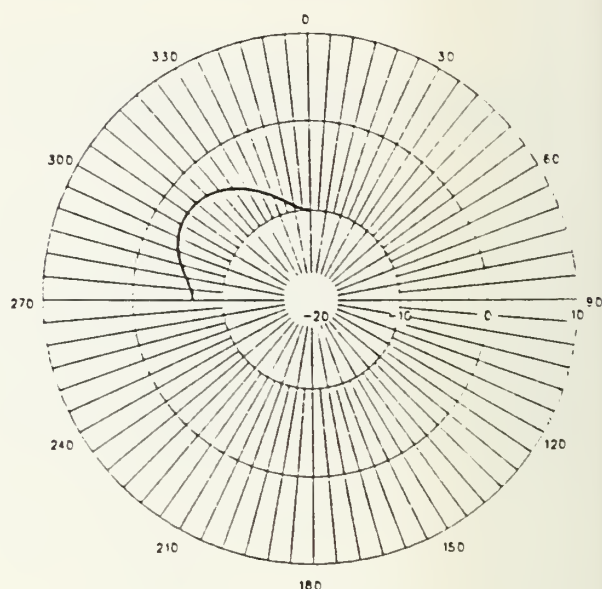

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

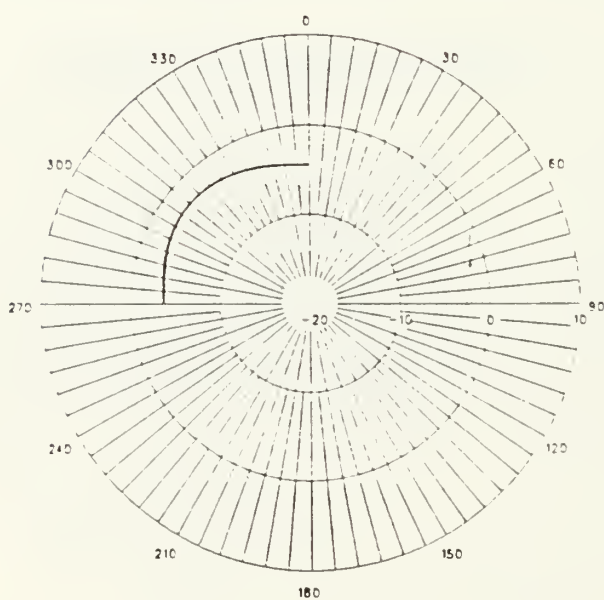

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



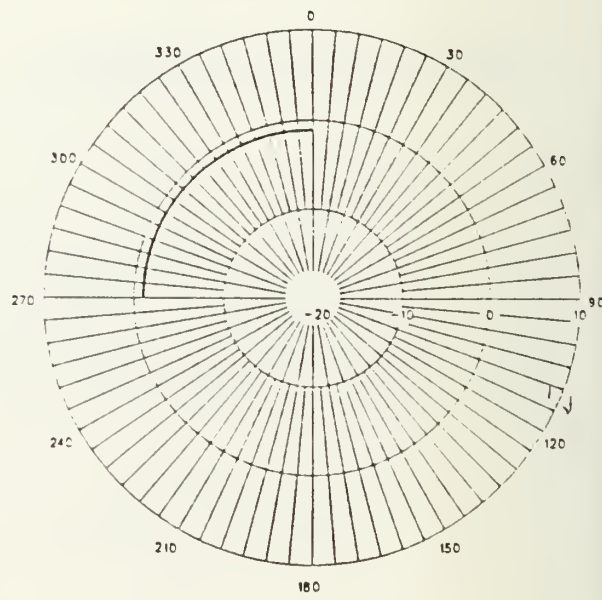


Figure 173. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 11 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

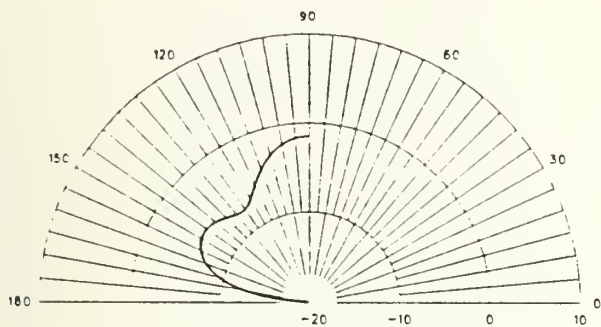

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

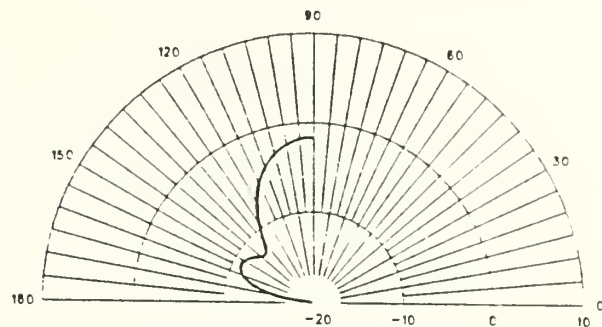

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

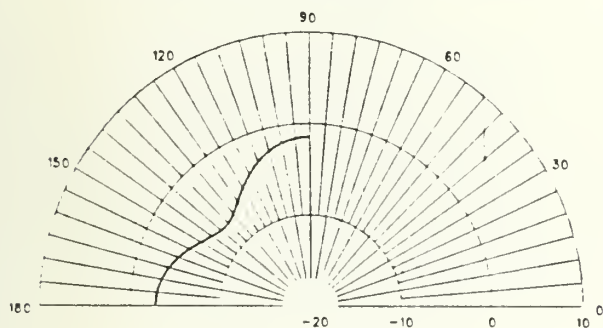

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



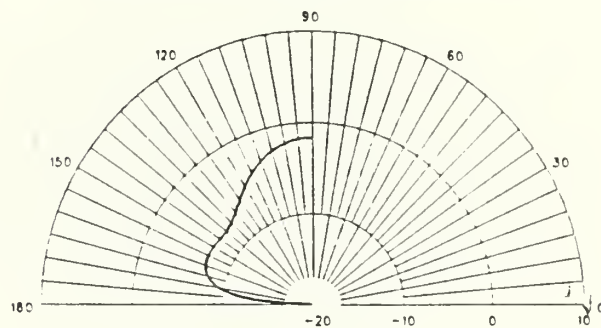


Figure 174. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 12 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

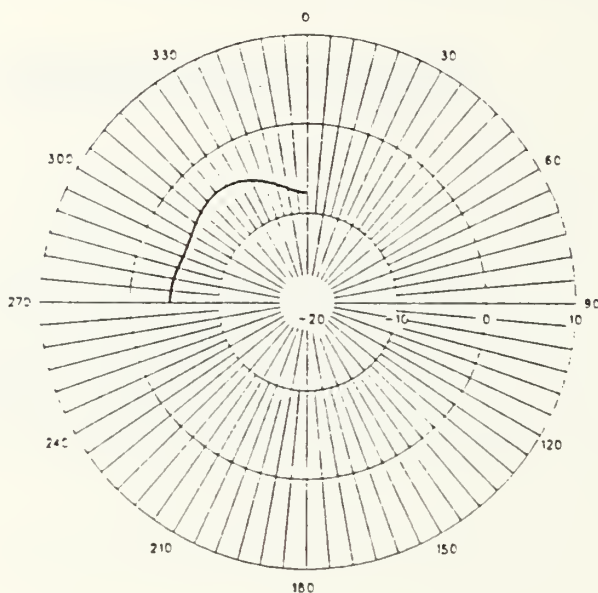

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

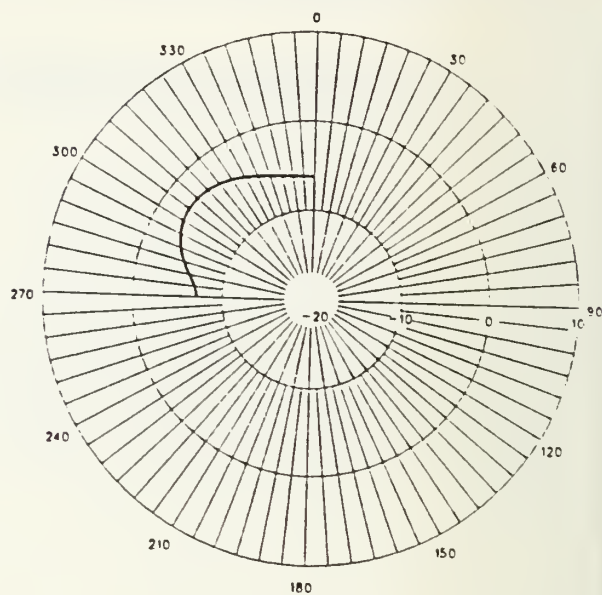

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

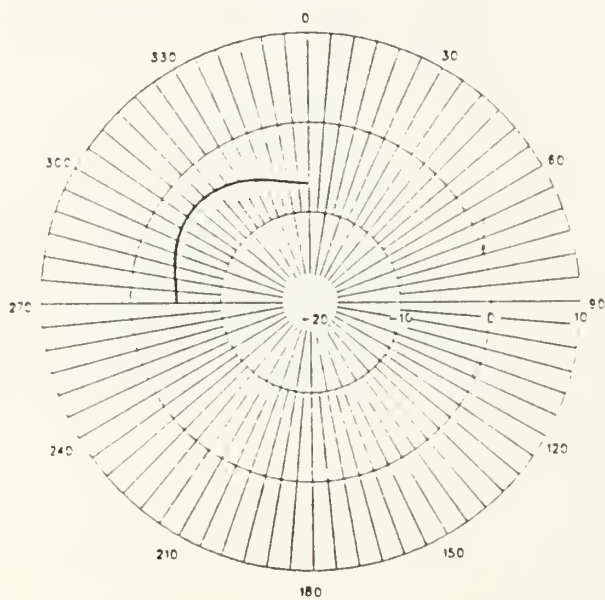

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



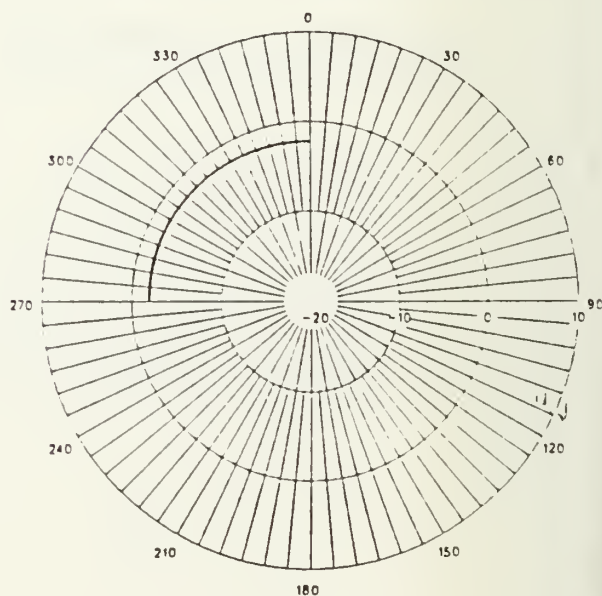


Figure 175. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 12 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

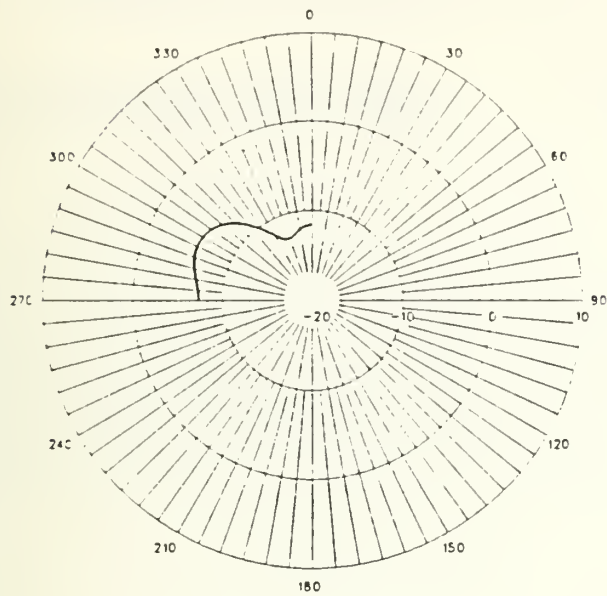

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

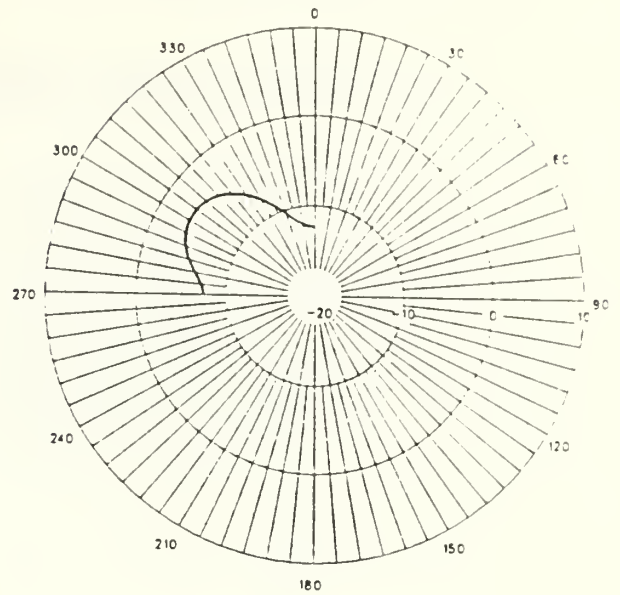

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

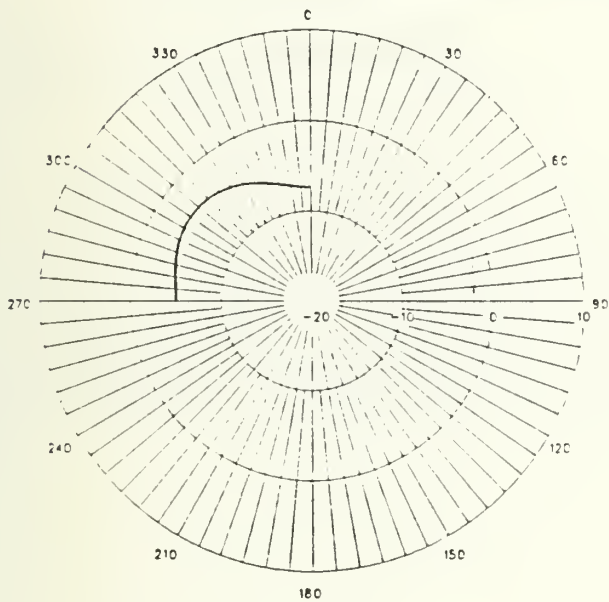

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



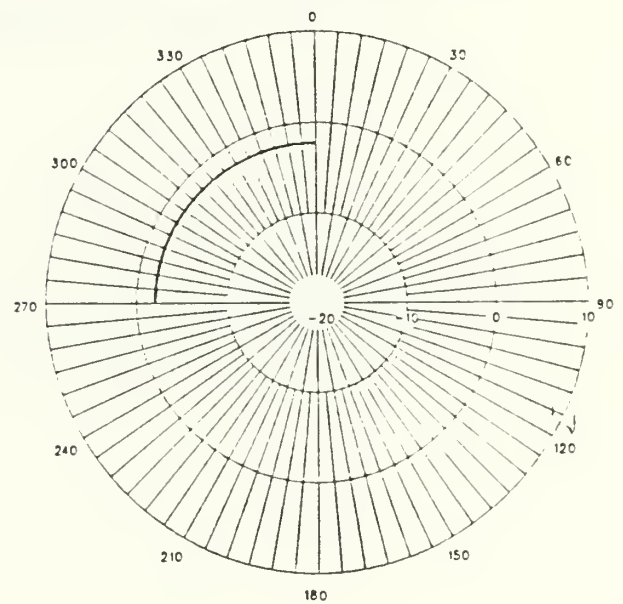


Figure 176. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 12 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. /13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

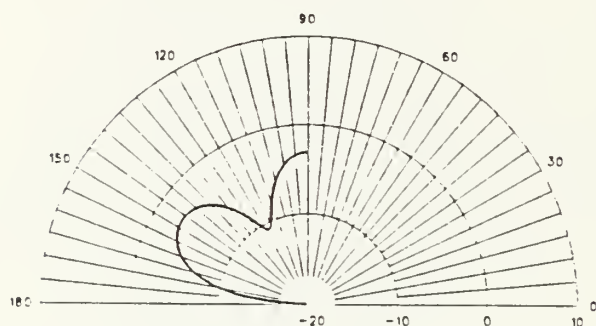

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. /13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

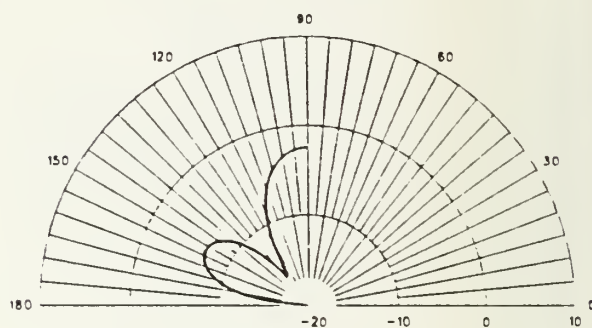

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. /13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

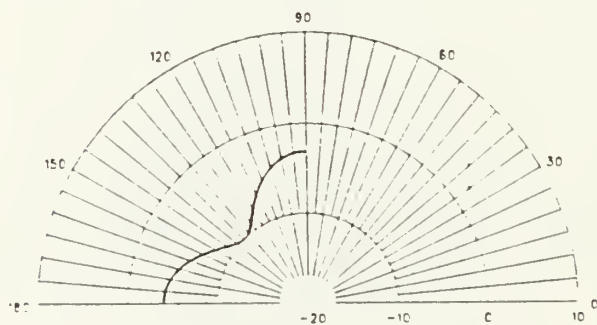

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. /13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



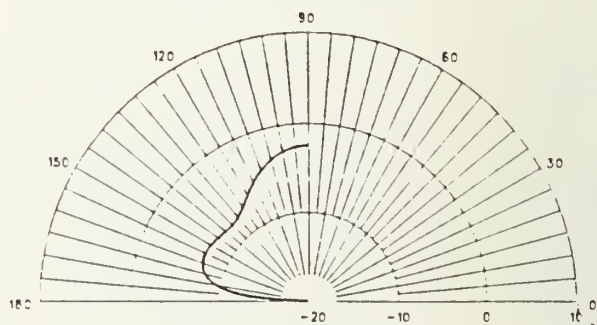


Figure 177. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 13 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

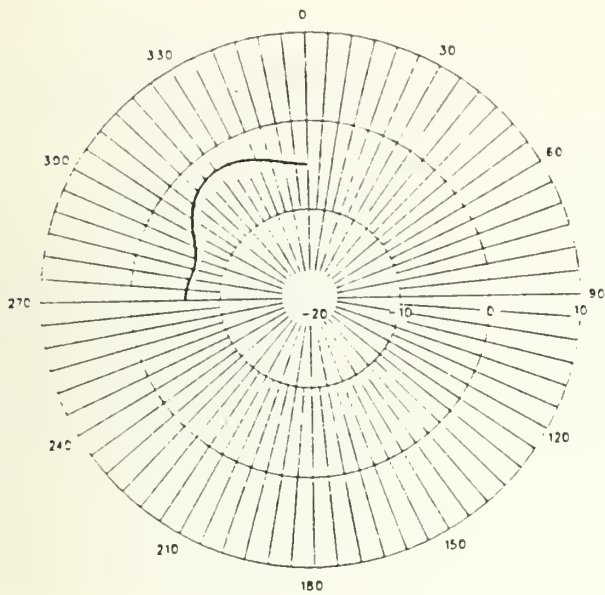

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

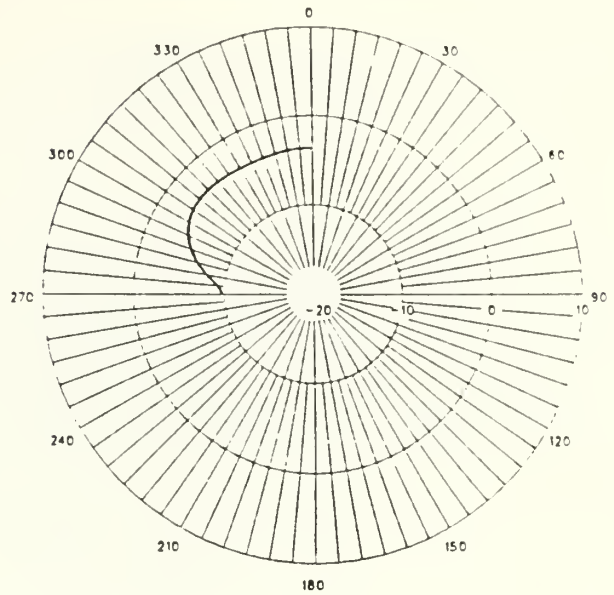

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

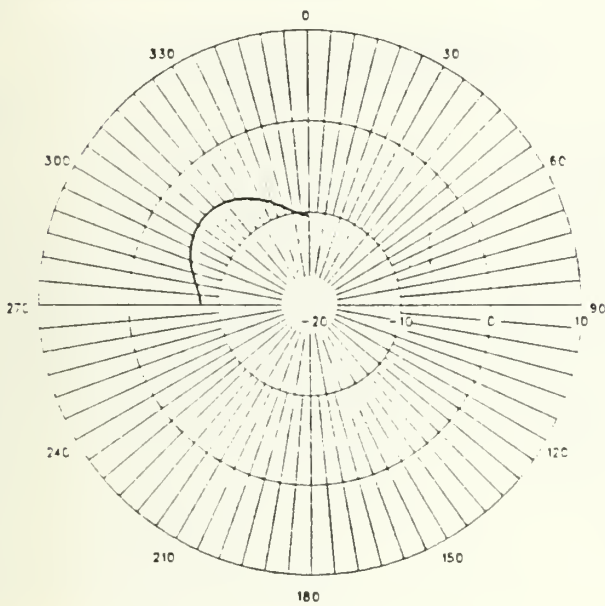

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



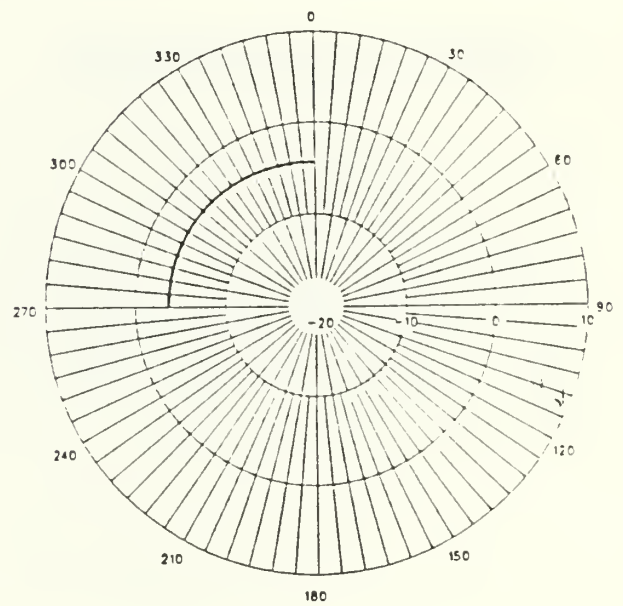


Figure 178. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 13 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

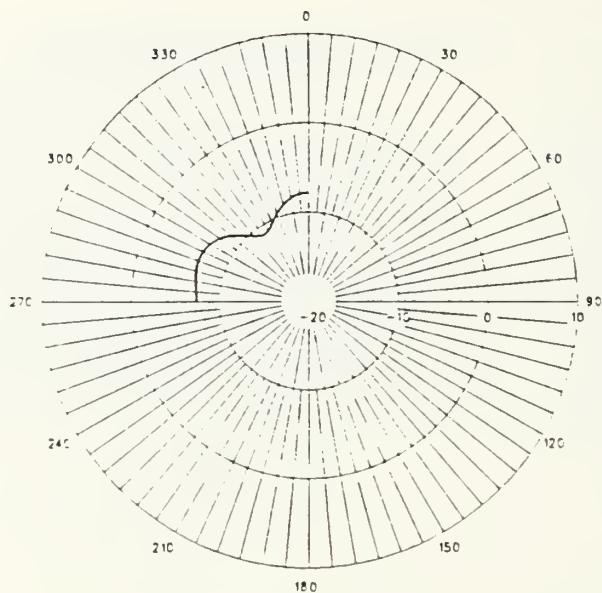

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

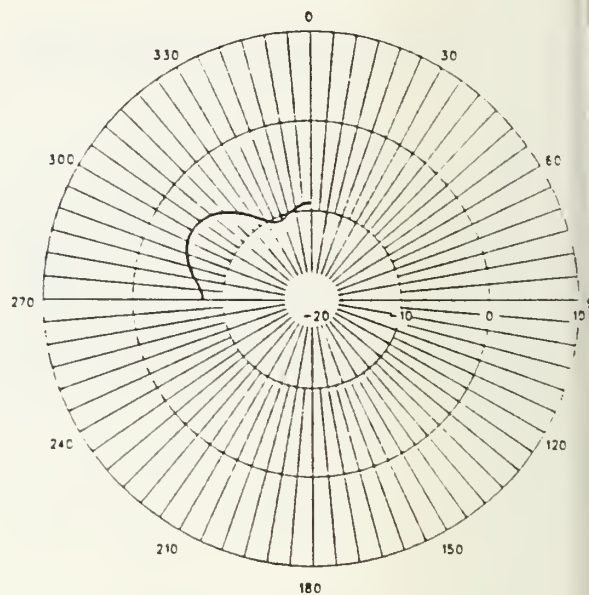

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

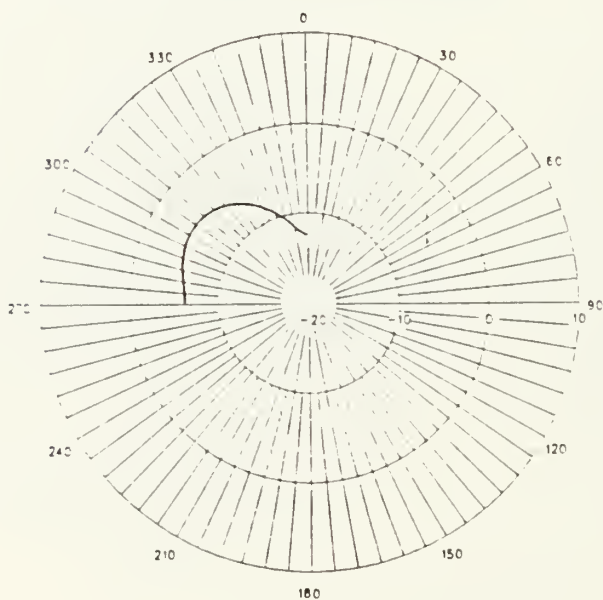

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



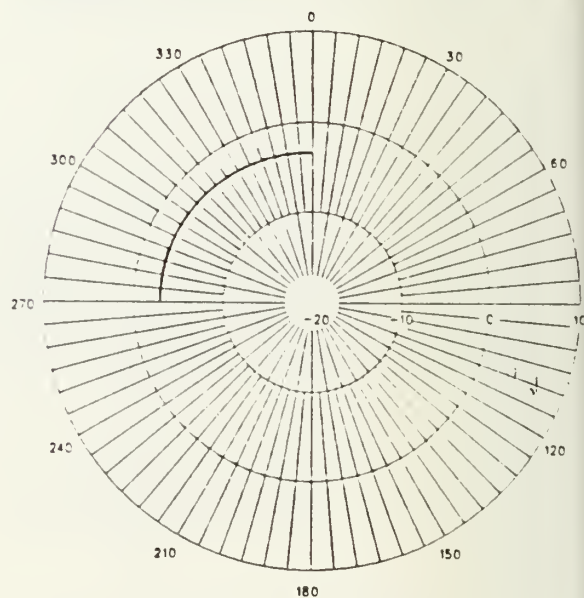


Figure 179. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 13 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

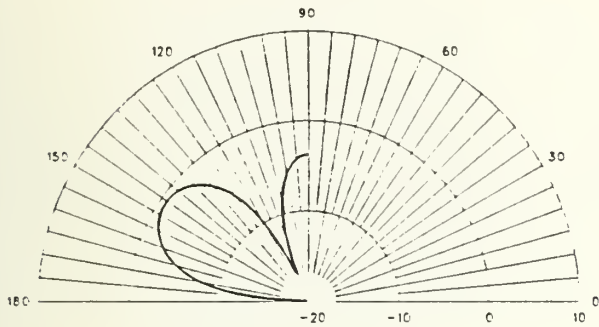

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

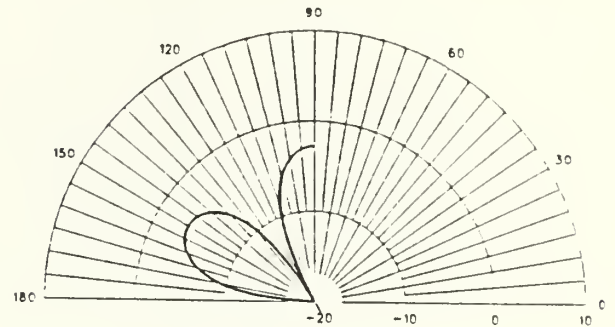

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

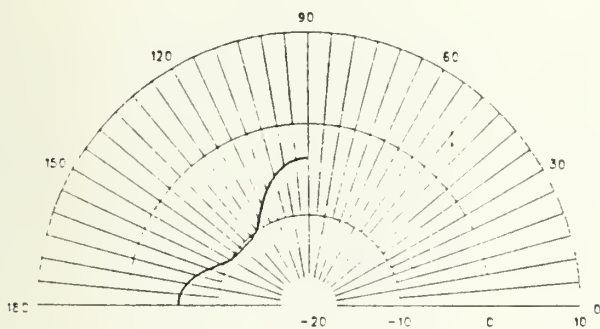

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



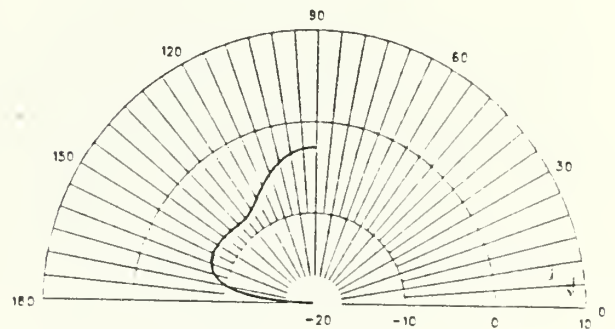


Figure 180. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 14 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FEFF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

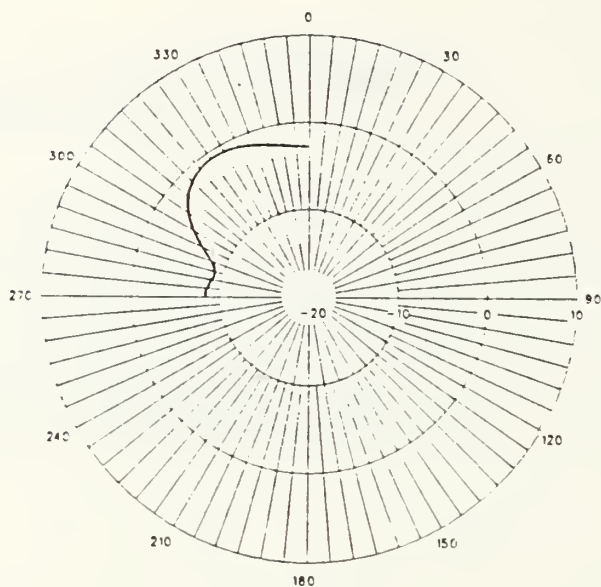

AIR FORCE HI-BAND DOUBLE DELTA / FEFF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

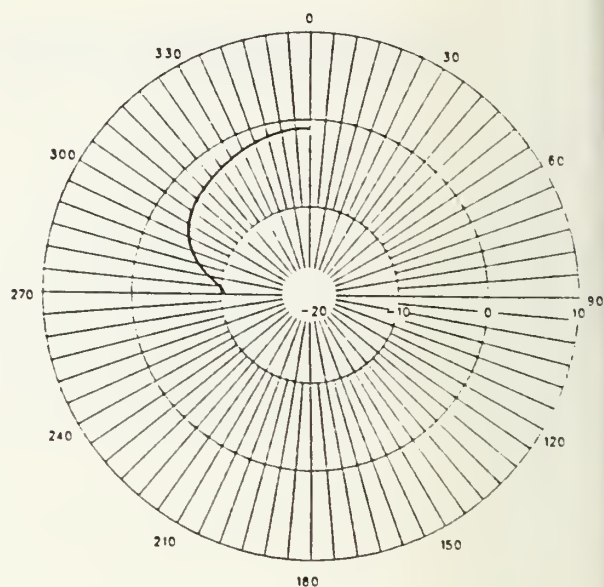

AIR FORCE HI-BAND DOUBLE DELTA / FEFF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

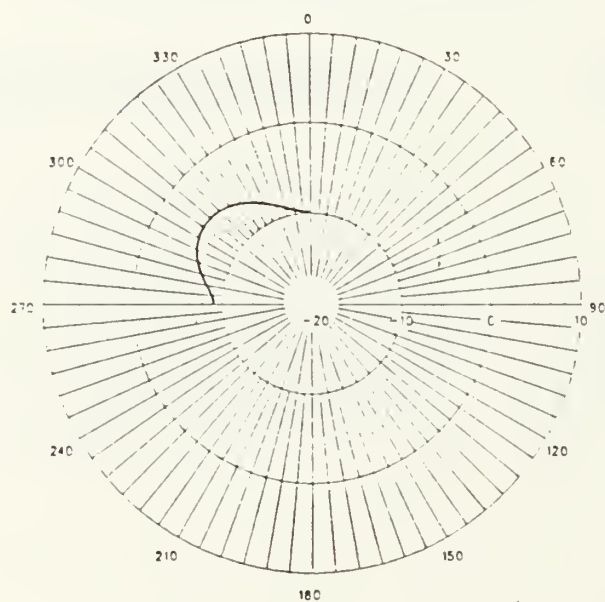

AIR FORCE HI-BAND DOUBLE DELTA / FEFF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



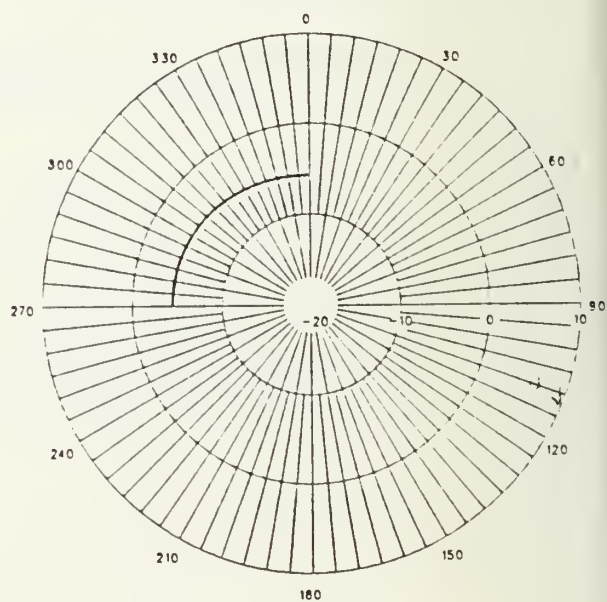


Figure 181. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 14 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

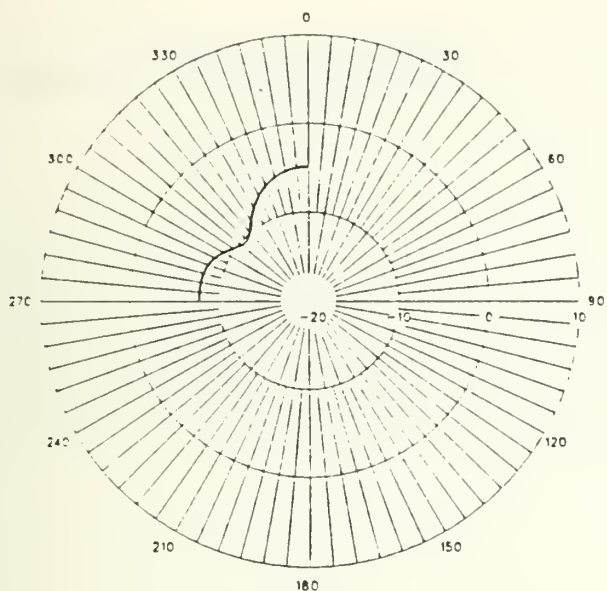

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

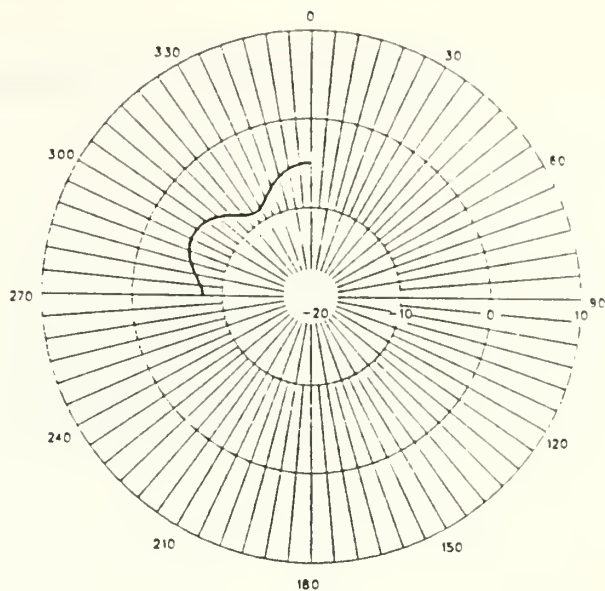

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

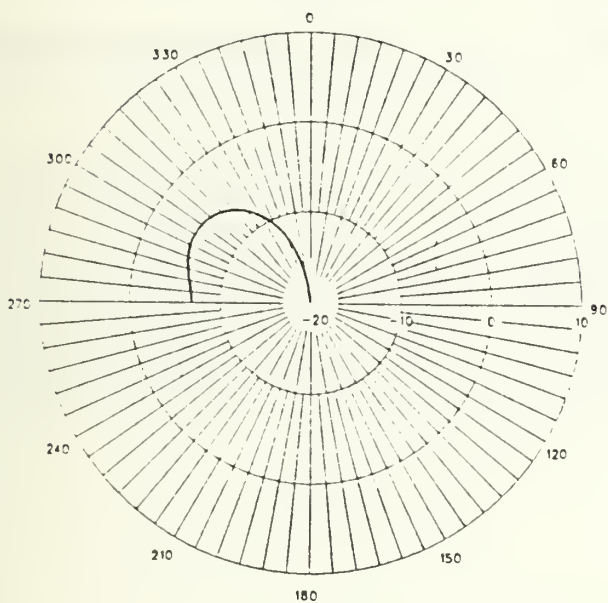

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



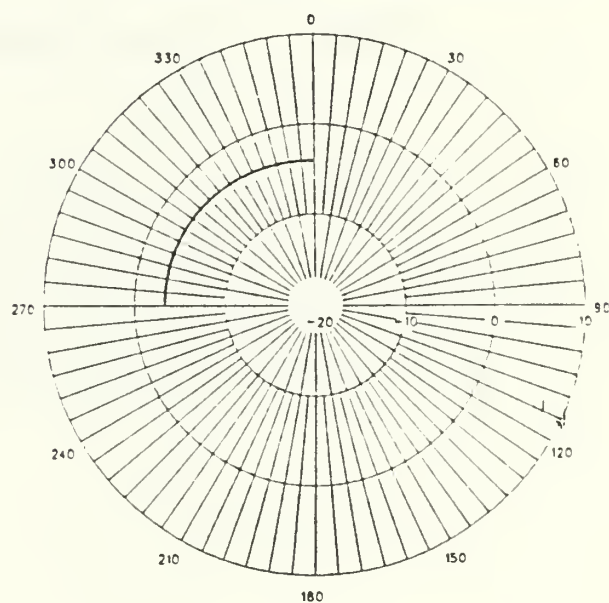


Figure 182. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 14 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

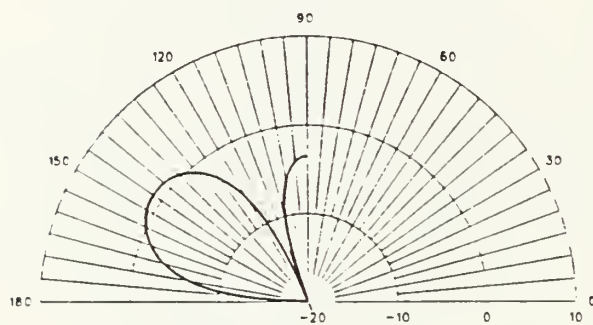

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

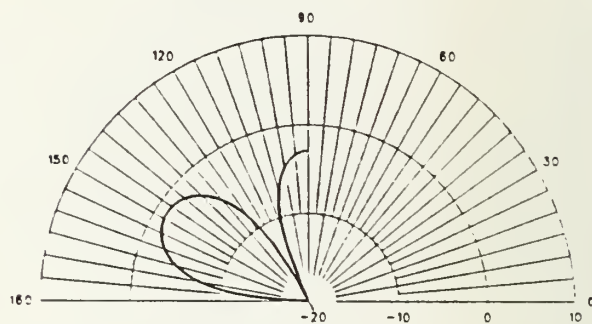

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

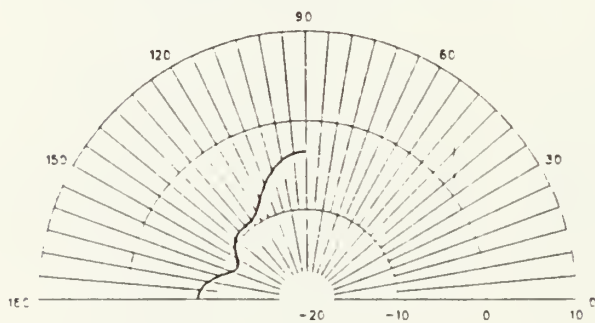

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



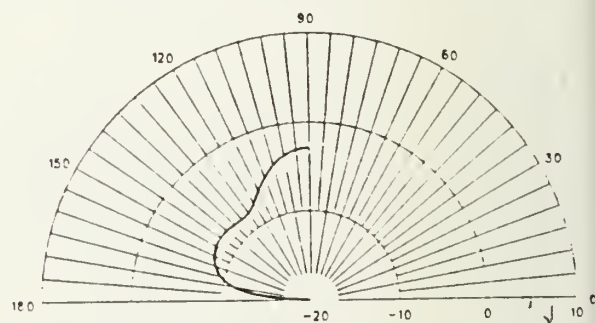


Figure 183. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 15 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

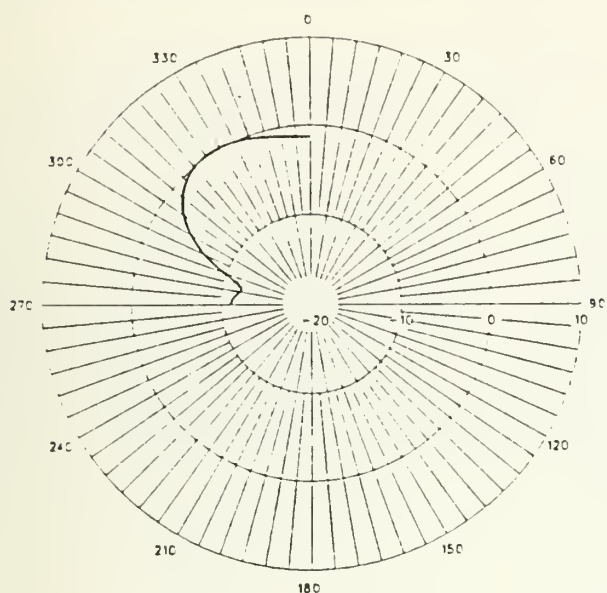

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

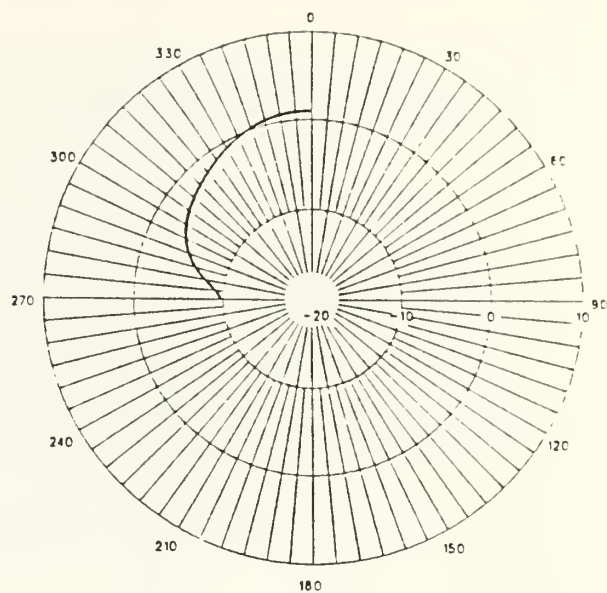

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

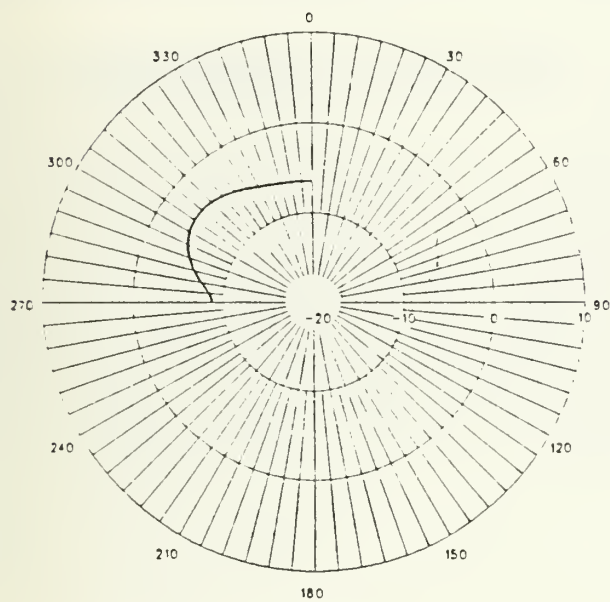

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



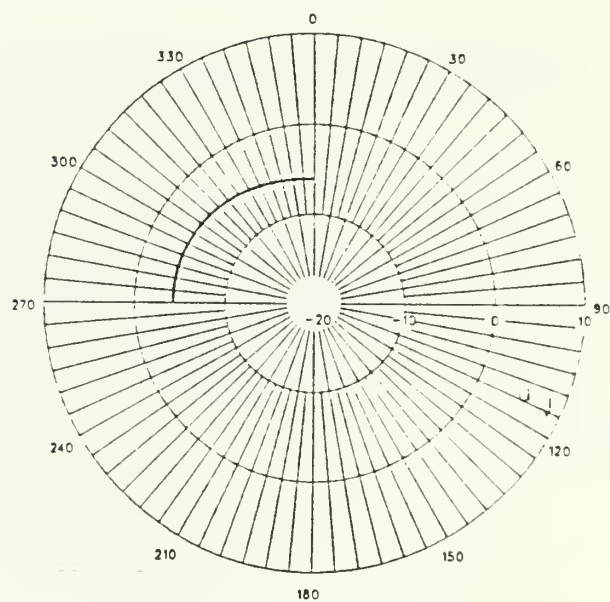


Figure 184. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 15 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

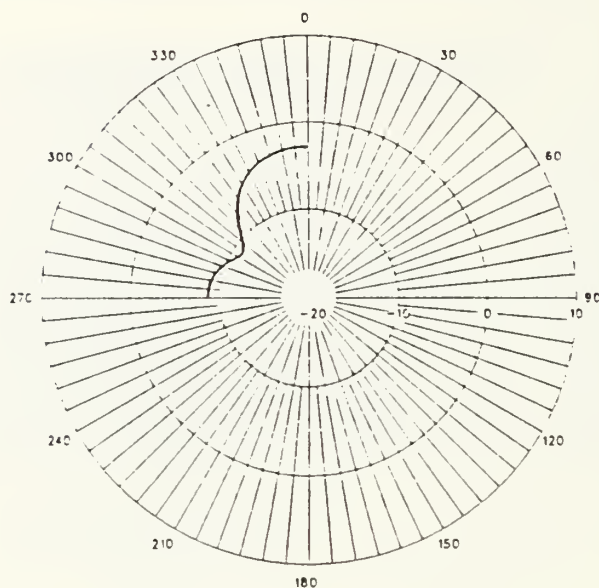

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

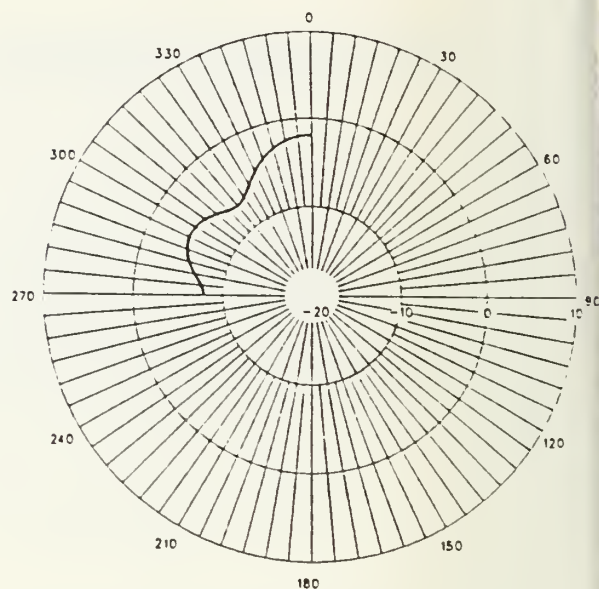

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

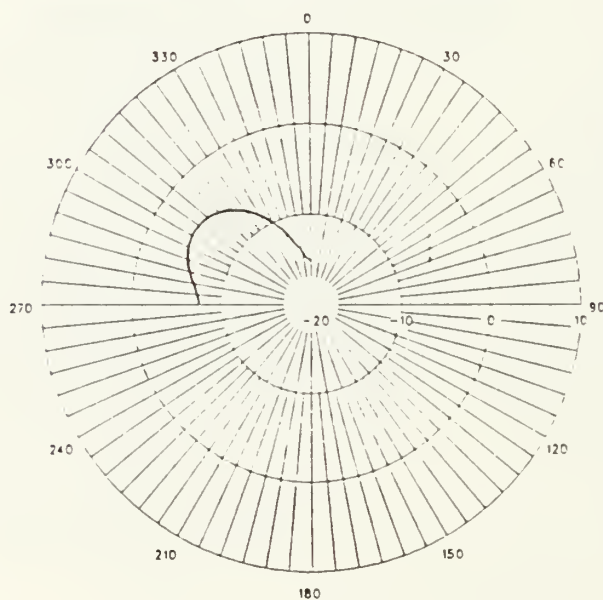

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



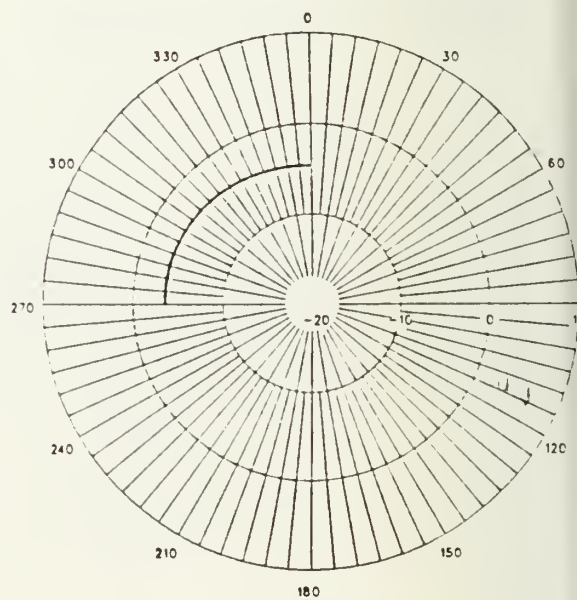


Figure 185. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 15 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

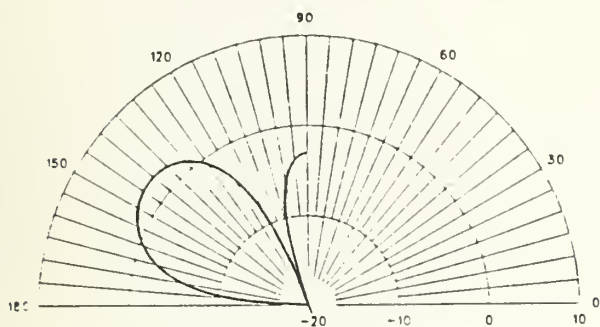

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

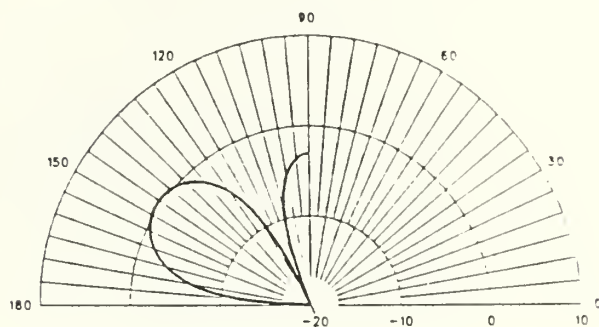

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

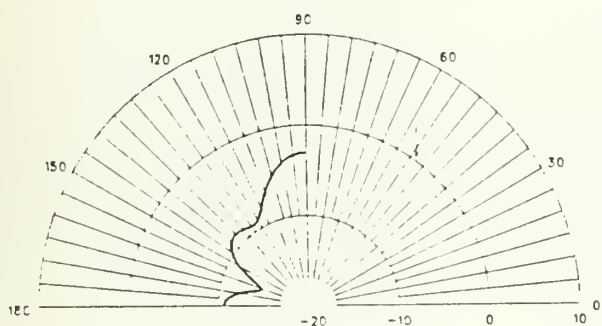

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



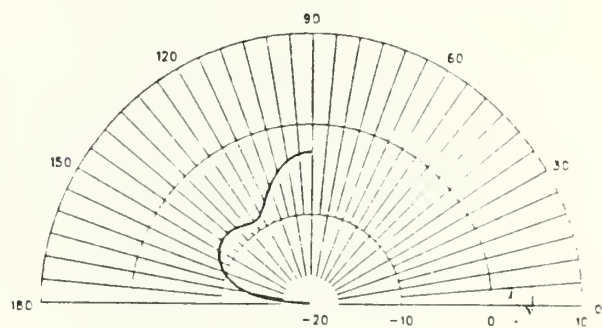


Figure 186. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 16 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

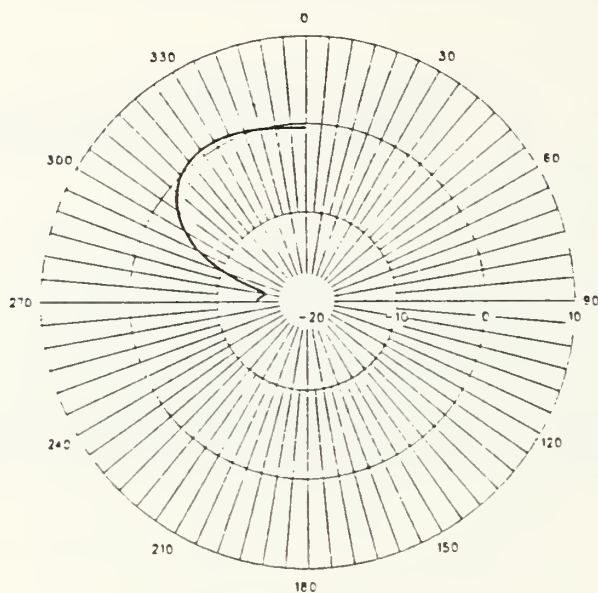

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

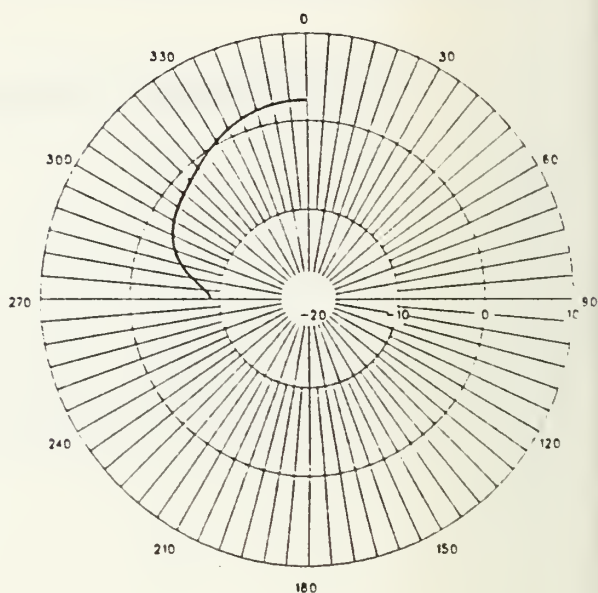

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

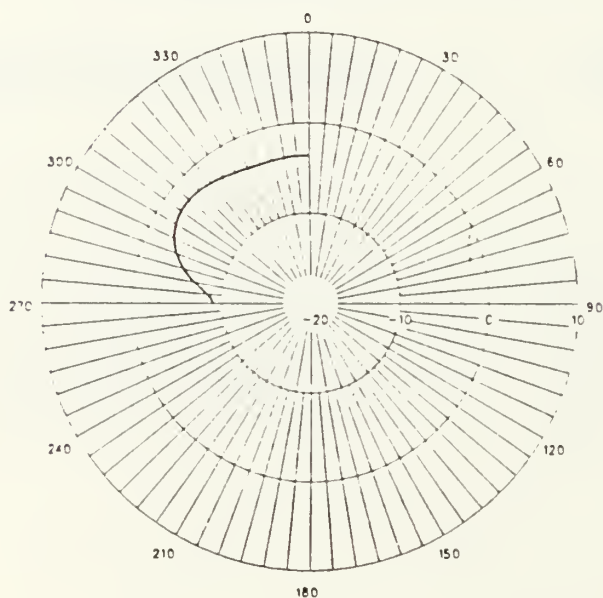

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



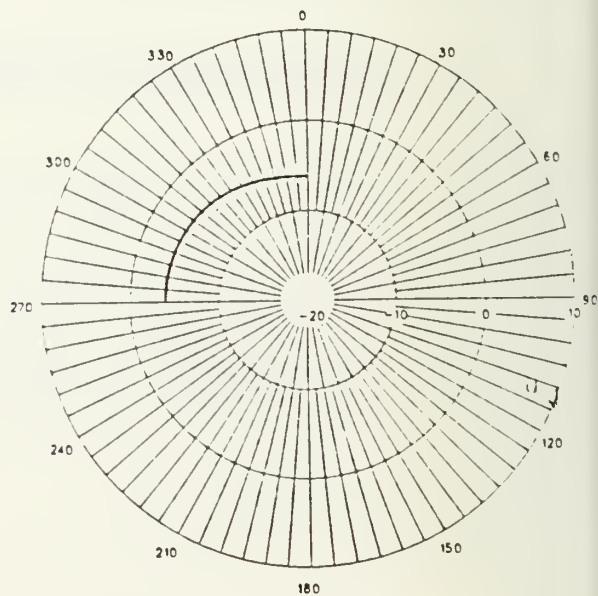


Figure 187. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 16 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

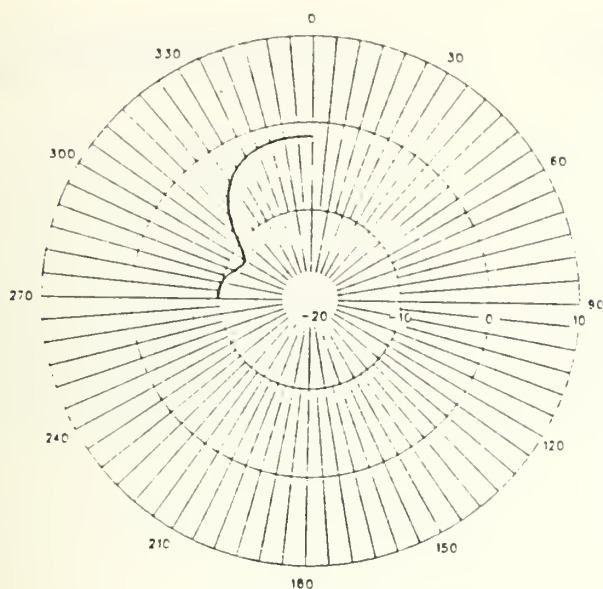

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

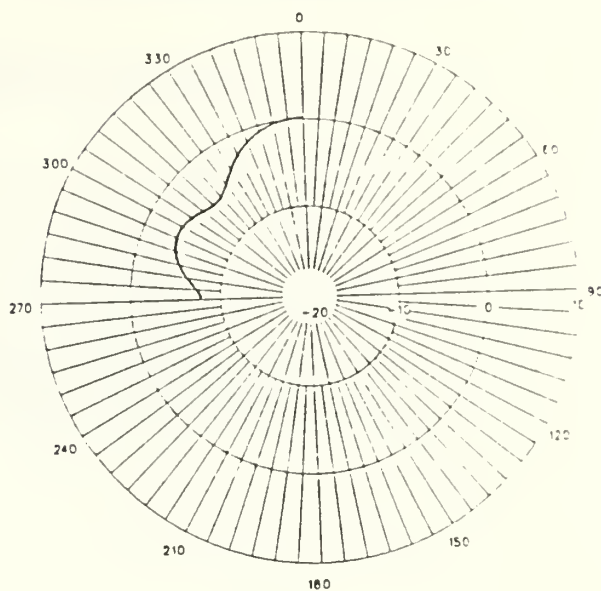

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

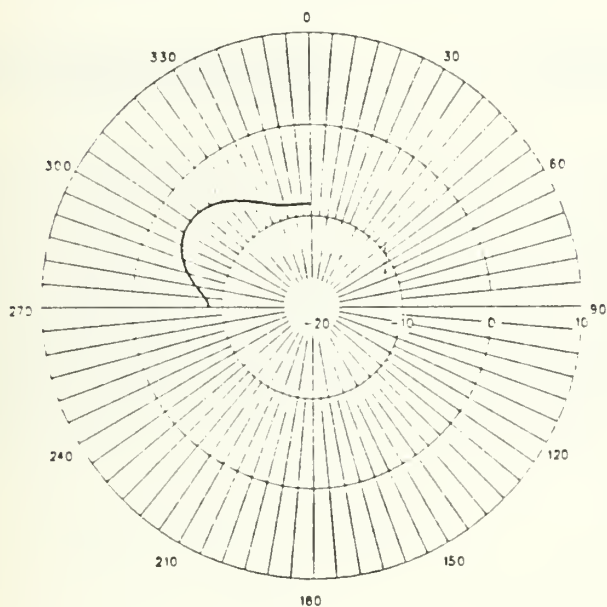

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



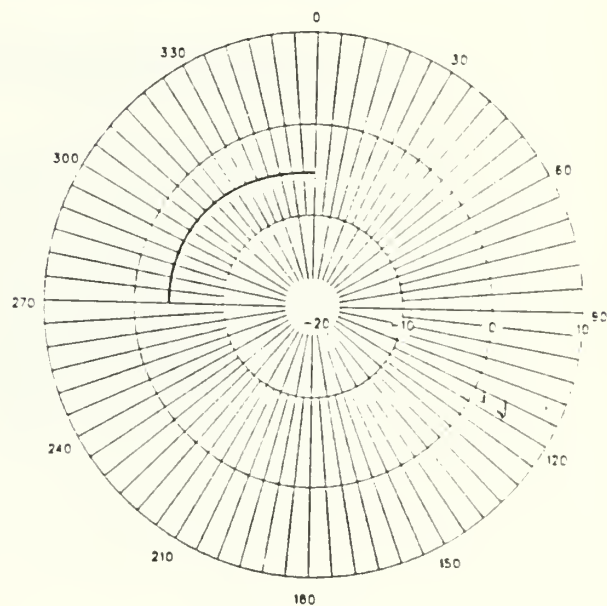


Figure 188. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 16 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

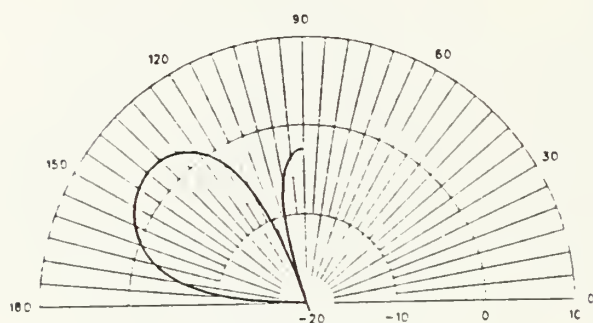

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

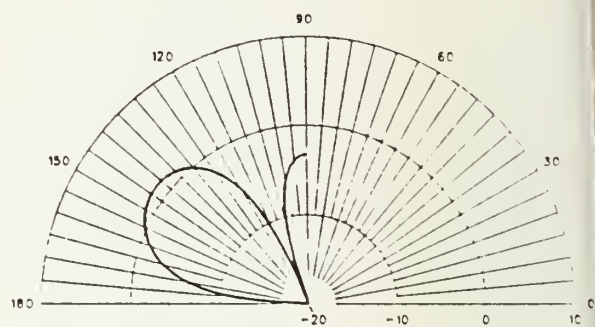

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

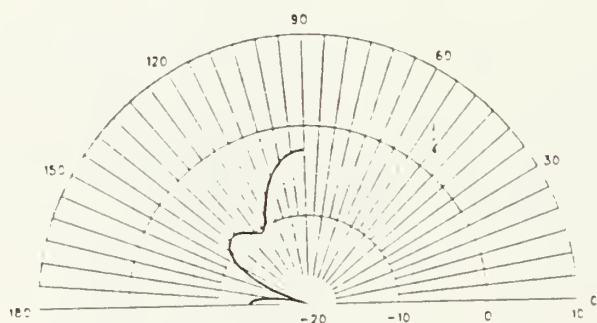

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



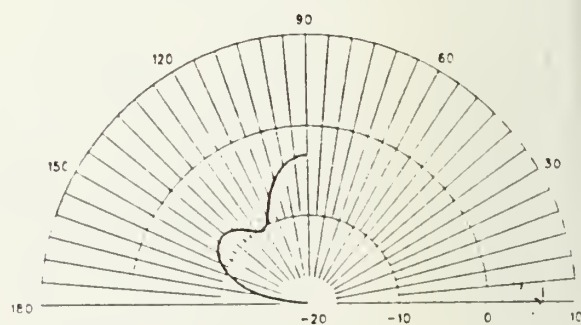


Figure 189. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 17 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

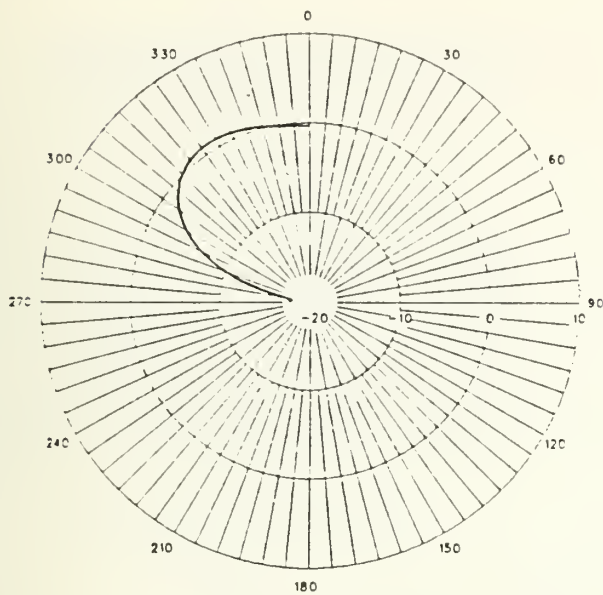

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

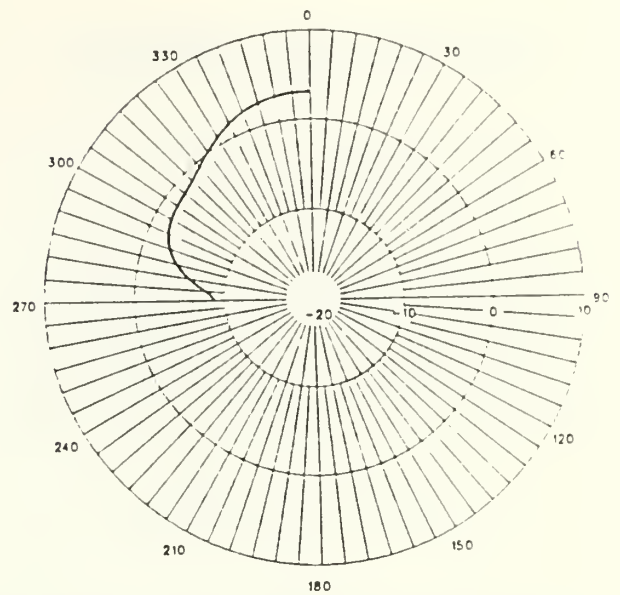

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

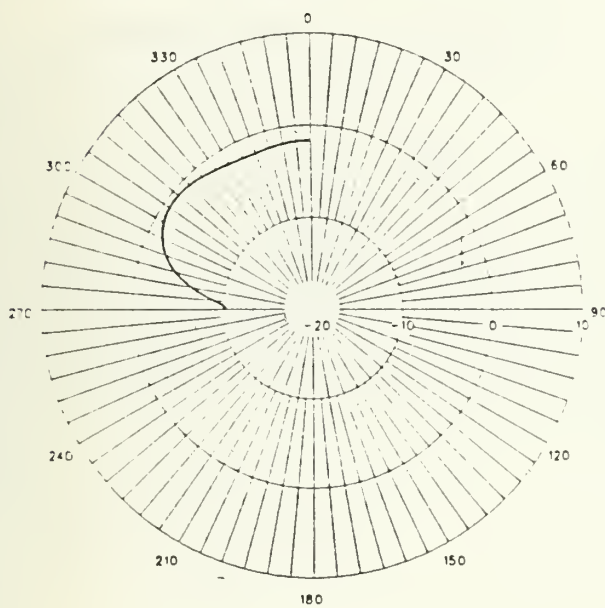

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



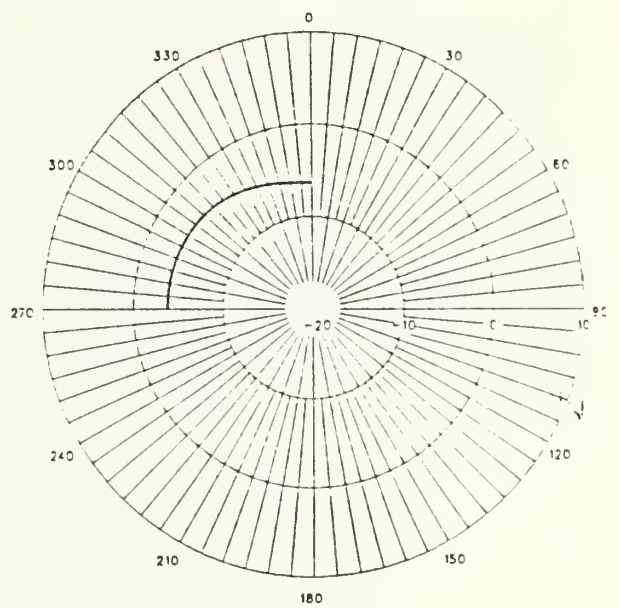


Figure 190. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 17 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

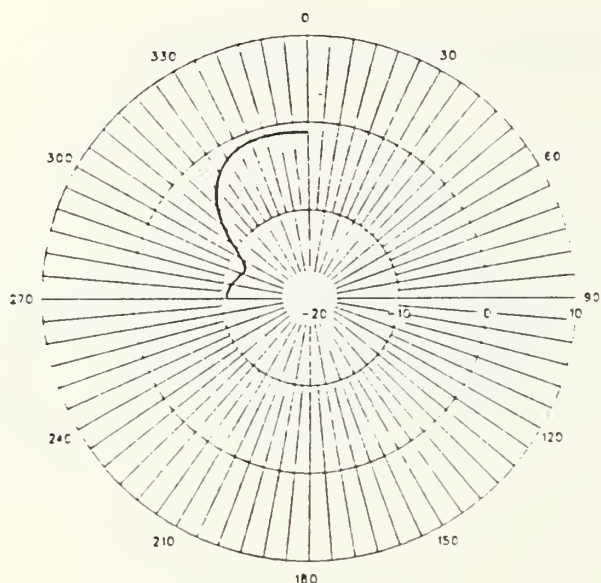

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

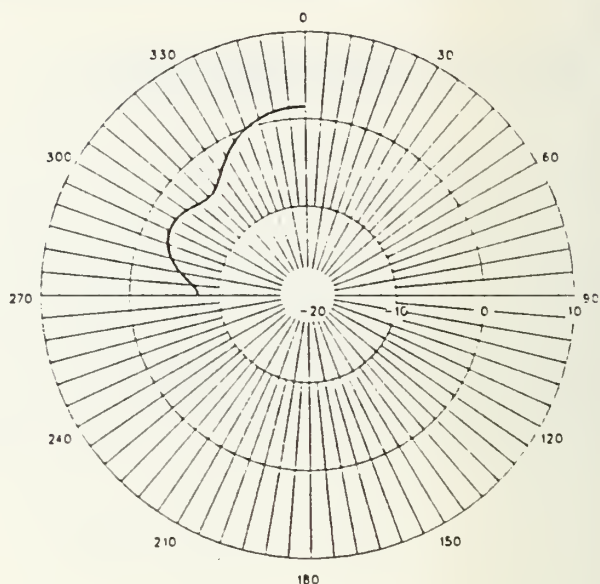

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

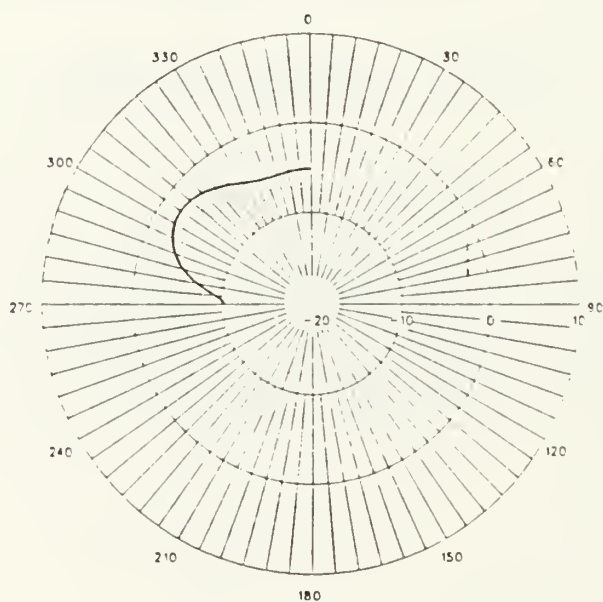

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



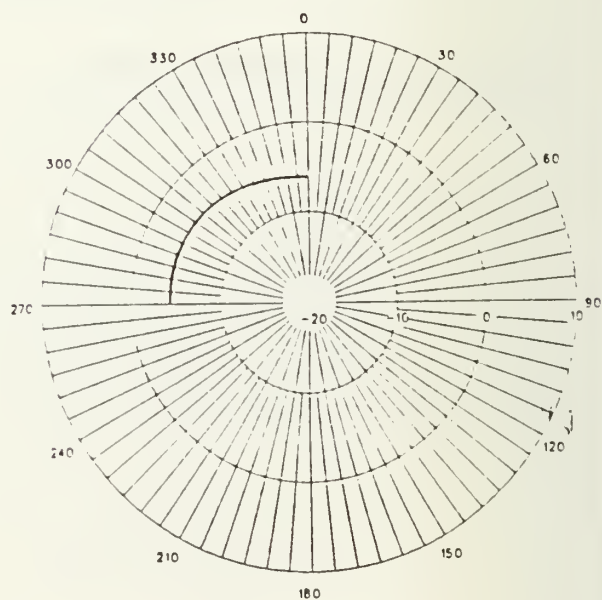


Figure 191. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 17 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

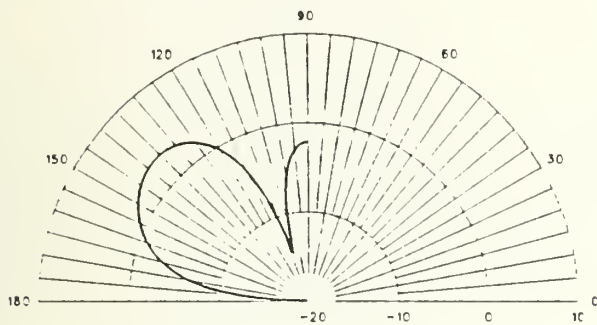

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

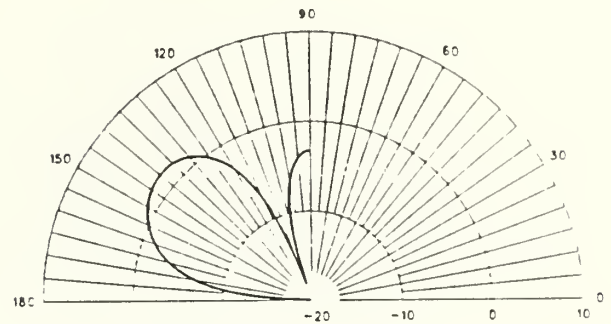

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

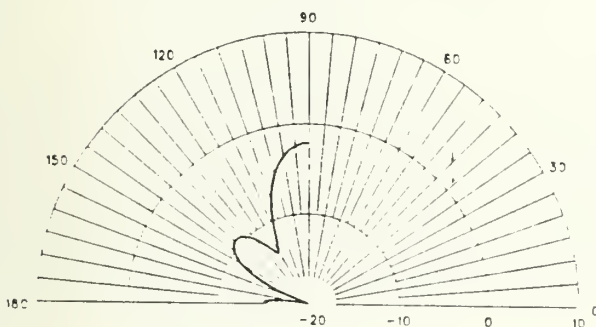

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



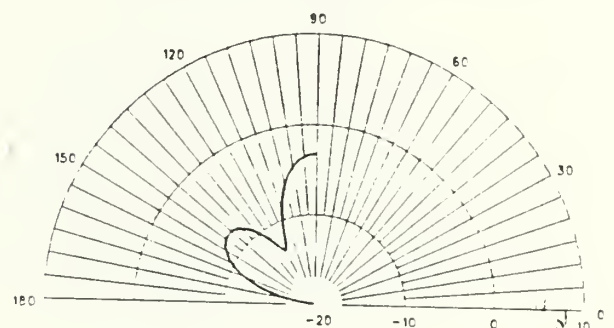


Figure 192. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 18 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

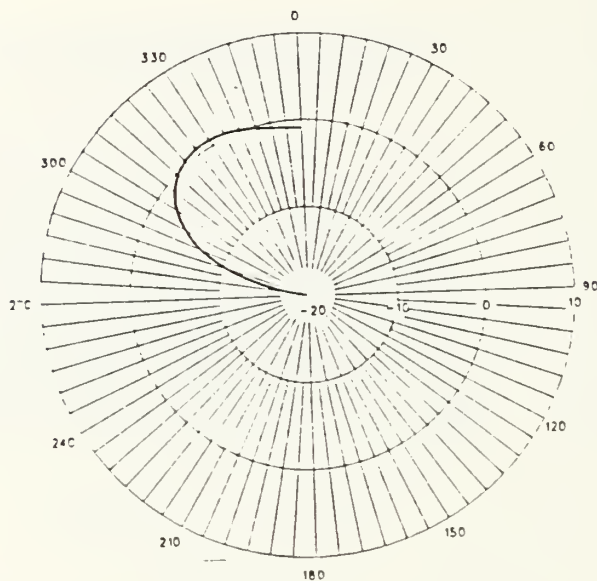

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

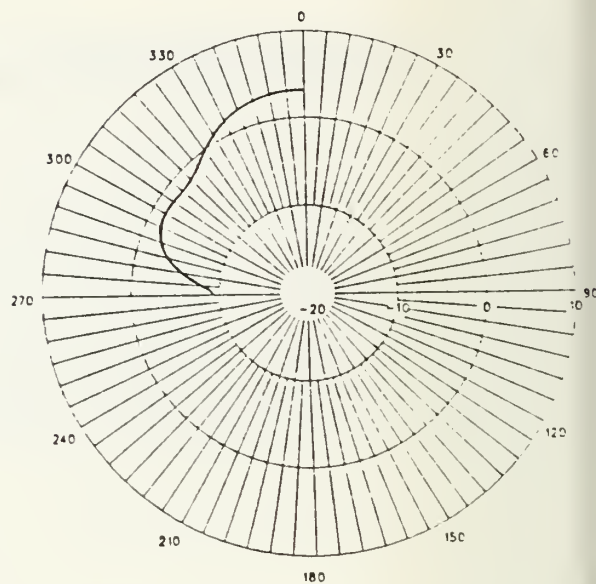

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

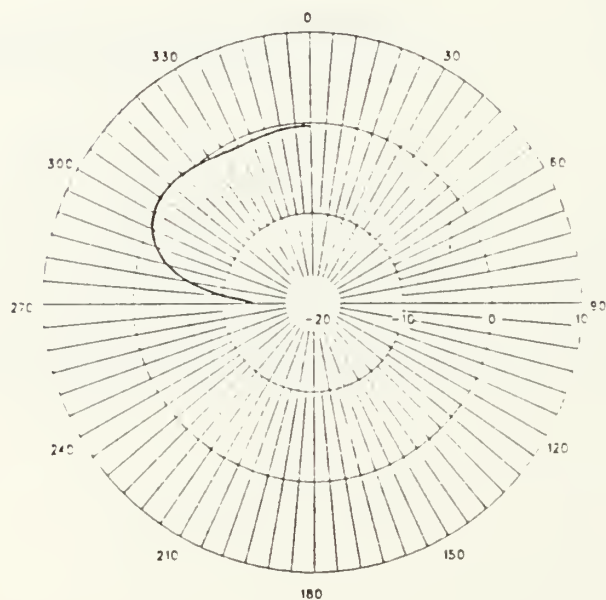

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



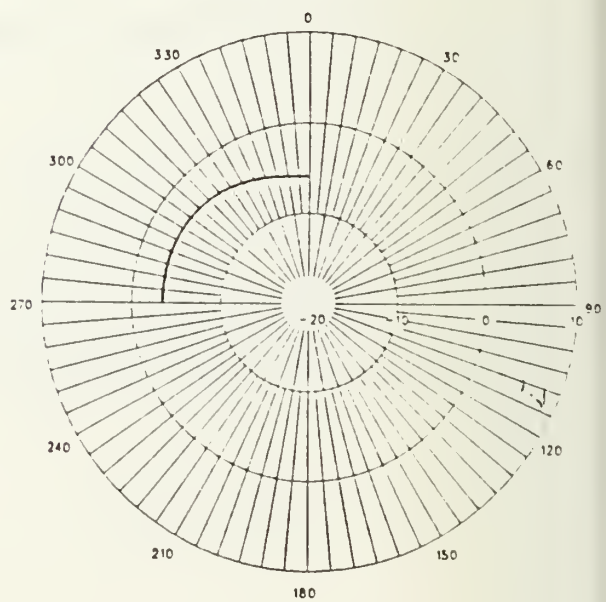


Figure 193. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 18 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

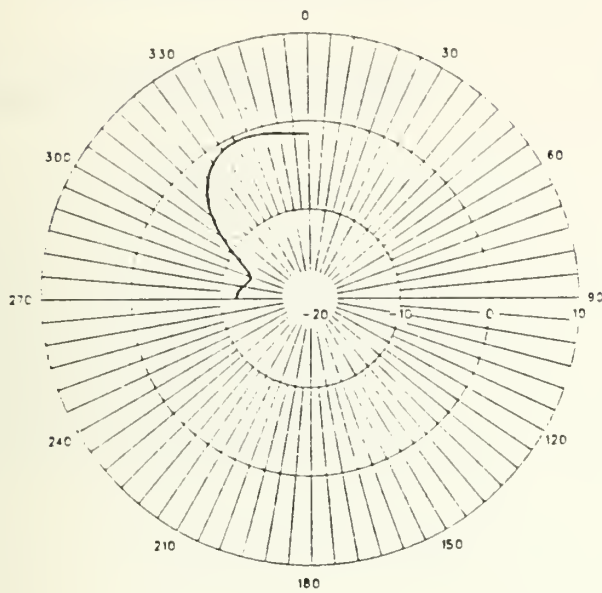

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

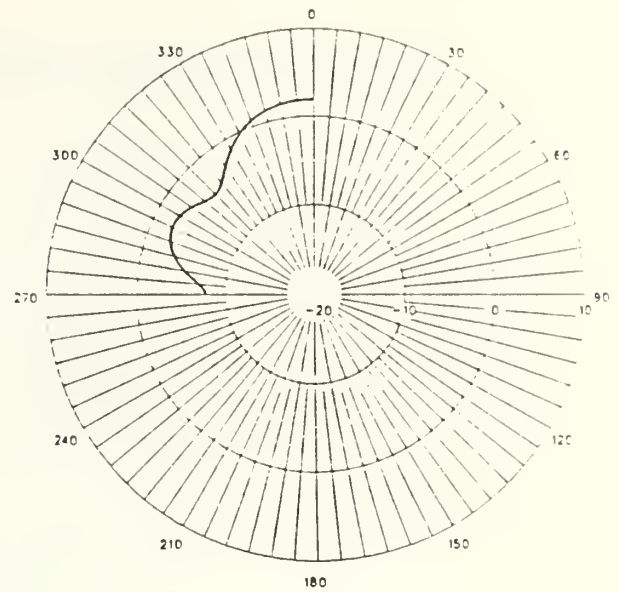

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

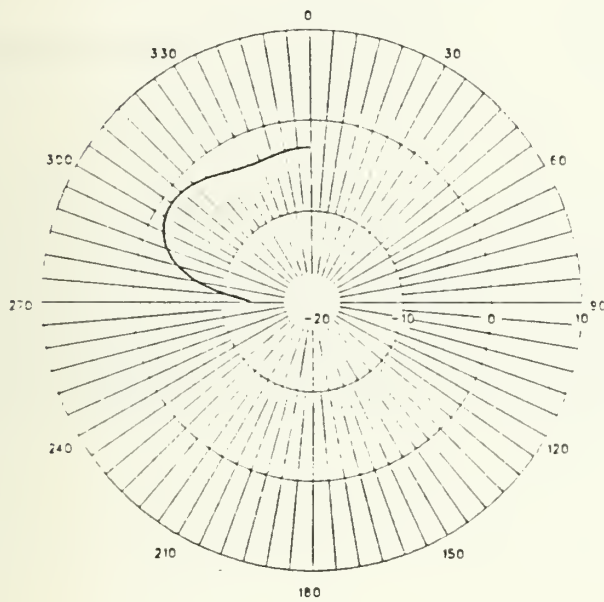

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



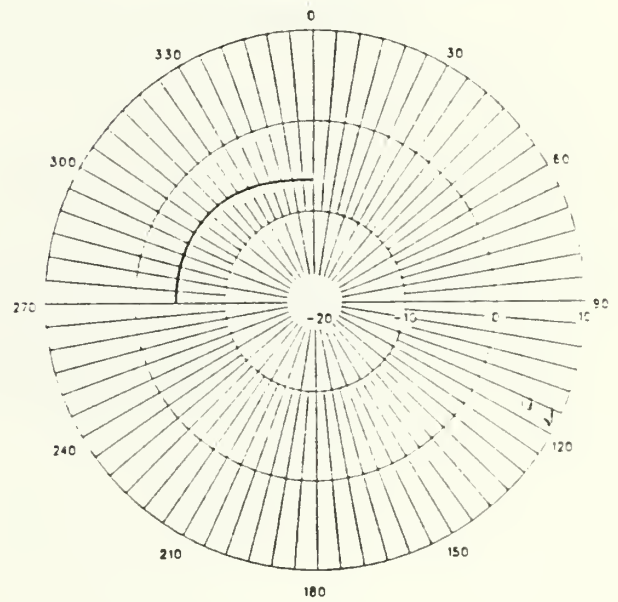


Figure 194. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 18 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

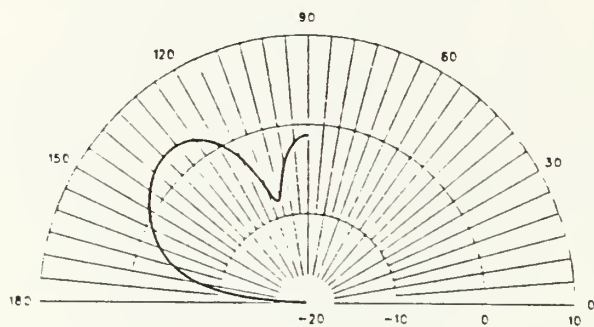

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

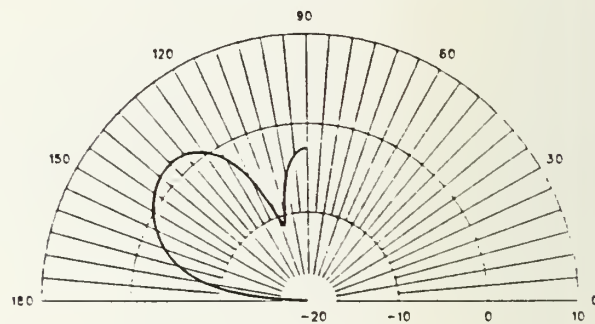

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

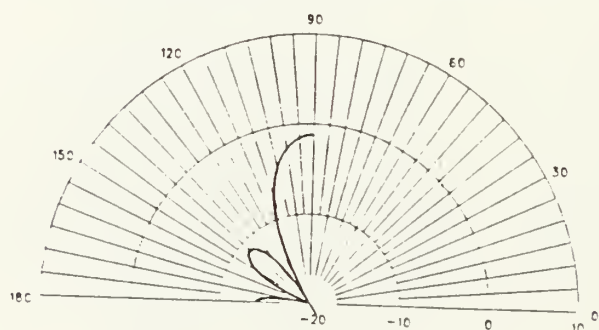

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



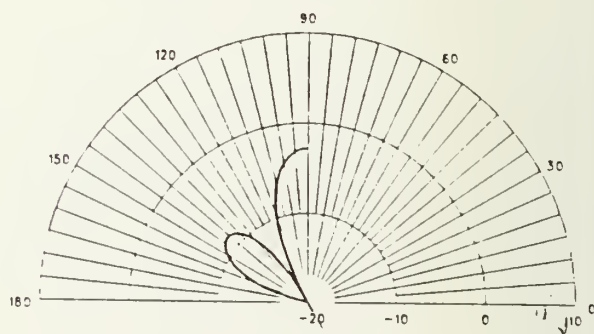


Figure 195. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 19 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

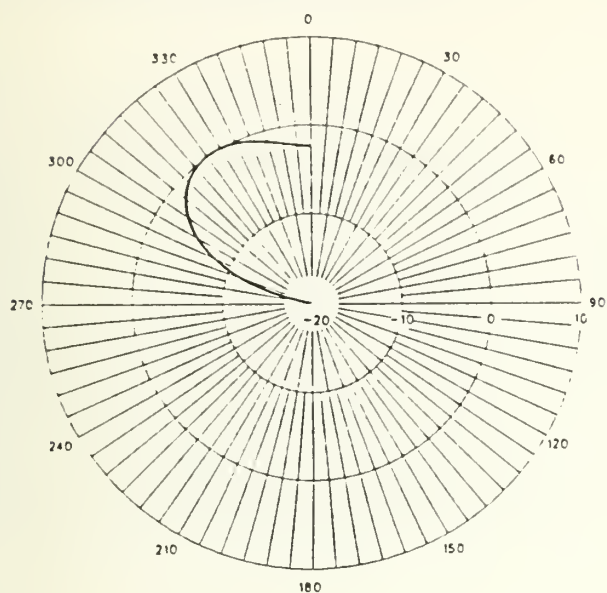

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

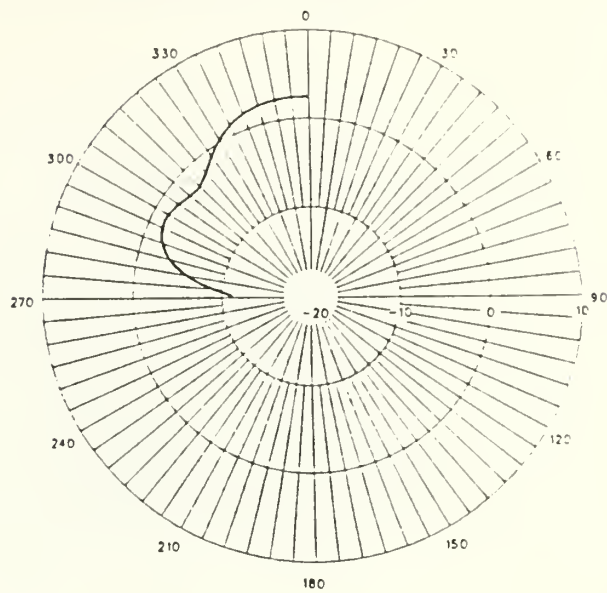

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

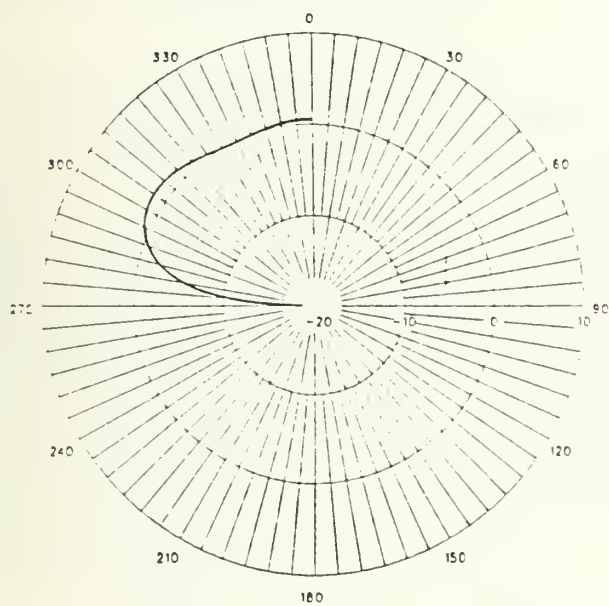

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



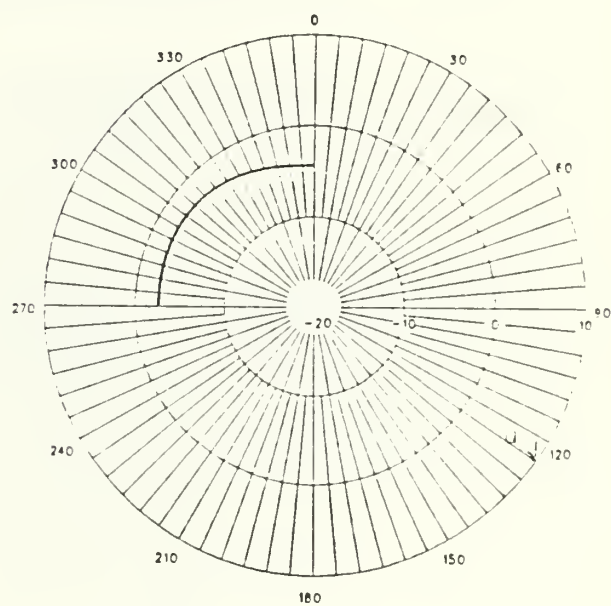


Figure 196. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 19 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

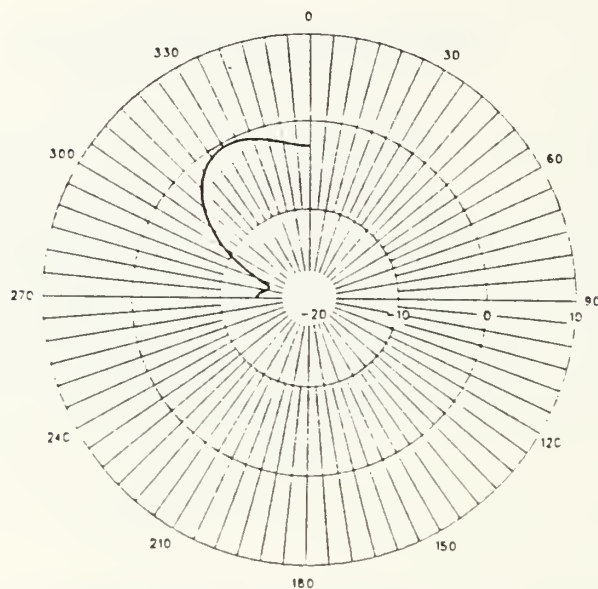

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

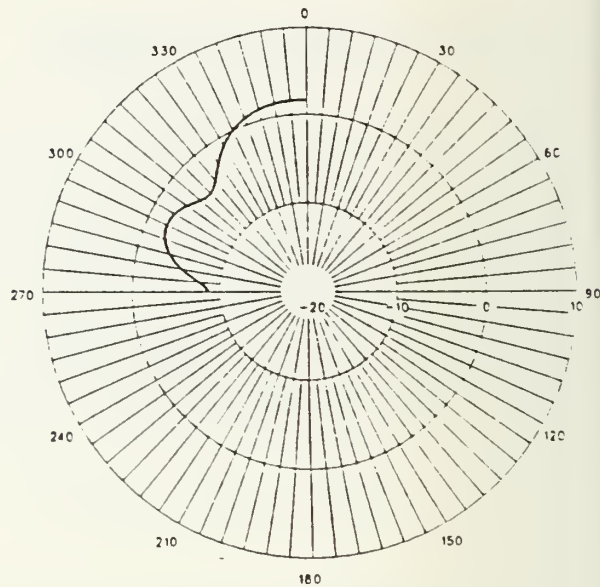

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

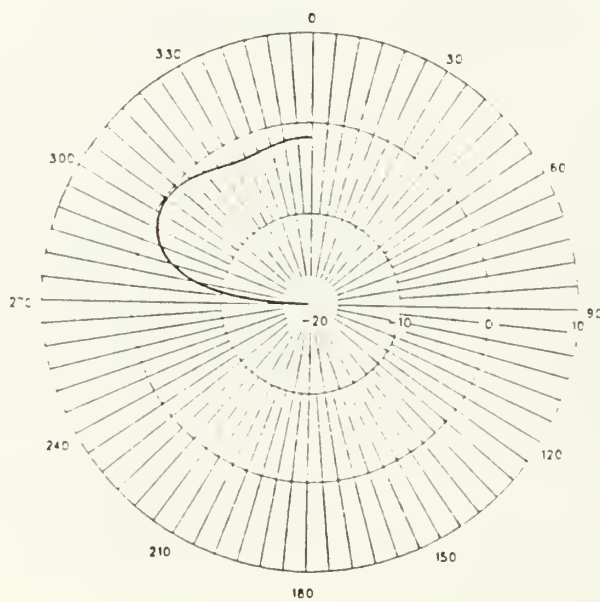

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



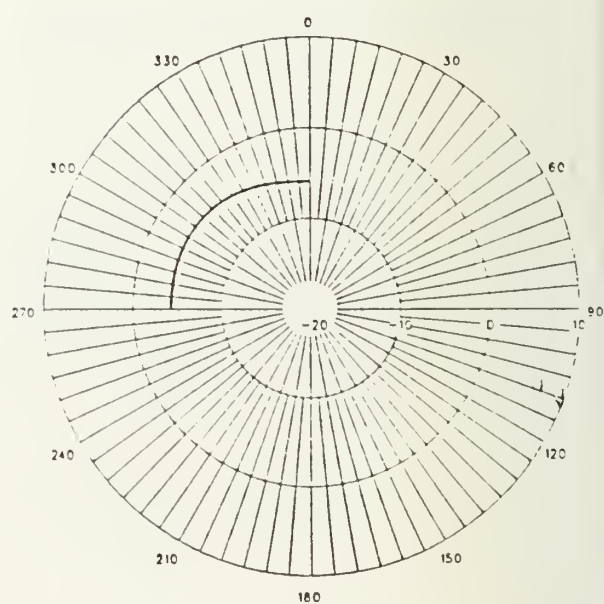


Figure 197. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 19 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

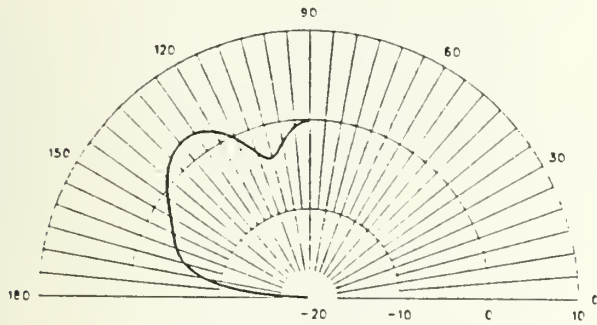

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

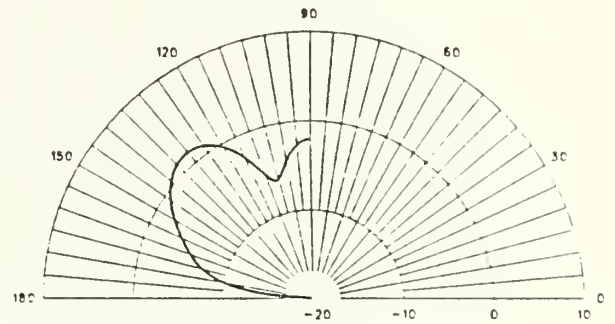

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

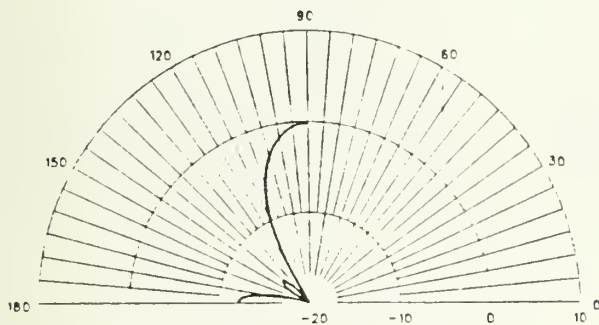

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



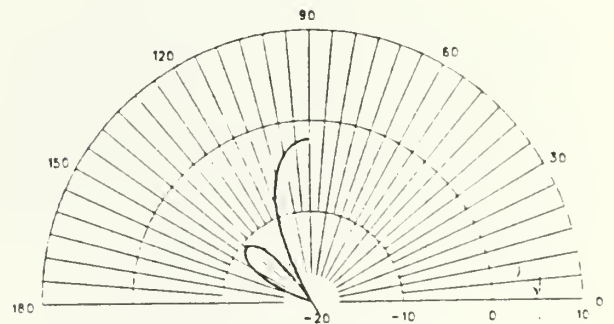


Figure 198. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 20 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 20

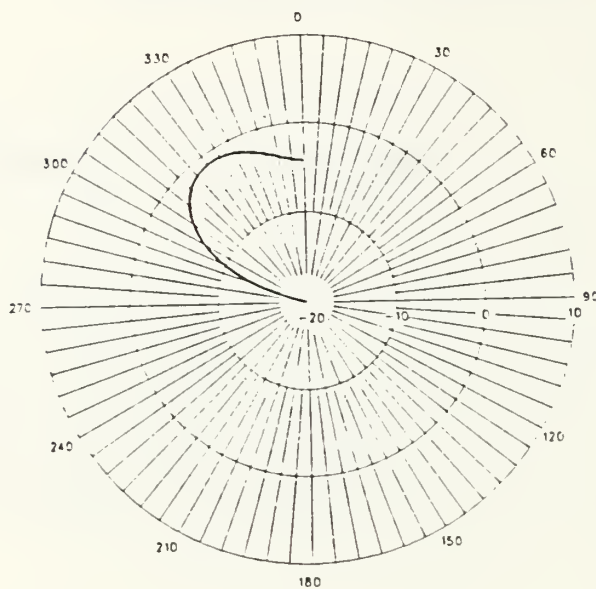

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 40

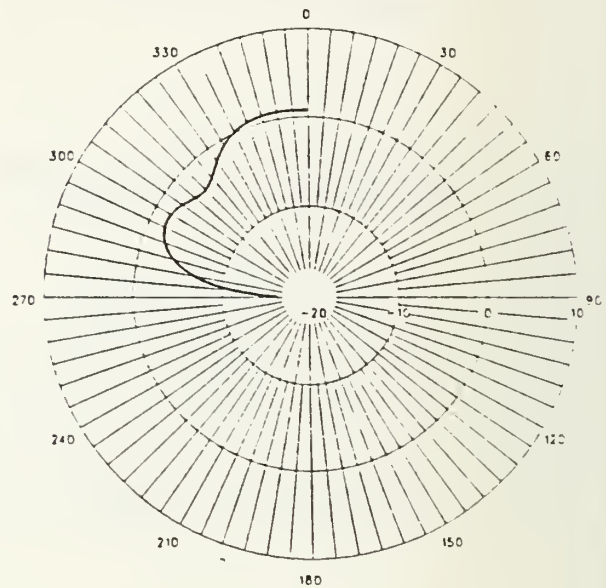

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 60

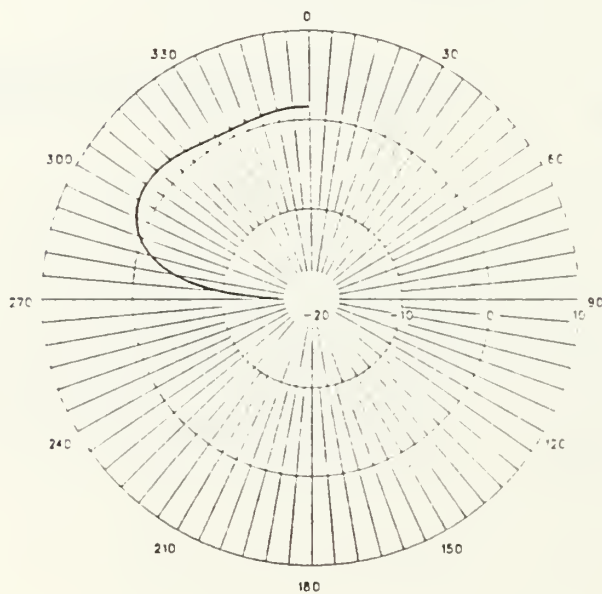

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 20 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 80



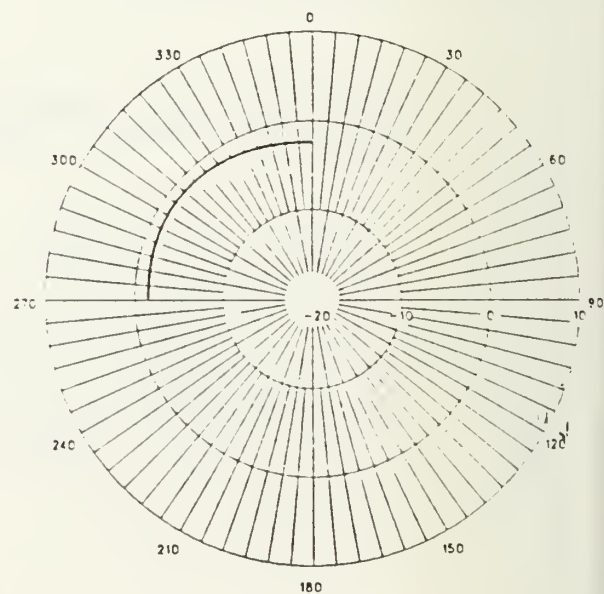


Figure 199. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 20 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

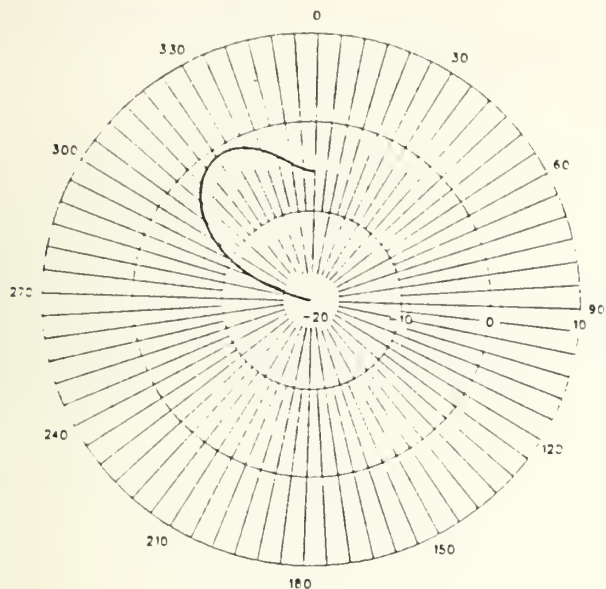

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

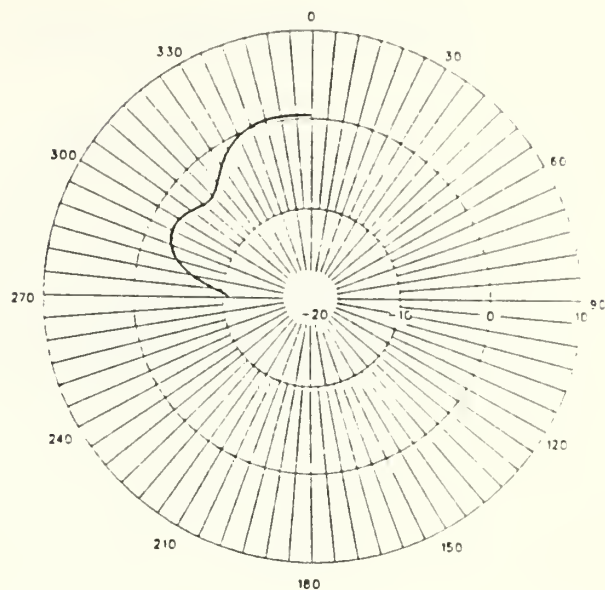

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

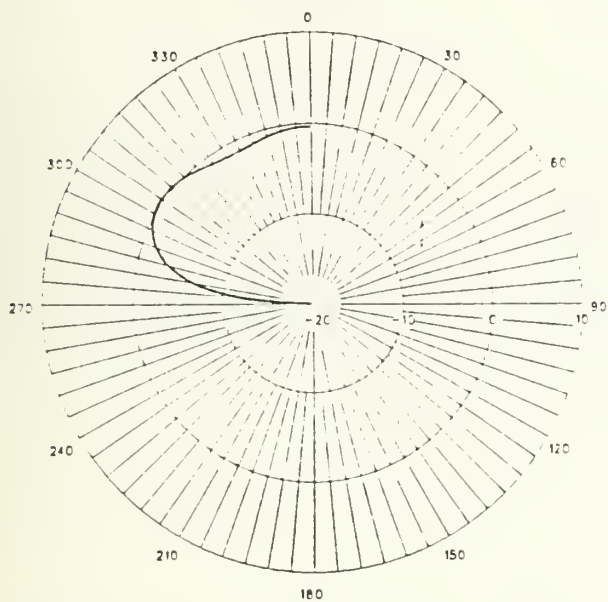

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



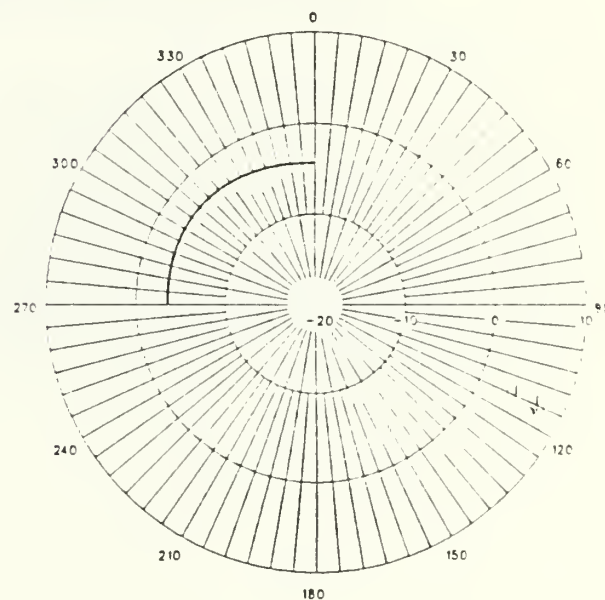


Figure 200. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 20 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

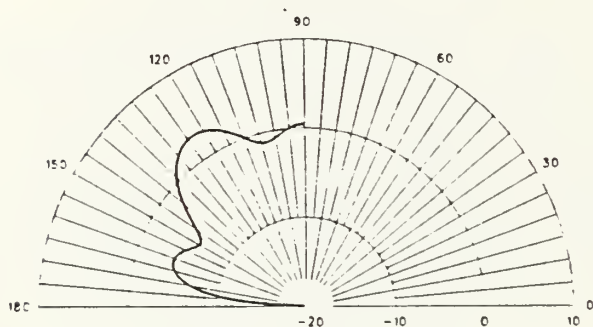

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

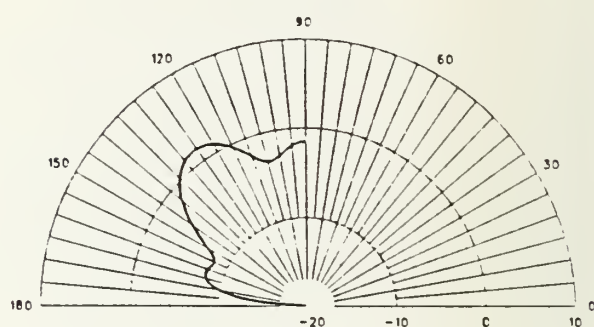

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

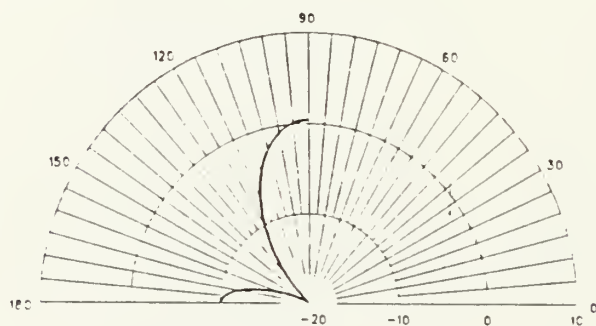

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



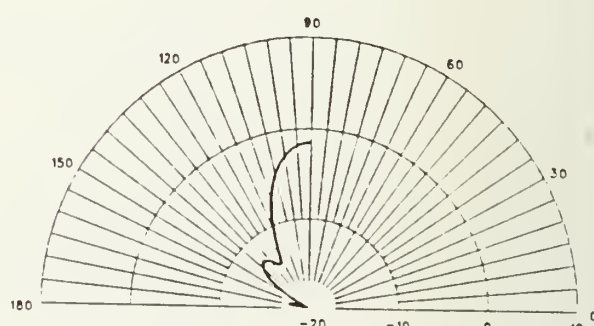


Figure 201. Elevation patterns of the Air Force highband DD antenna over perfect ground and fair ground at 21 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

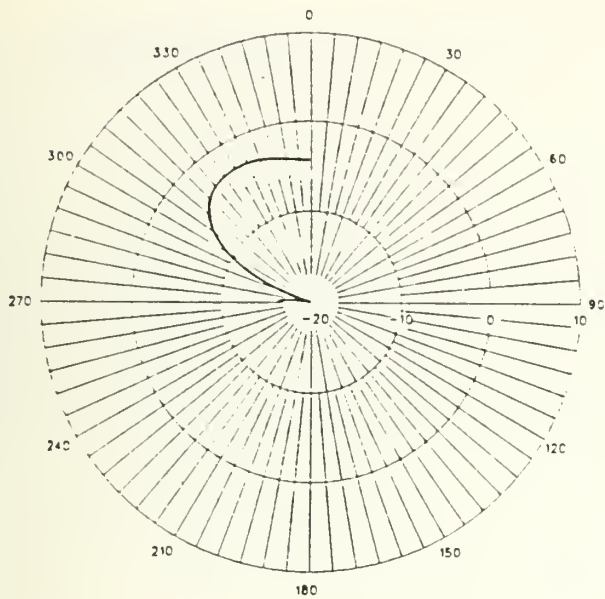

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

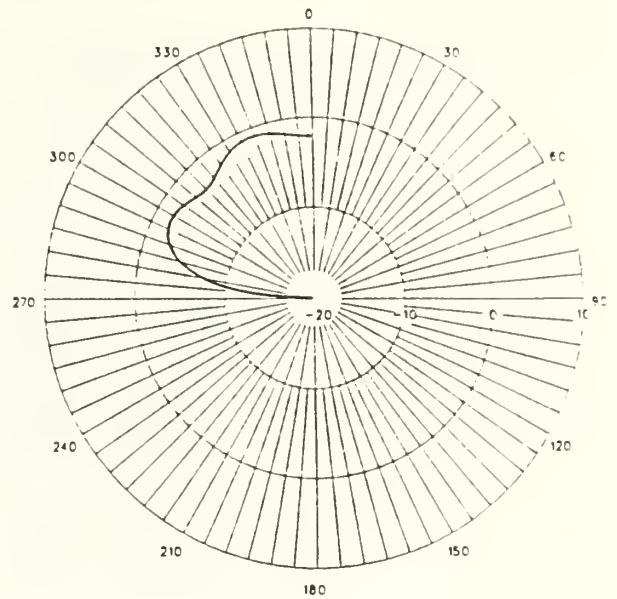

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

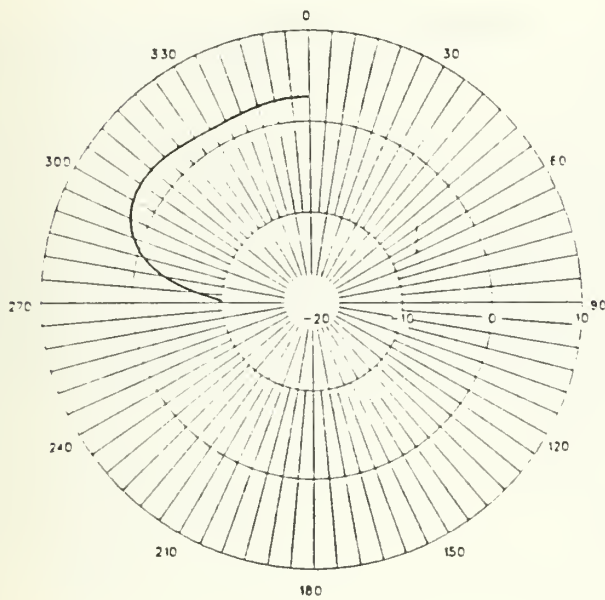

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



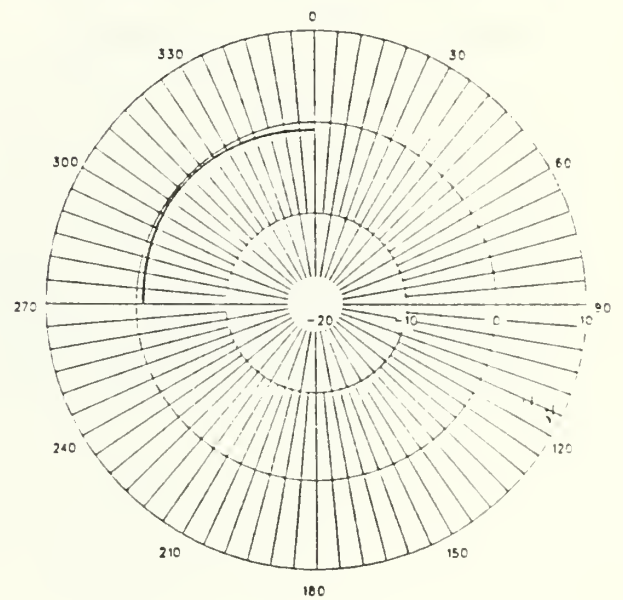


Figure 202. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 21 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

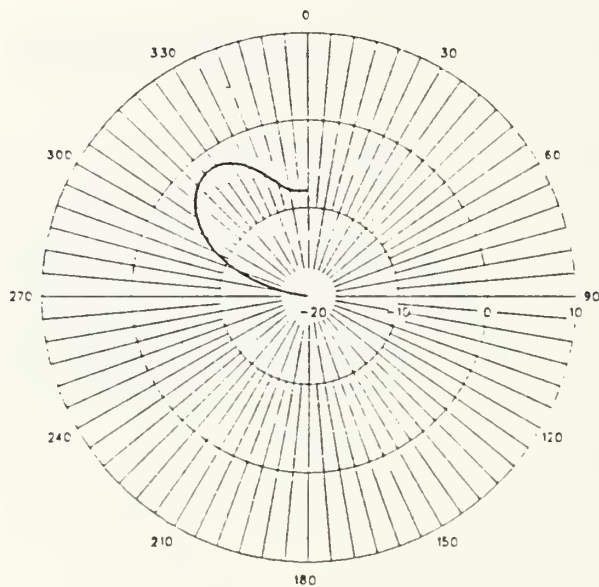

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

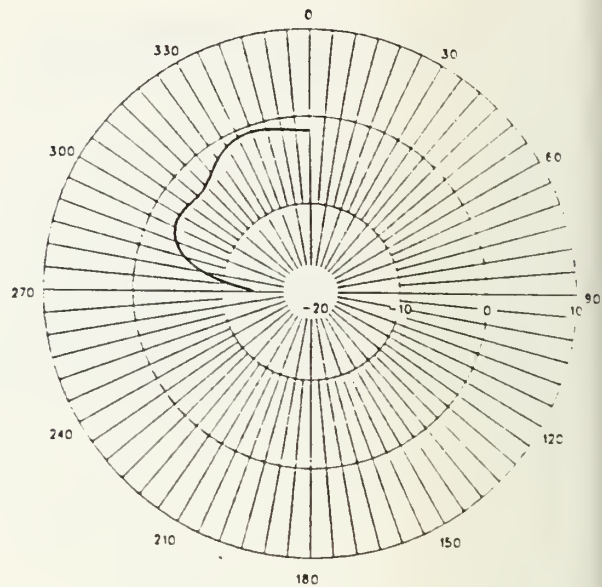

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

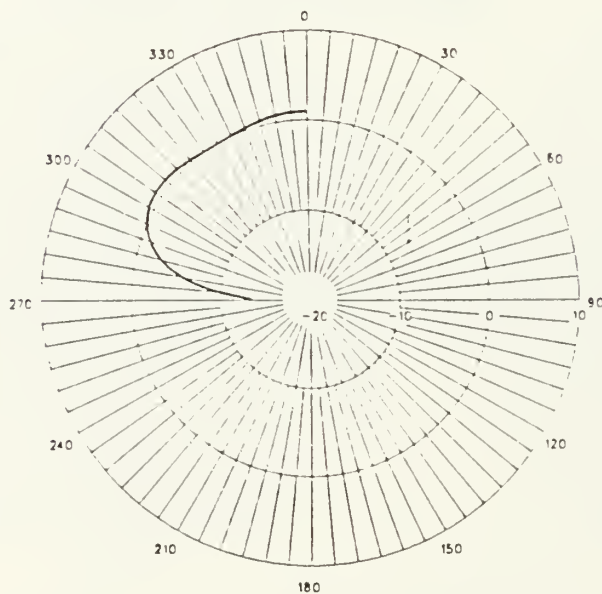

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



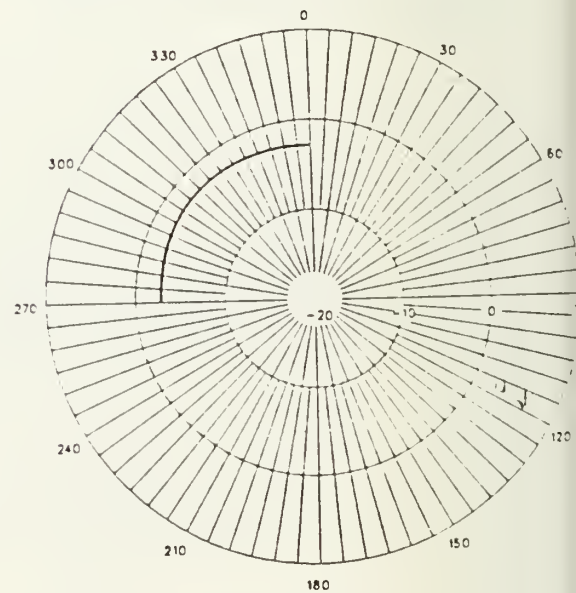


Figure 203. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 21 MHz


AIR FORCE HI-BAND DOUBLE DELTA // PERF. GND. // 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

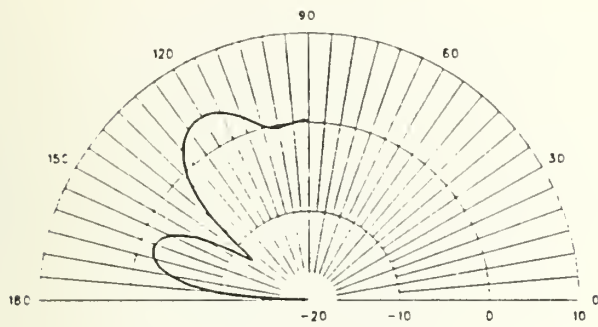

AIR FORCE HI-BAND DOUBLE DELTA // FAIR GND. // 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

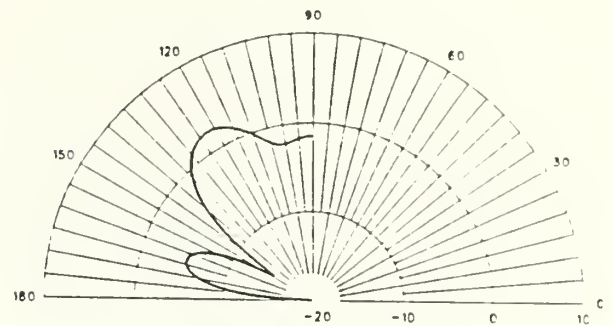

AIR FORCE HI-BAND DOUBLE DELTA // PERF. GND. // 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

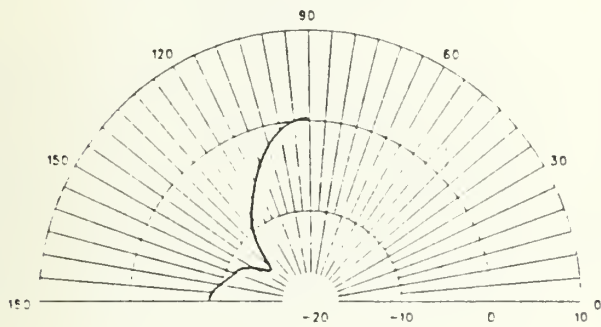

AIR FORCE HI-BAND DOUBLE DELTA // FAIR GND. // 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



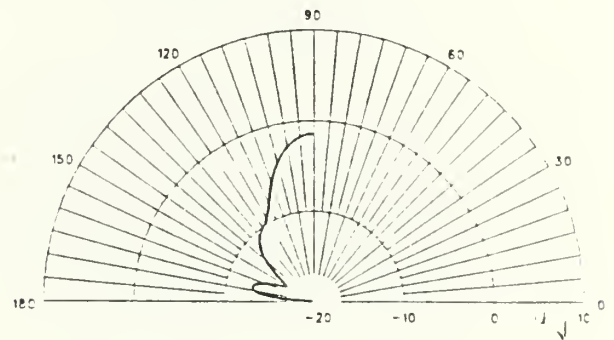


Figure 204. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 22 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

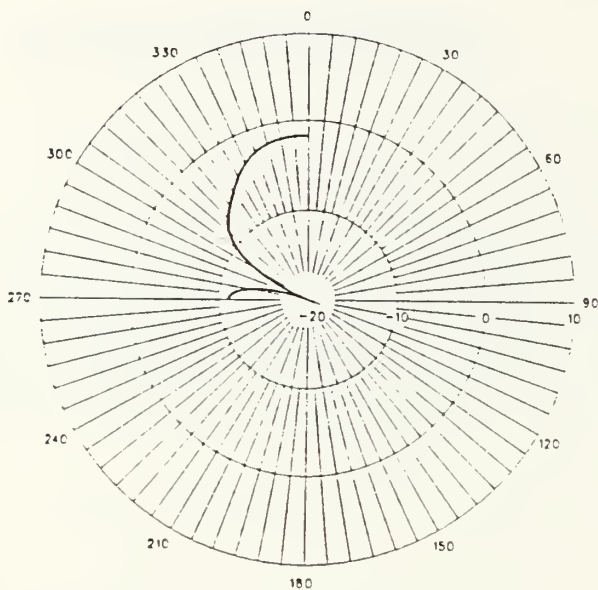

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

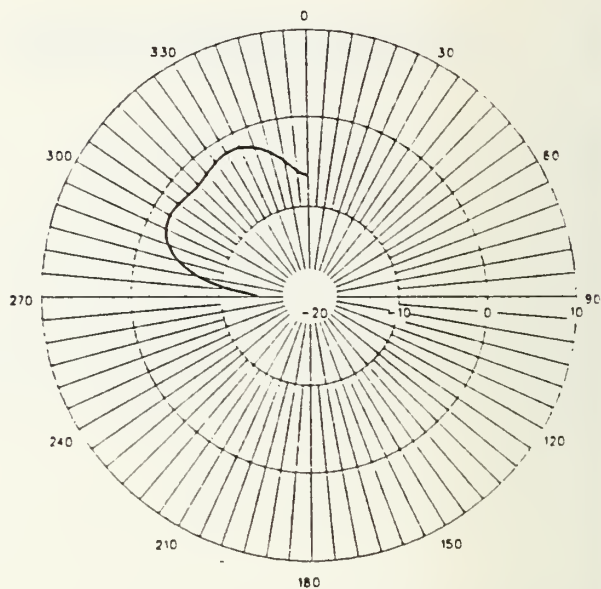

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

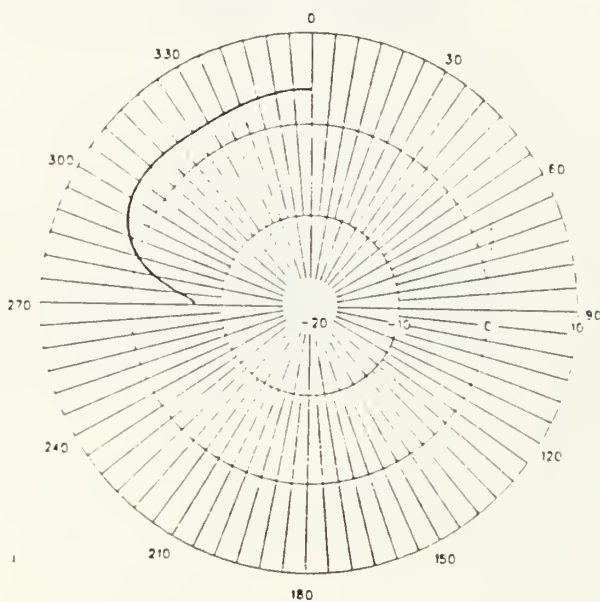

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



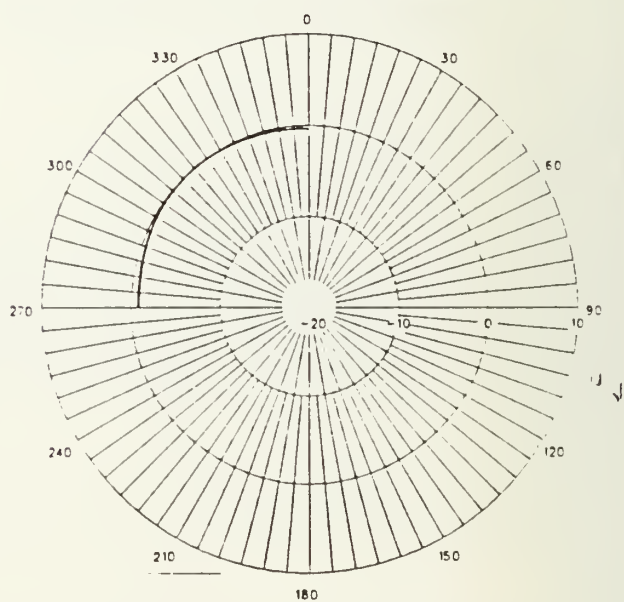


Figure 205. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 22 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

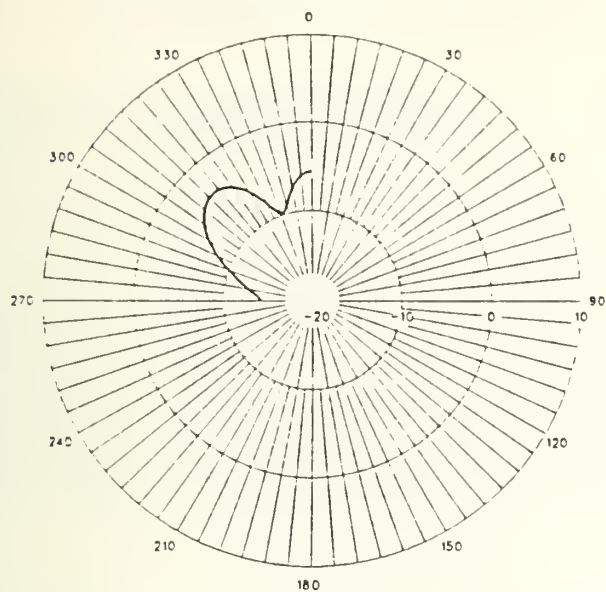

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

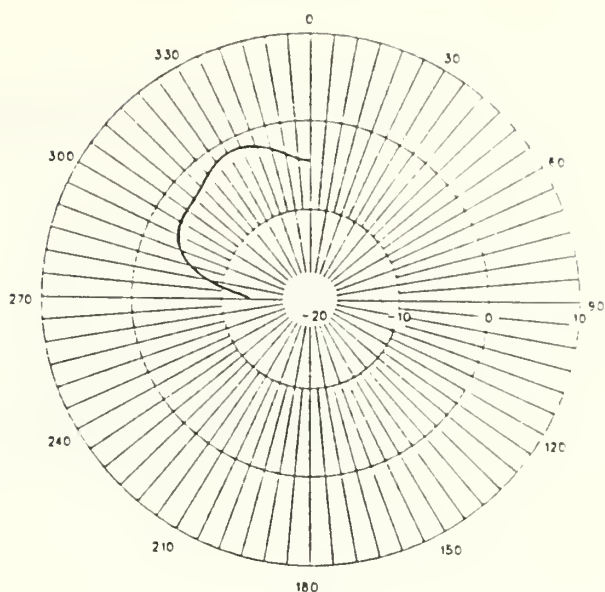

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

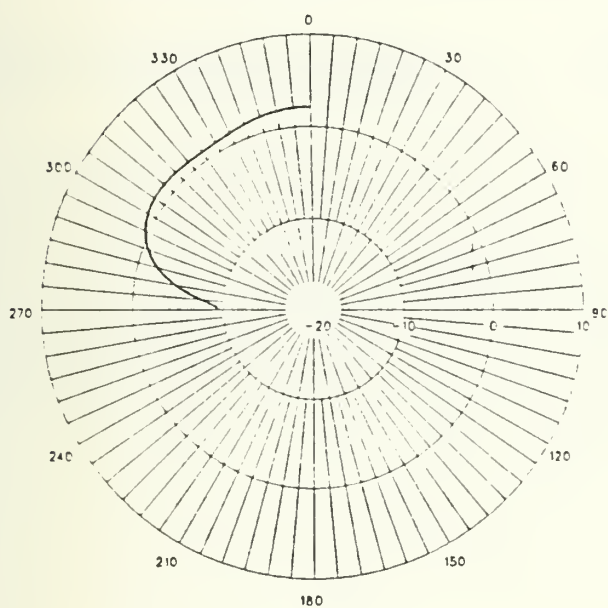

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



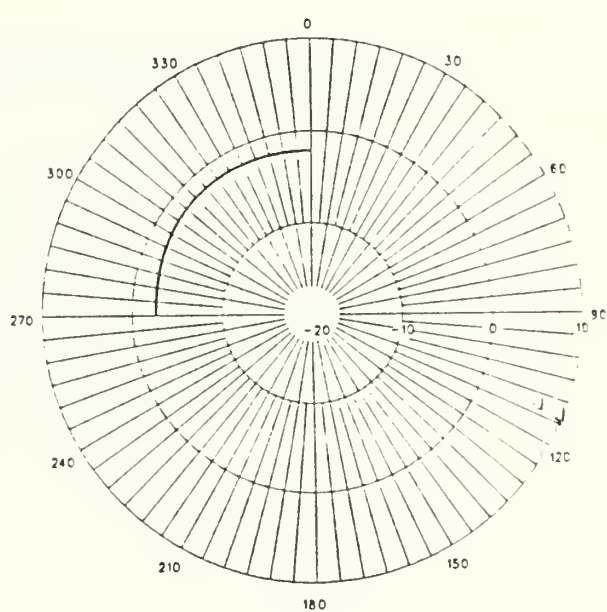


Figure 206. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 22 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. /23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

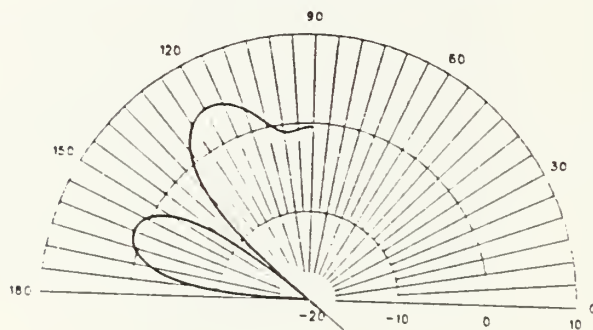

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. /23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

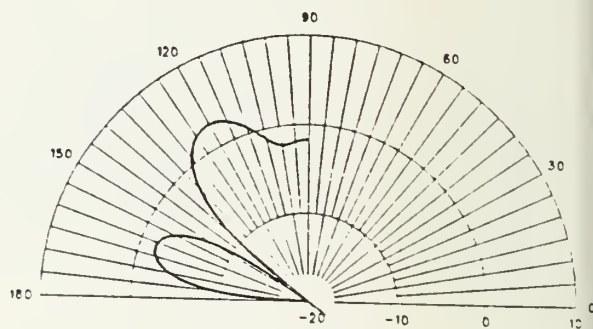

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. /23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

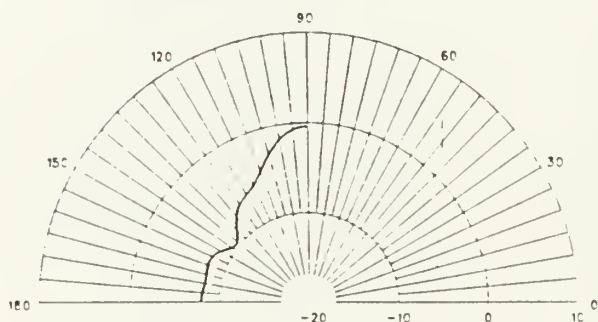

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. /23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



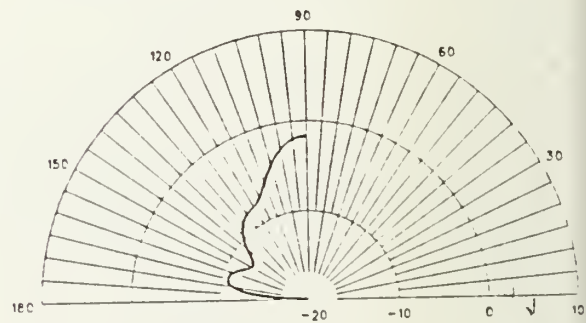


Figure 207. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 23 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

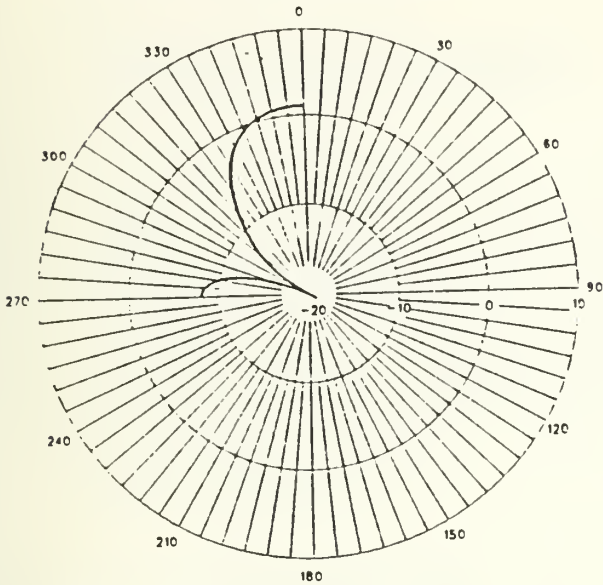

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

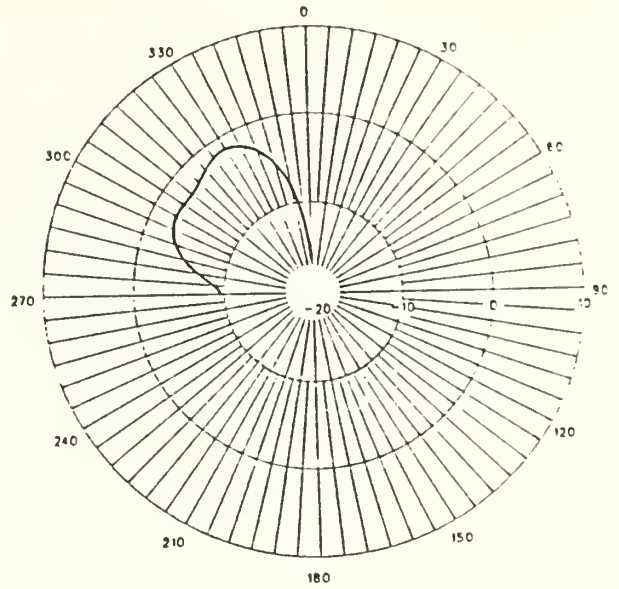

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80

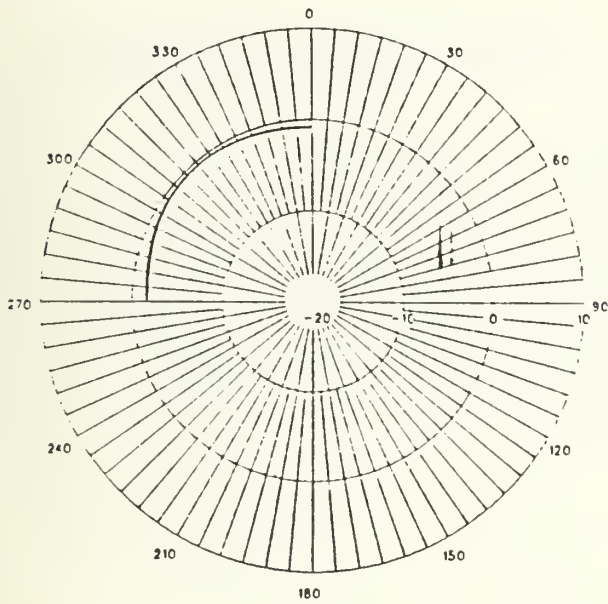

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60



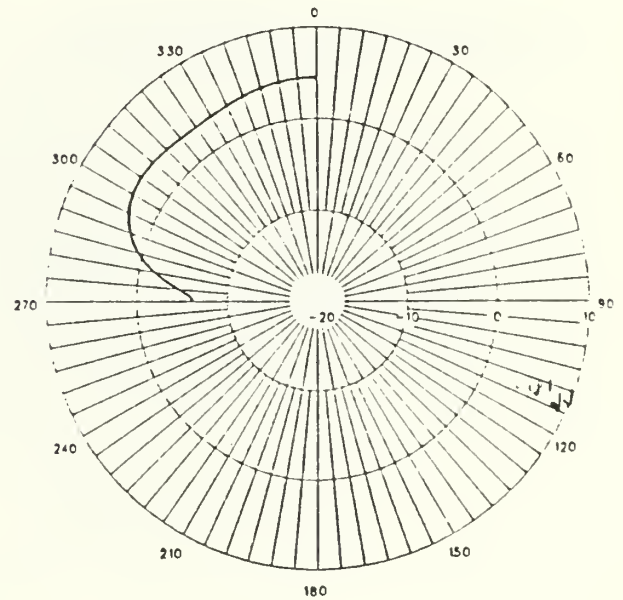


Figure 208. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 23 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 20

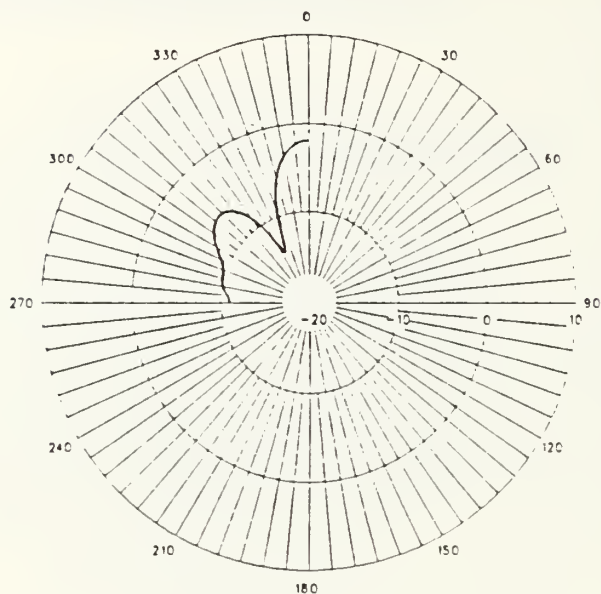

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 40

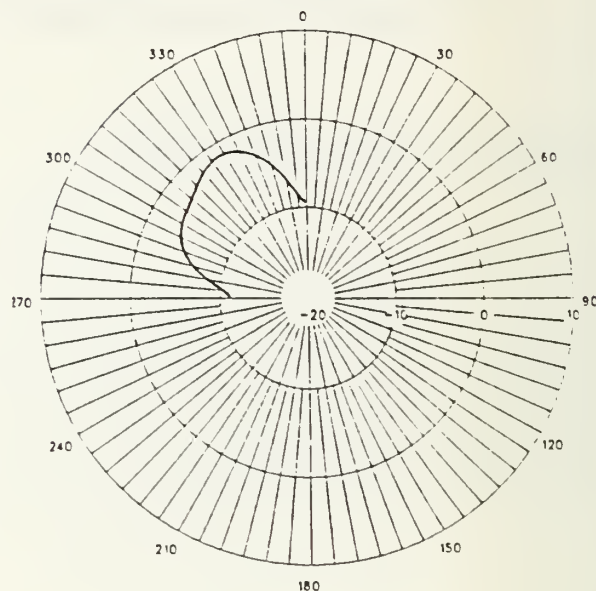

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 60

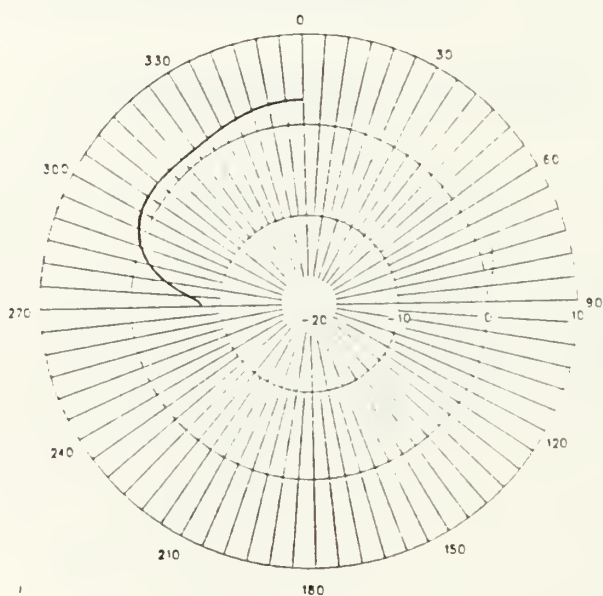

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 23 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 80



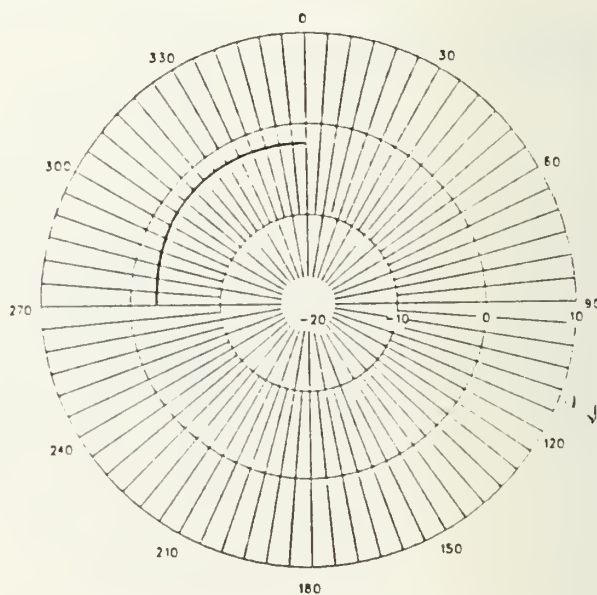


Figure 209. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 23 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

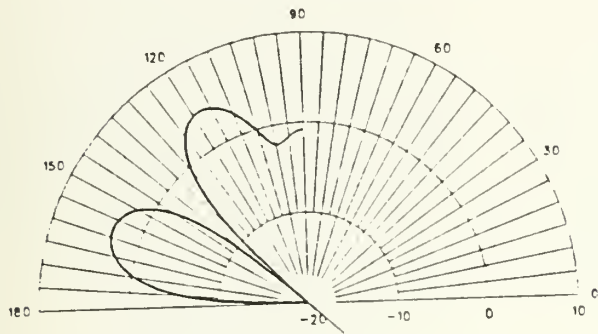

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

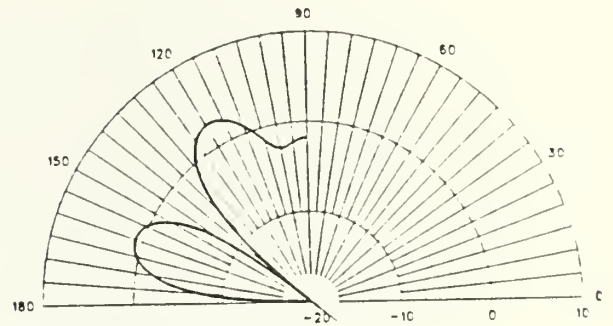

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

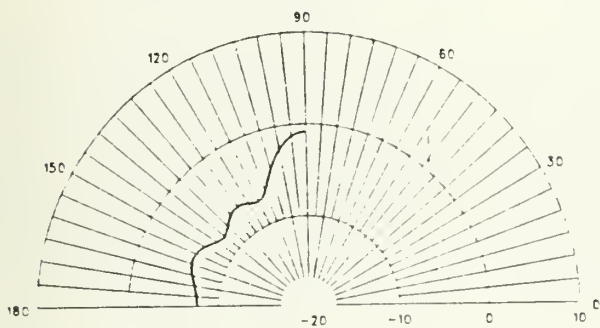

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



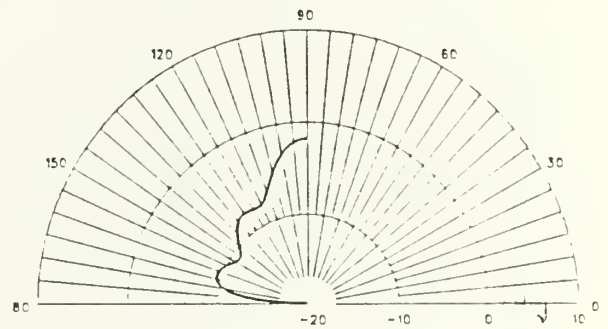


Figure 210. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 24 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

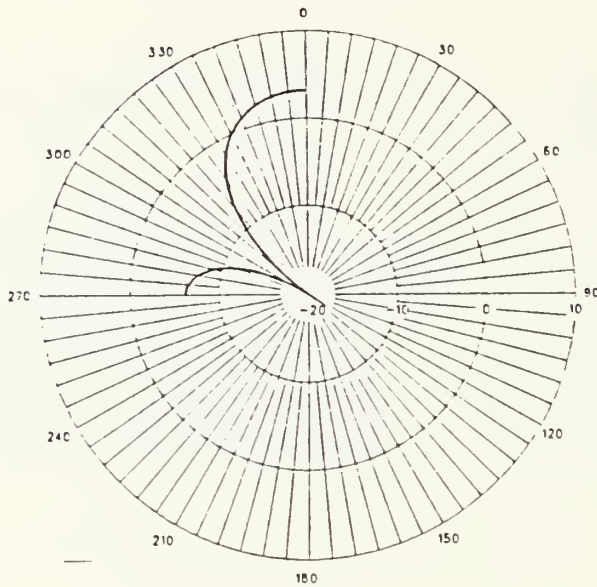

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

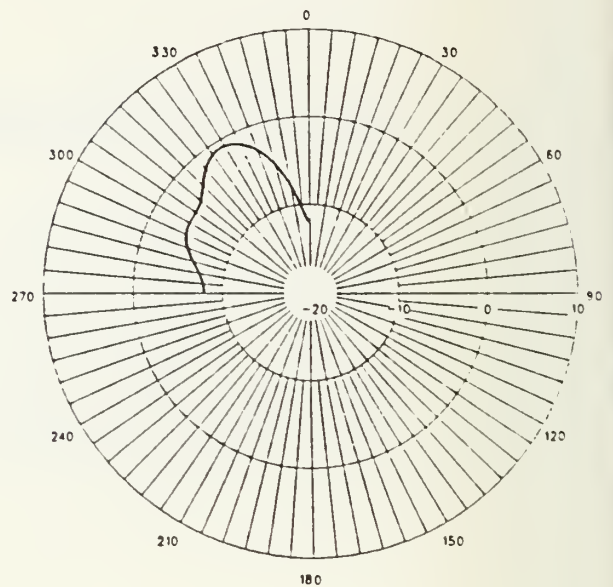

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

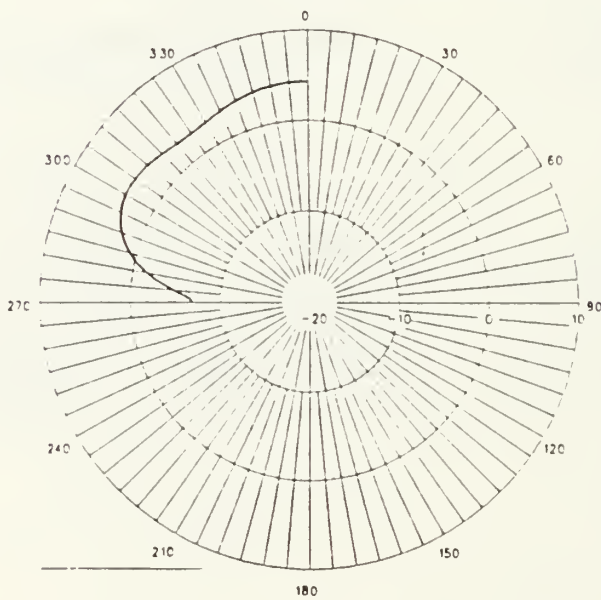

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



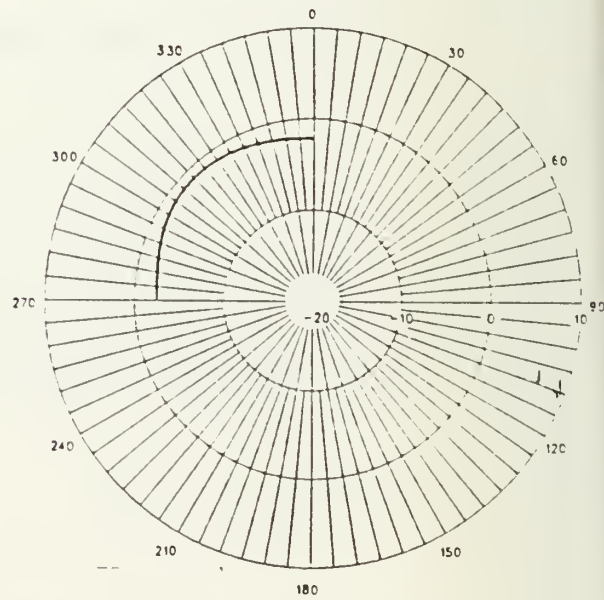


Figure 211. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 24 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

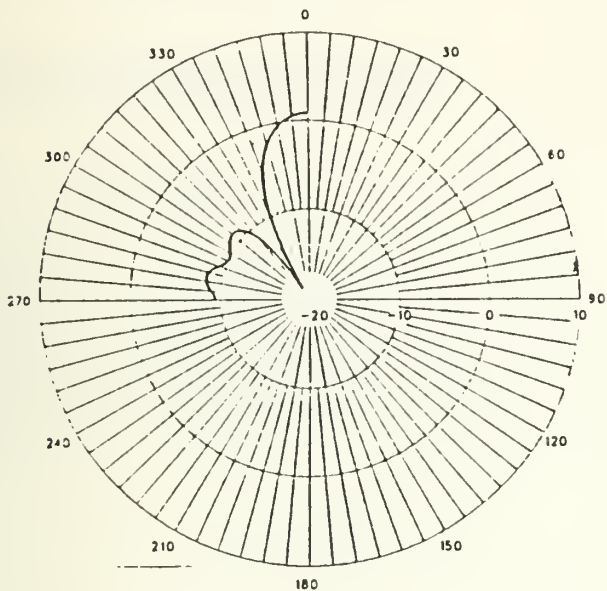

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

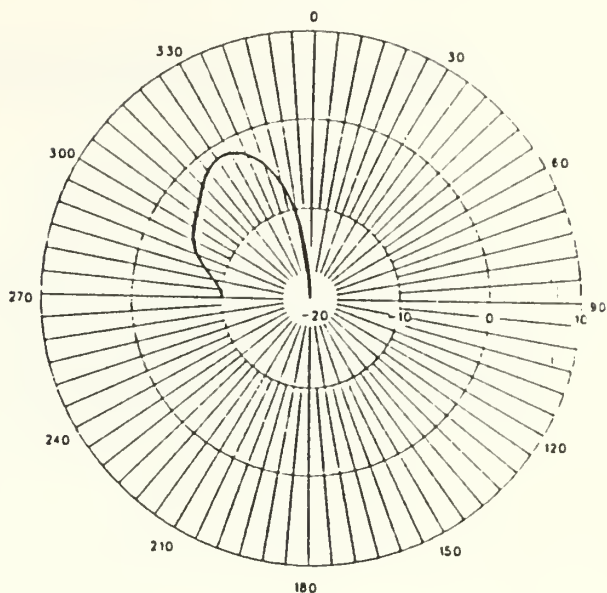

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

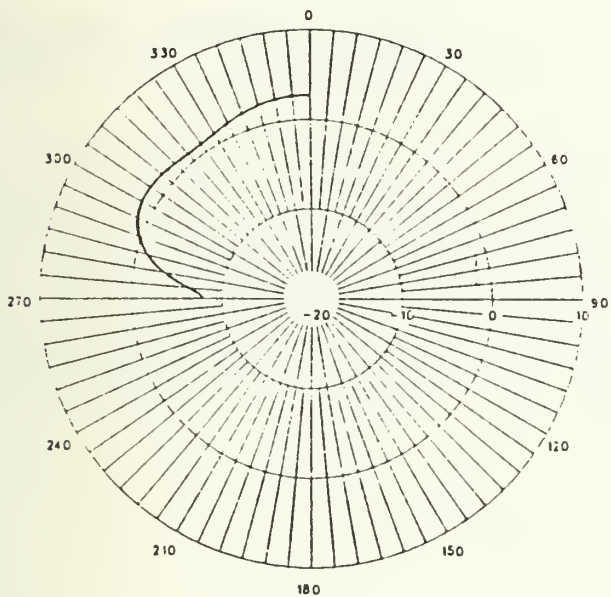

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



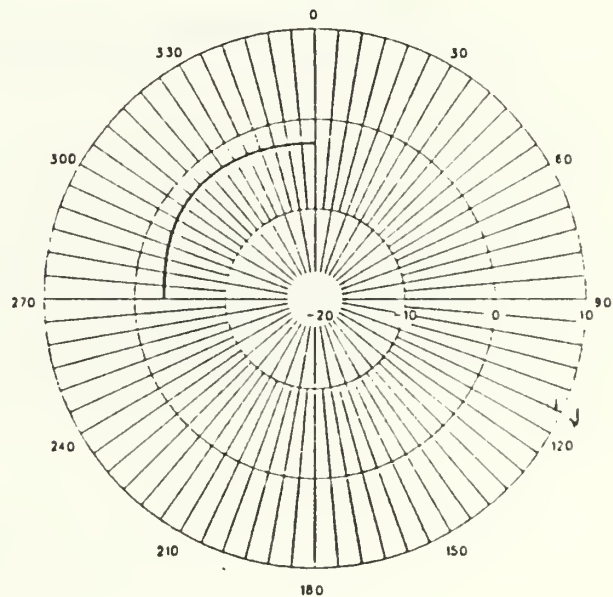


Figure 212. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 24 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

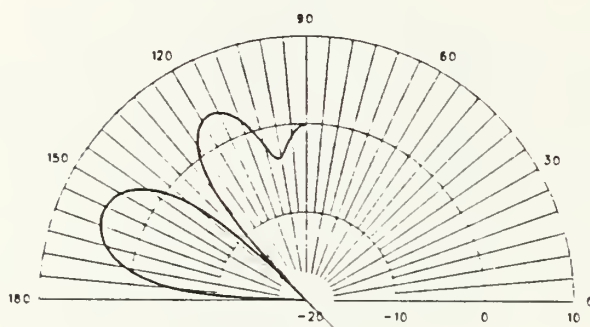

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

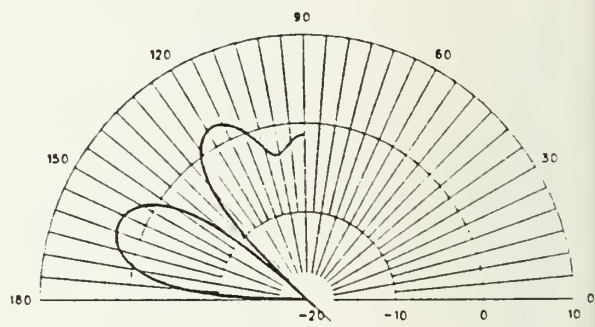

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

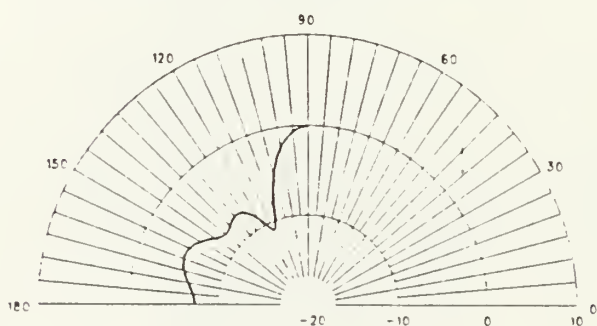

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



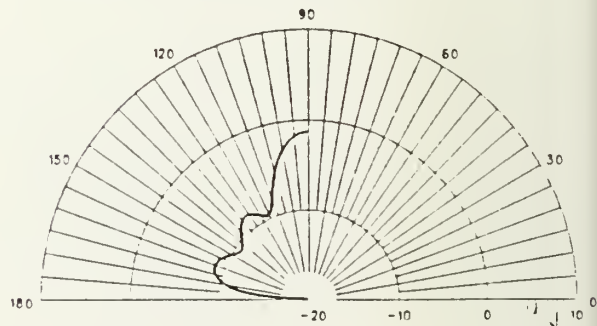


Figure 213. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 25 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PEFF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

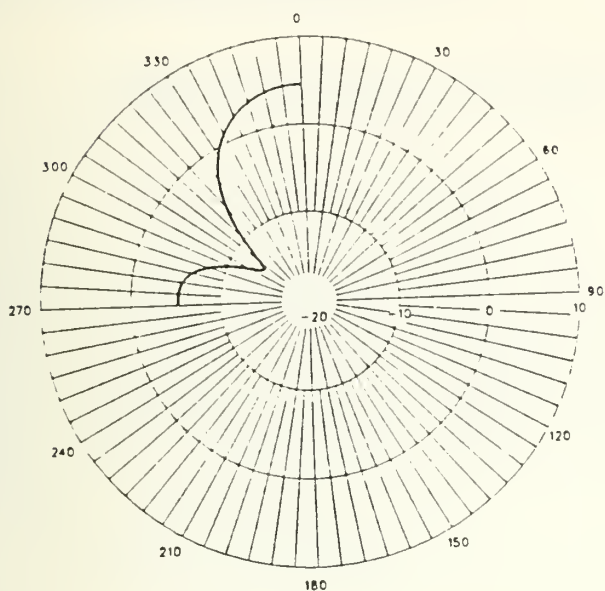

AIR FORCE HI-BAND DOUBLE DELTA / PEFF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

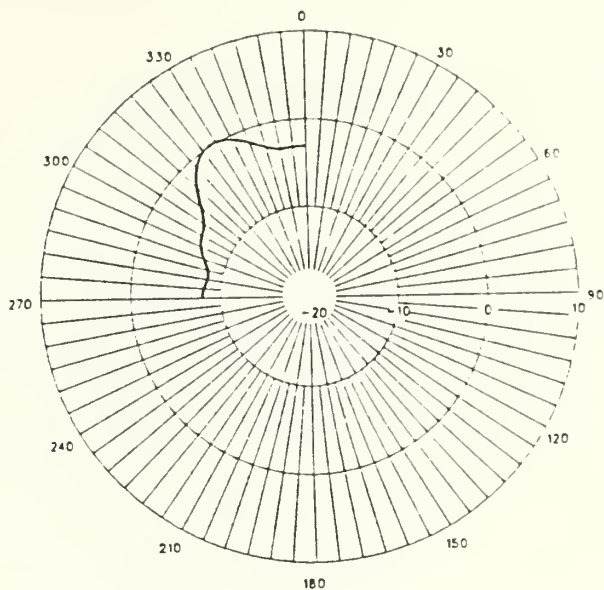

AIR FORCE HI-BAND DOUBLE DELTA / PEFF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

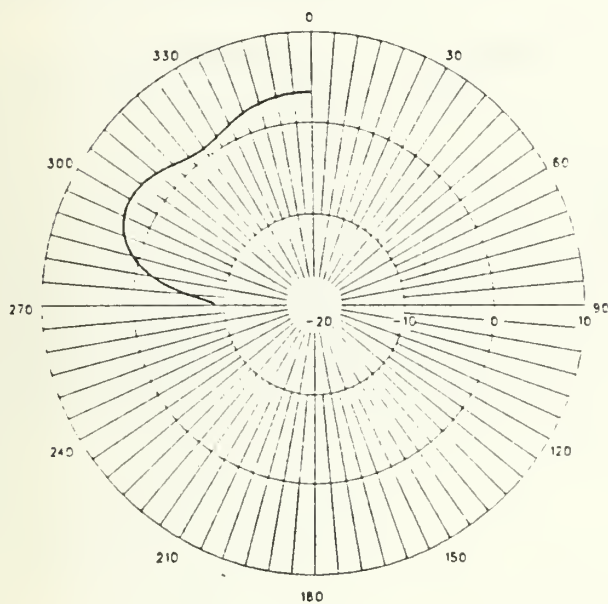

AIR FORCE HI-BAND DOUBLE DELTA / PEFF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



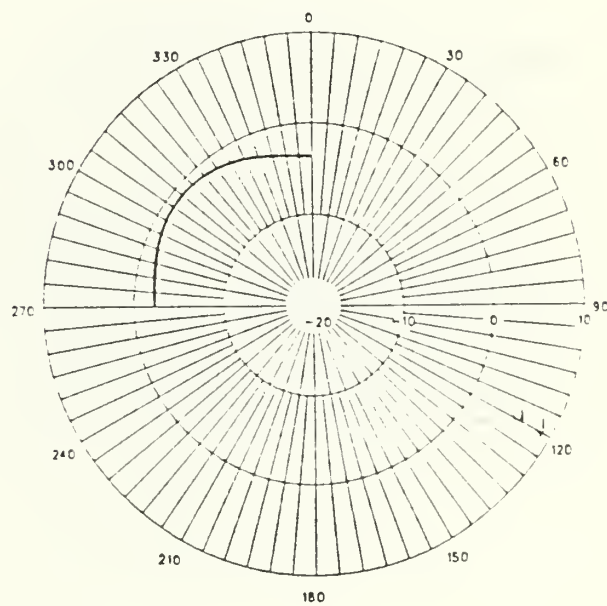


Figure 214. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 25 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 20

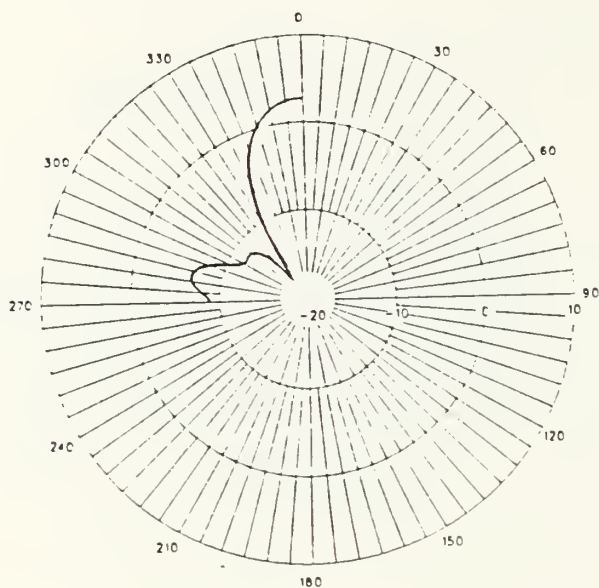

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 40

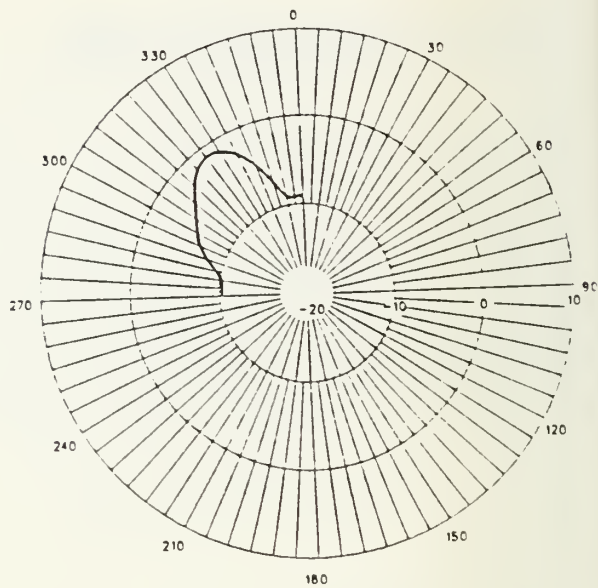

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 60

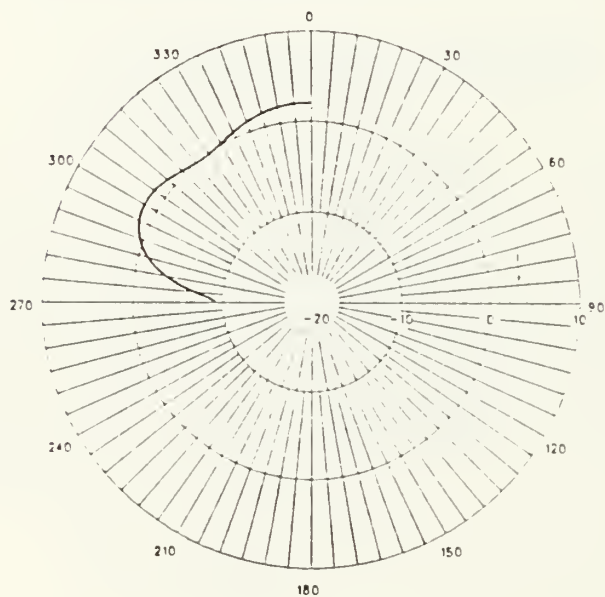

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 25 MHz
AZIMUTH PATTERN / ELEVATION ANGLE = 80



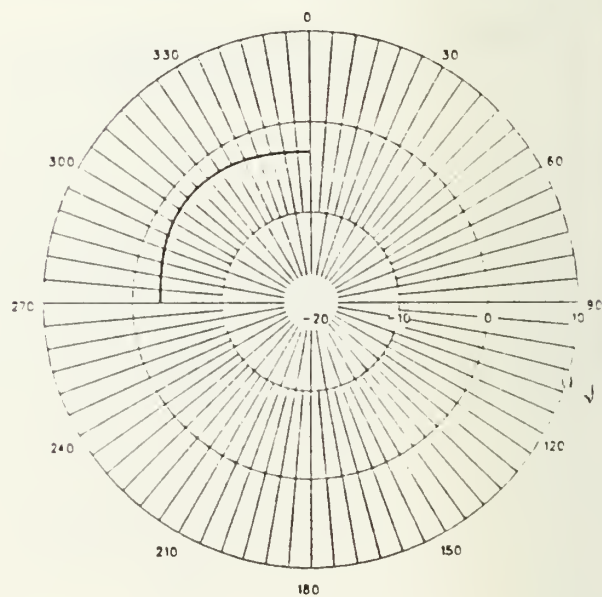


Figure 215. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 25 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

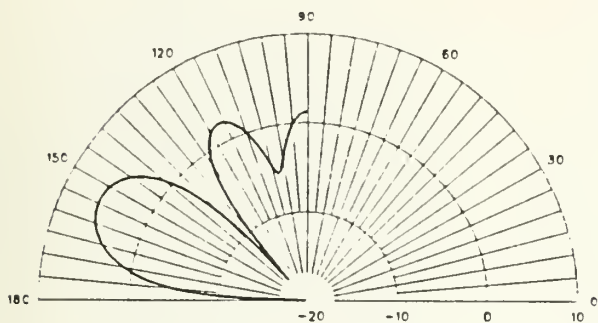

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

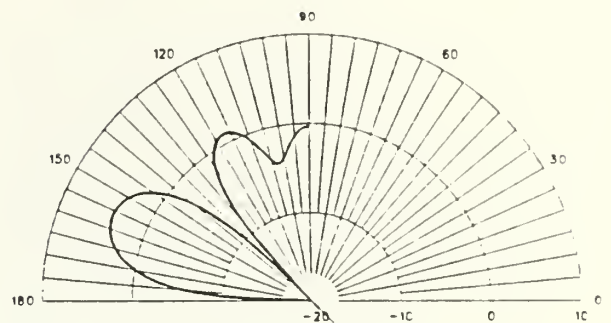

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

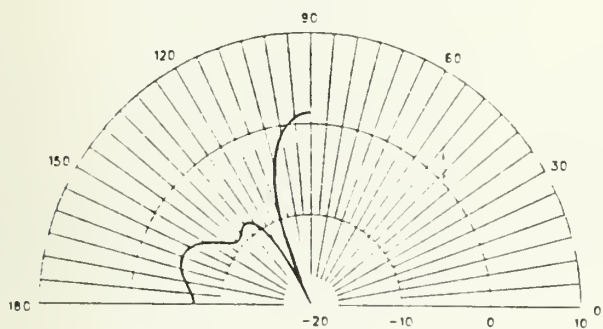

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



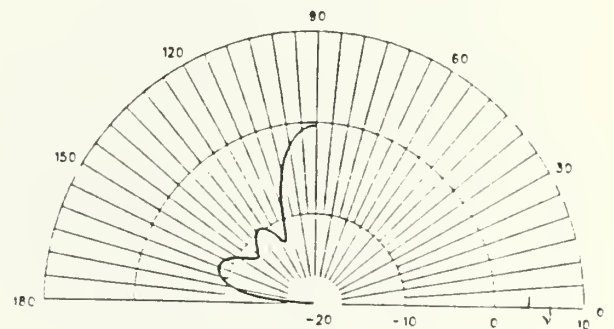


Figure 216. Elevation patterns of the Air Force highband DD antenna over perfect ground and fair ground at 26 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

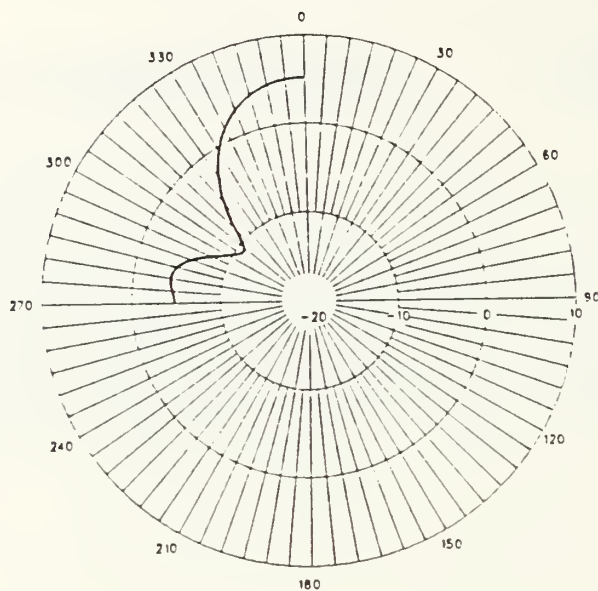

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

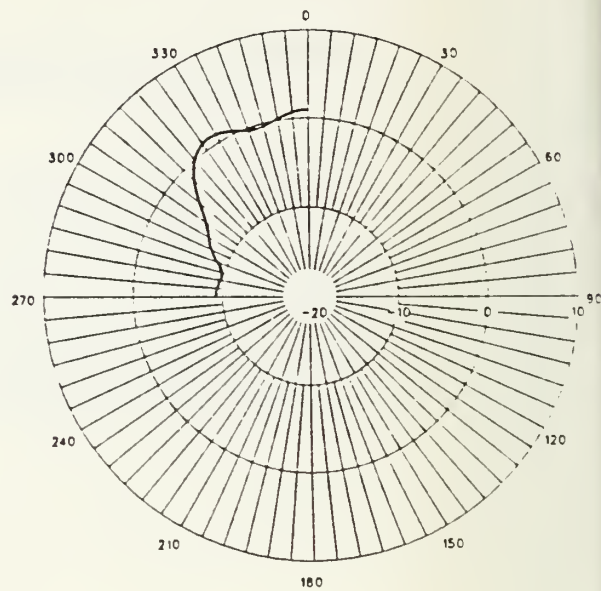

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

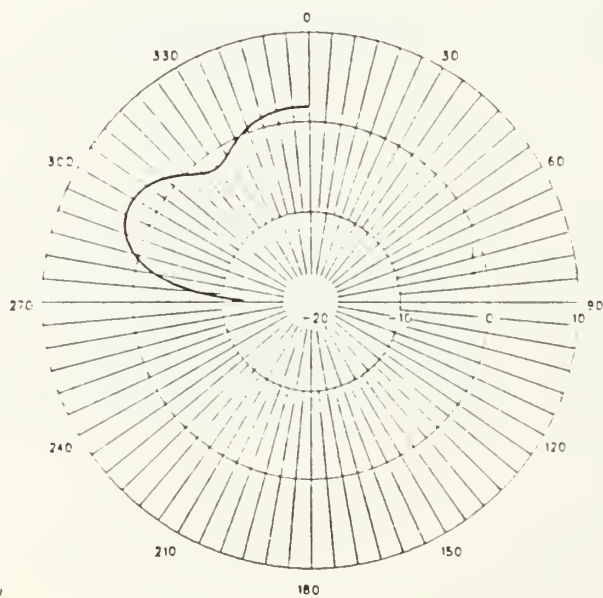

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



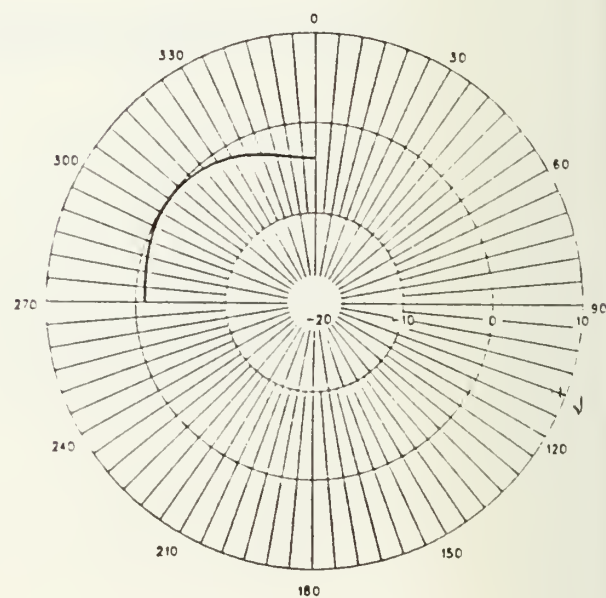


Figure 217. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 26 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

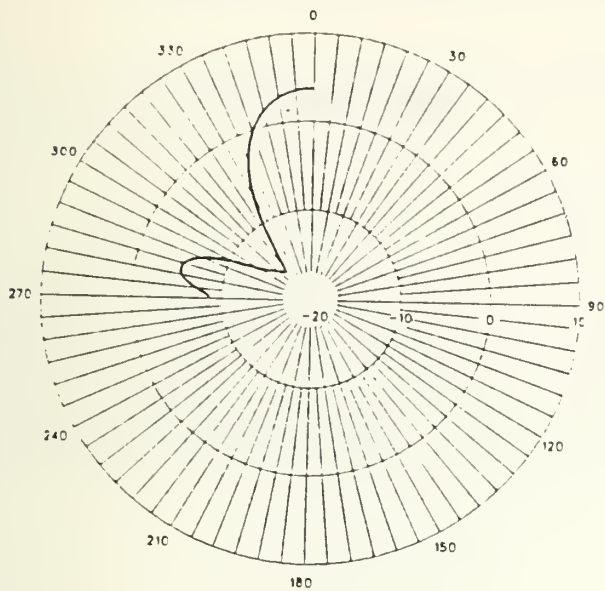

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

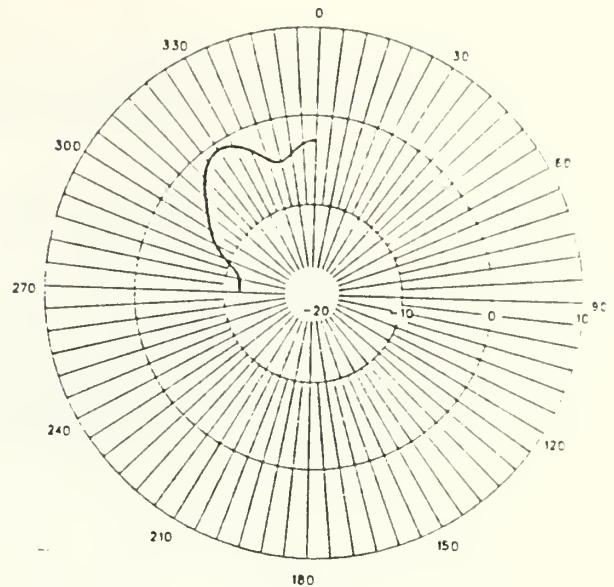

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

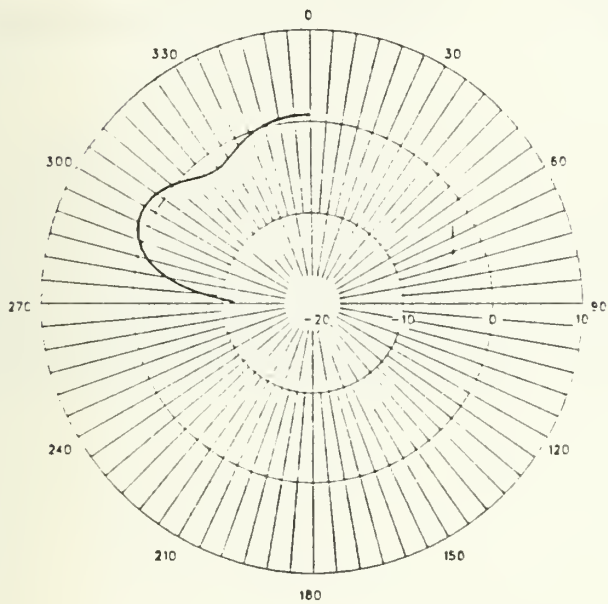

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



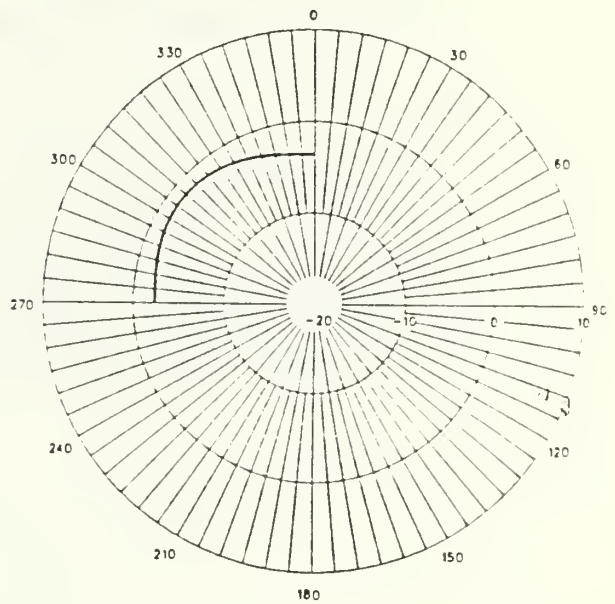


Figure 218. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 26 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

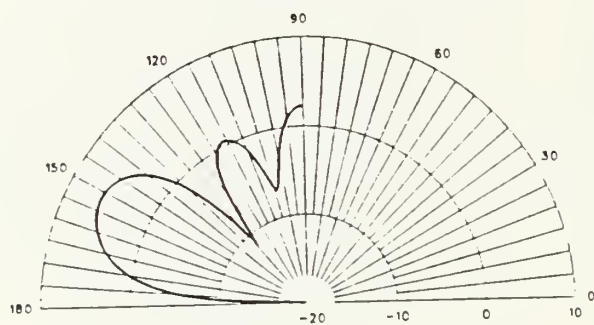

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

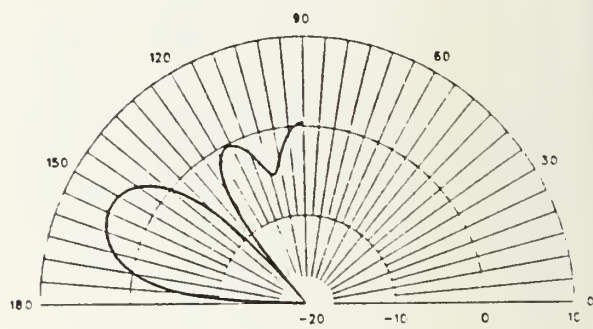

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

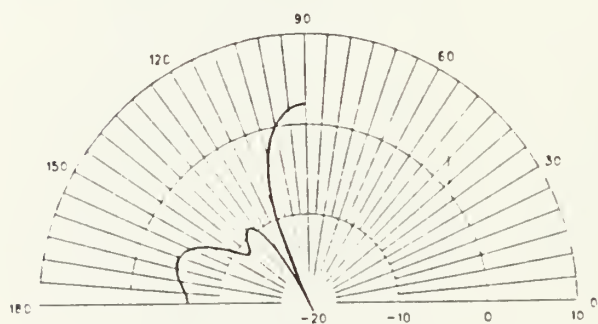

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



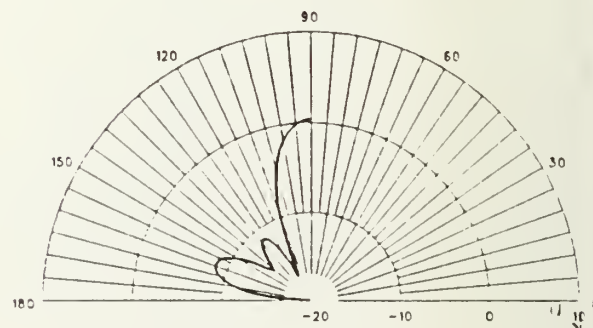


Figure 219. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 27 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

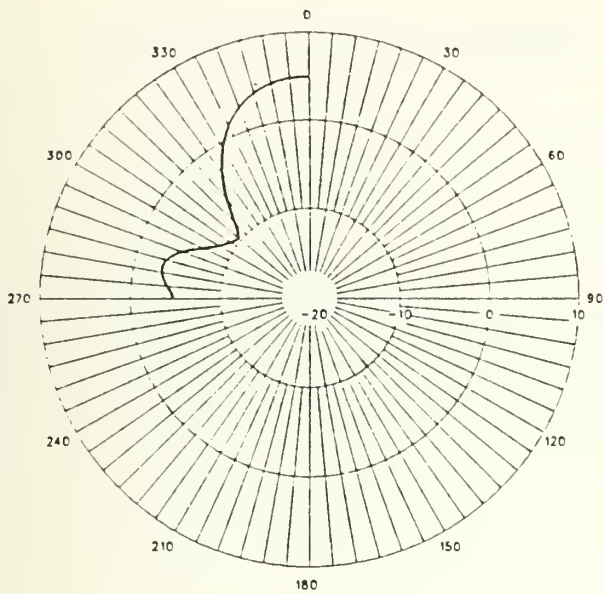

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

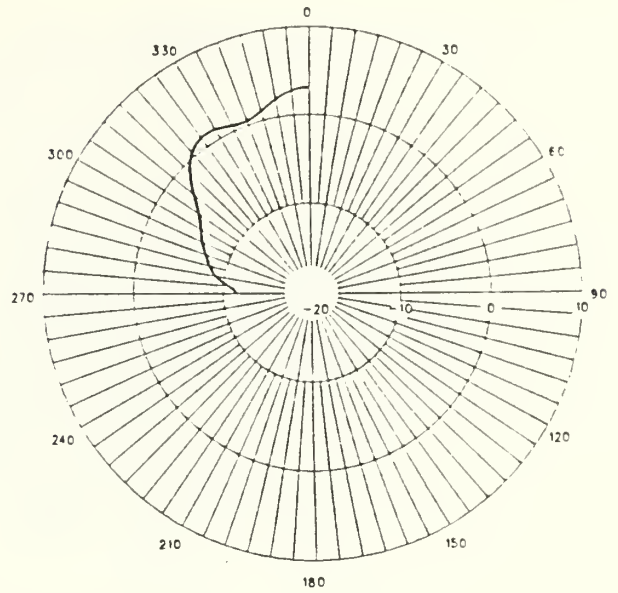

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

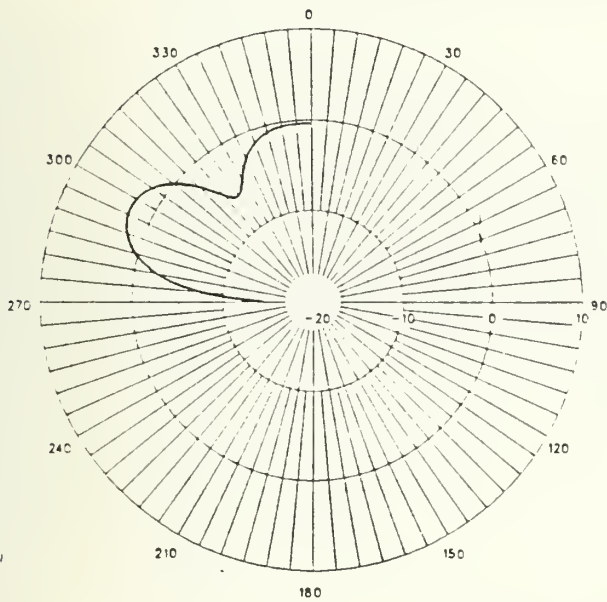

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



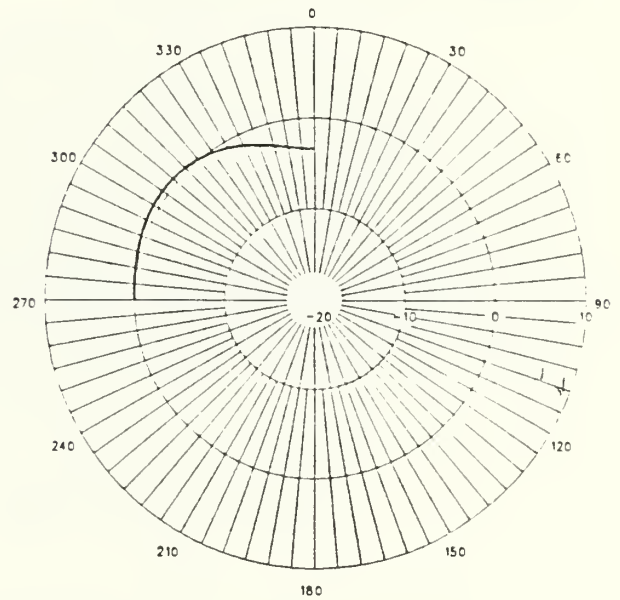


Figure 220. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 27 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

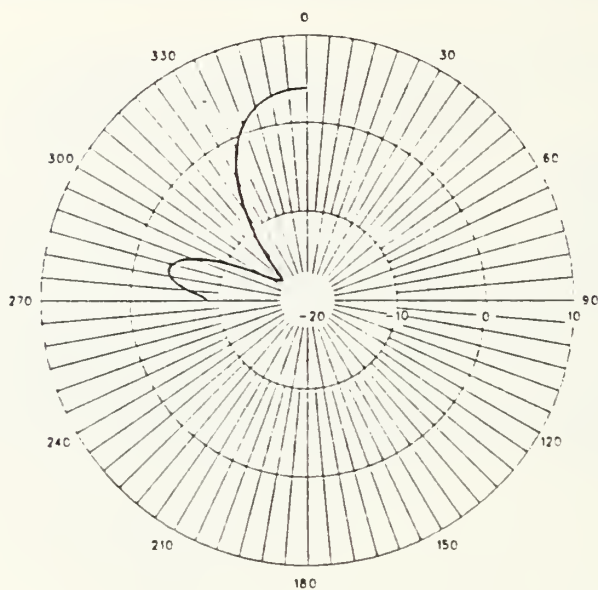

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

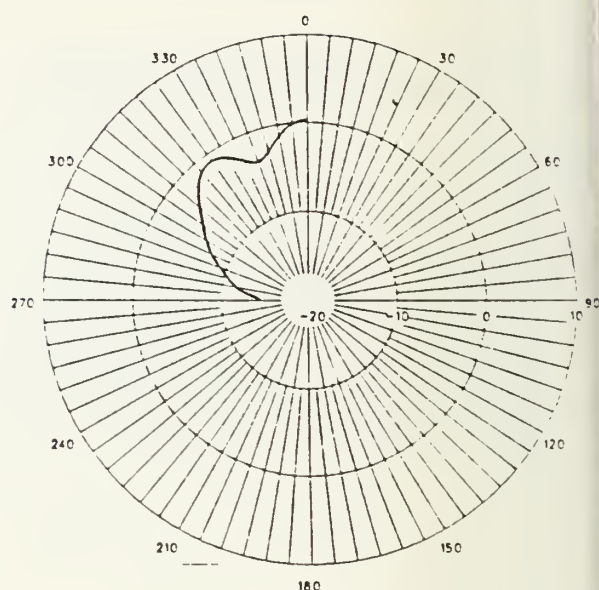

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

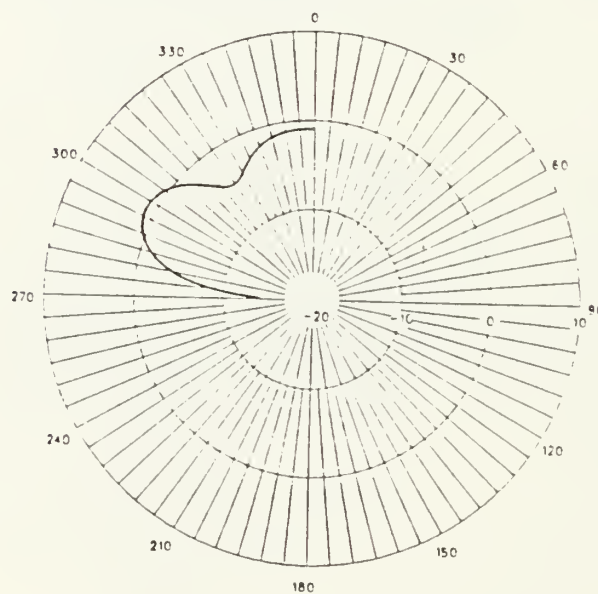

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



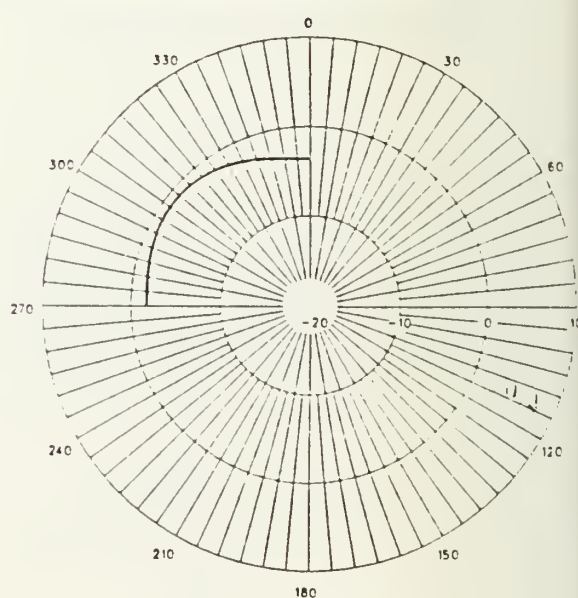


Figure 221. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 27 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

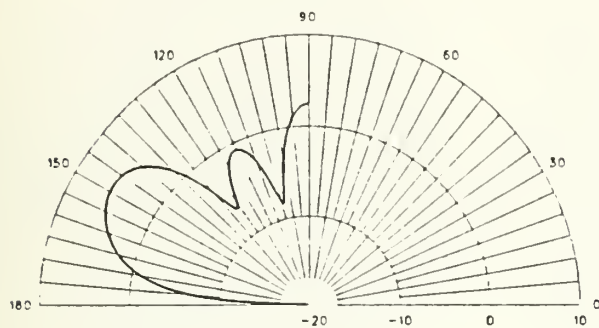

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

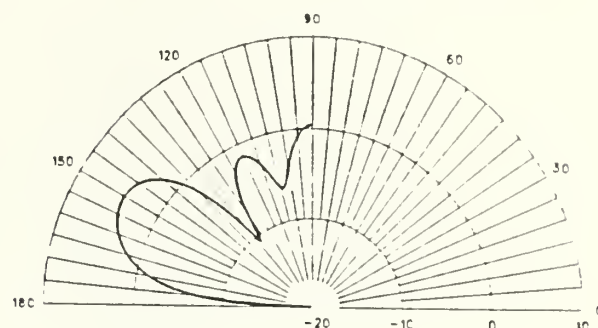

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

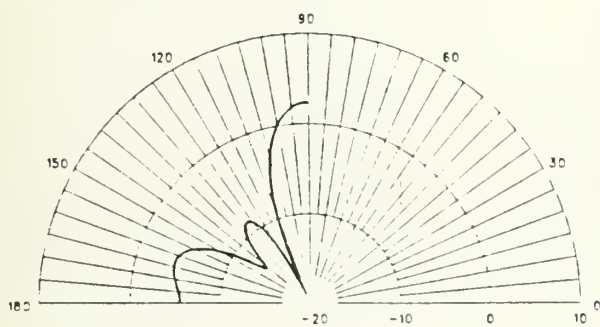

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



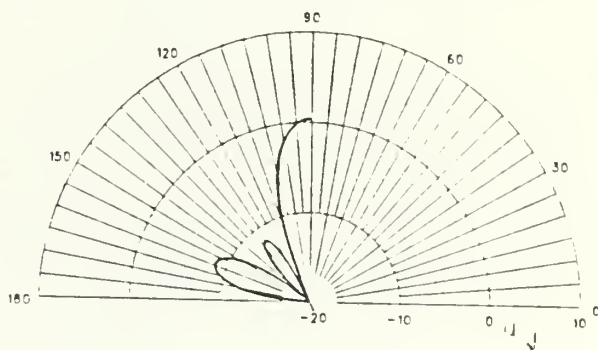


Figure 222. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 28 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

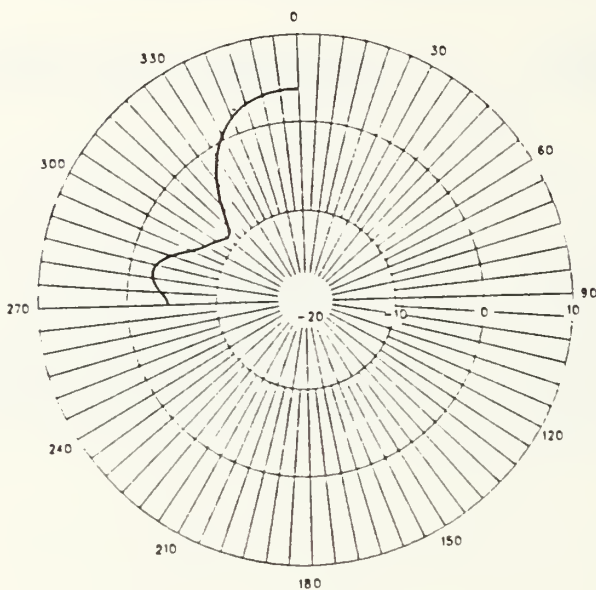

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

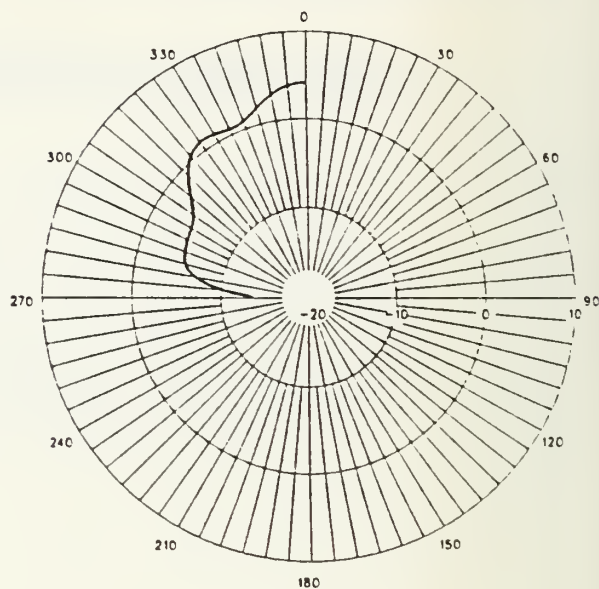

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

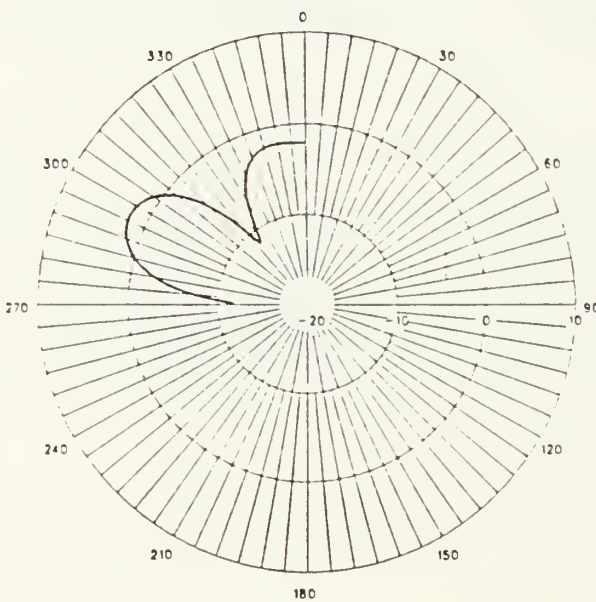

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



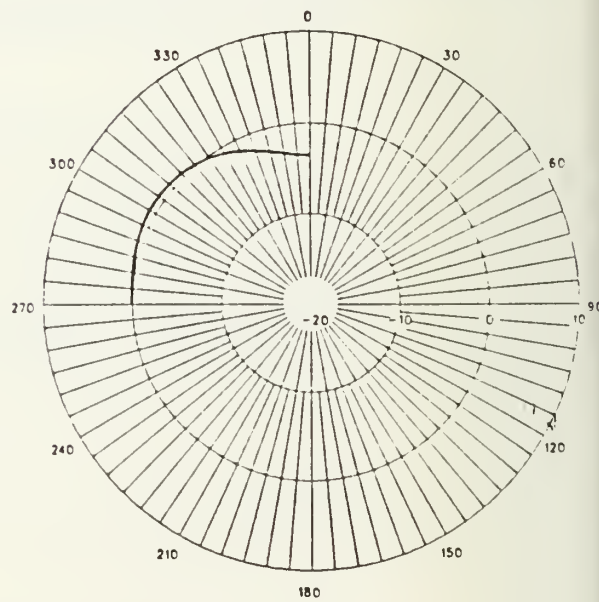


Figure 223. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 28 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

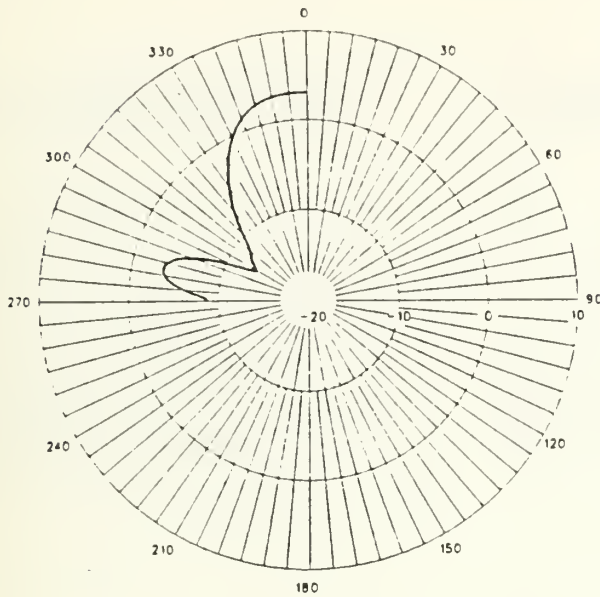

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

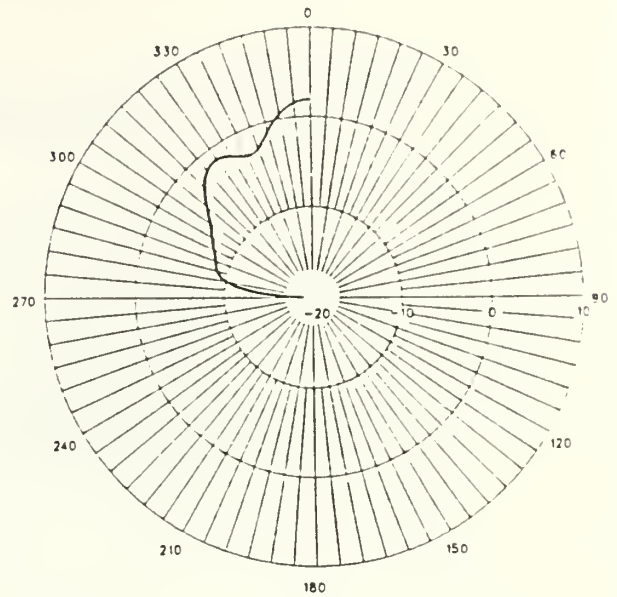

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

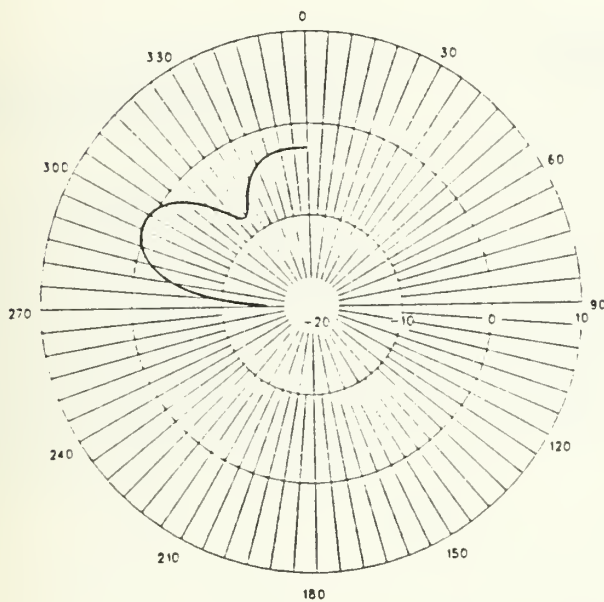

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



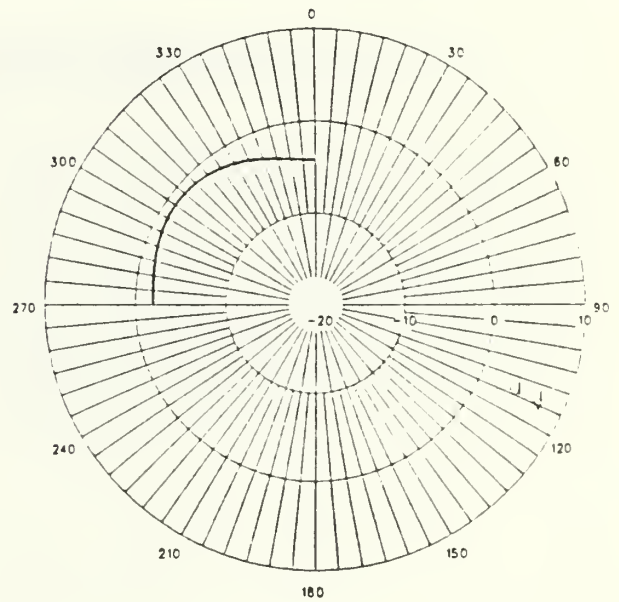


Figure 224. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 28 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

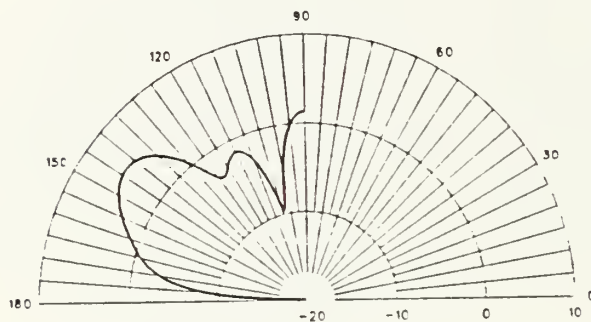

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

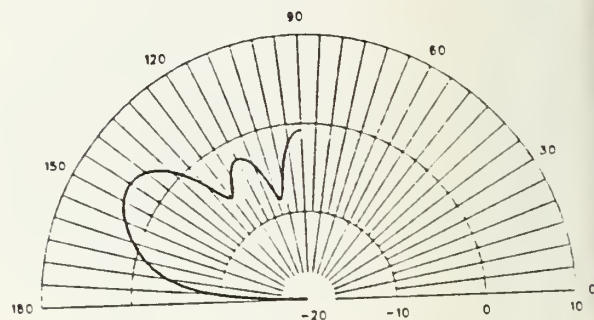

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

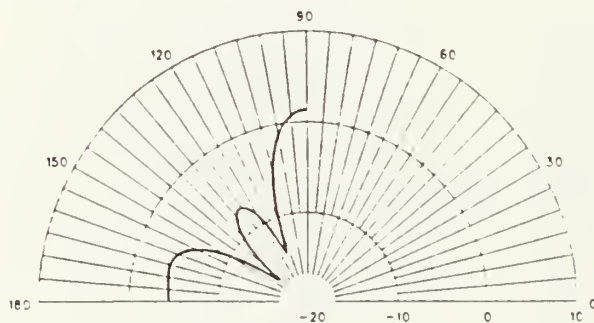

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



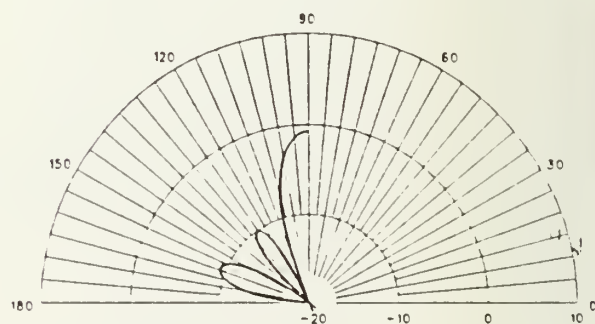


Figure 225. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 29 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

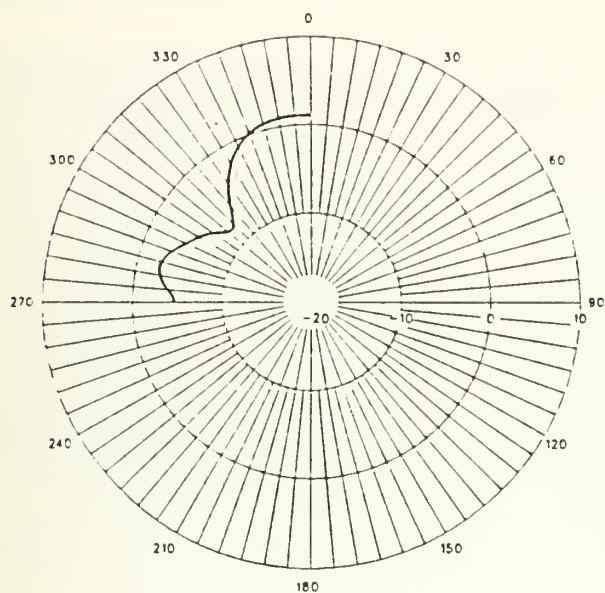

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

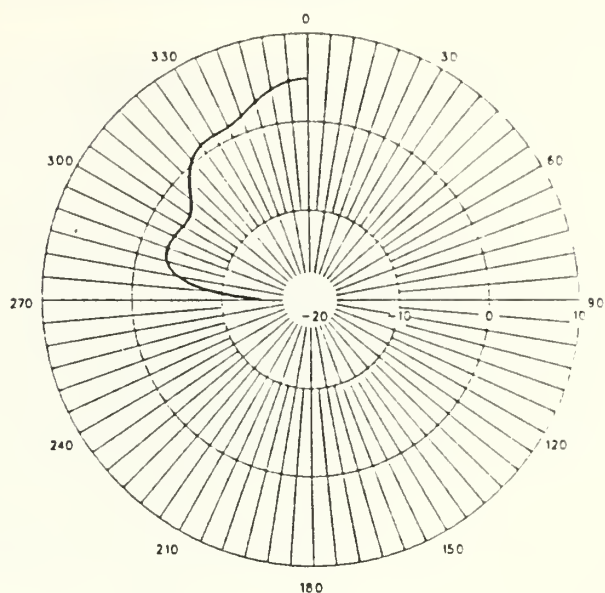

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

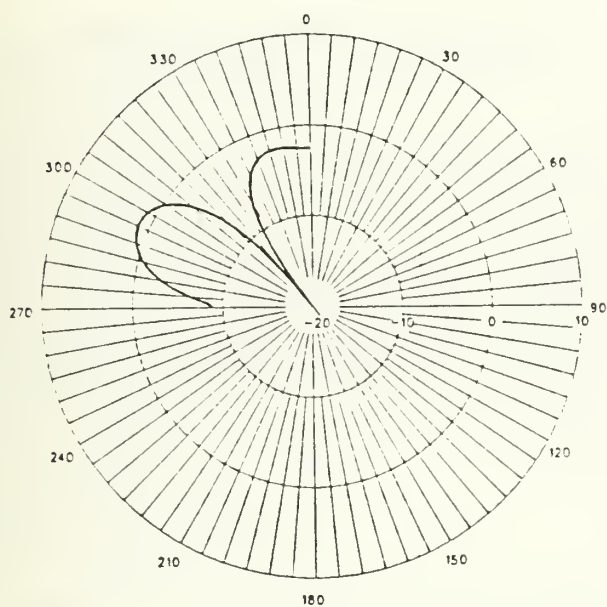

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



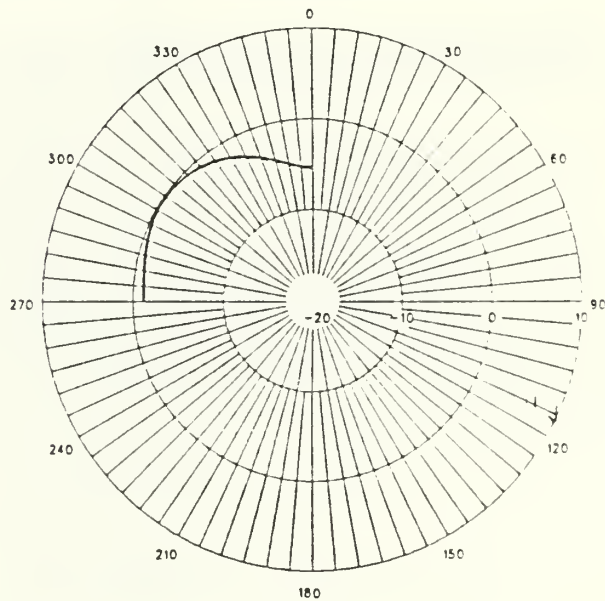


Figure 226. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 29 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

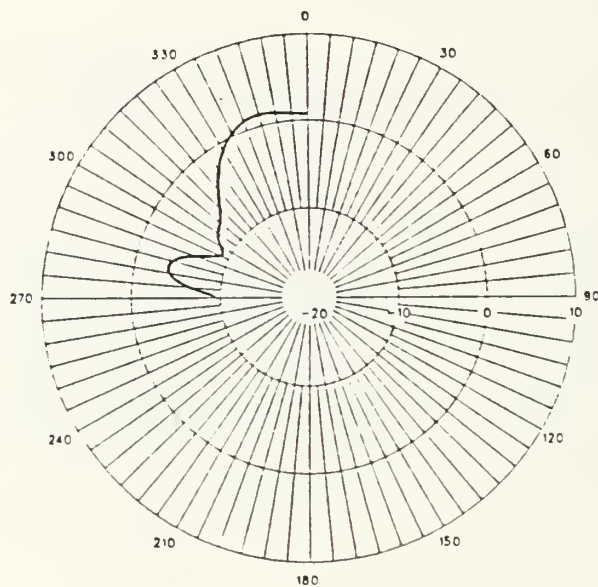

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

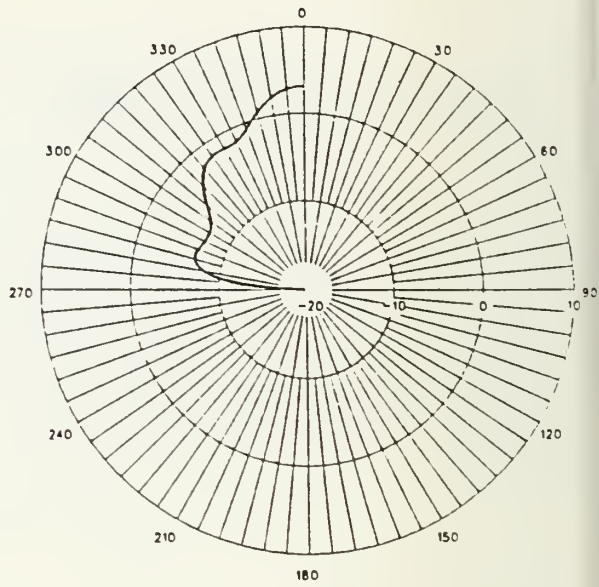

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

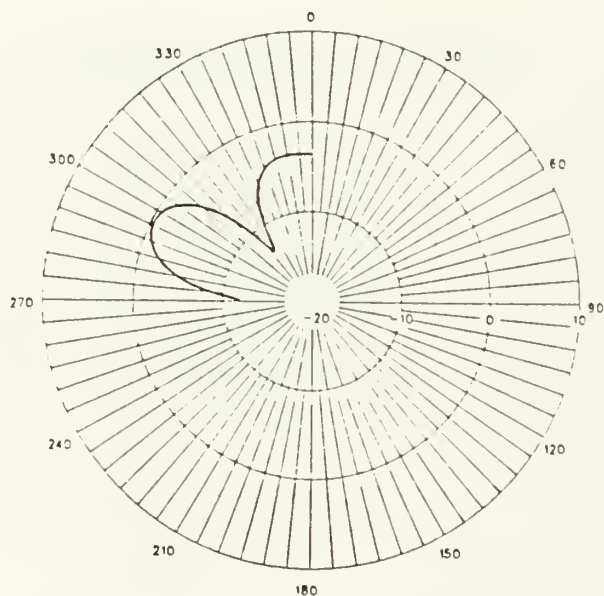

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



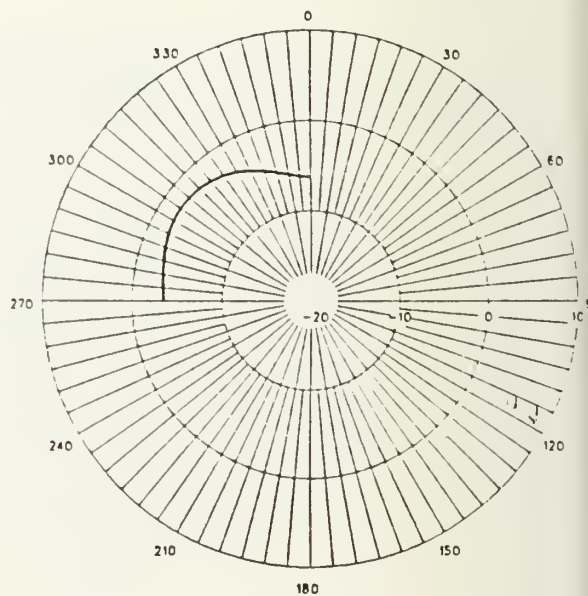


Figure 227. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 29 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

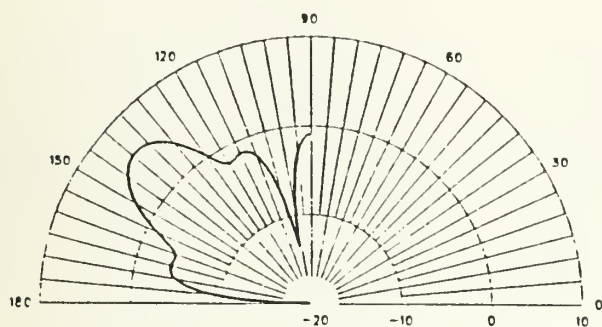

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

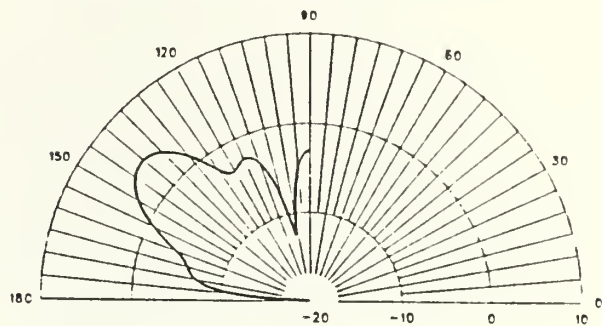

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

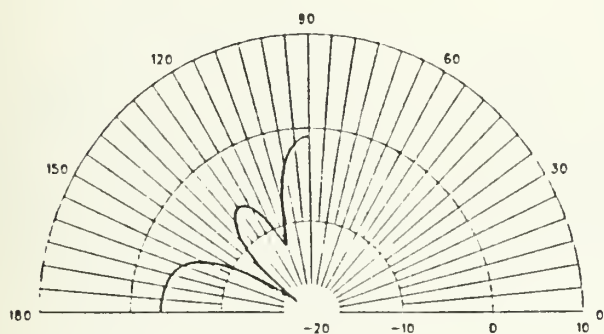

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



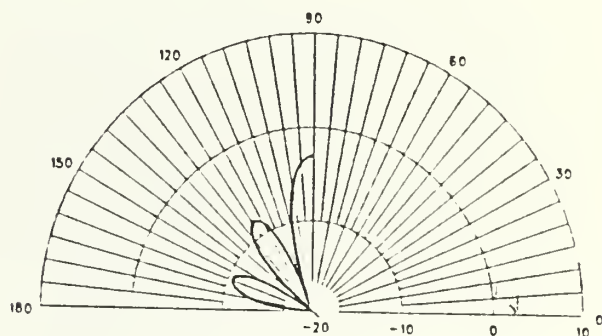


Figure 228. Elevation patterns of the Air Force Highband DD antenna over perfect ground and fair ground at 30 MHz


AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

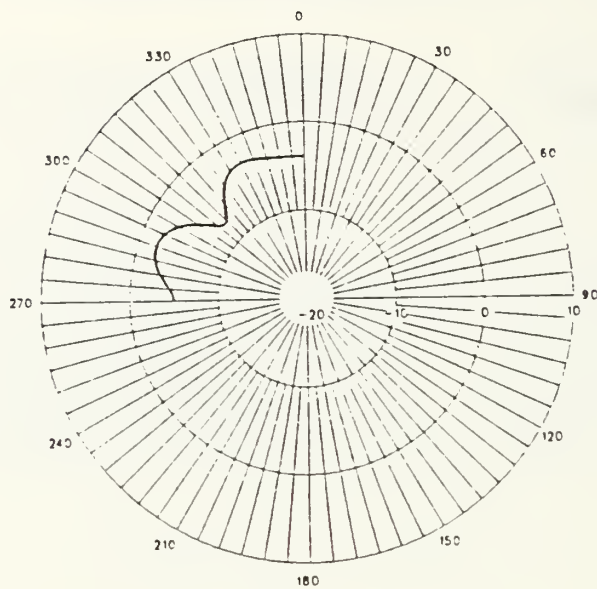

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

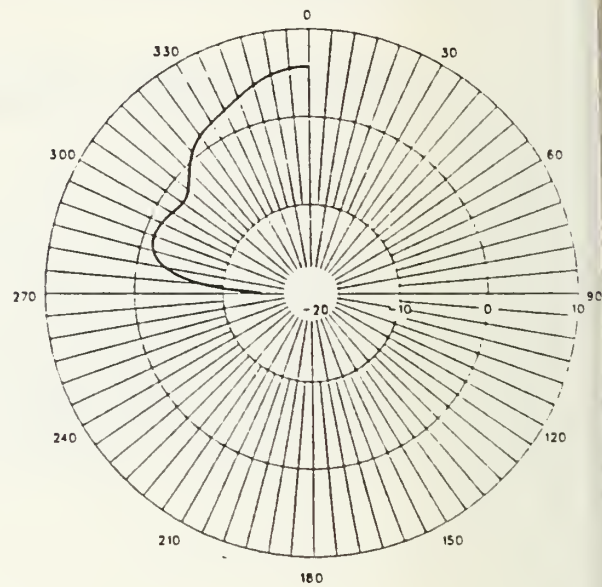

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

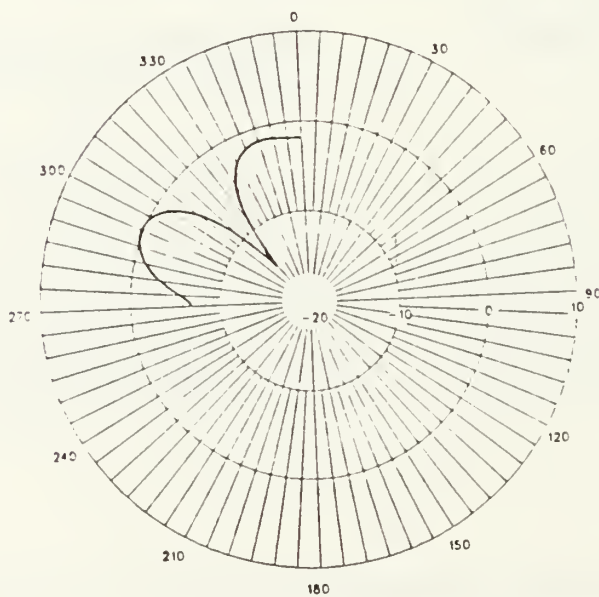

AIR FORCE HI-BAND DOUBLE DELTA / PERF. GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



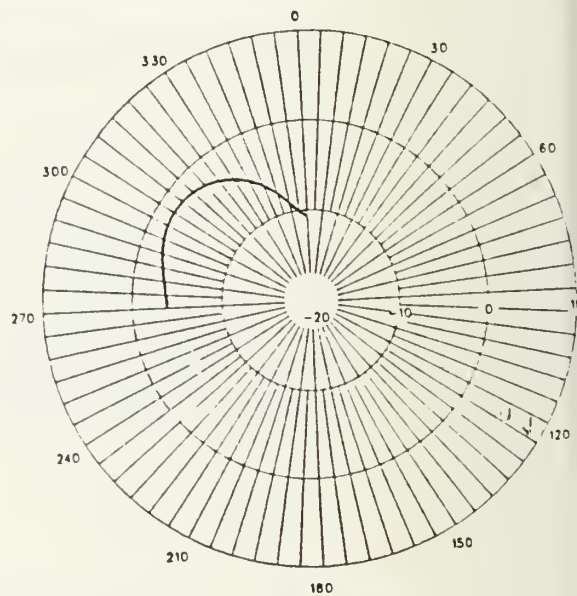


Figure 229. Azimuth patterns of the Air Force Highband DD antenna over perfect ground at 30 MHz


AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

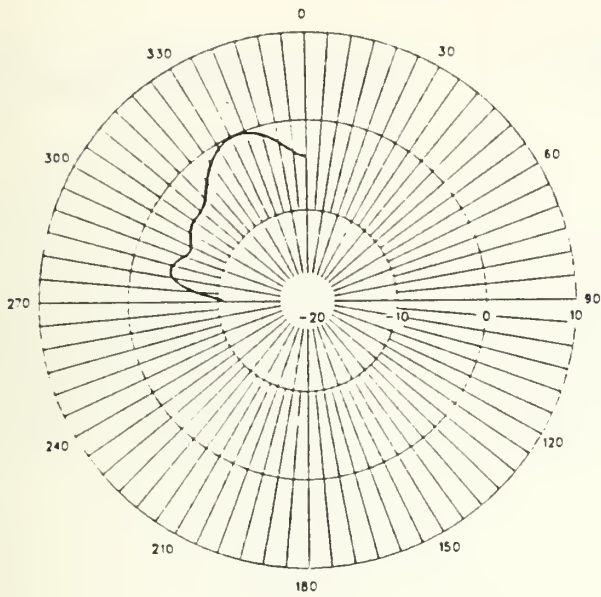

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

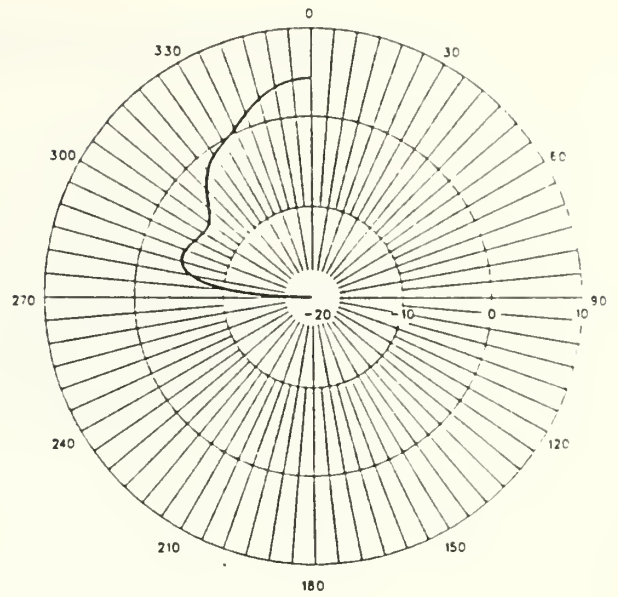

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

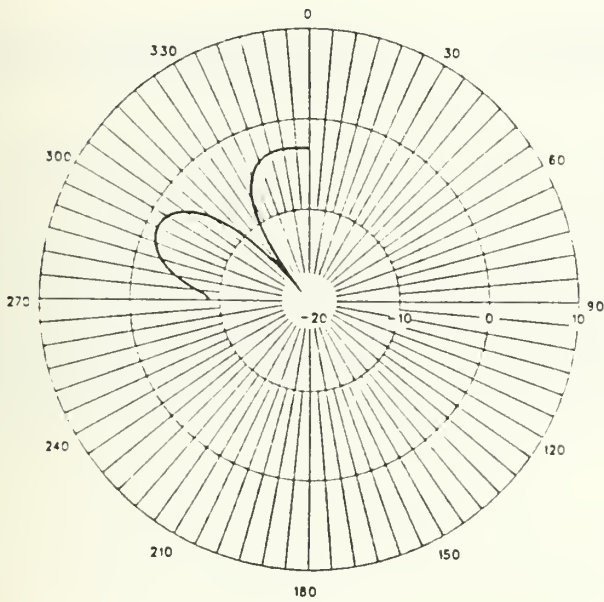

AIR FORCE HI-BAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



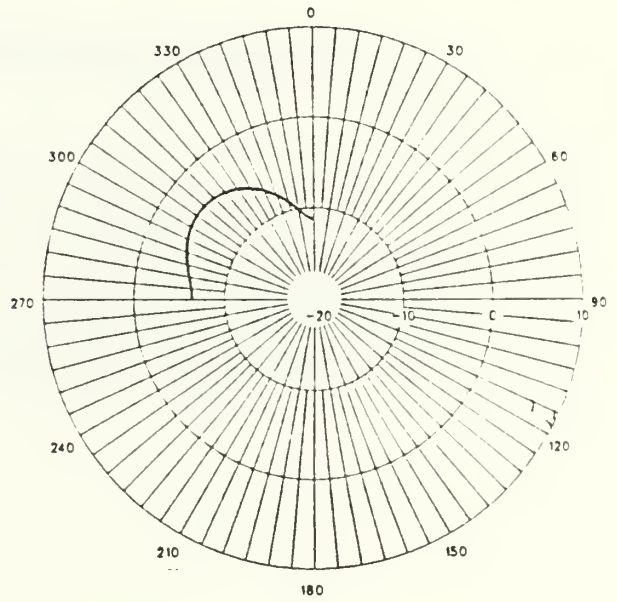


Figure 230. Azimuth patterns of the Air Force Highband DD antenna over fair ground at 30 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

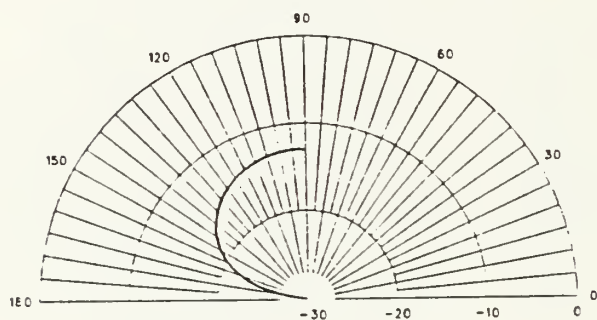

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

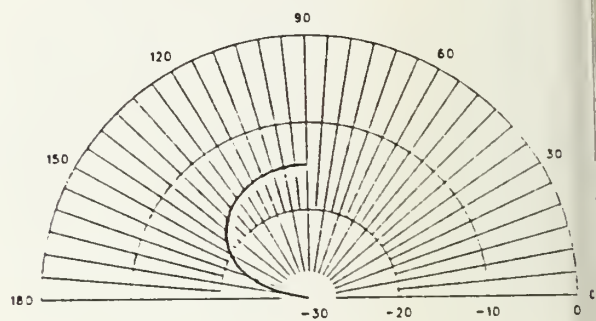

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

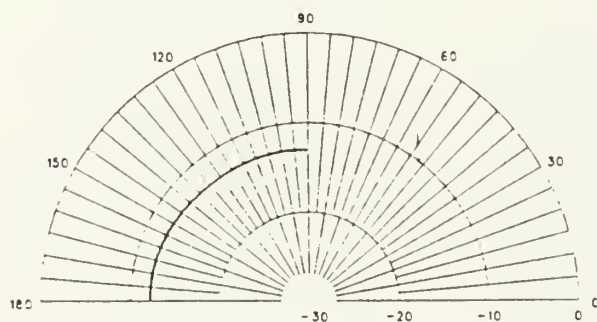

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 2 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



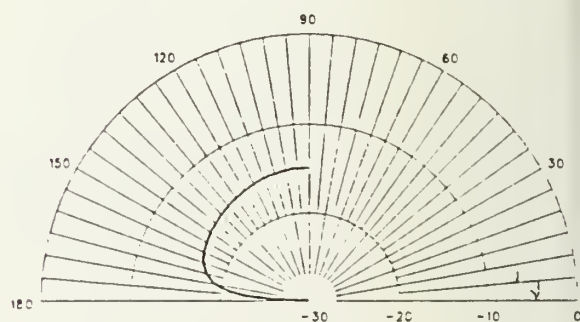


Figure 231. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 2 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

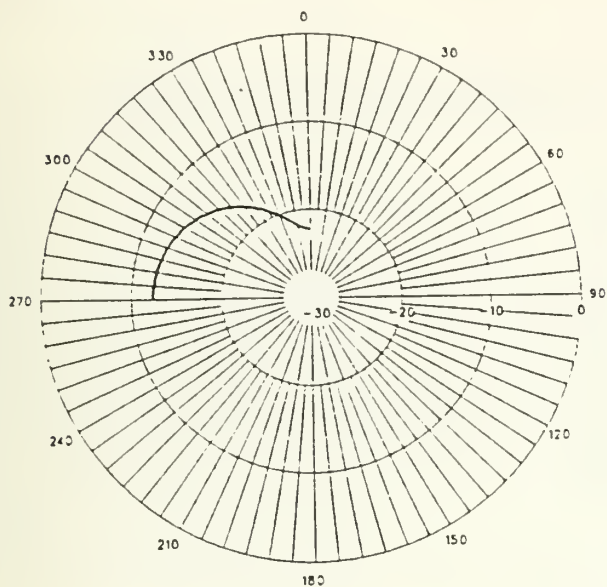

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

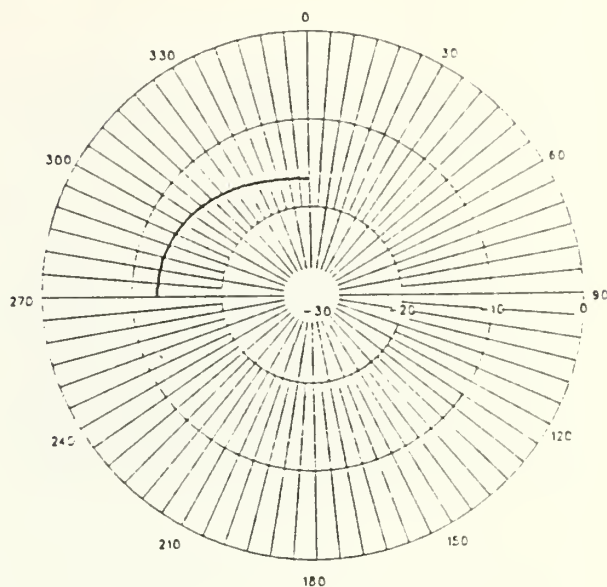

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

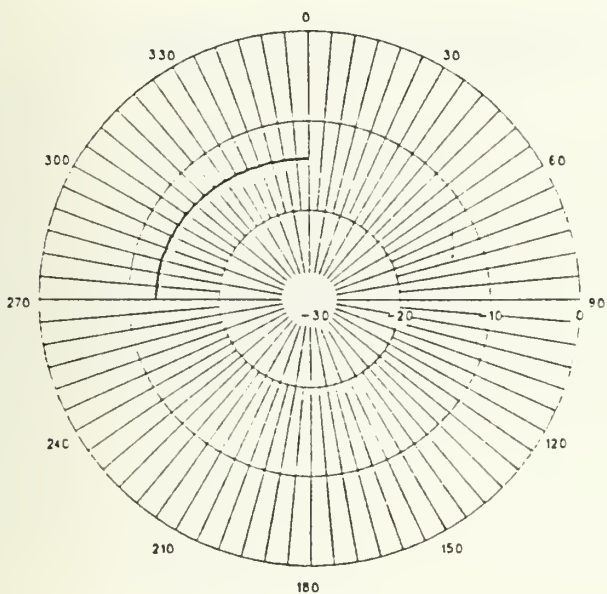

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



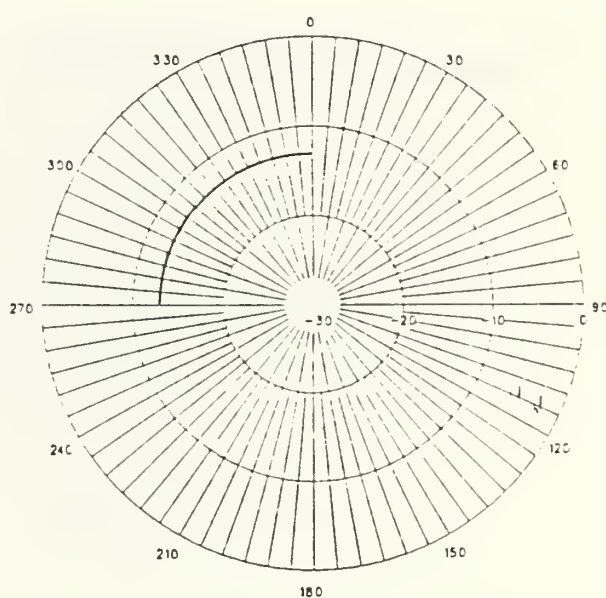


Figure 232. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 2 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

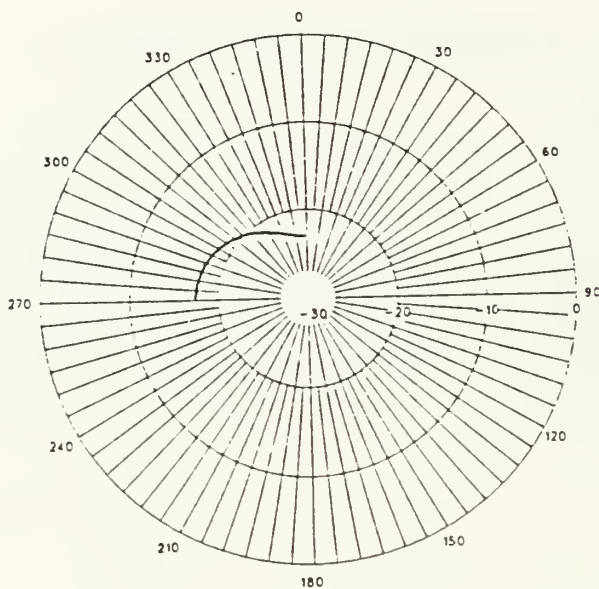

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

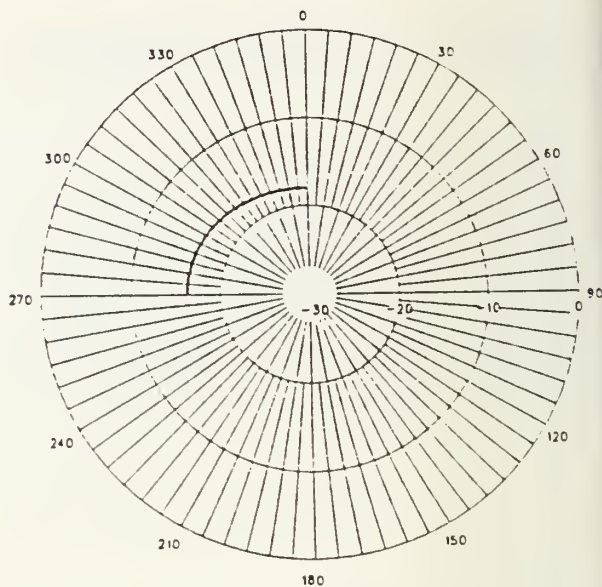

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

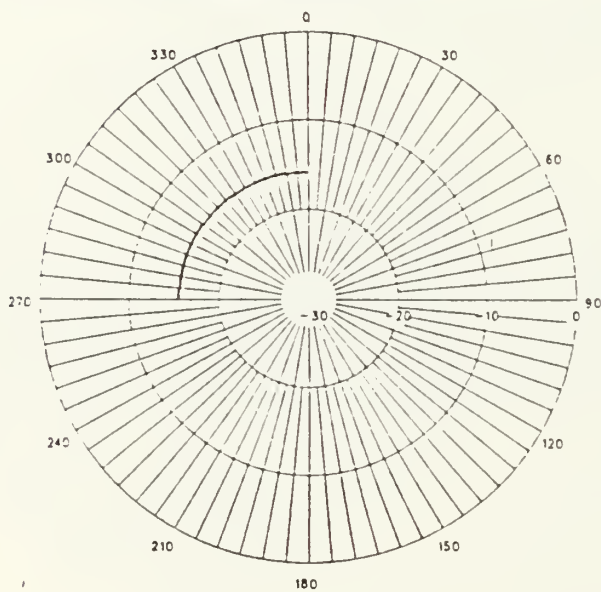

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 2 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



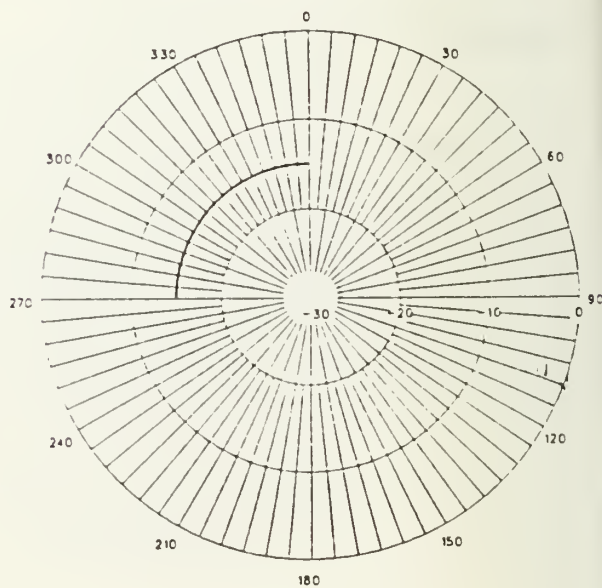


Figure 233. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 2 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

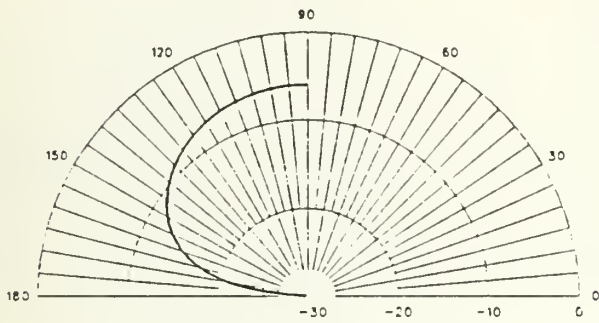

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

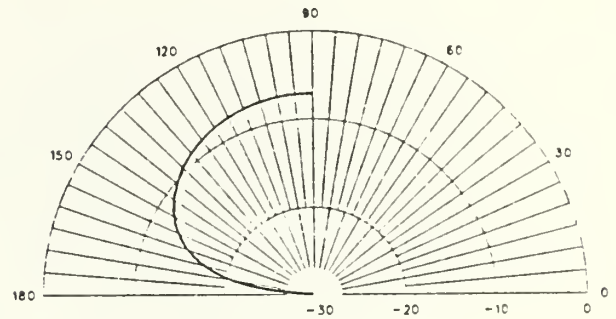

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

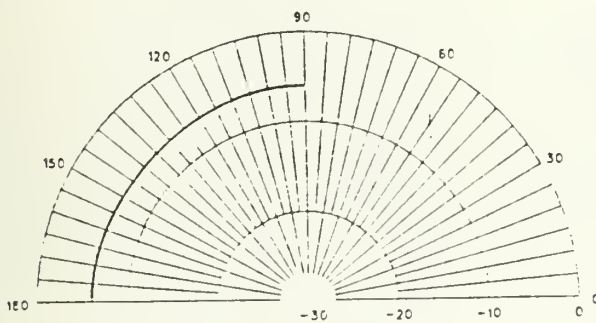

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 3 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



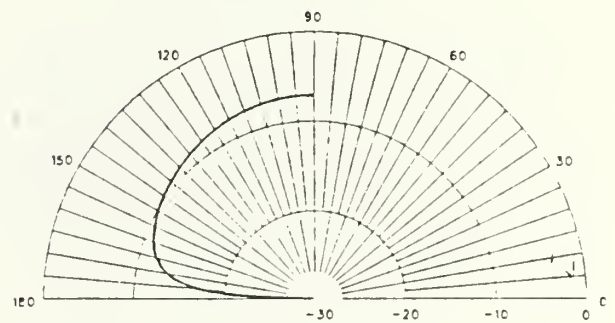


Figure 234. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 3 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

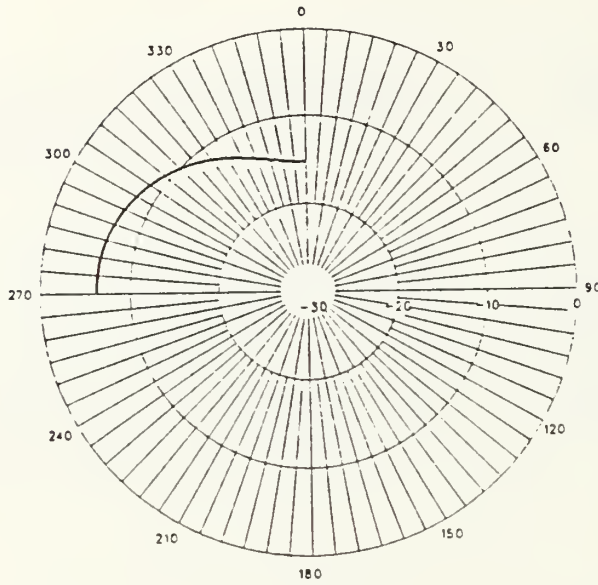

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

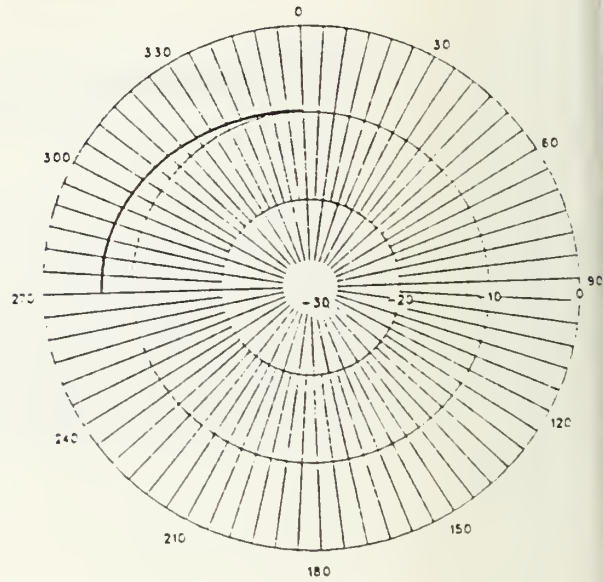

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

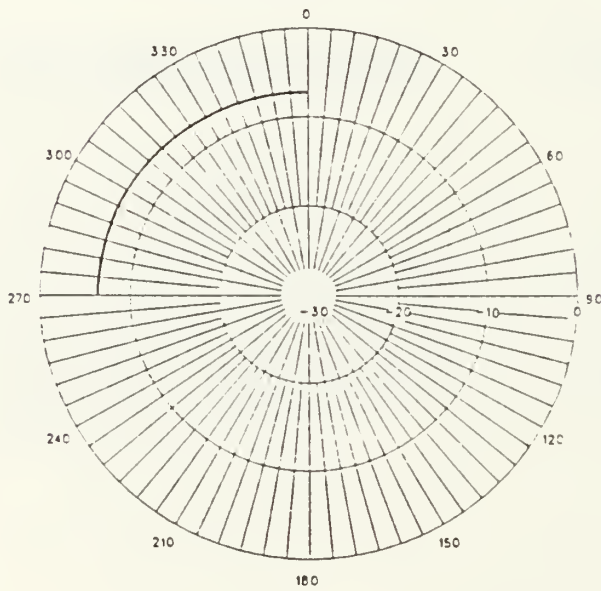

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



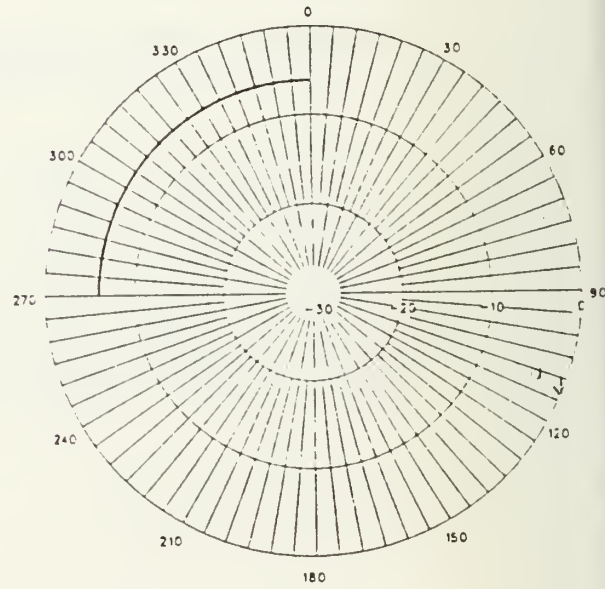


Figure 235. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 3 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

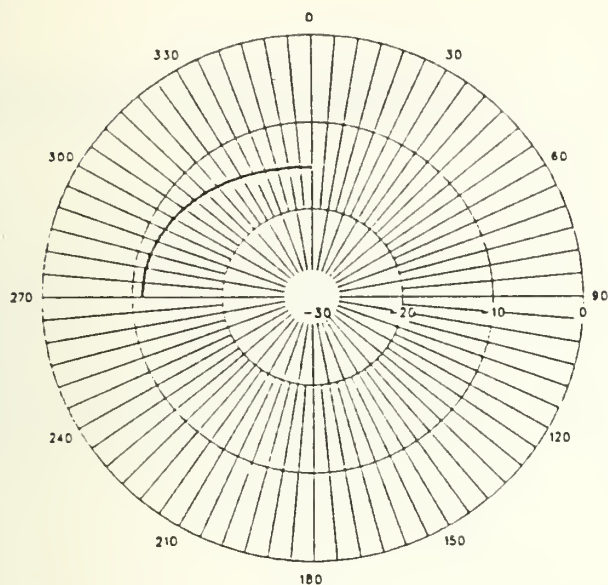

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

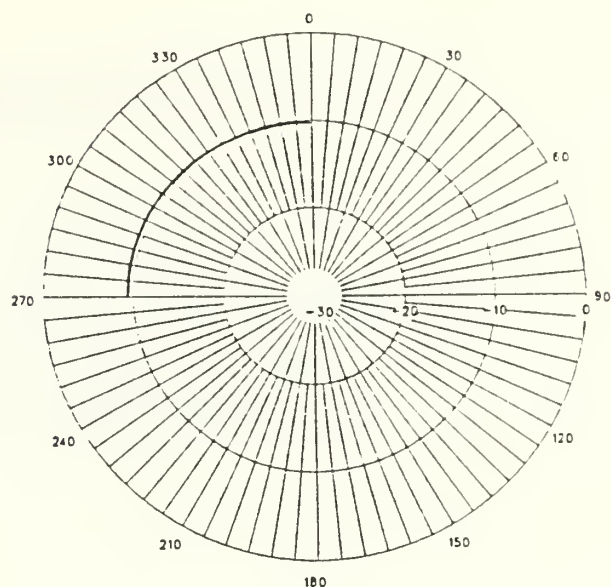

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

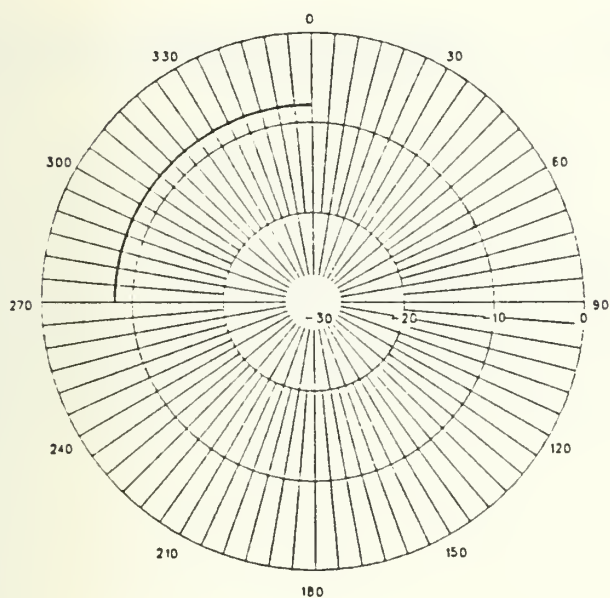

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 3 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



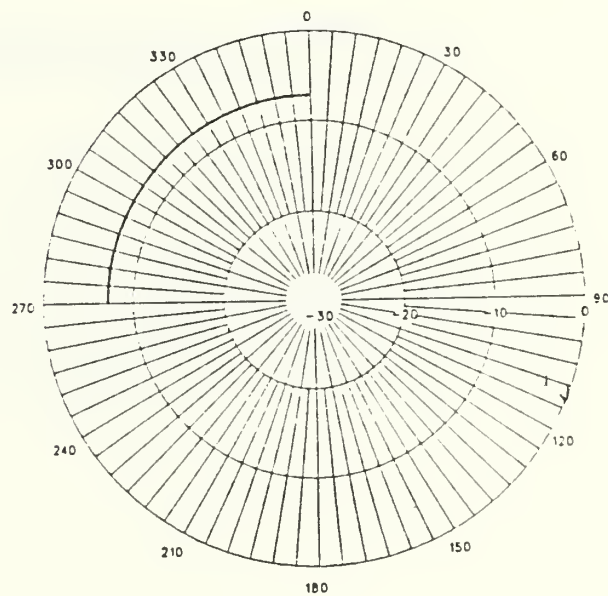


Figure 236. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 3 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

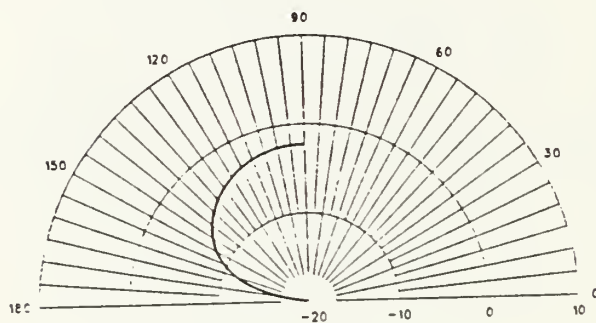

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

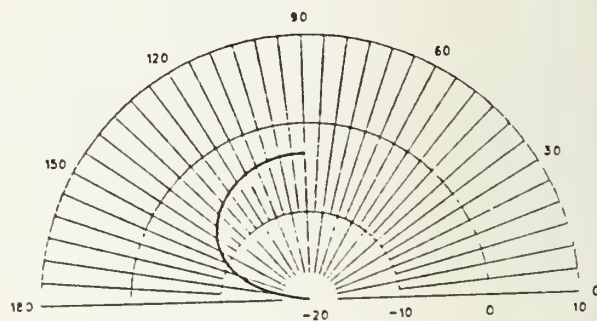

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

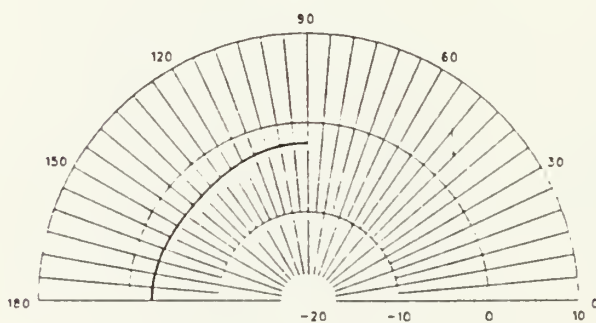

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 4 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



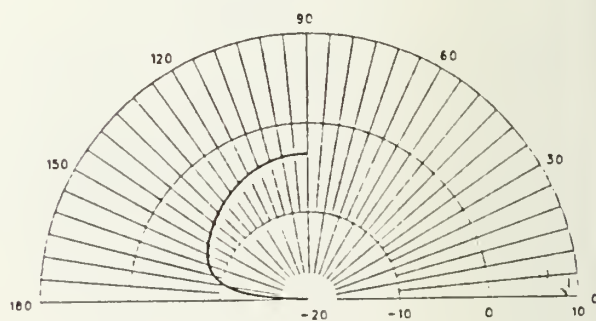


Figure 237. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 4 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

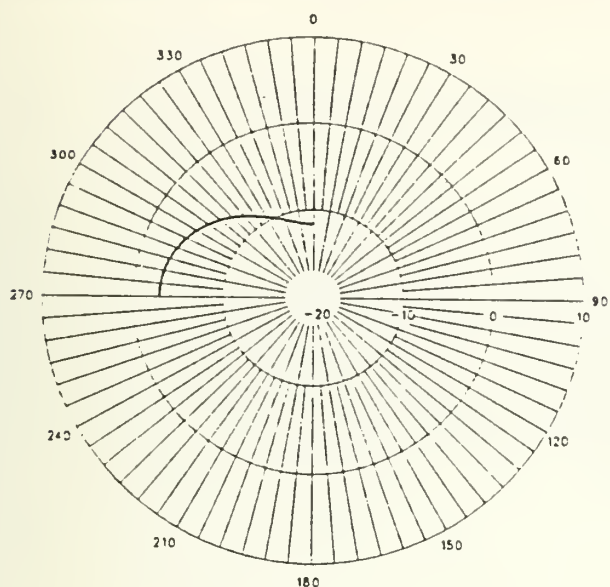

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

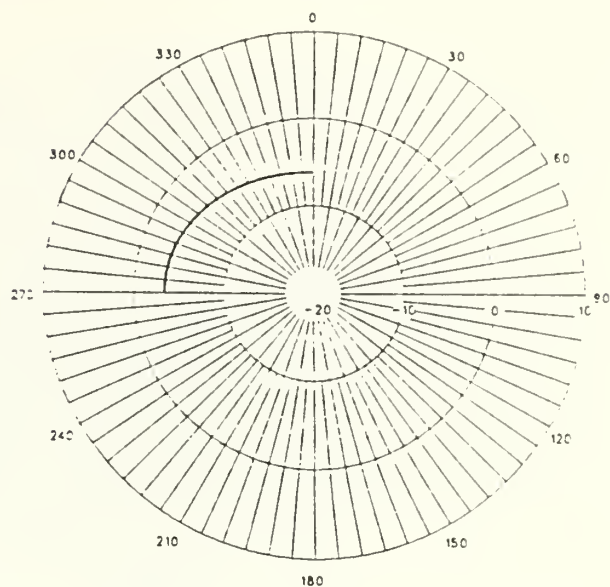

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

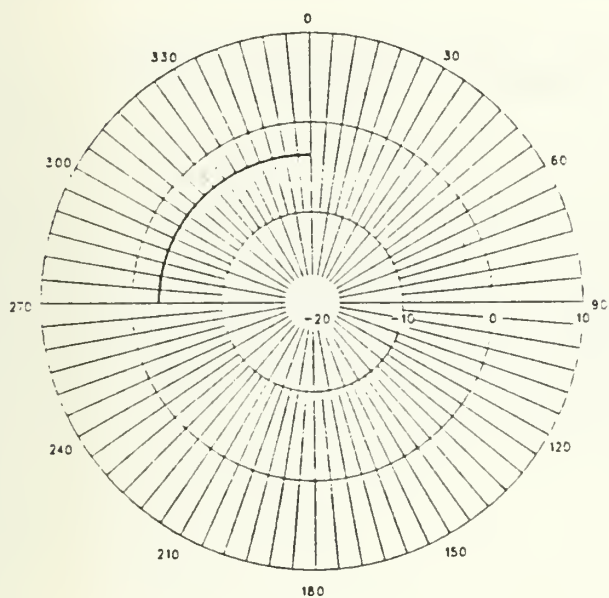

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



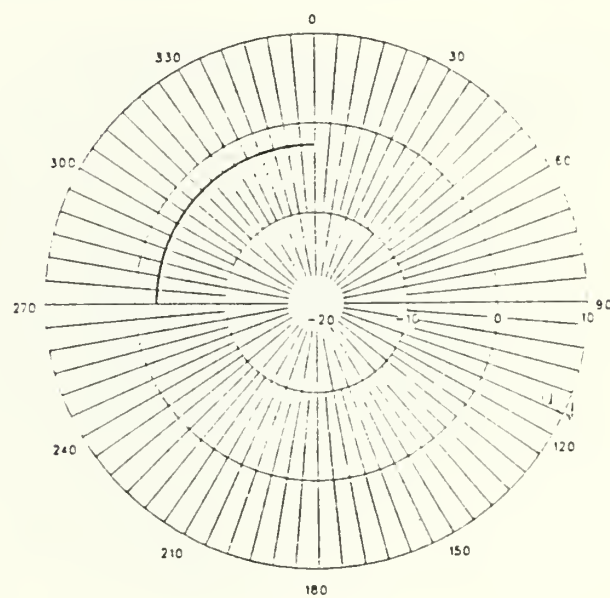


Figure 238. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 4 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

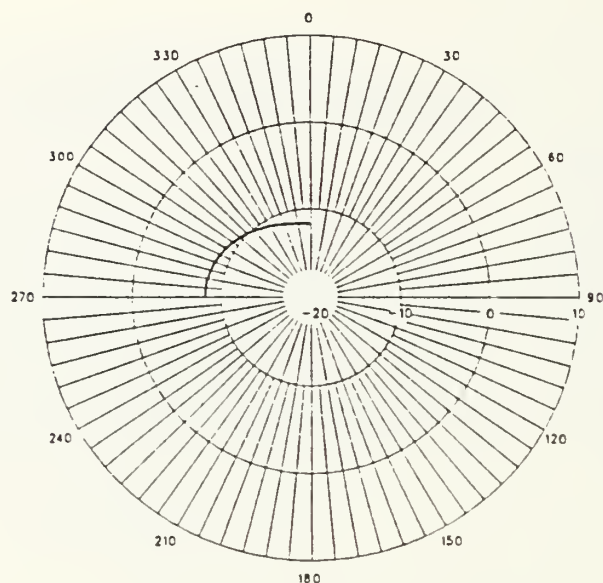

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

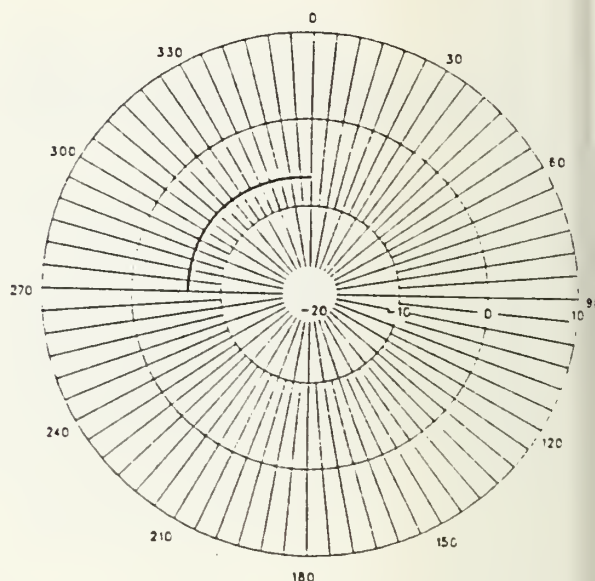

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

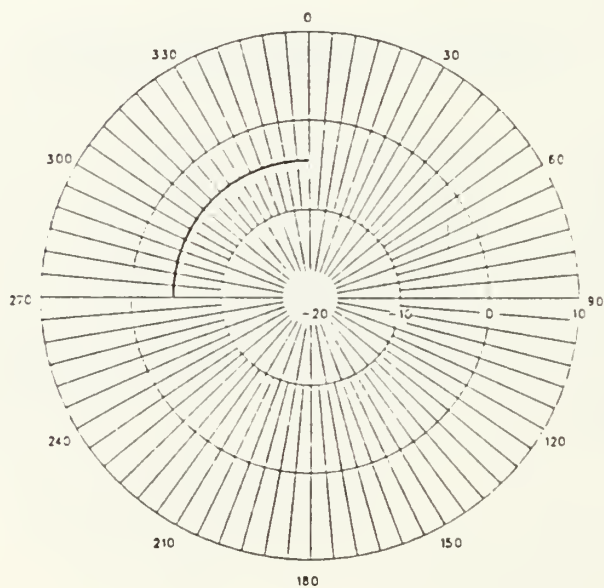

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 4 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



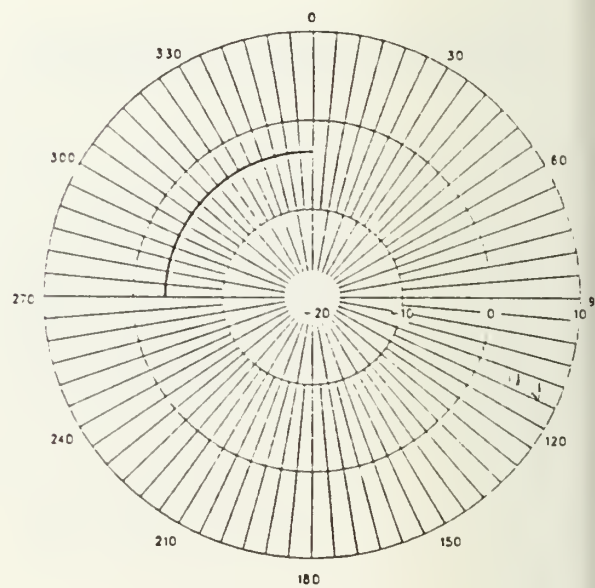


Figure 239. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 4 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

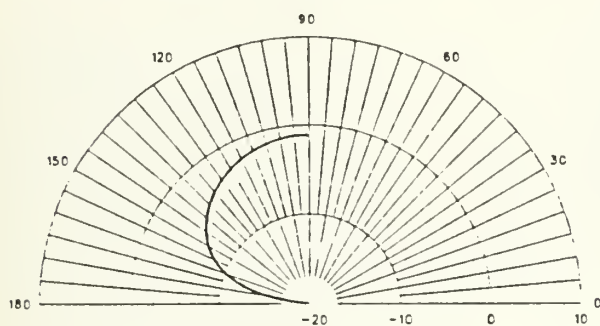

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

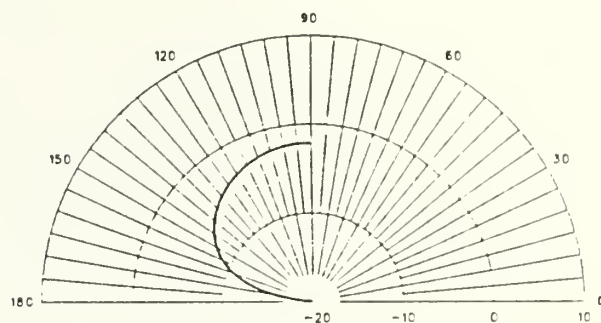

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

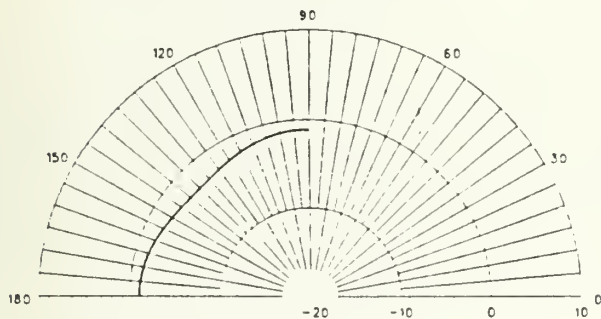

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 5 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



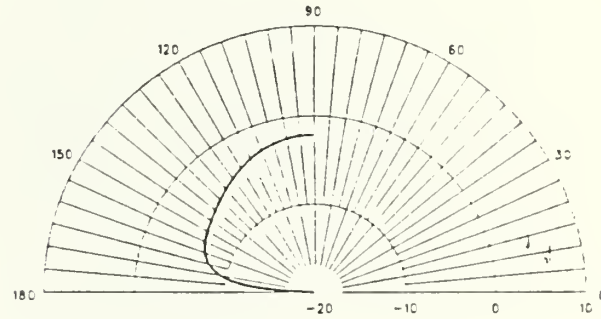


Figure 240. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 5 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

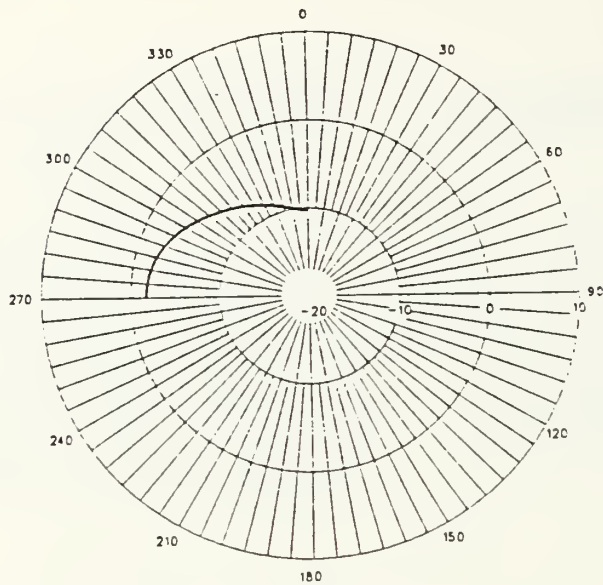

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

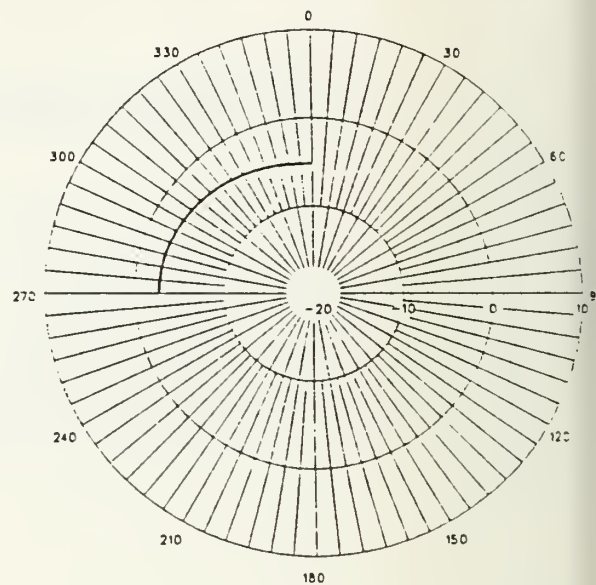

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

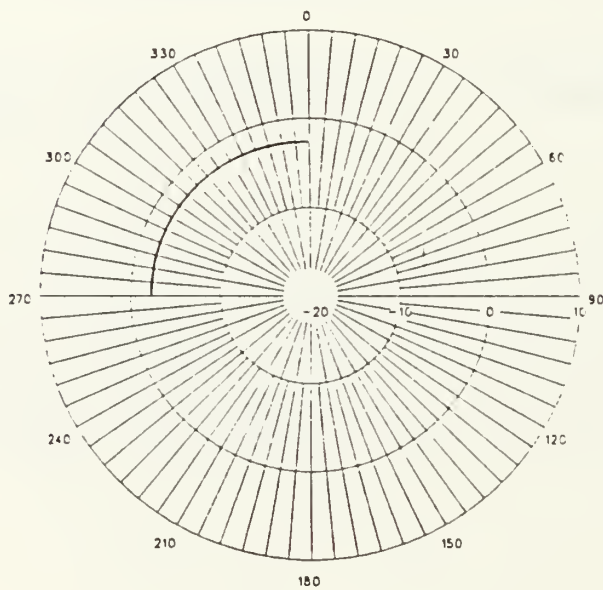

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



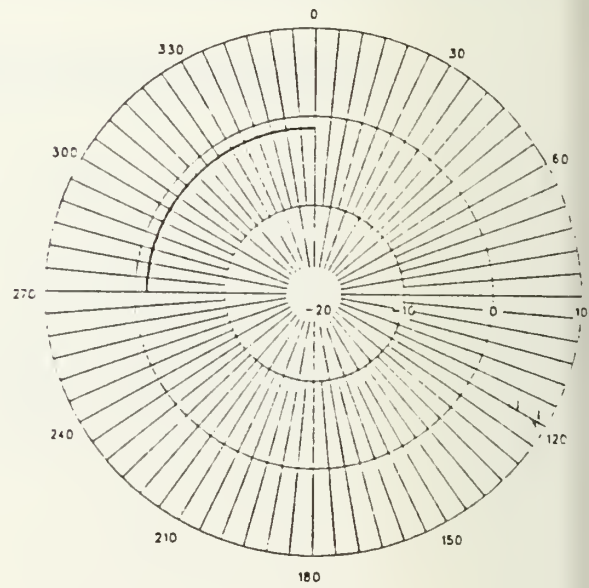


Figure 241. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 5 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

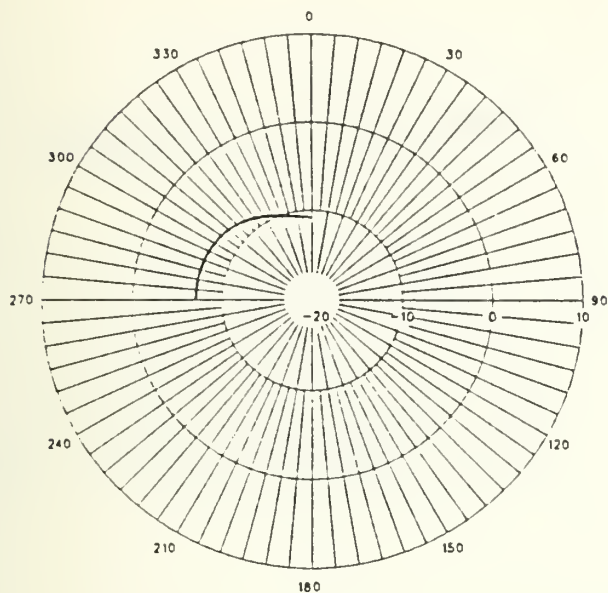

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

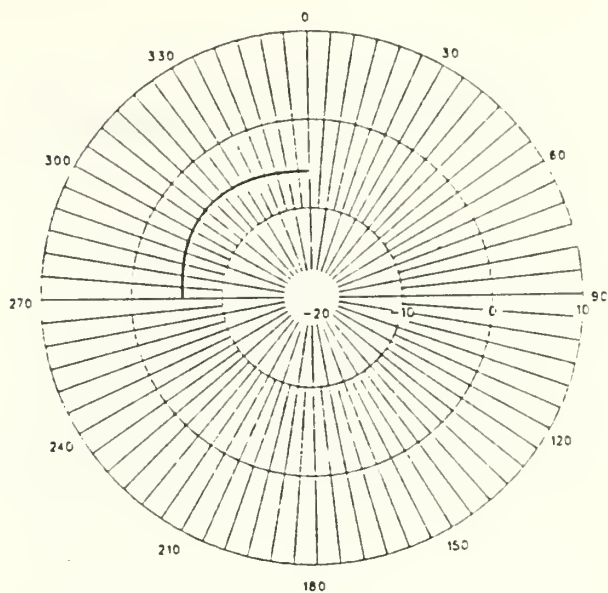

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

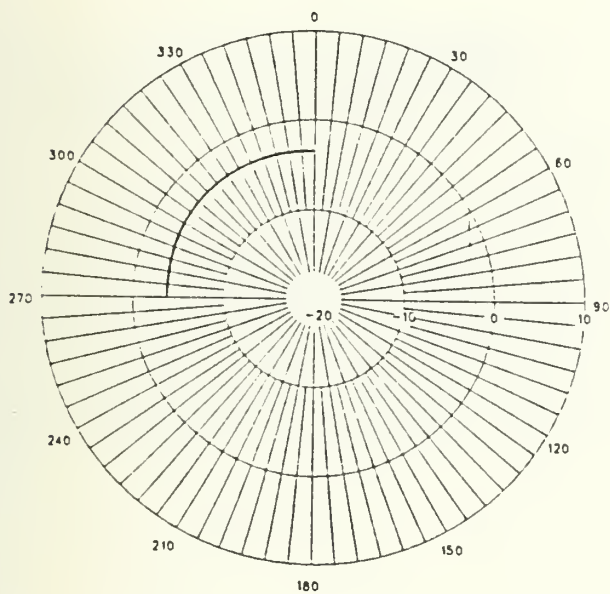

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 5 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



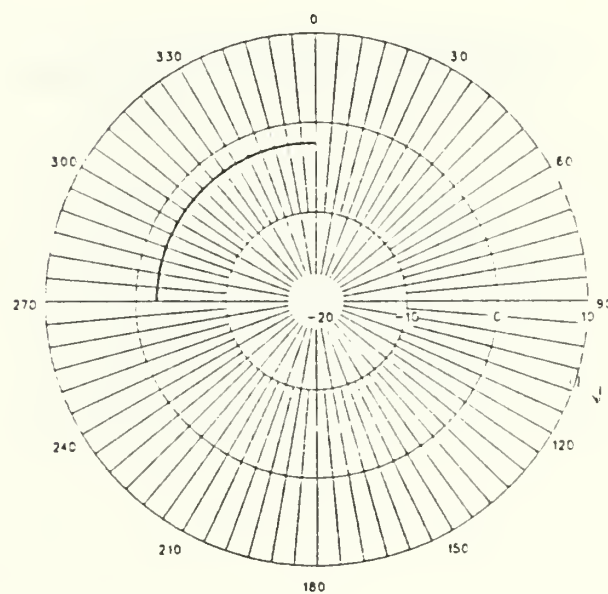


Figure 242. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 5 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

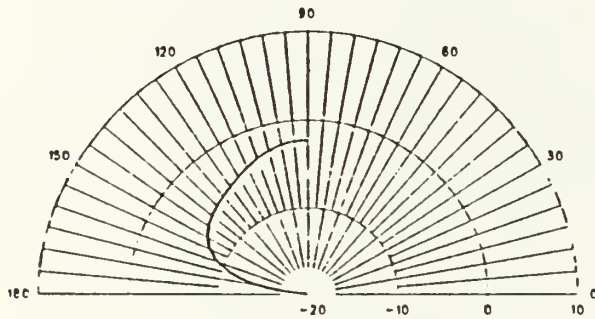

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

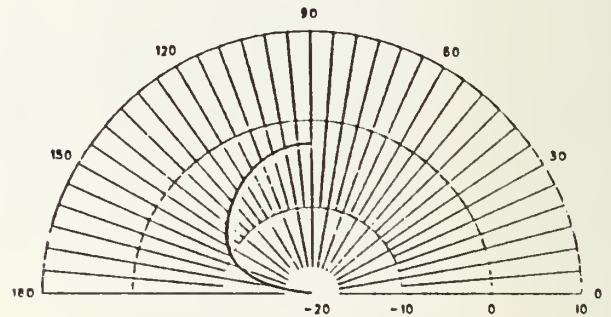

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

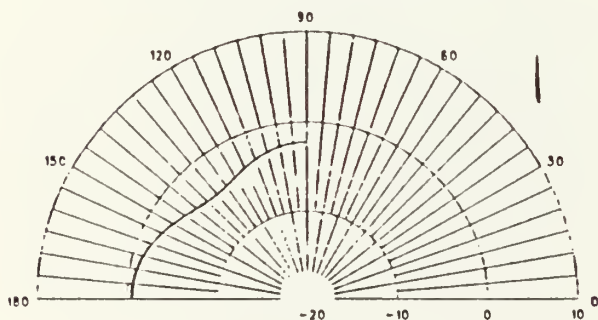

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 6 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



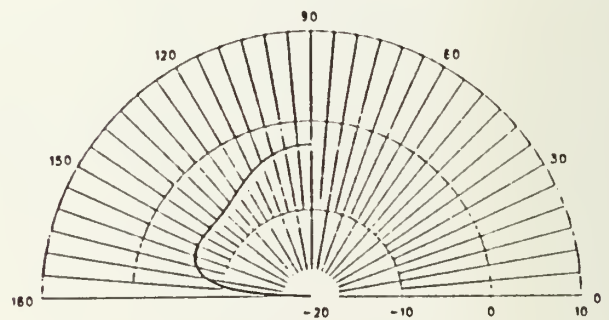


Figure 243. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 6 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

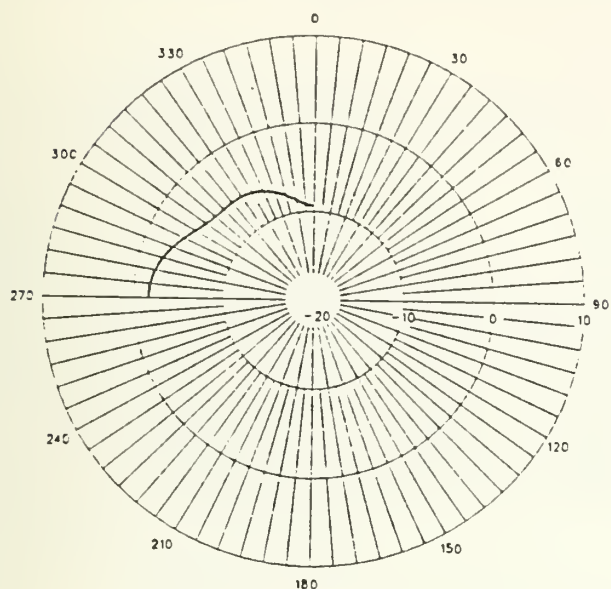

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

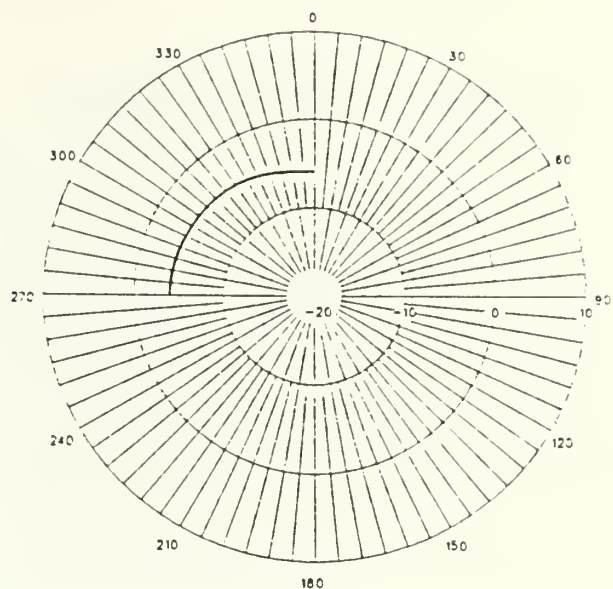

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

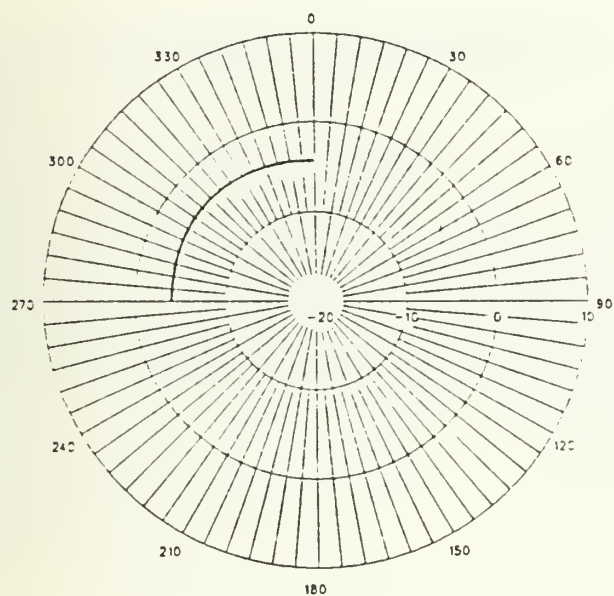

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



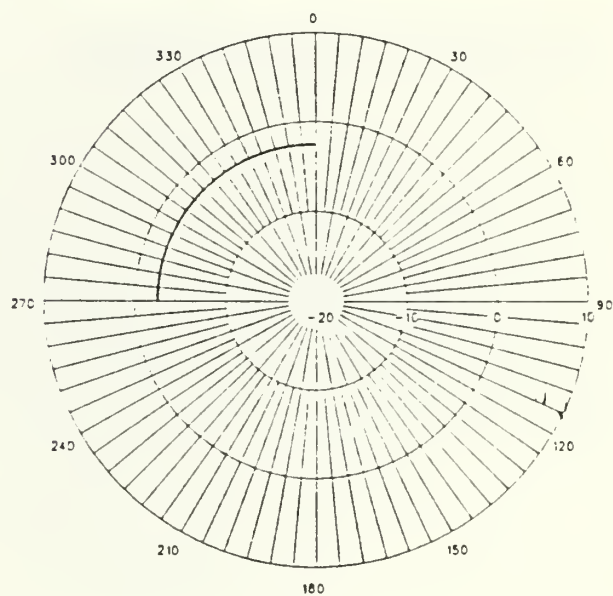


Figure 244. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 6 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

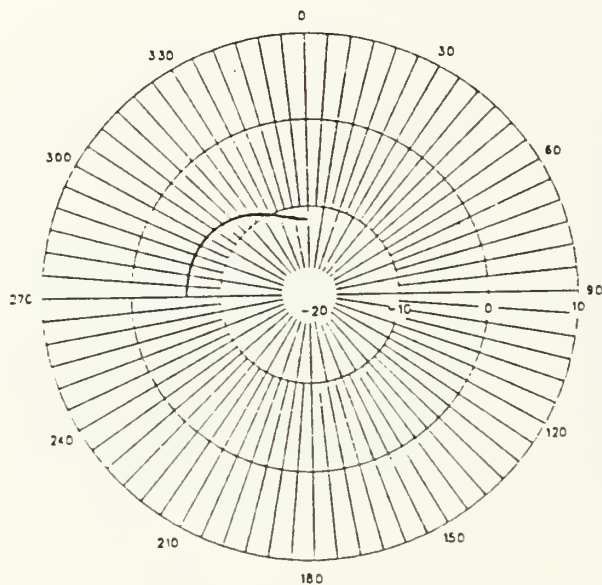

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

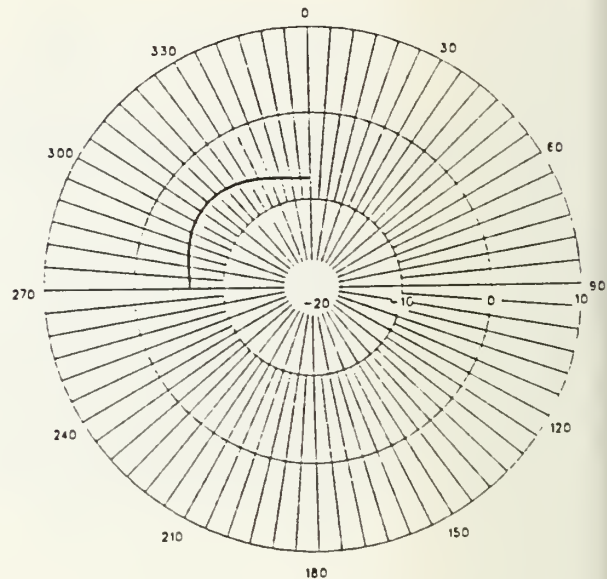

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

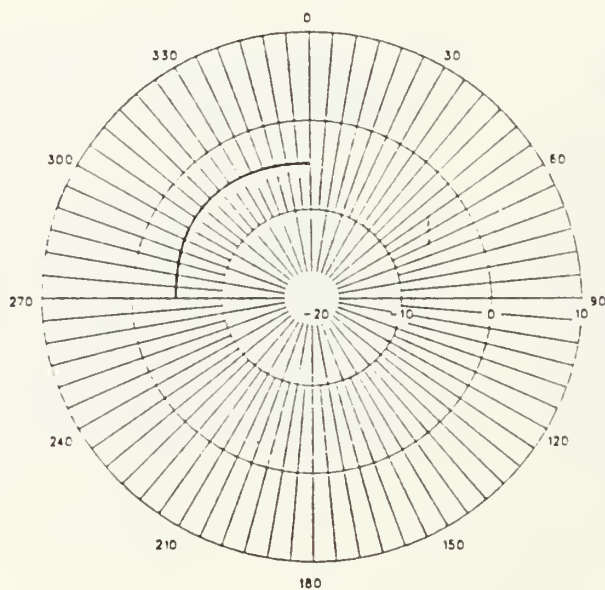

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 6 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



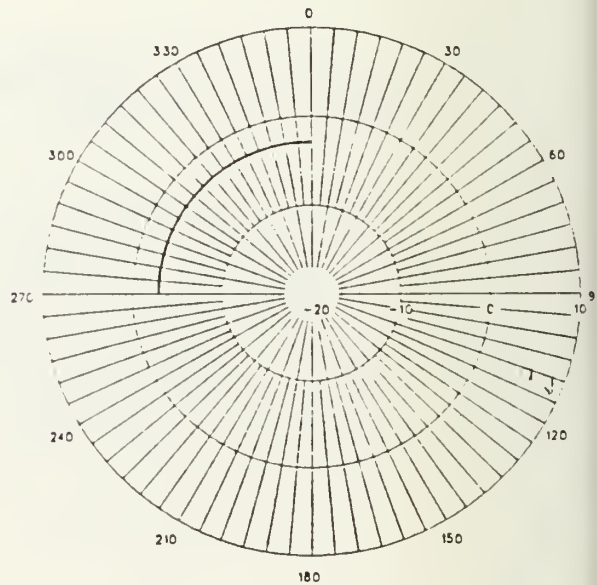


Figure 245. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 6 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

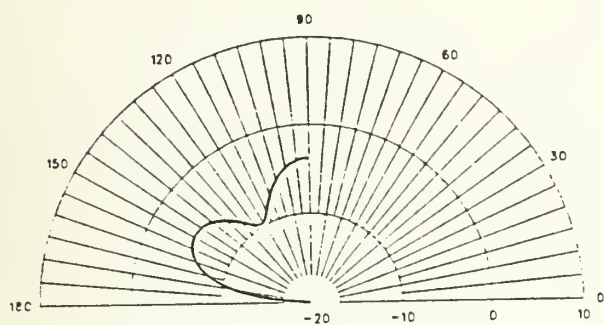

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

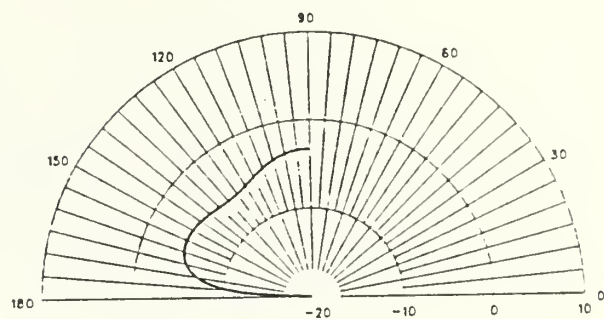

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

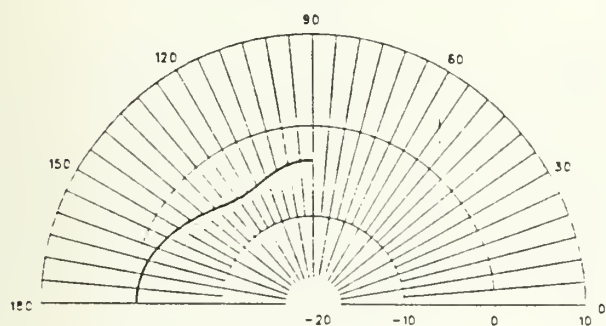

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 7 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT



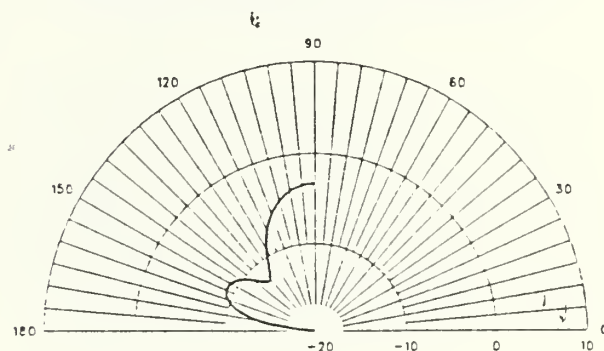


Figure 246. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 7 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

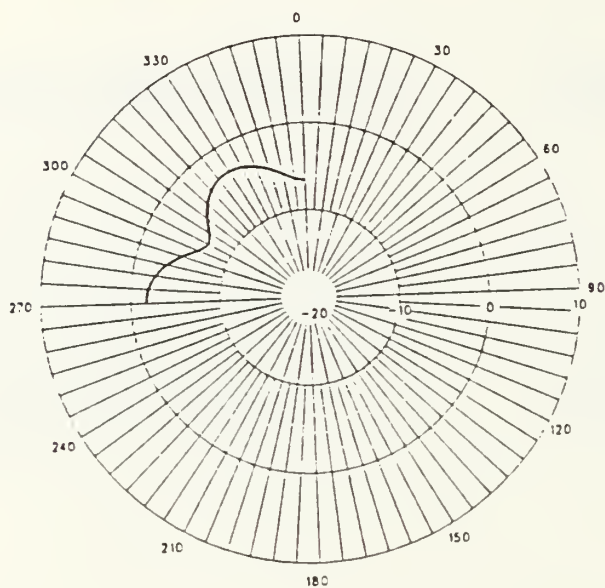

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

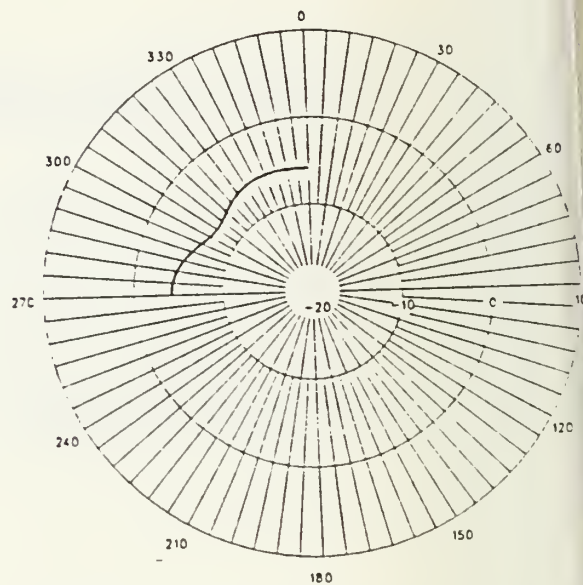

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

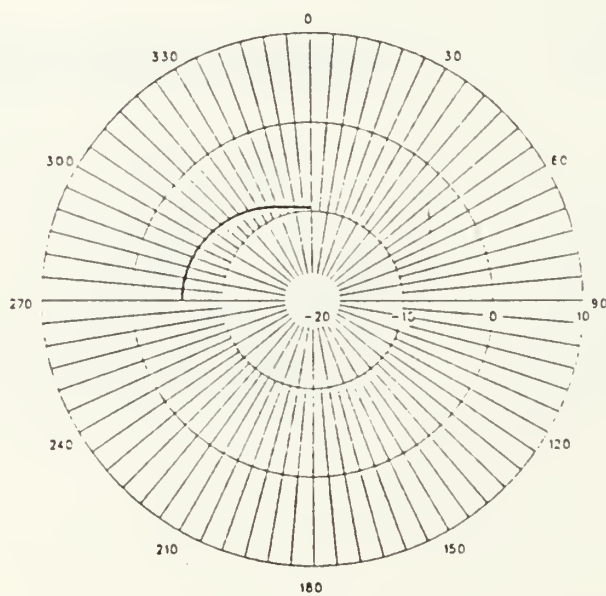

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



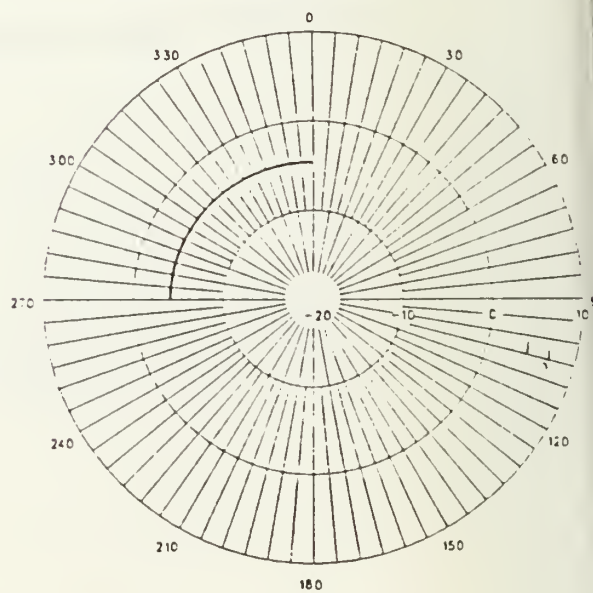


Figure 247. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 7 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

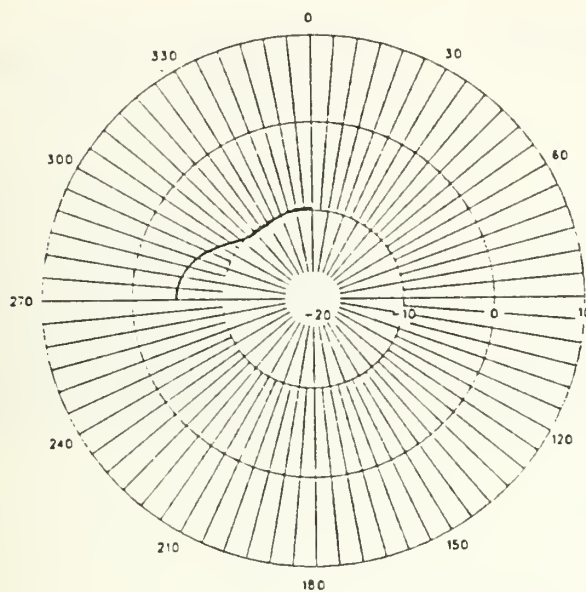

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

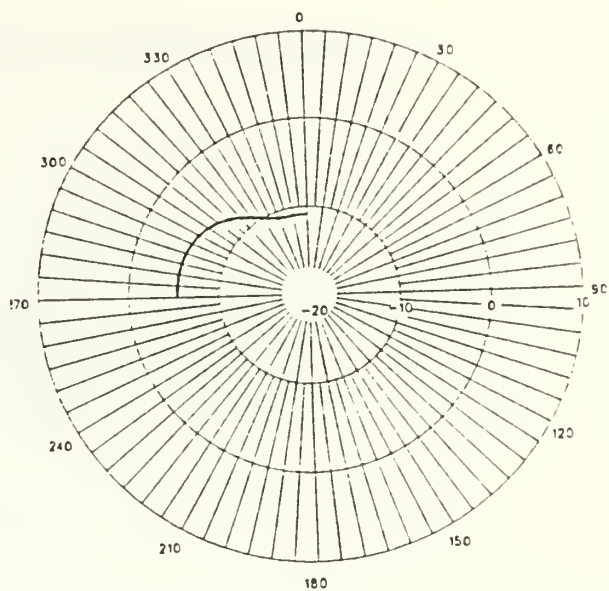

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

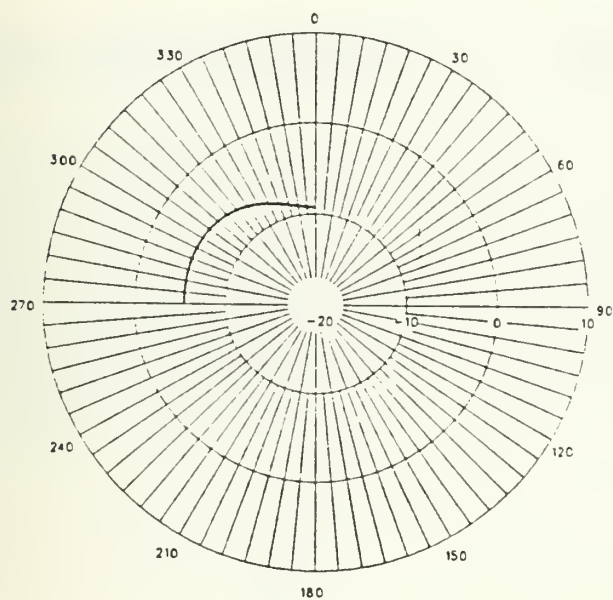

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 7 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



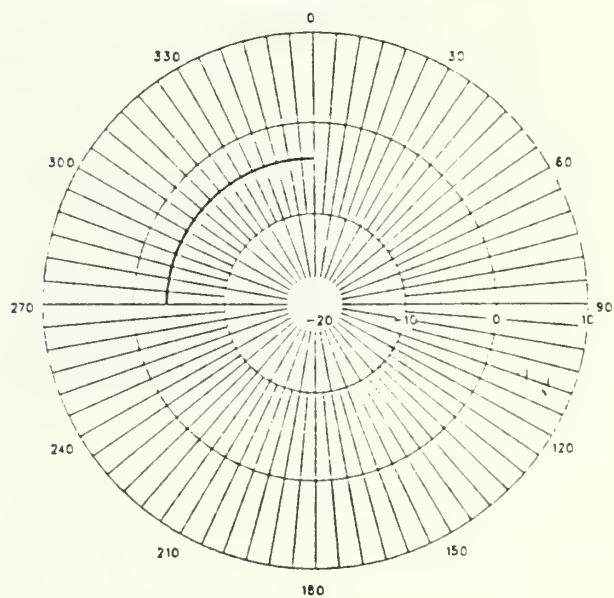


Figure 248. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 7 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

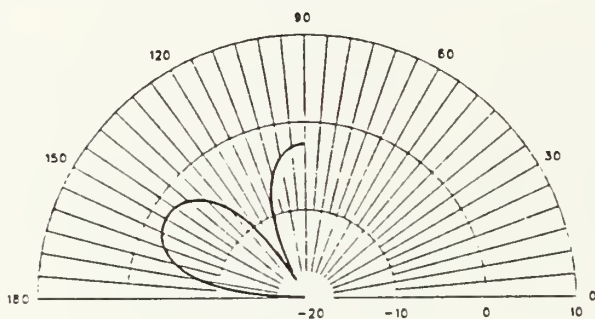

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

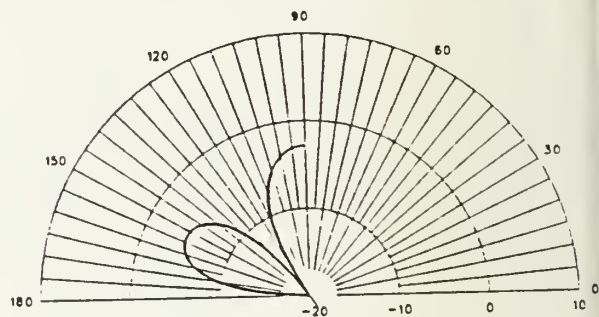

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

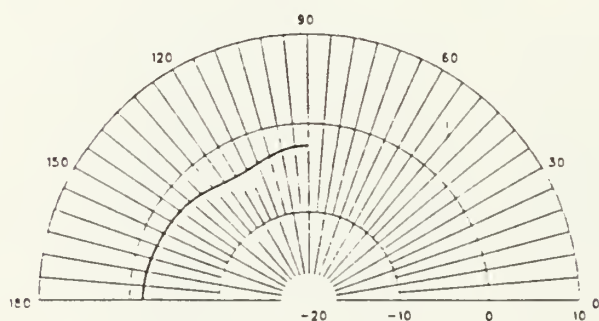

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 8 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



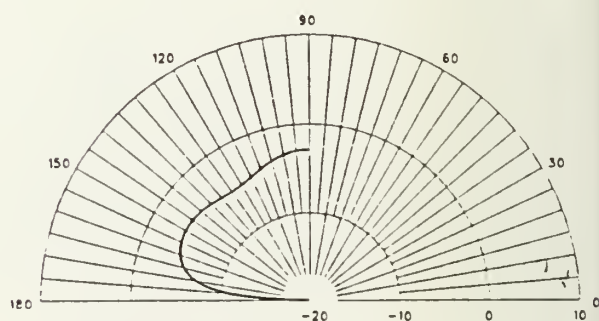


Figure 249. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 8 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

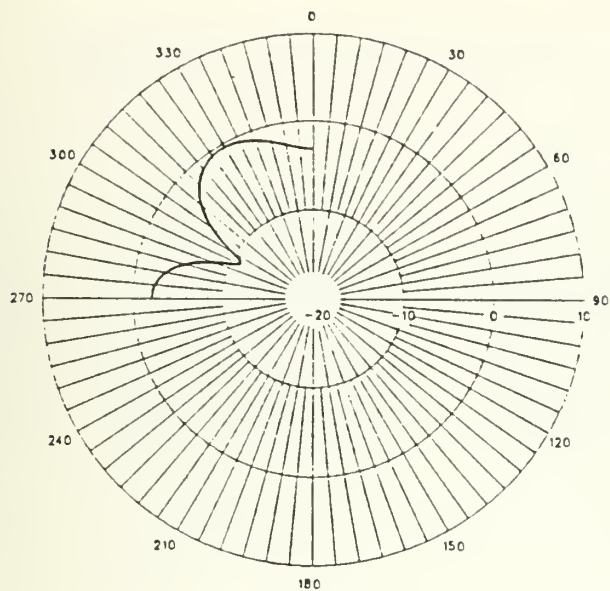

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

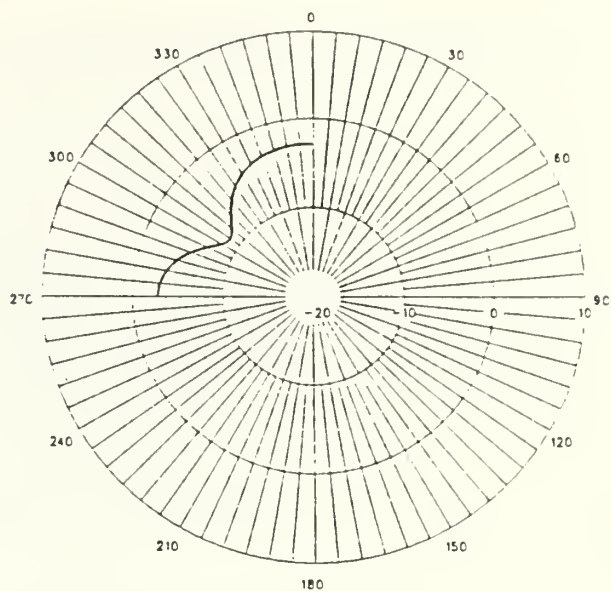

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

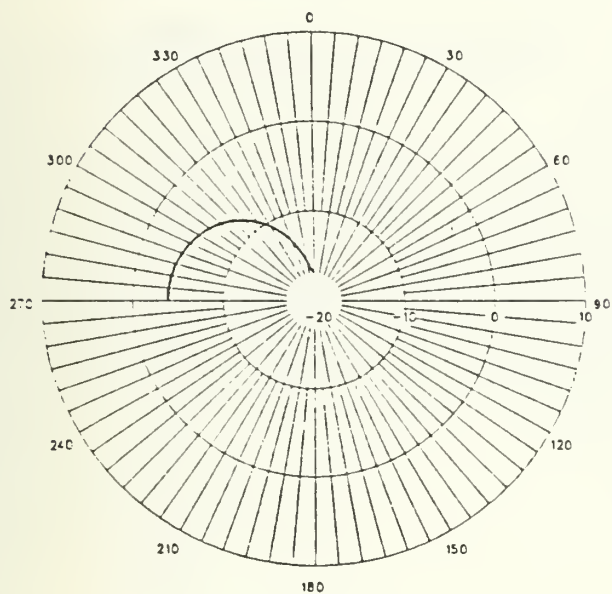

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



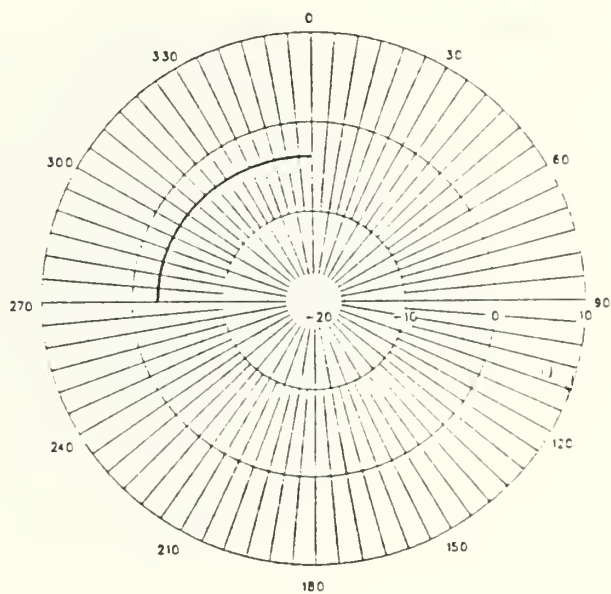


Figure 250. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 8 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

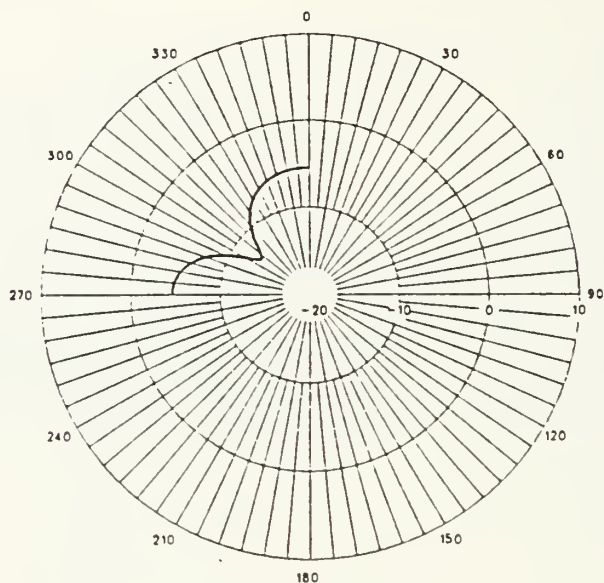

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

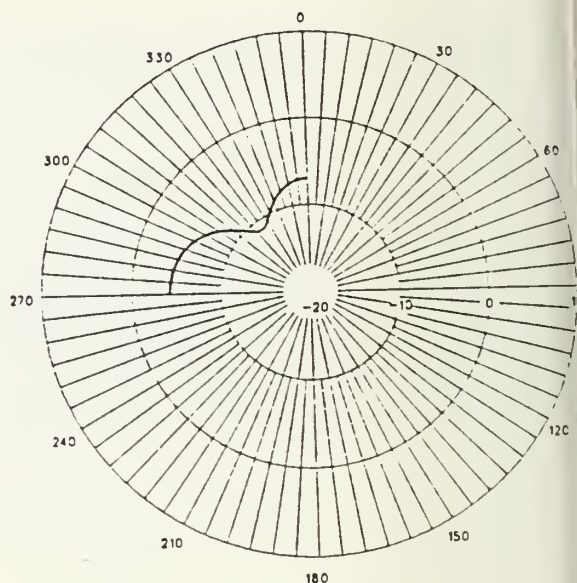

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

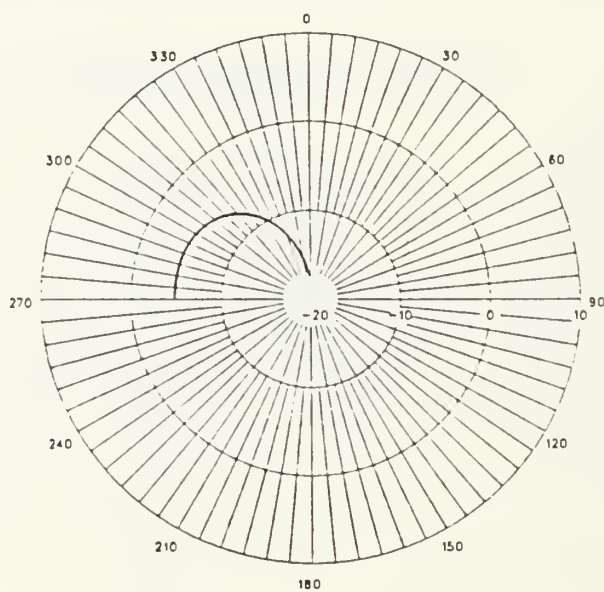

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 8 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



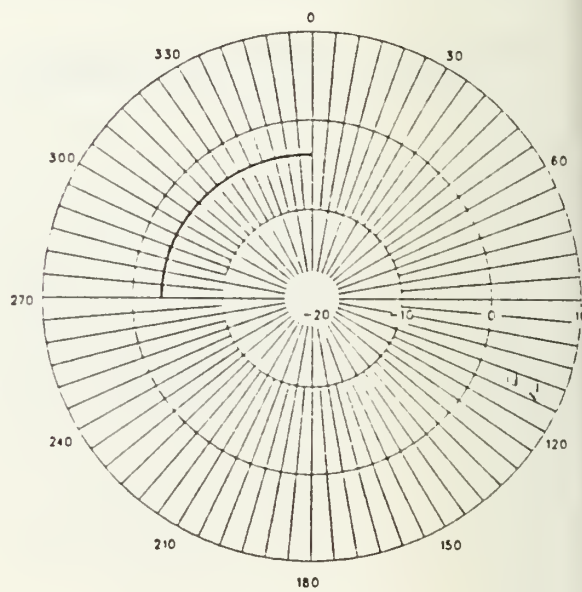


Figure 251. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 8 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

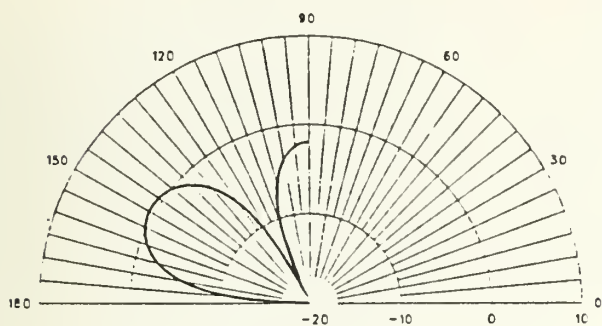

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

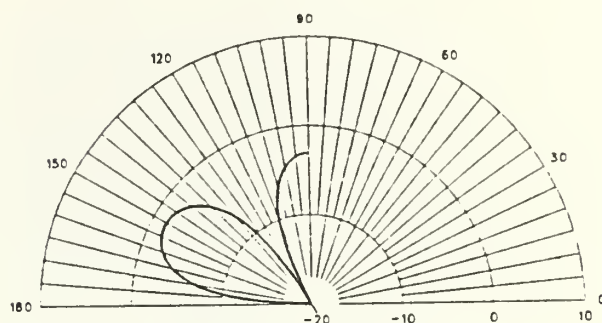

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

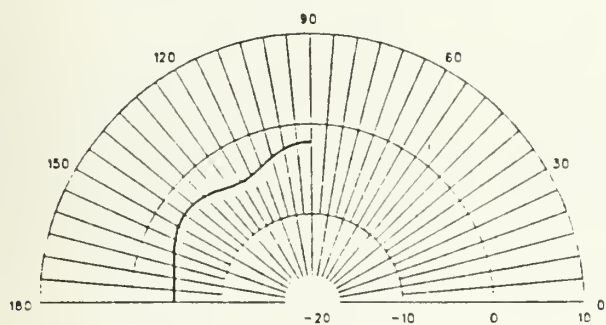

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 9 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



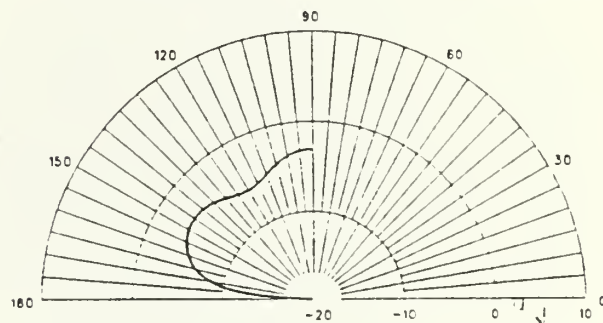


Figure 252. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 9 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

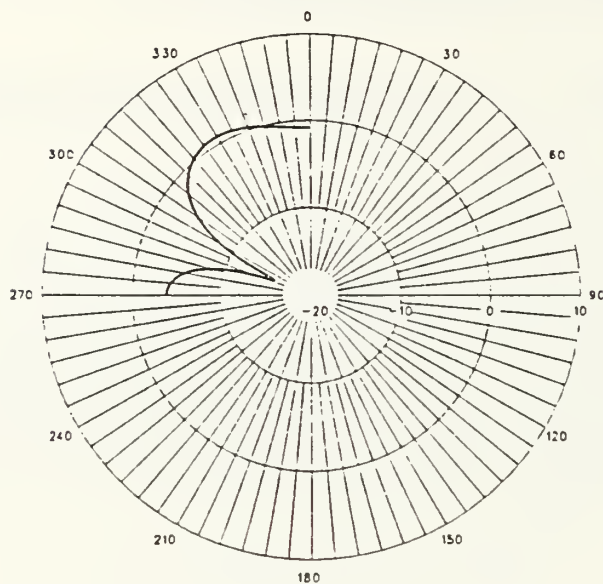

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

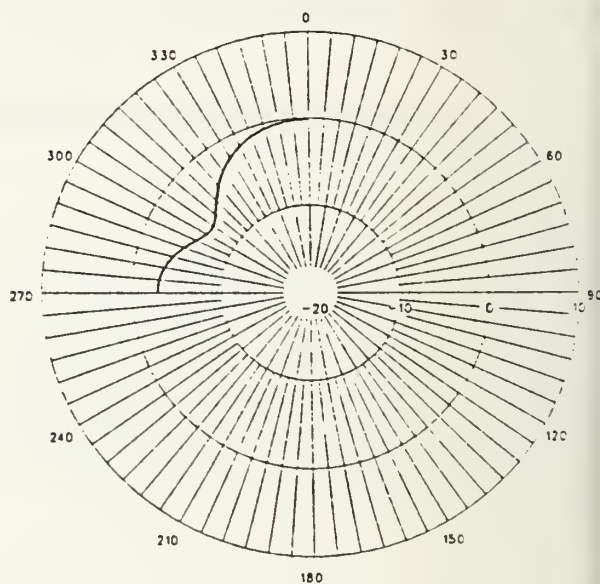

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

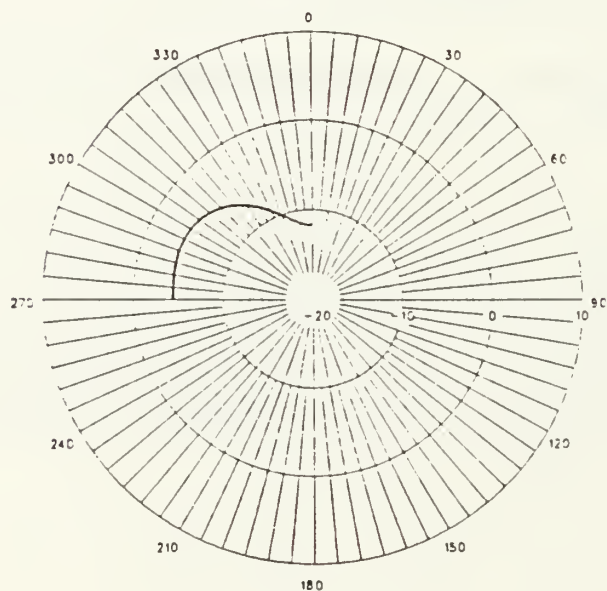

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



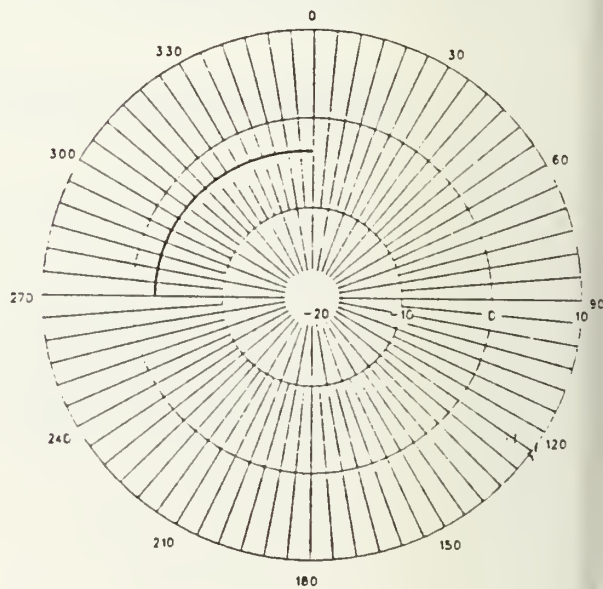


Figure 253. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 9 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

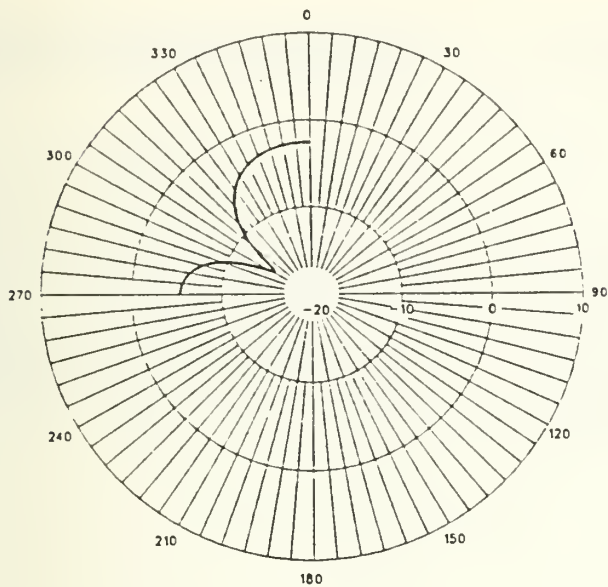

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

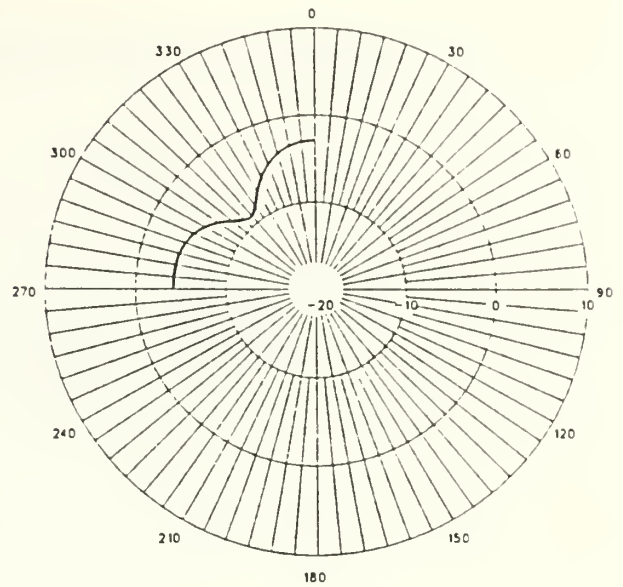

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

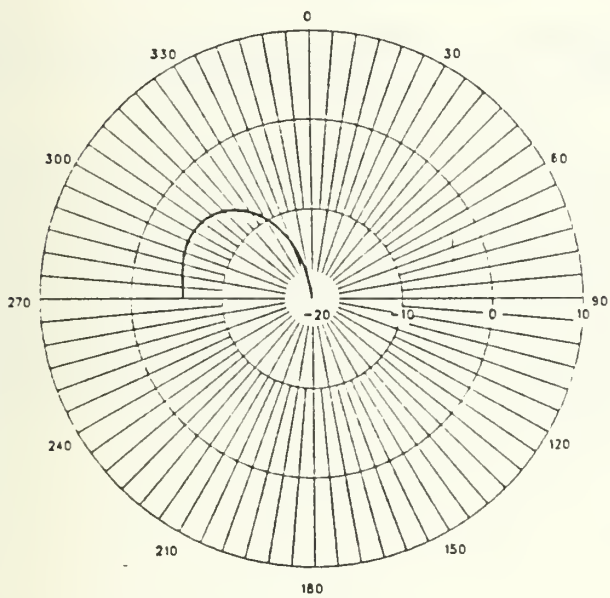

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 9 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



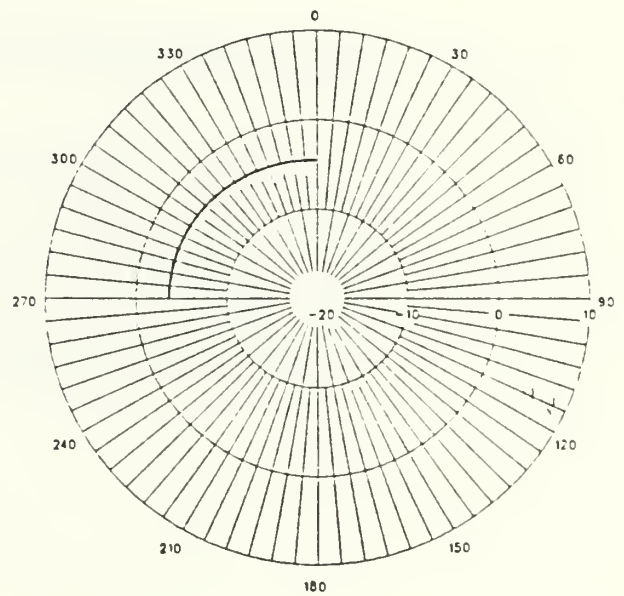


Figure 254. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 9 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

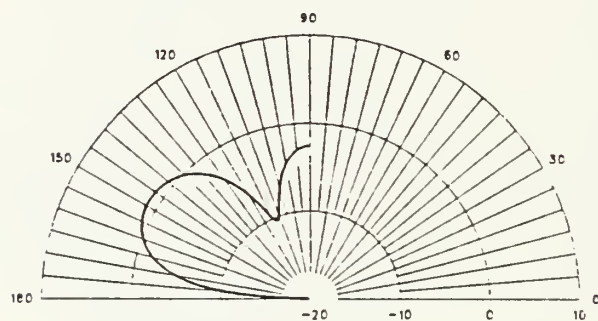

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

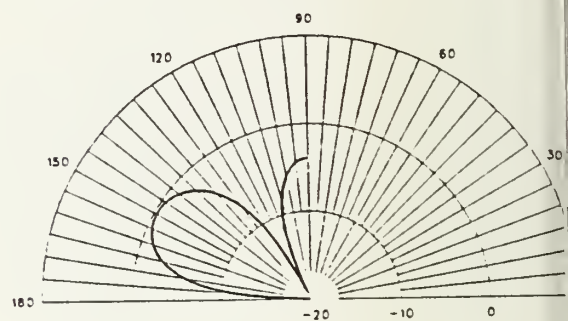

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

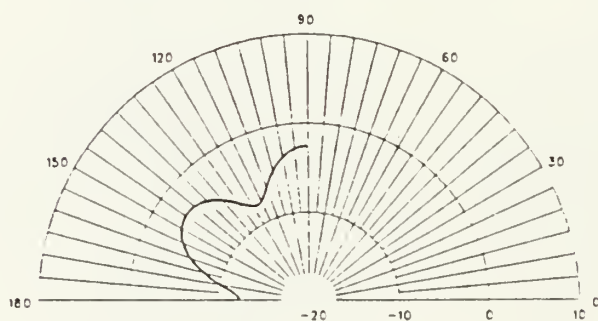

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 10 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



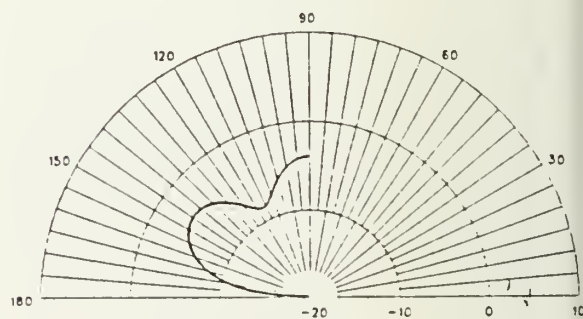


Figure 255. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 10 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

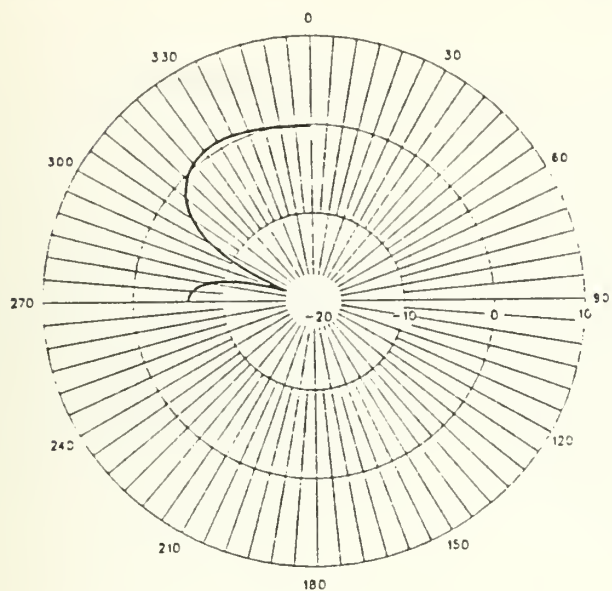

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

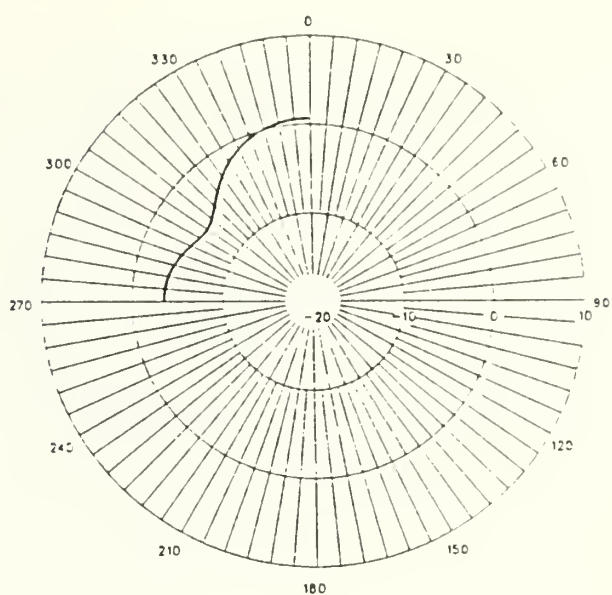

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

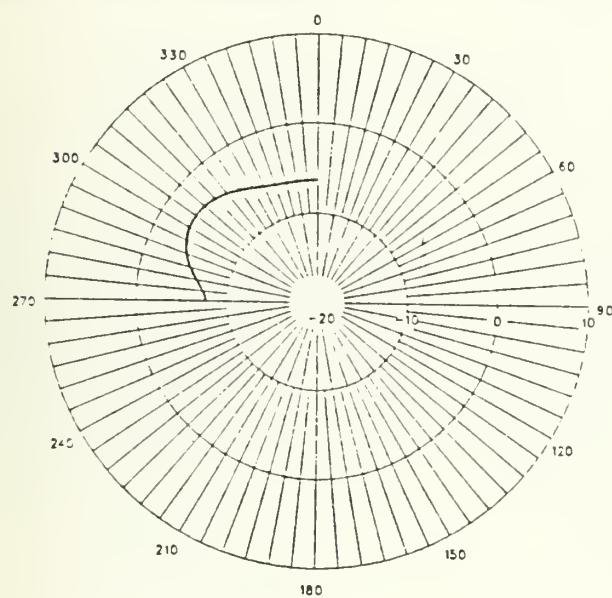

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



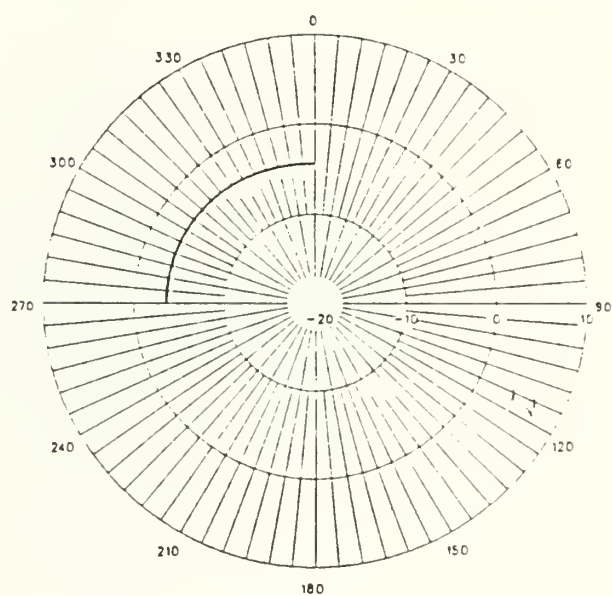


Figure 256. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 10 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

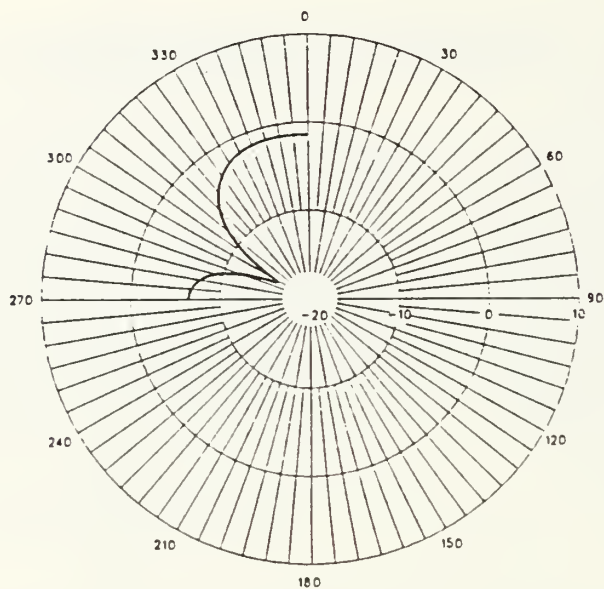

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

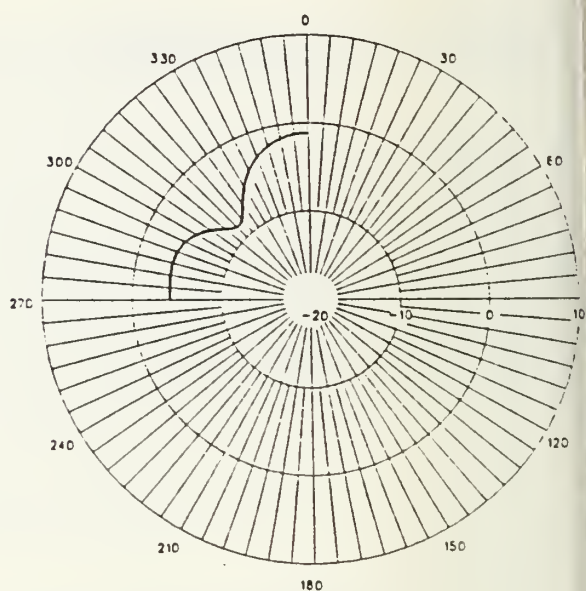

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

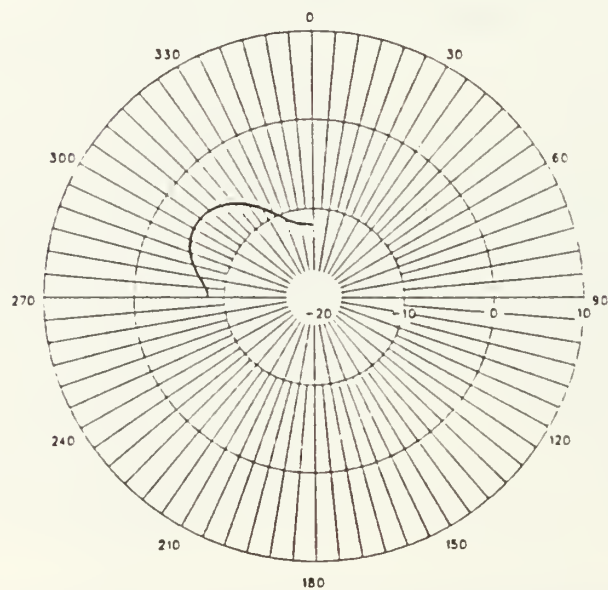

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 10 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



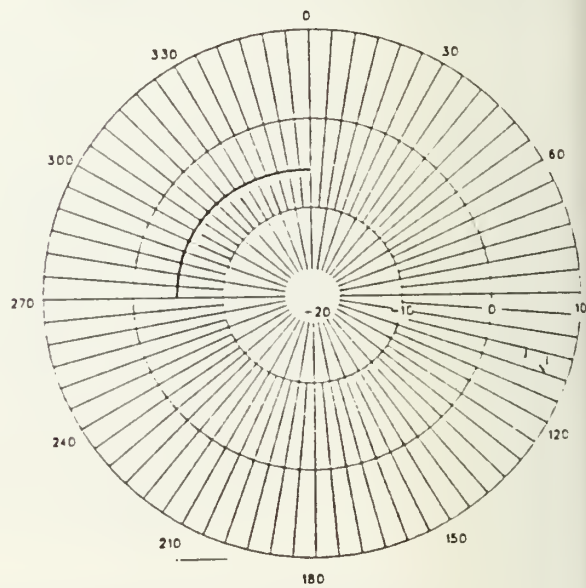


Figure 257. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 10 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 11 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

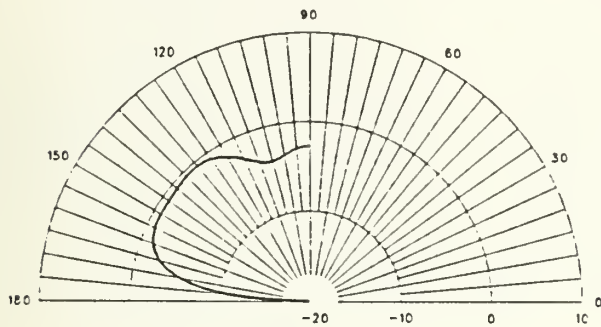

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 11 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

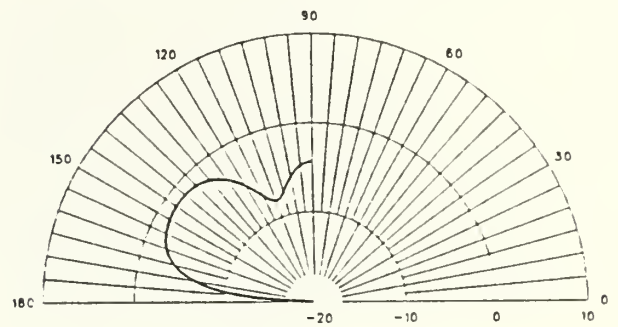

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 11 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

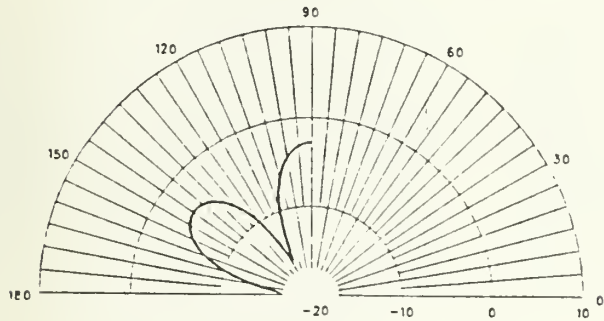

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 11 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



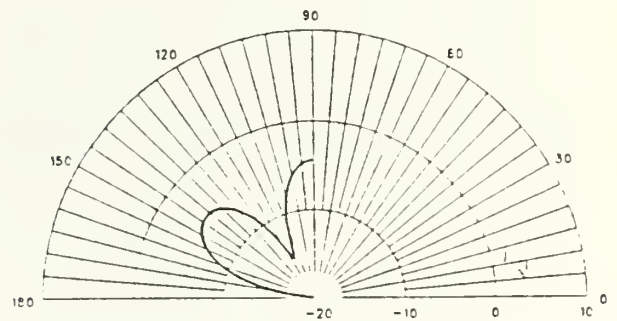


Figure 258. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 11 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

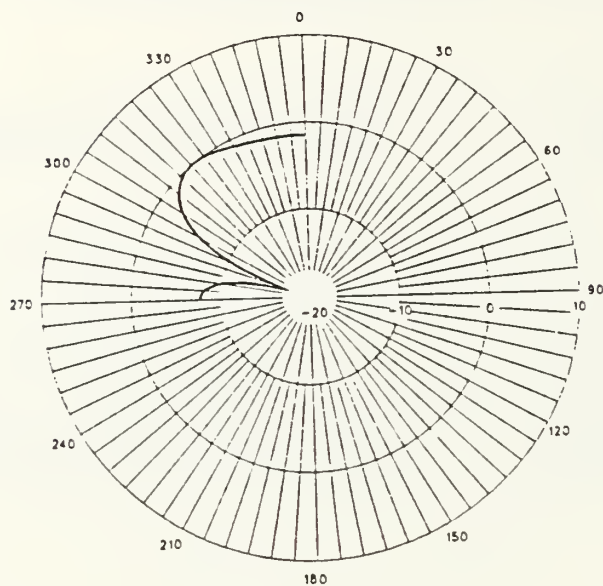

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

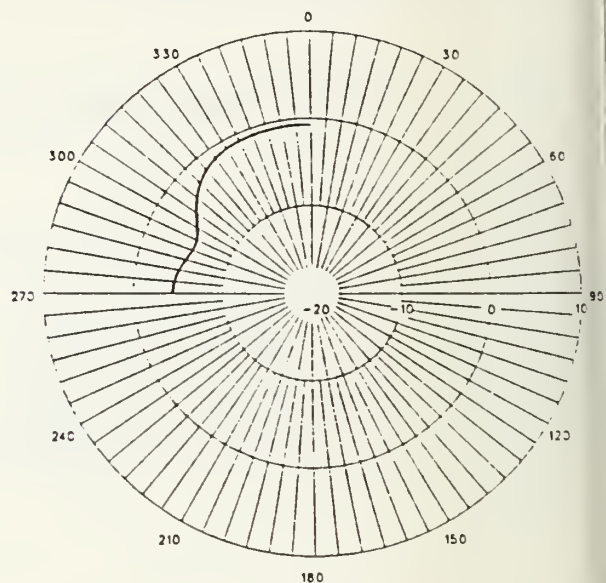

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

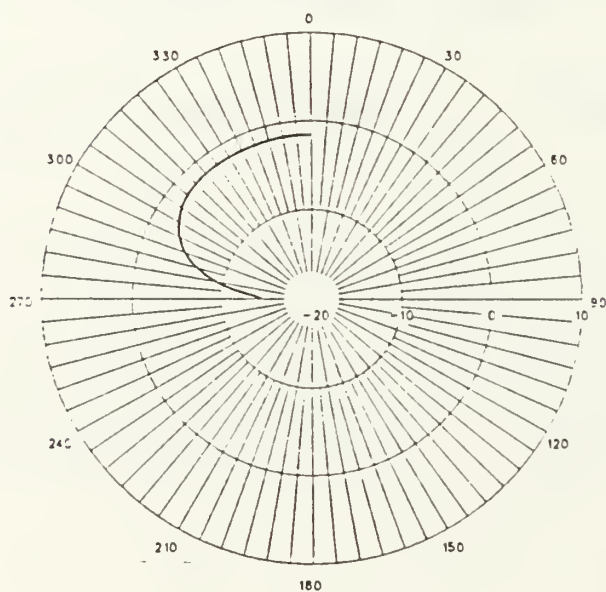

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



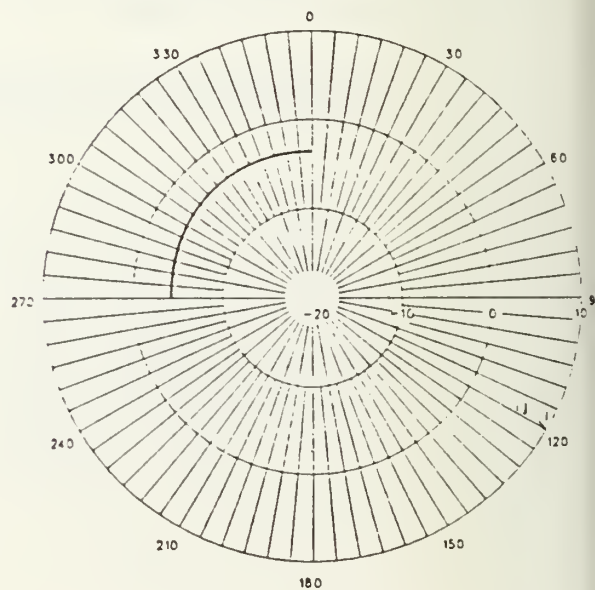


Figure 259. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 11 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

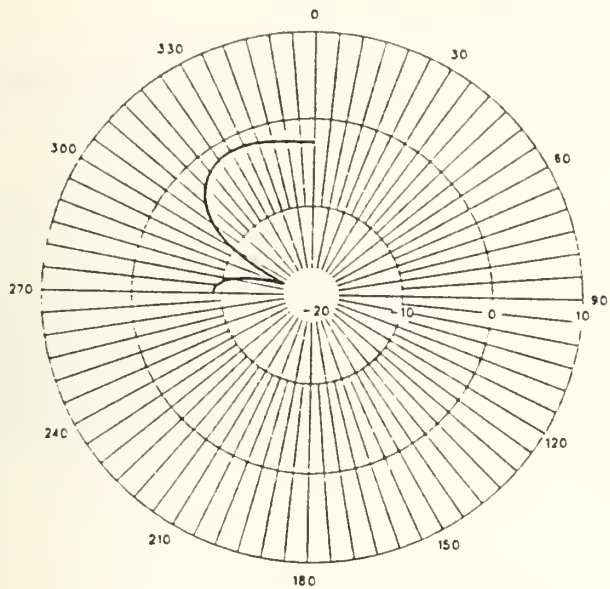

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

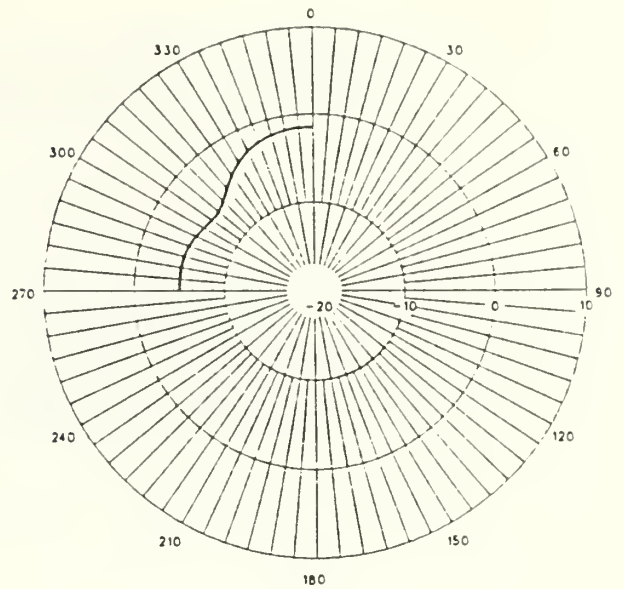

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

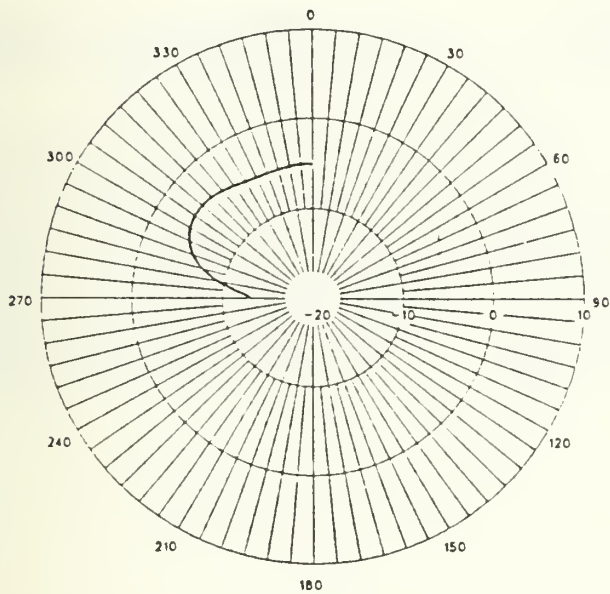

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 11 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



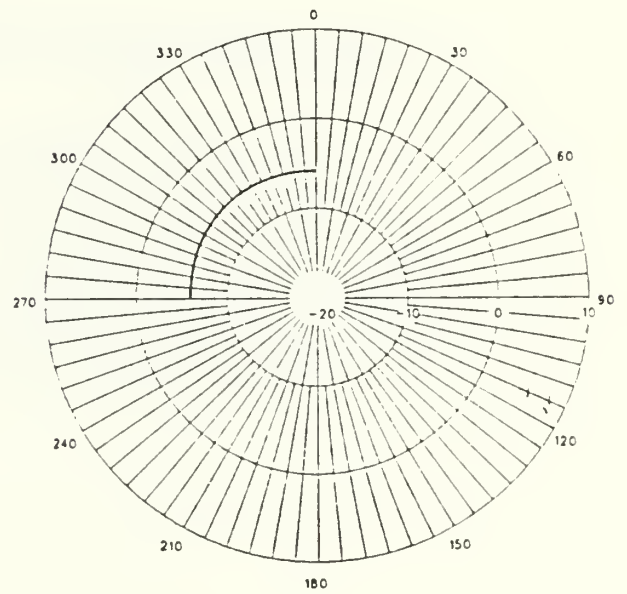


Figure 260. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 11 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

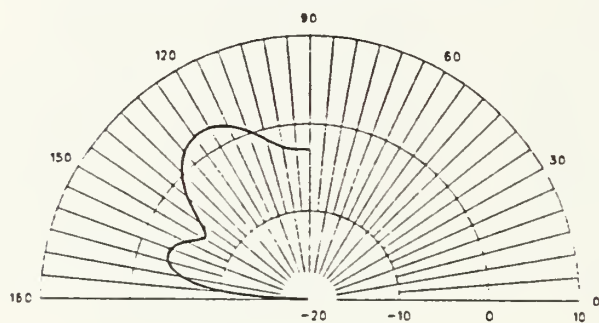

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

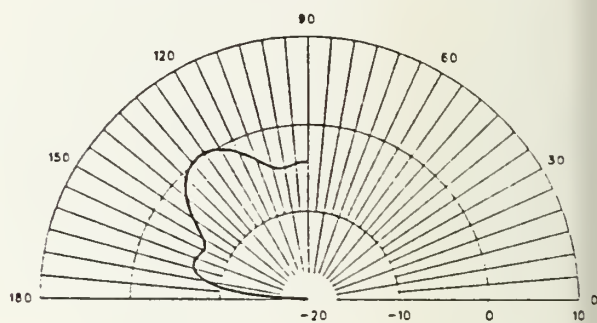

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

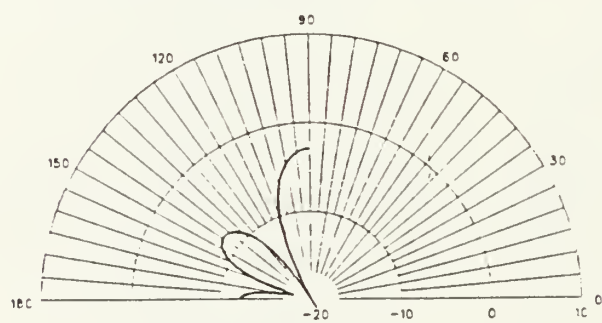

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 12 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



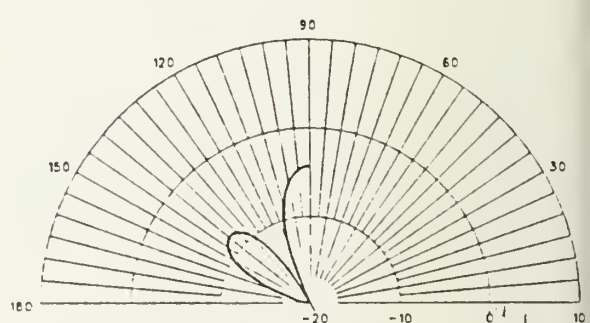


Figure 261. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 12 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

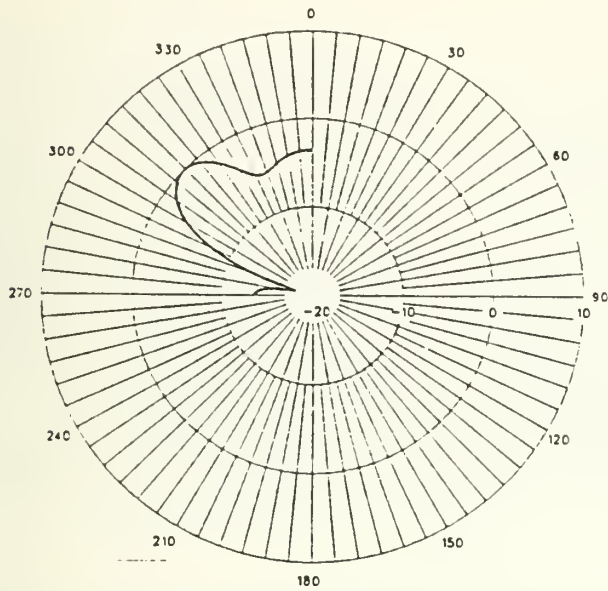

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

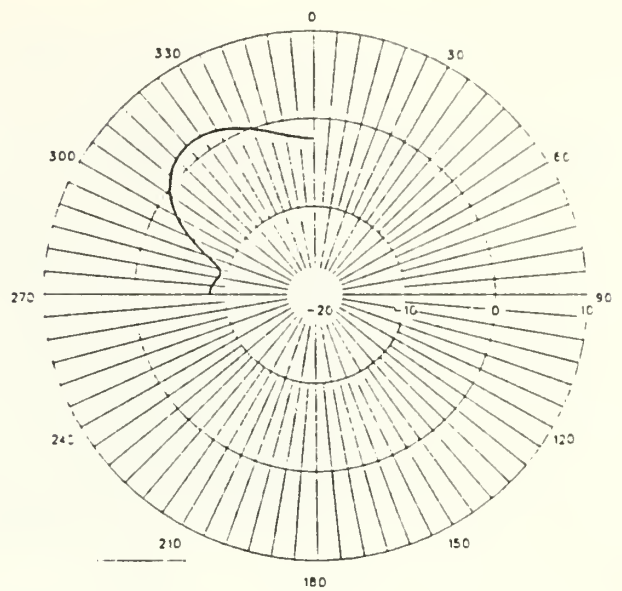

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

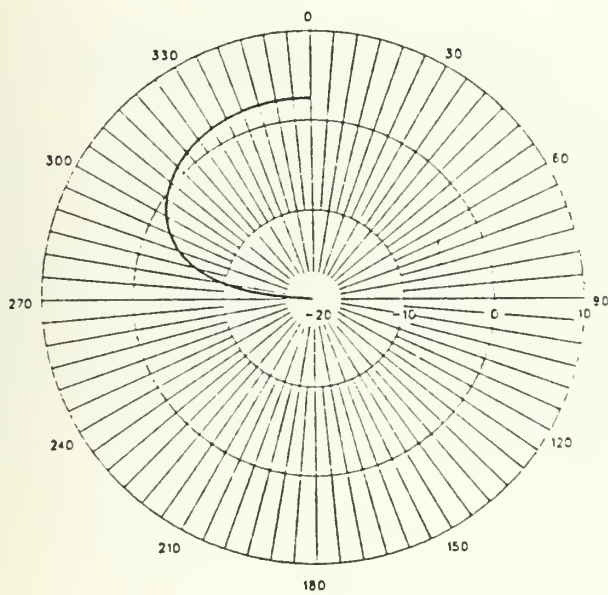

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



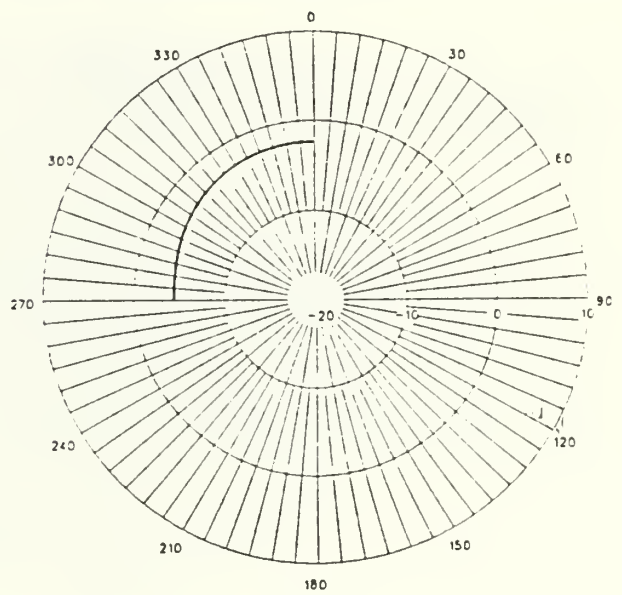


Figure 262. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 12 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

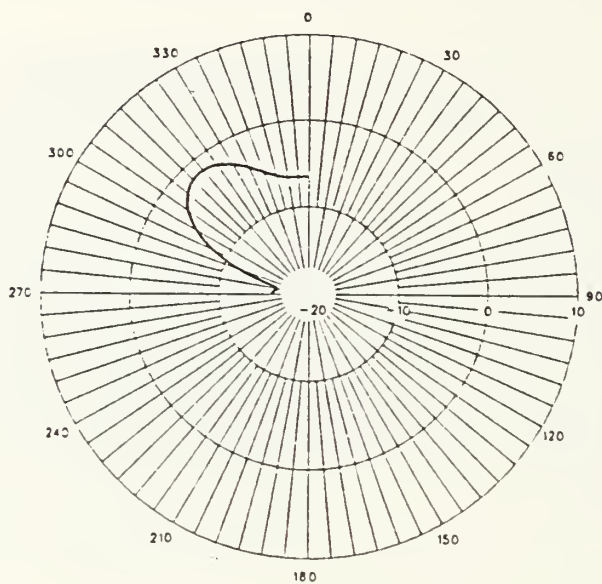

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

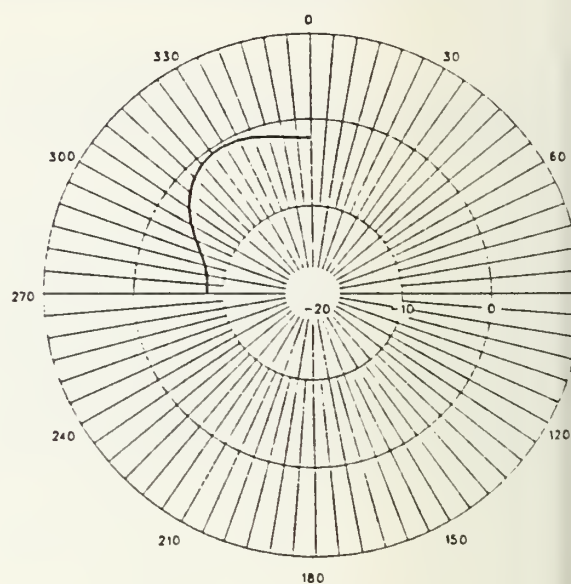

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

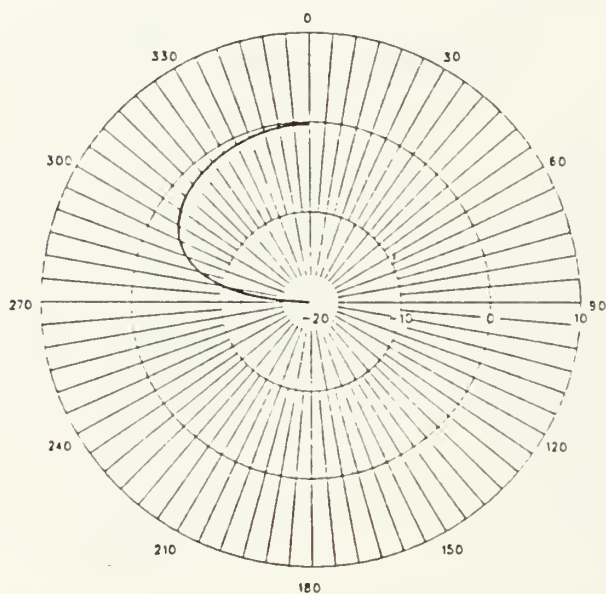

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 12 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



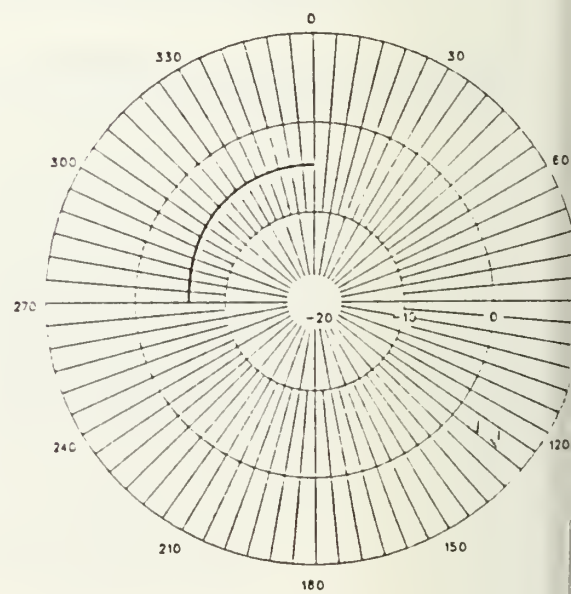


Figure 263. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 12 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

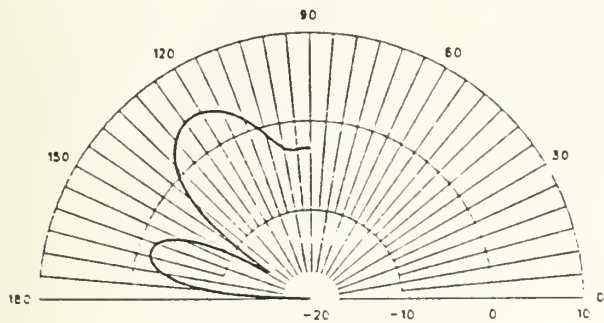

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

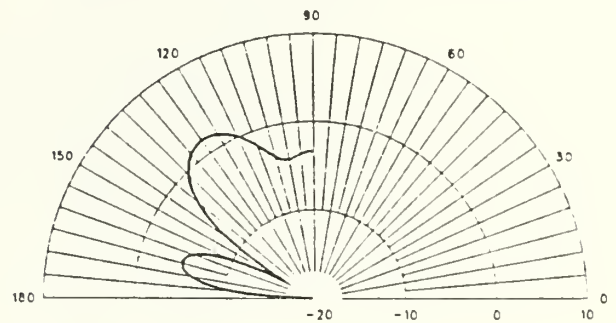

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

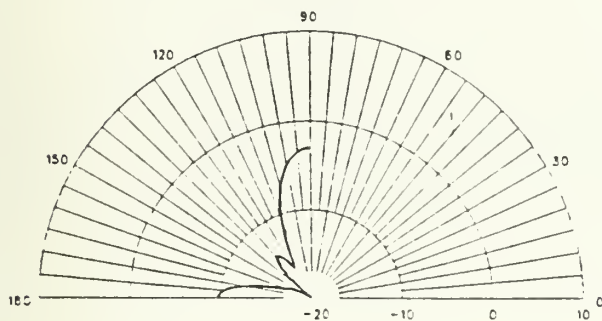

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 13 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



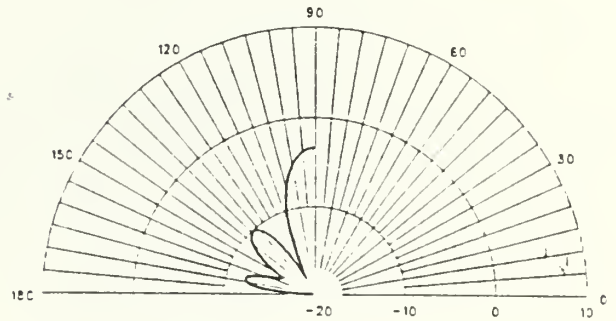


Figure 264. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 13 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

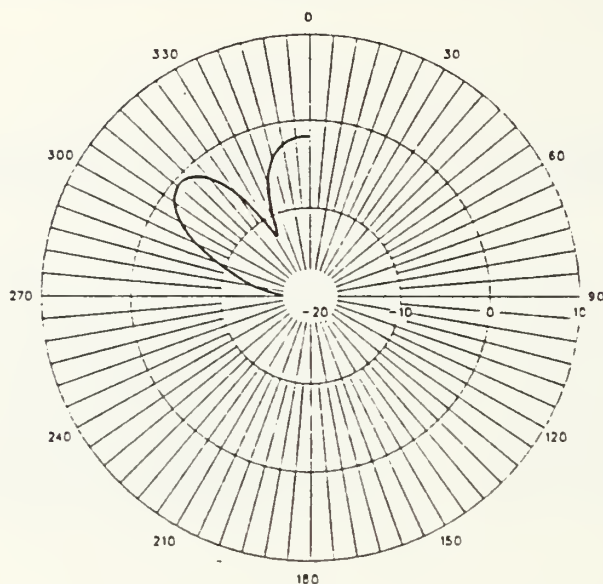

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

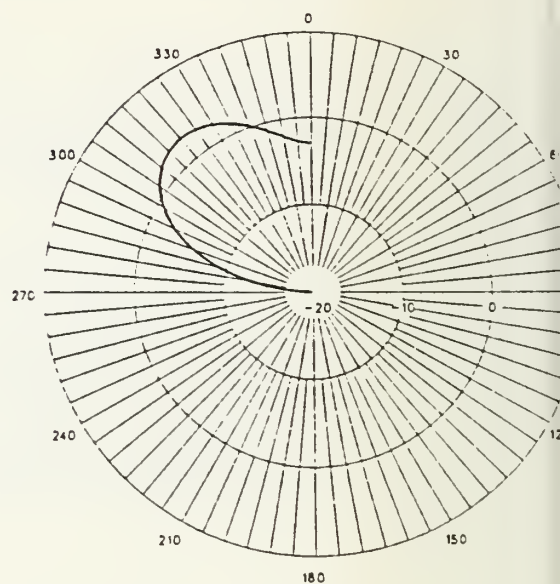

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

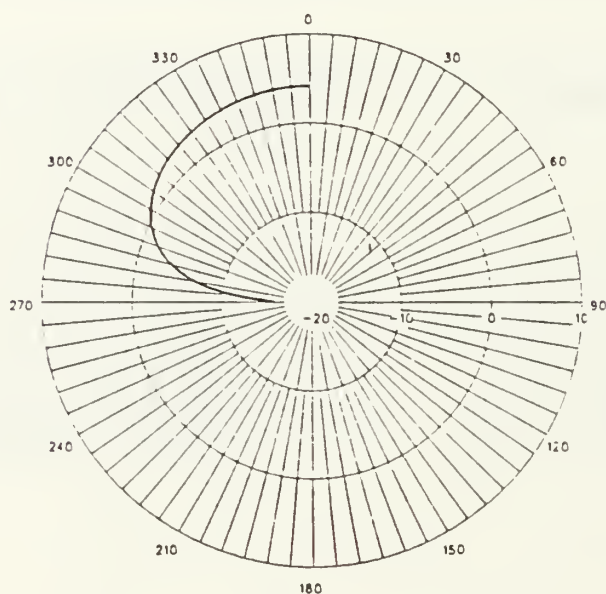

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



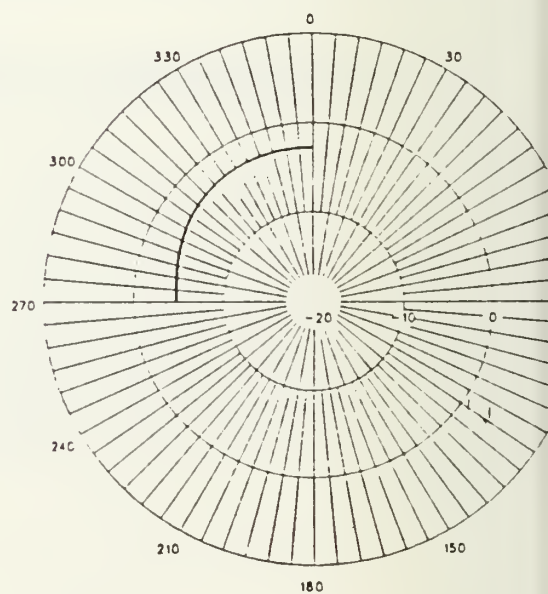


Figure 265. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 13 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

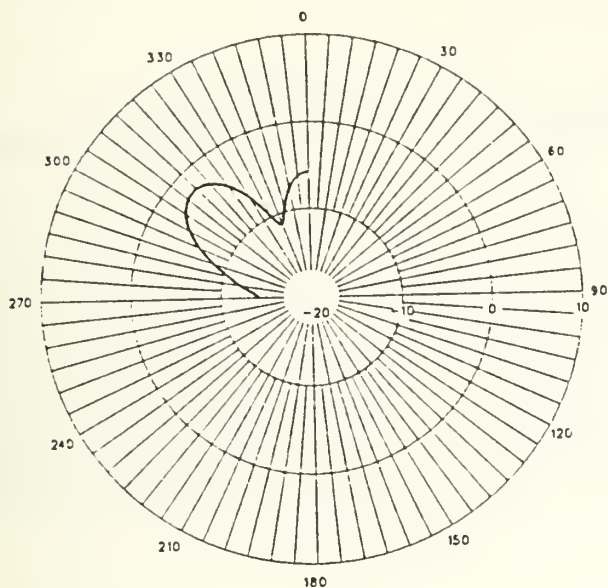

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

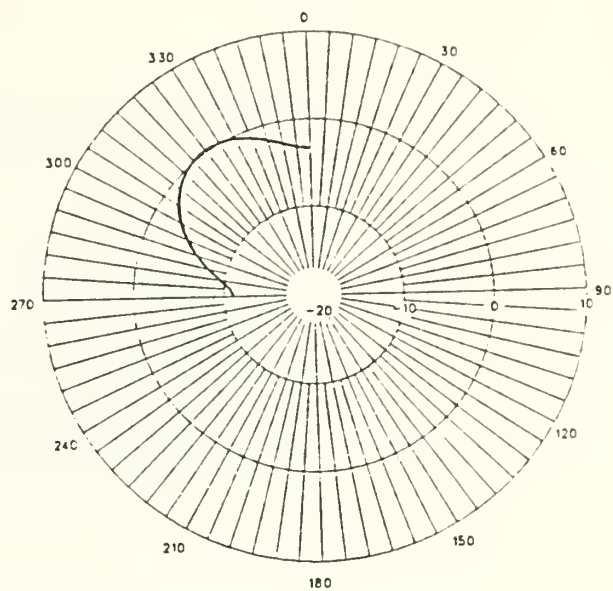

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

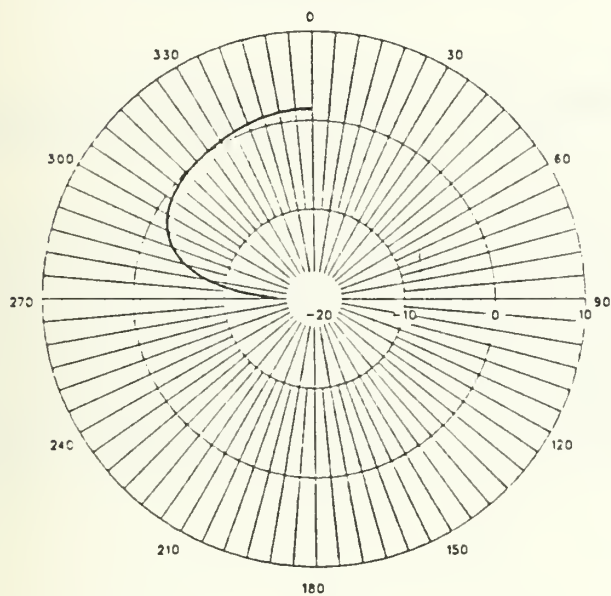

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 13 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



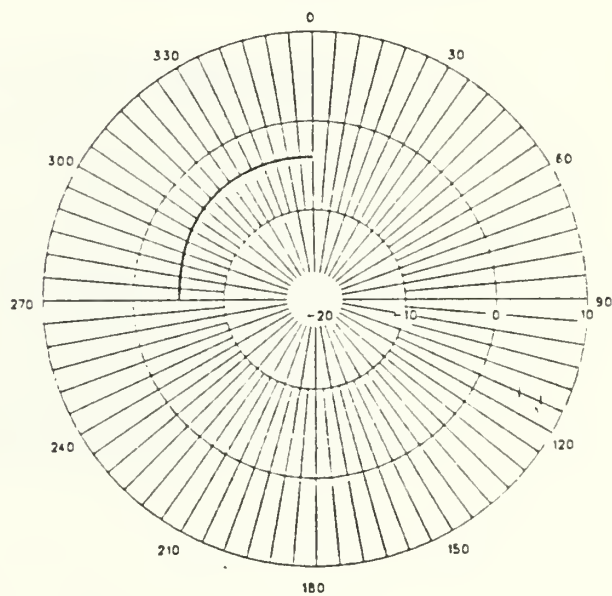


Figure 266. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 13 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

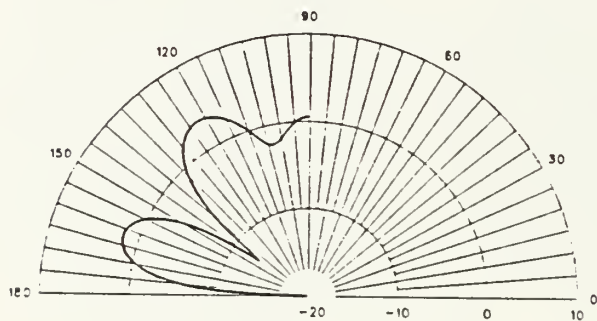

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

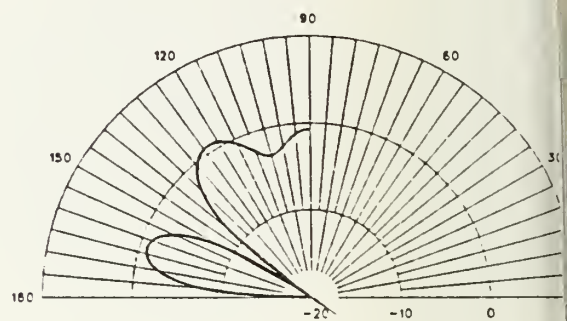

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

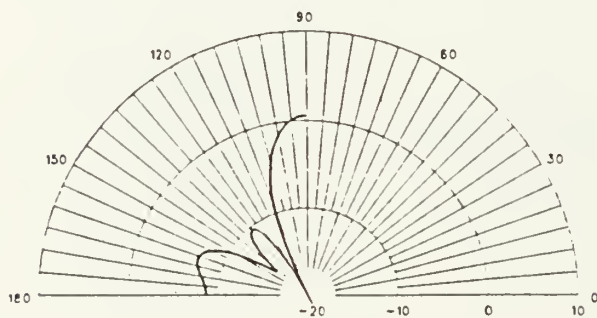

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 14 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



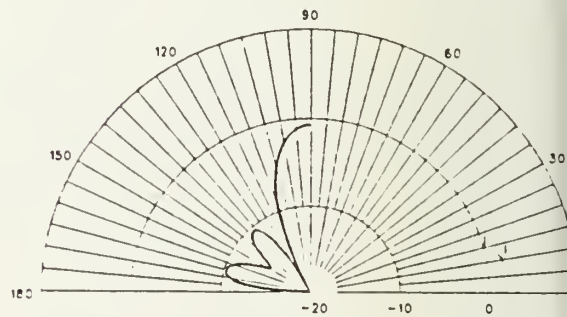


Figure 267. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 14 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

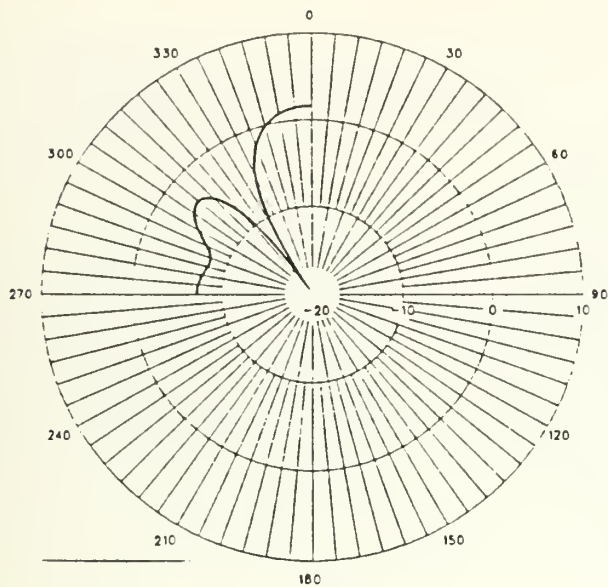

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

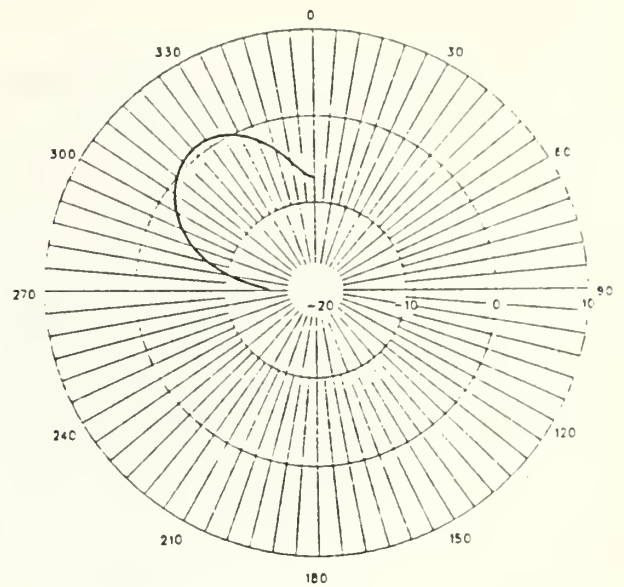

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

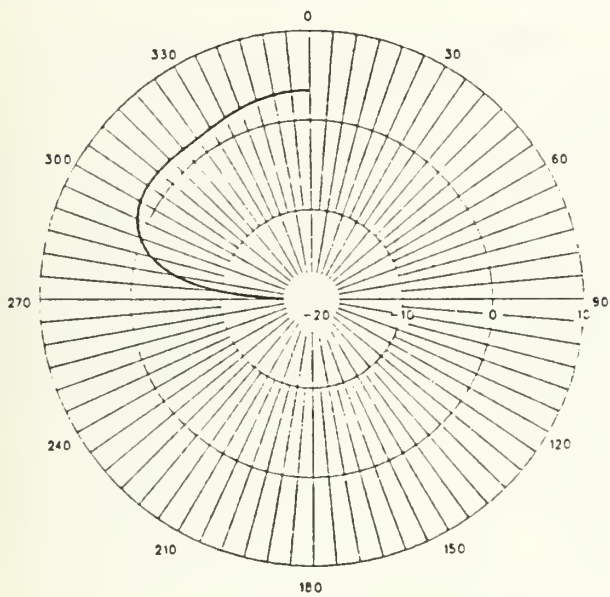

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



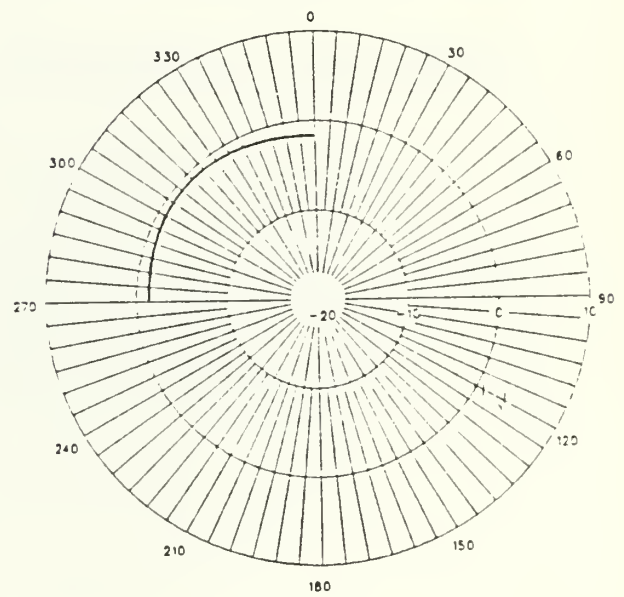


Figure 268. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 14 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

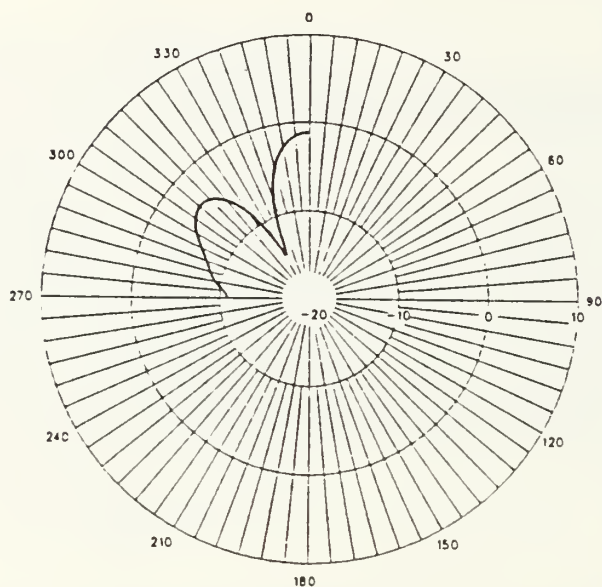

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

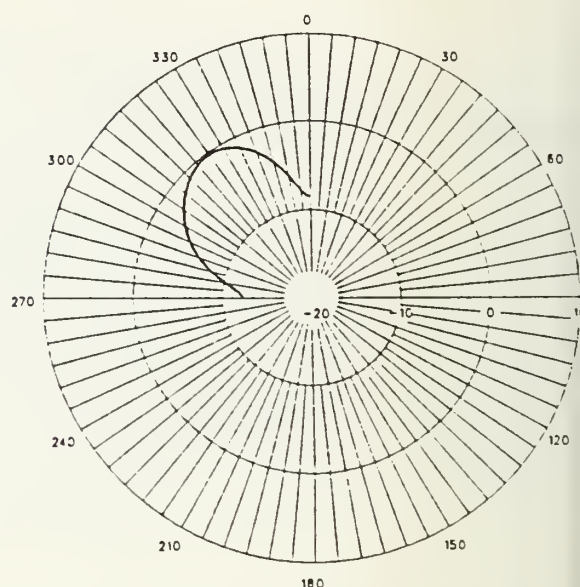

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

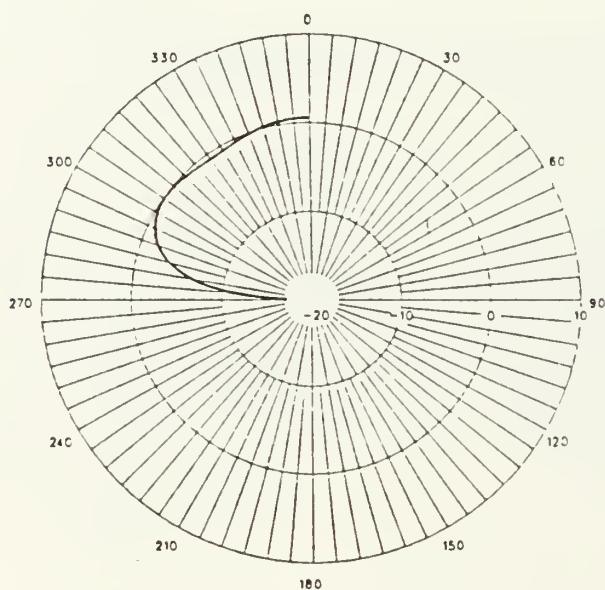

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 14 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



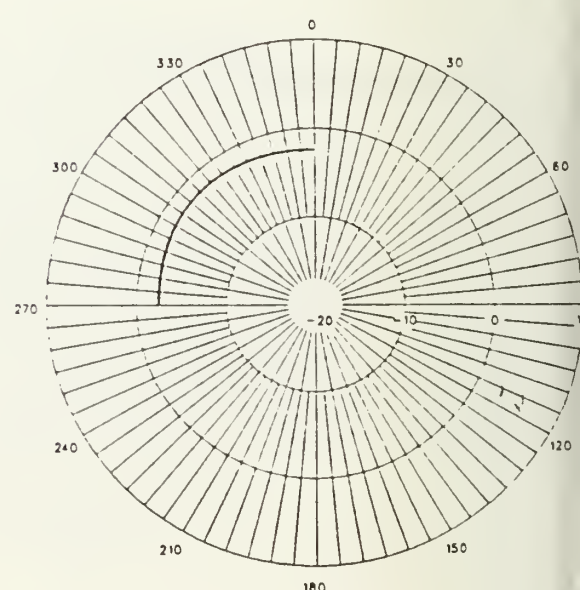


Figure 269. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 14 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

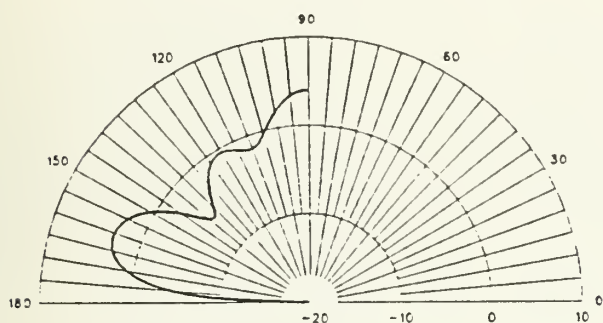

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

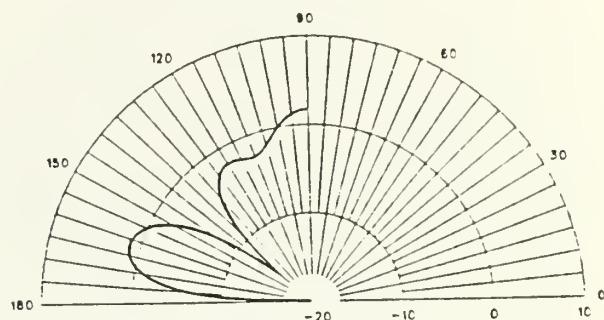

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

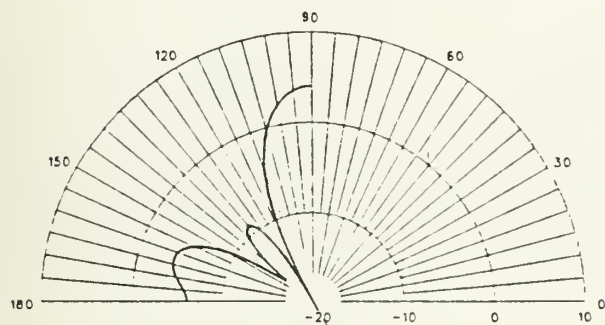

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 15 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



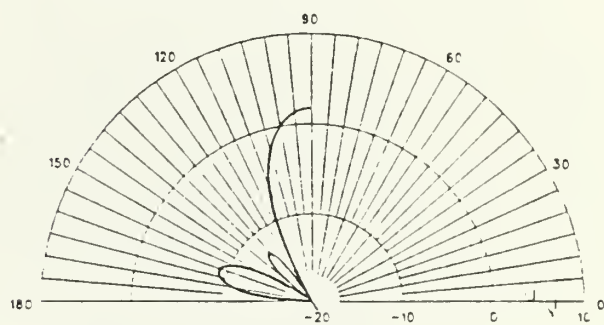


Figure 270. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 15 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

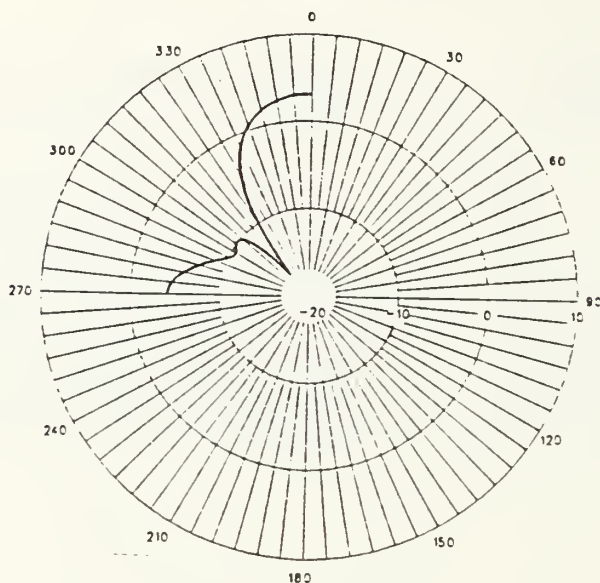

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

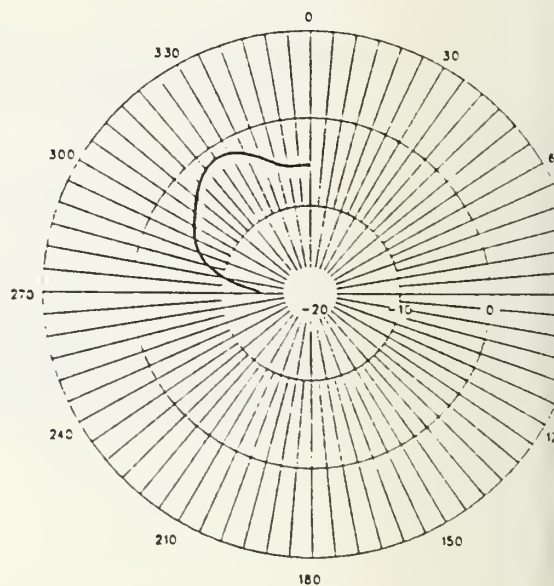

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

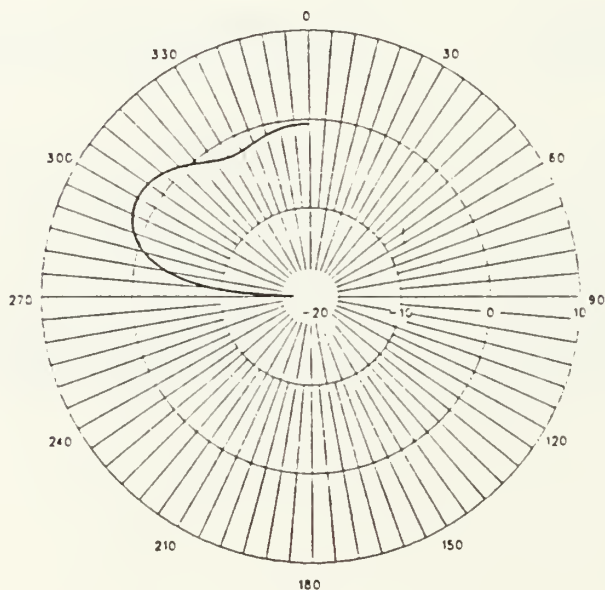

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



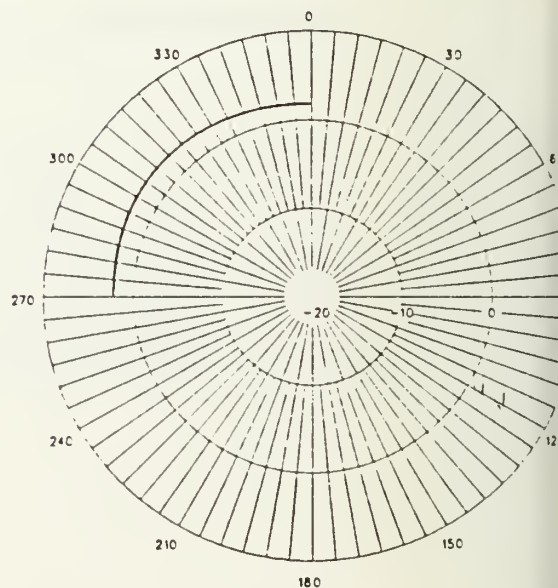


Figure 271. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 15 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

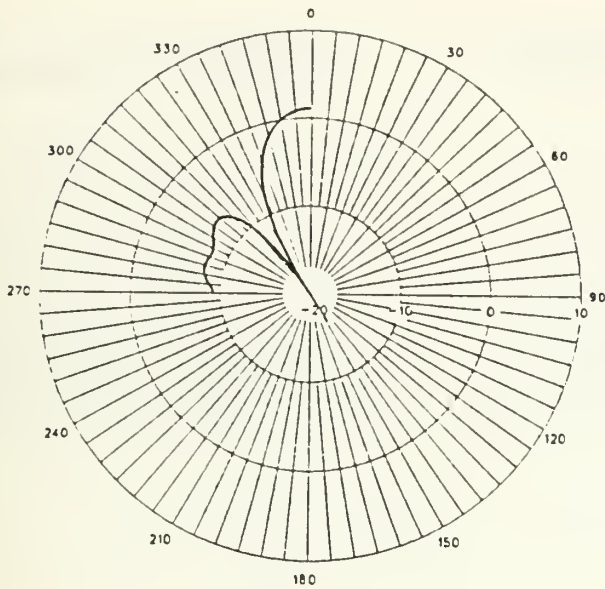

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

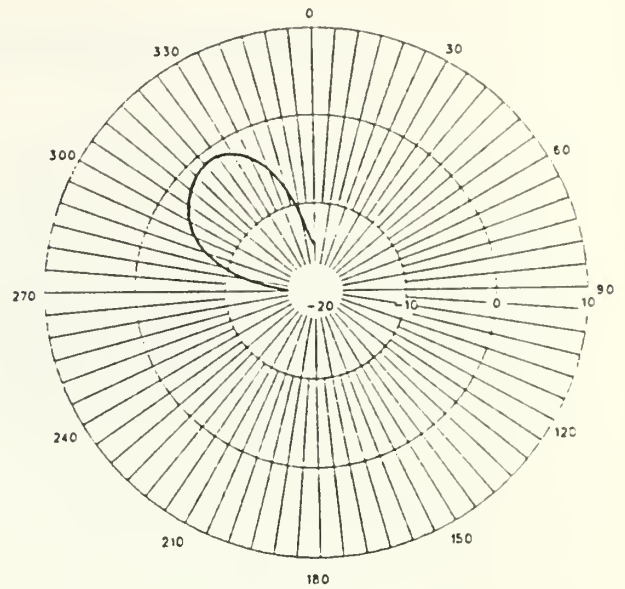

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

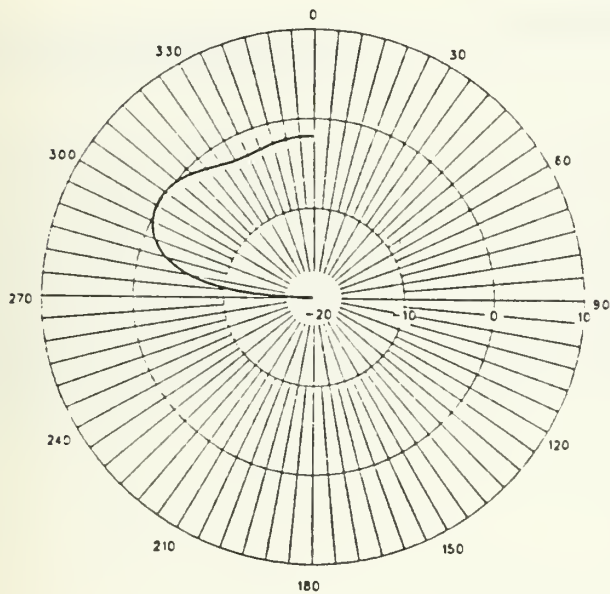

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 15 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



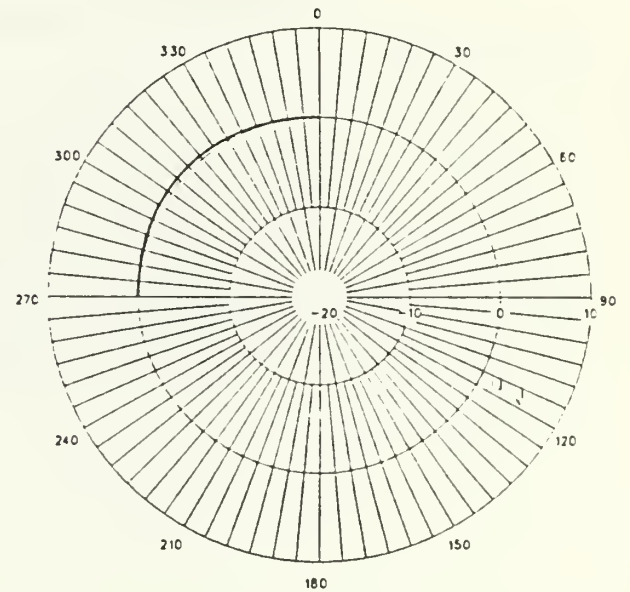


Figure 272. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 15 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

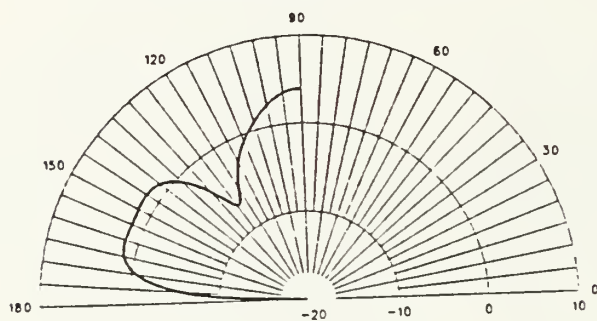

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

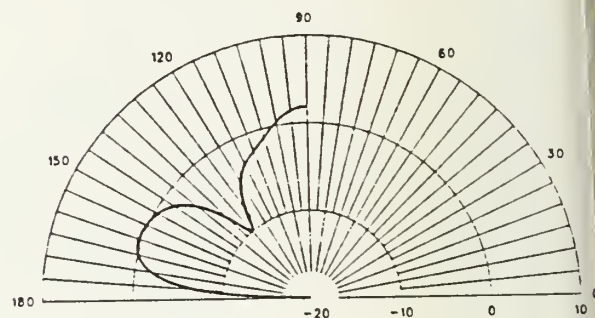

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

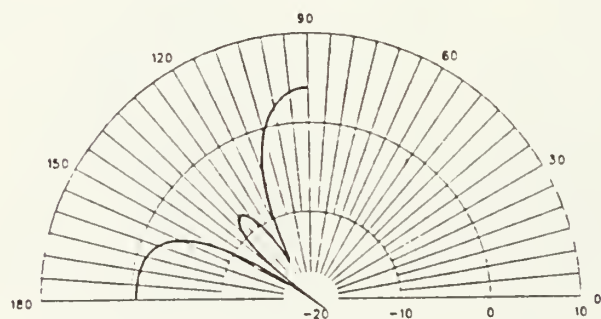

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 16 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



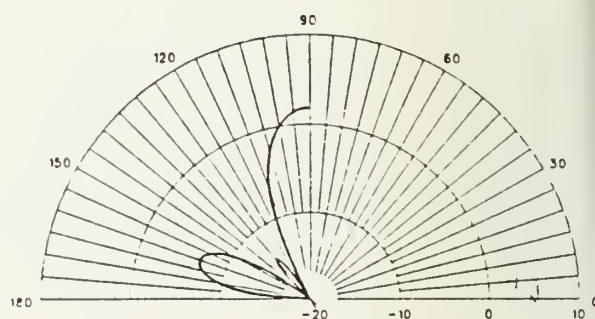


Figure 273. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 16 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

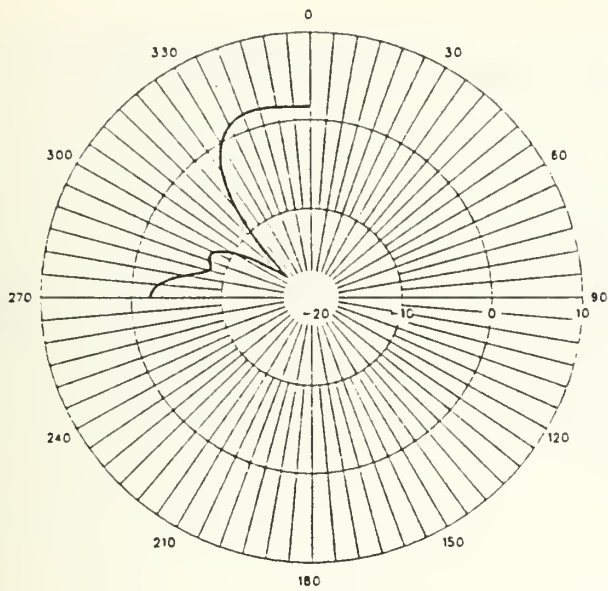

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

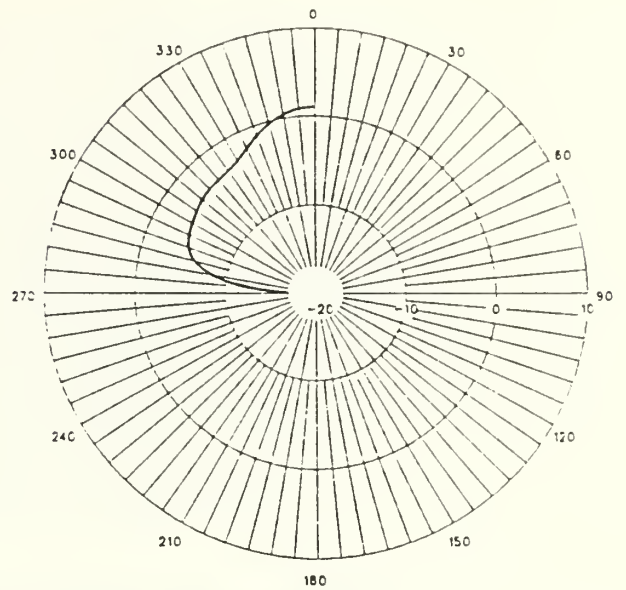

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

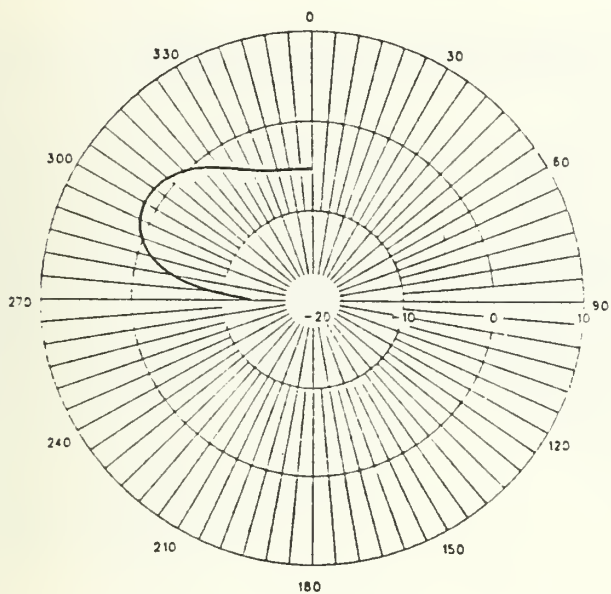

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



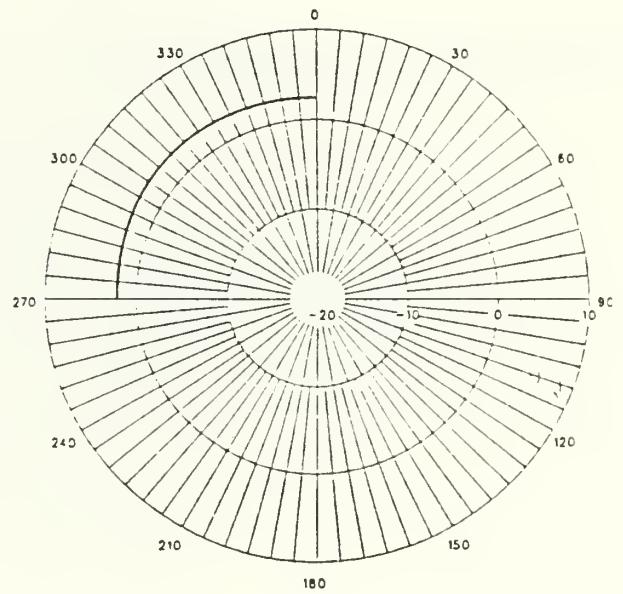


Figure 274. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 16 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

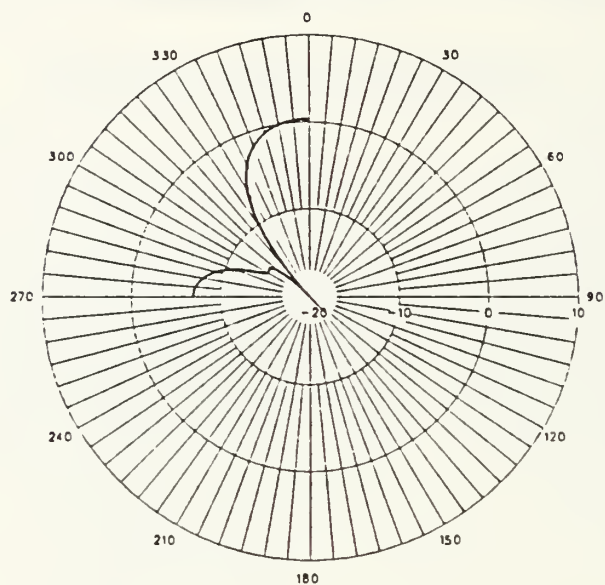

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

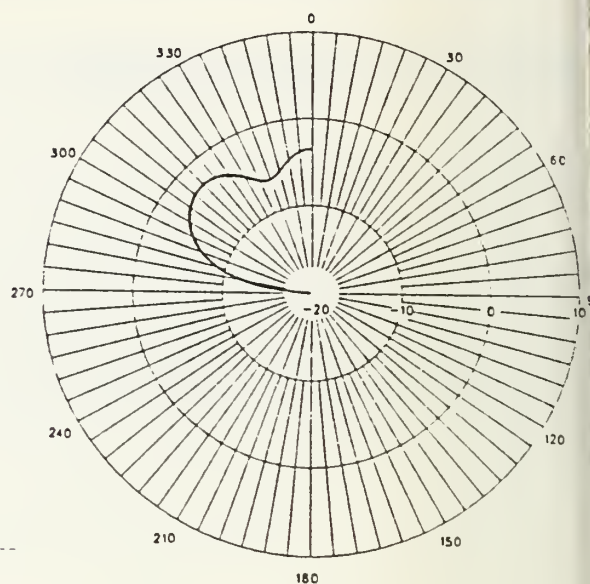

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

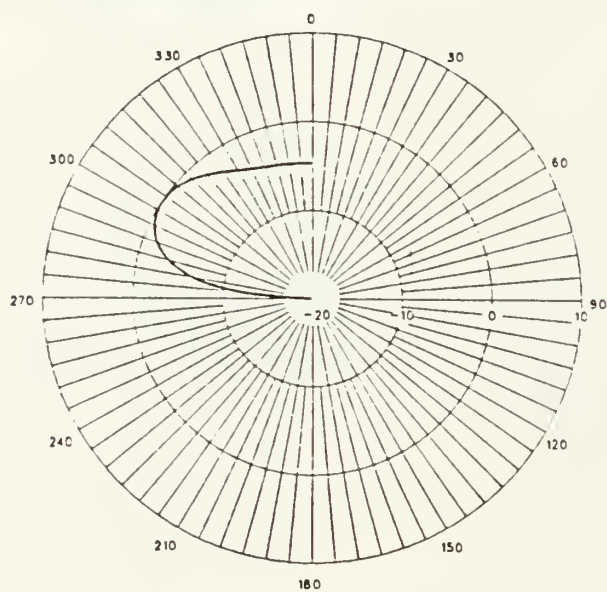

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 16 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



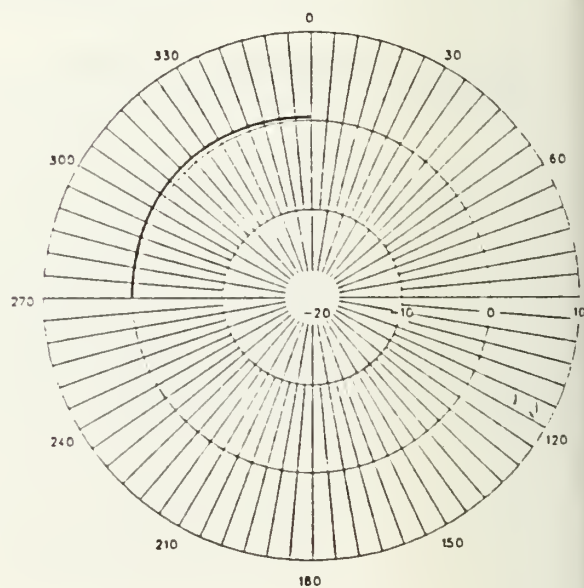


Figure 275. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 16 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

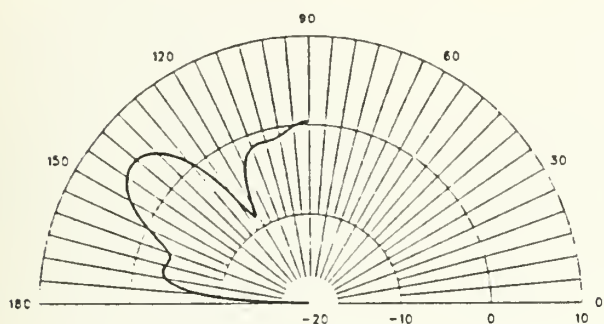

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

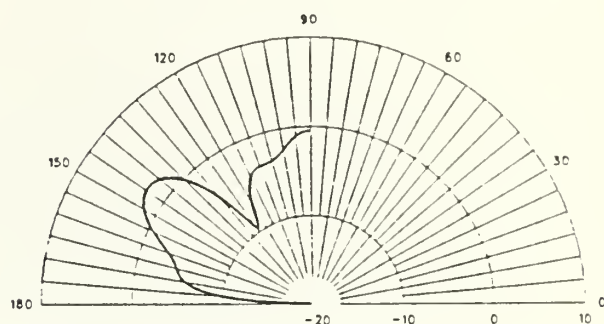

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

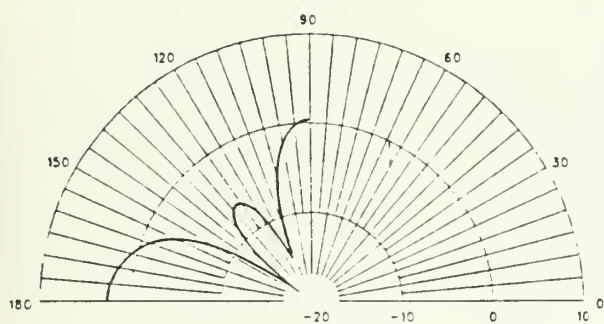

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 17 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



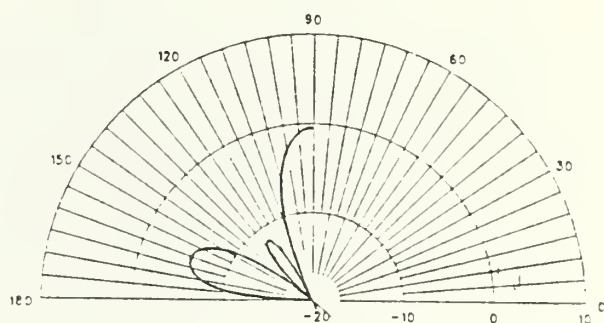


Figure 276. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 17 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

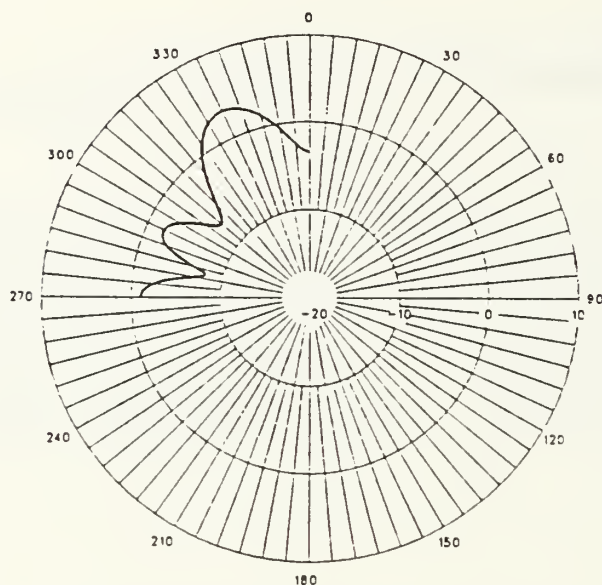

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

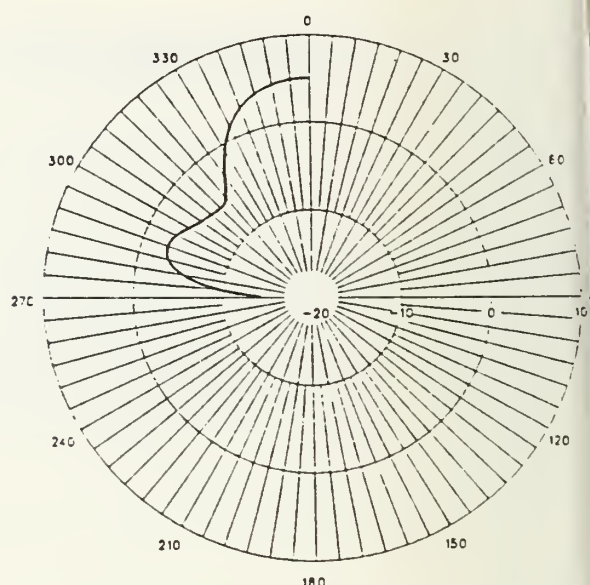

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

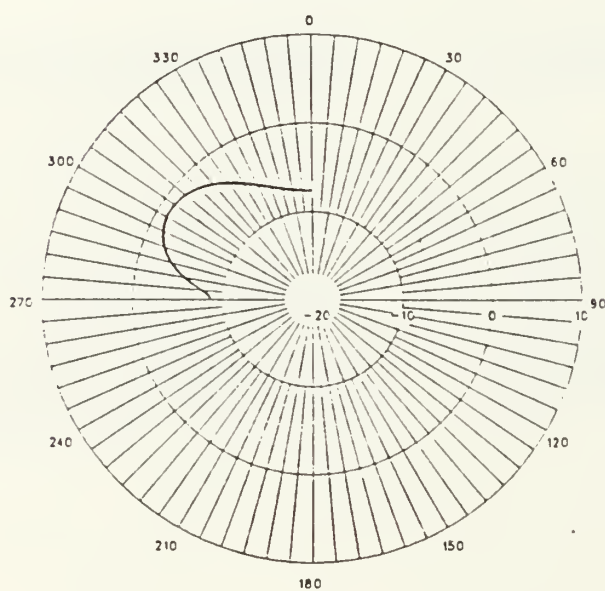

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



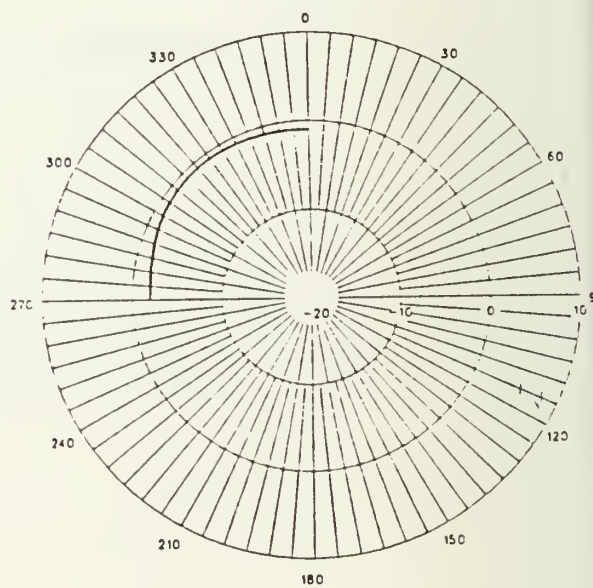


Figure 277. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 17 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

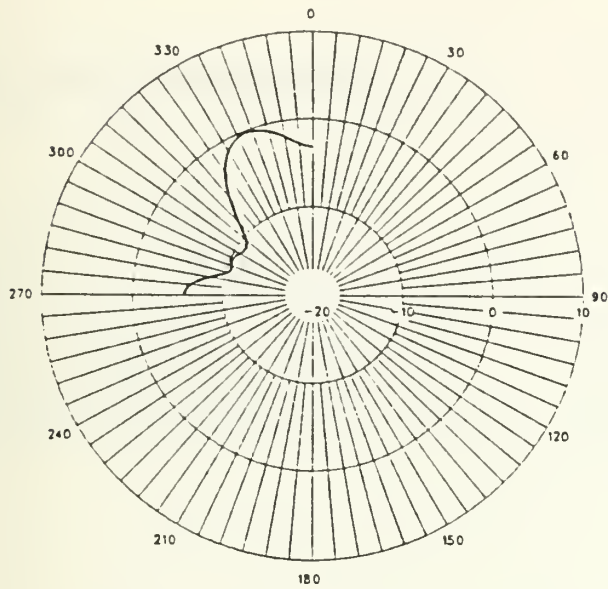

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

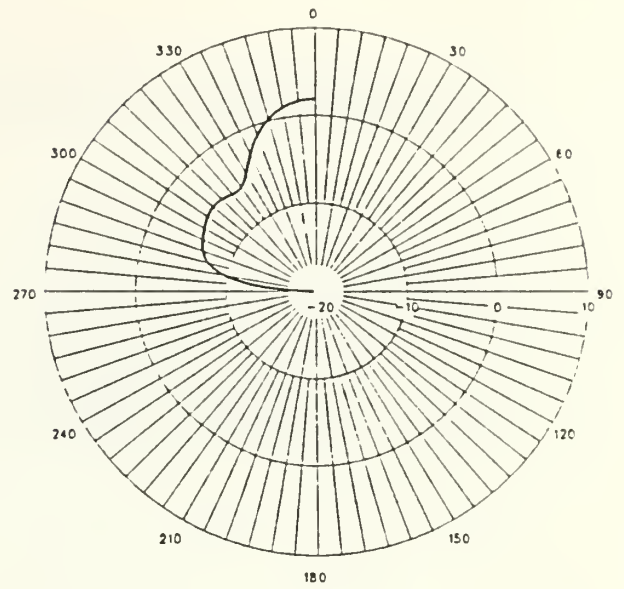

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

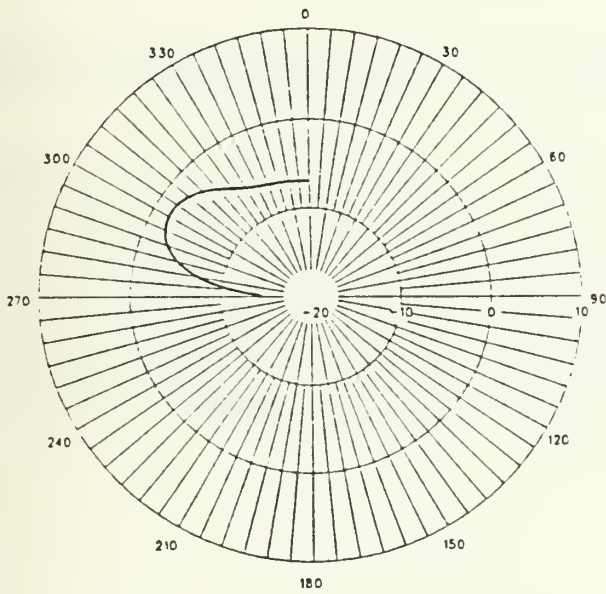

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 17 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



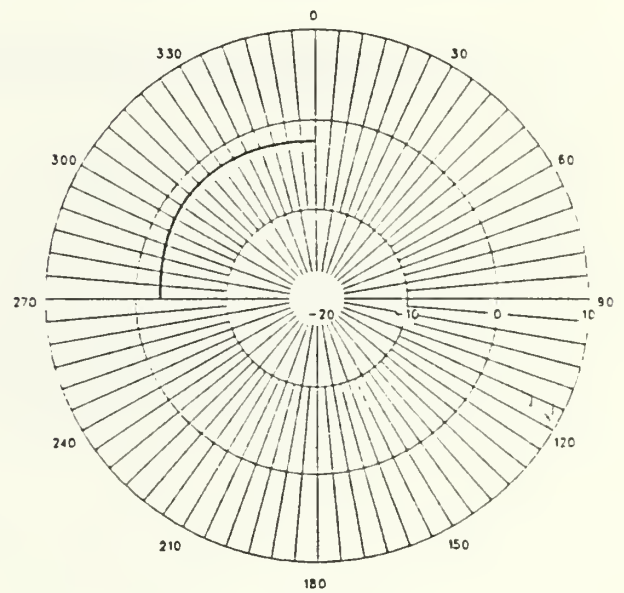


Figure 278. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 17 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

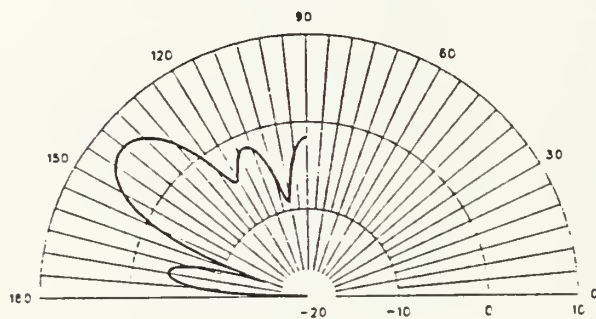

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

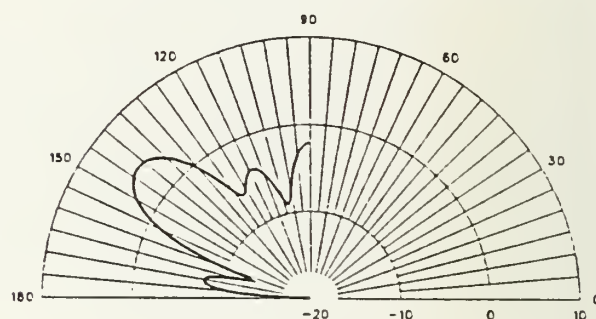

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

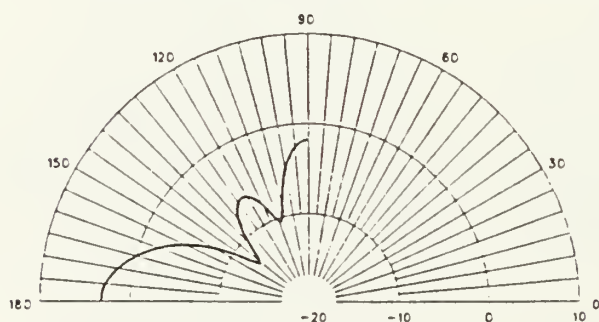

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 18 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



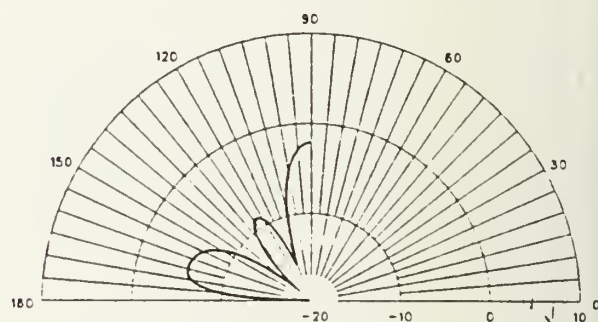


Figure 279. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 18 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

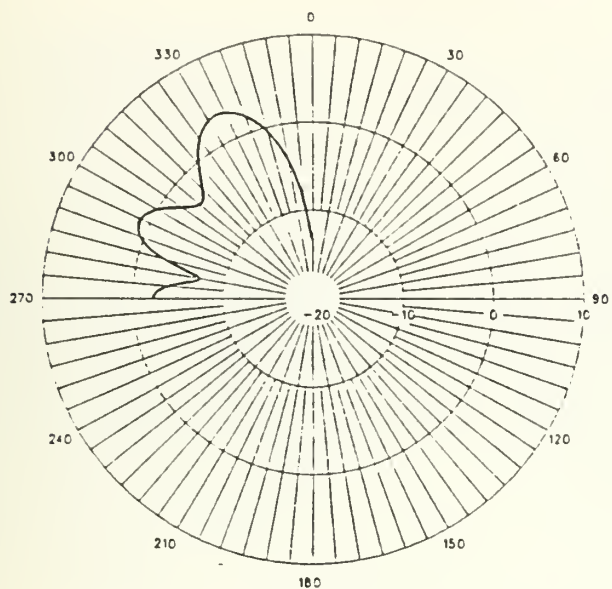

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

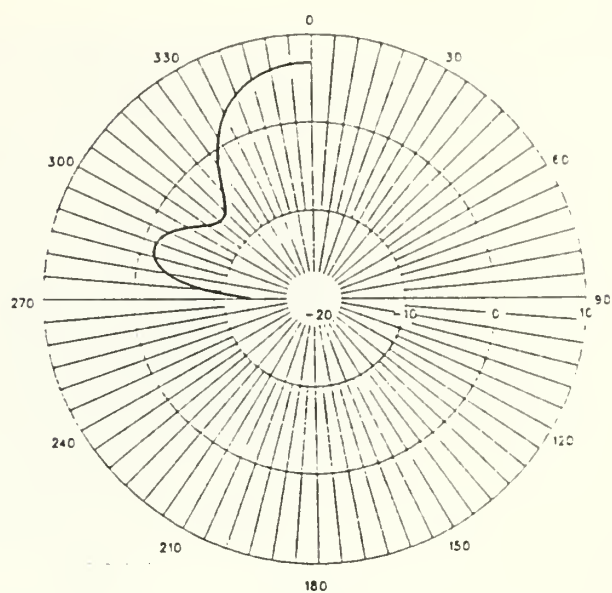

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

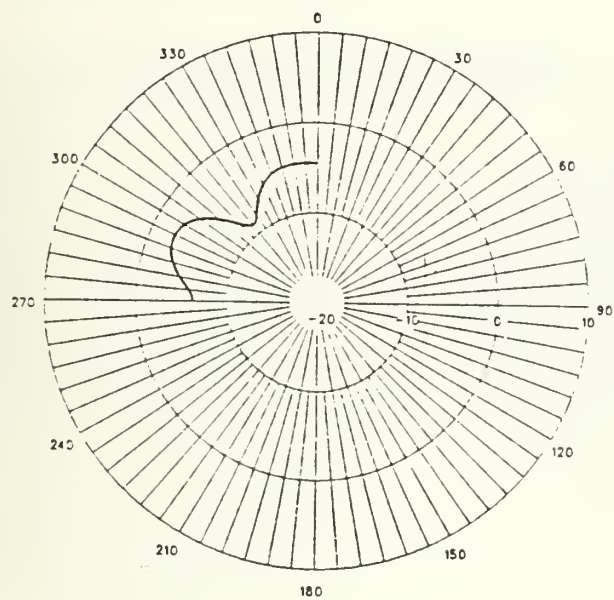

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



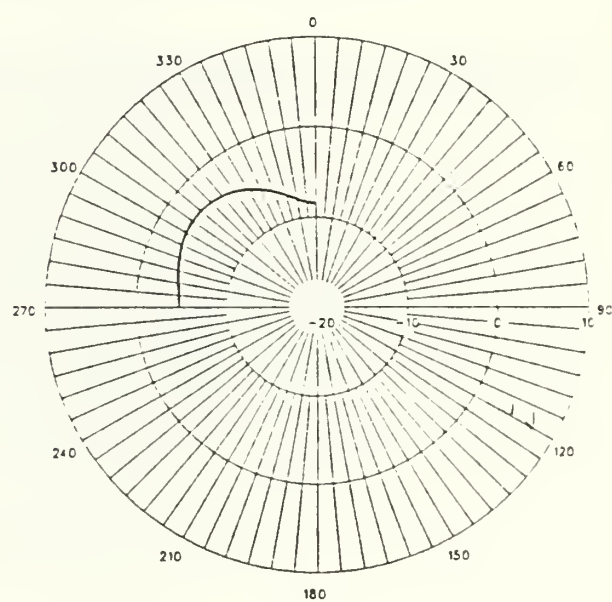


Figure 280. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 18 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

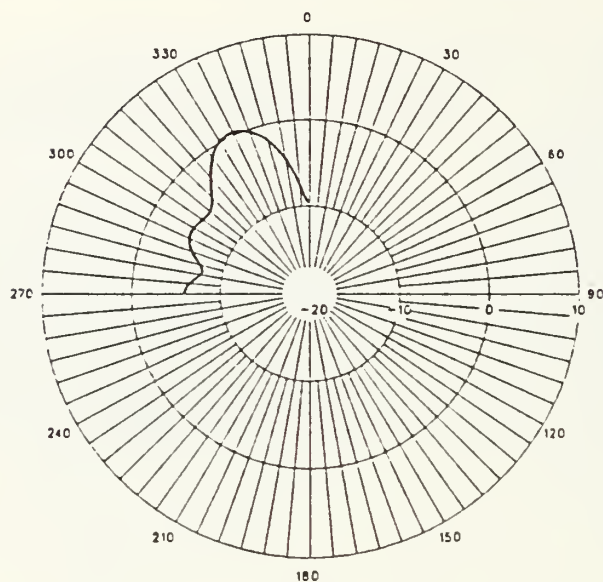

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

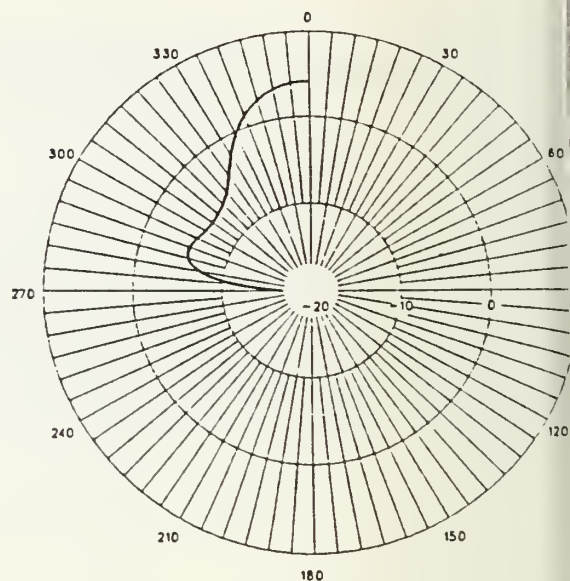

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

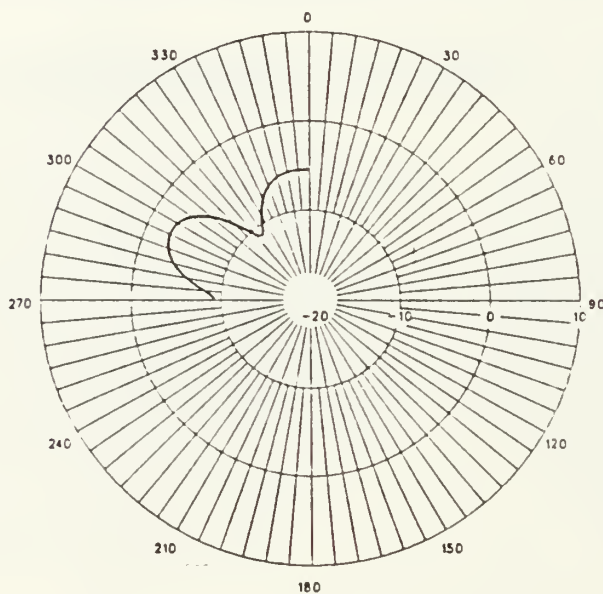

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 18 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



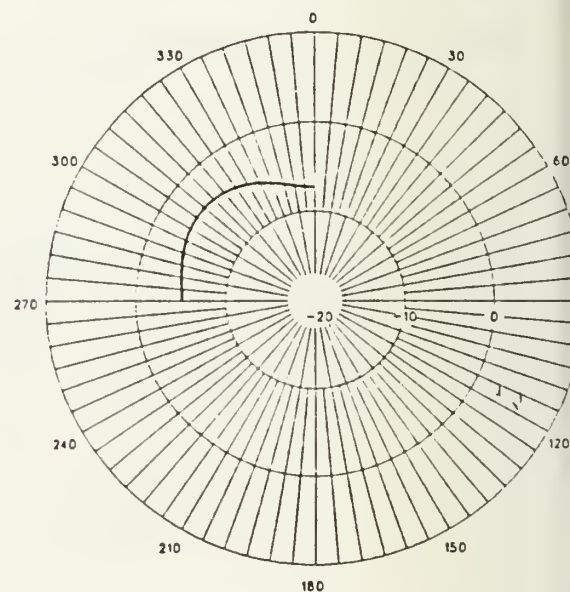


Figure 281. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 18 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

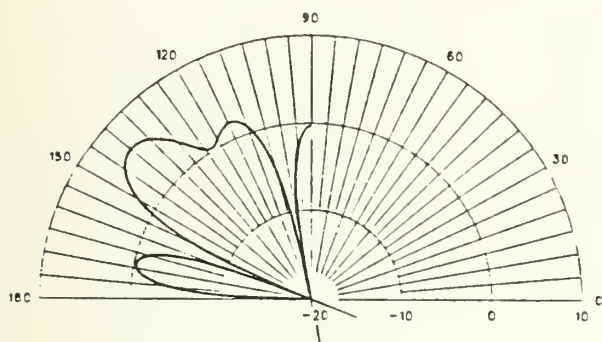

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

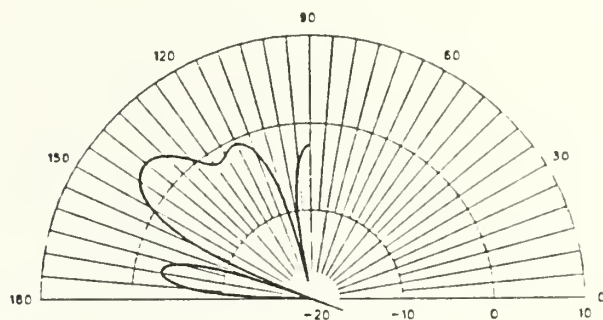

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

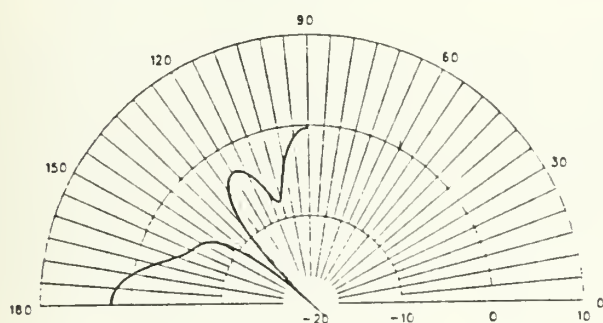

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND / 19 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



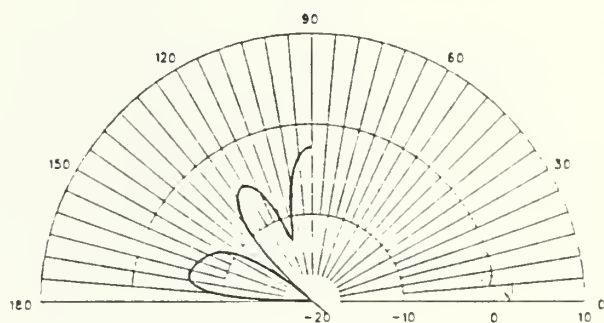


Figure 282. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 19 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

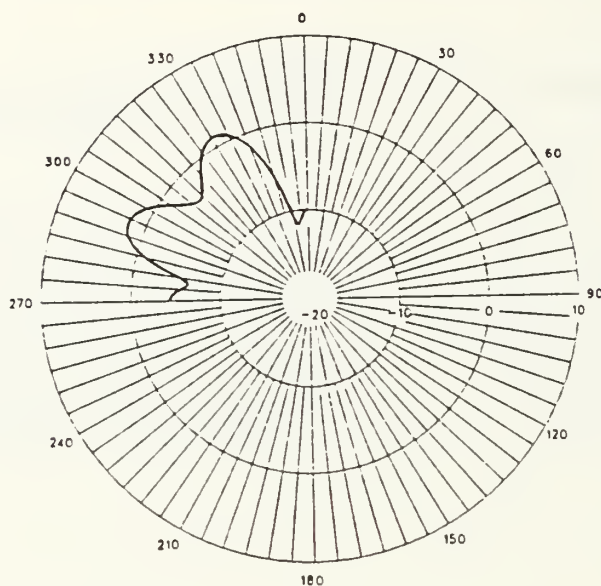

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

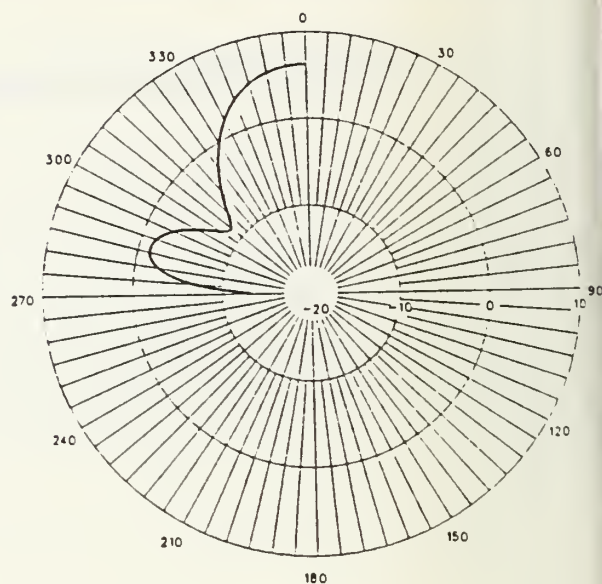

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

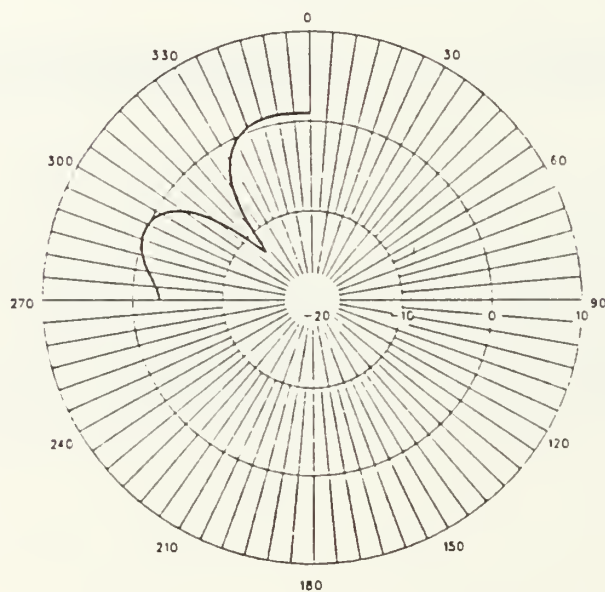

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



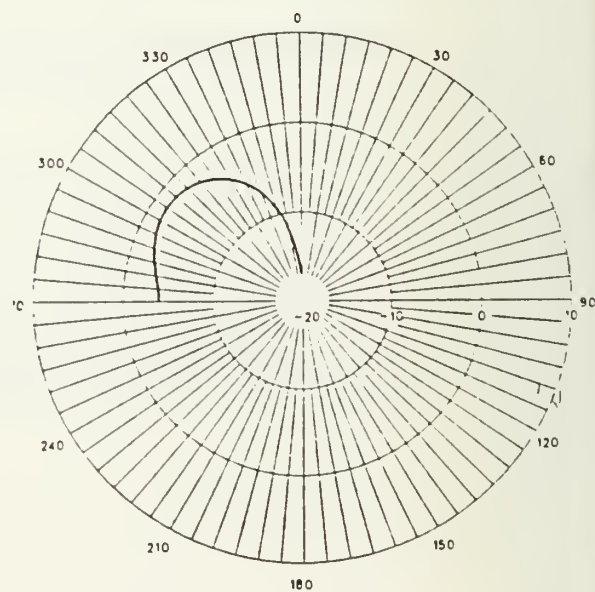


Figure 283. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 19 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

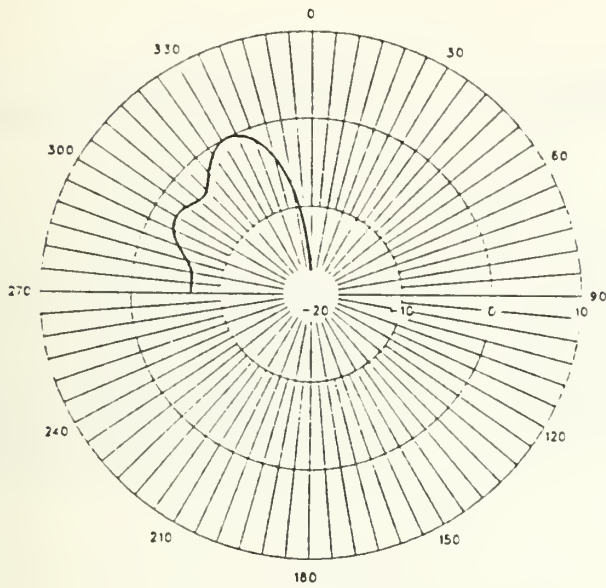

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

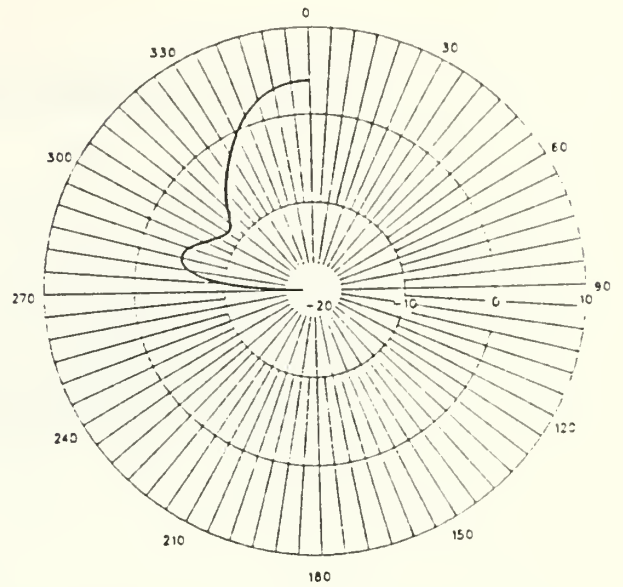

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

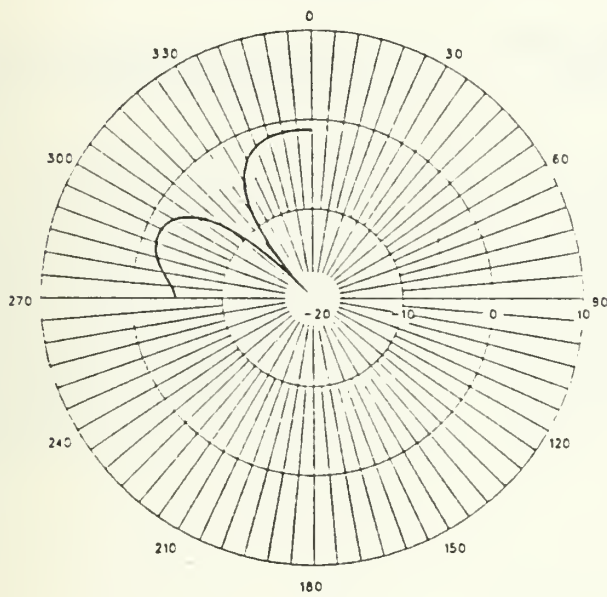

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 19 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



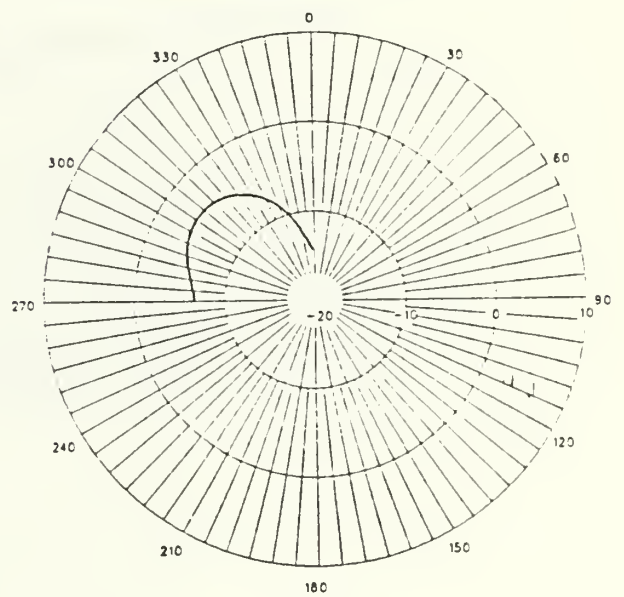


Figure 284. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 19 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

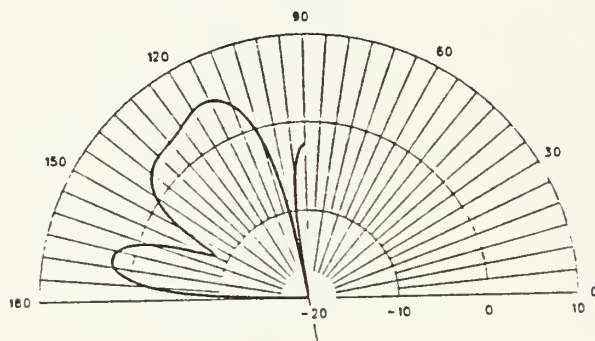

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

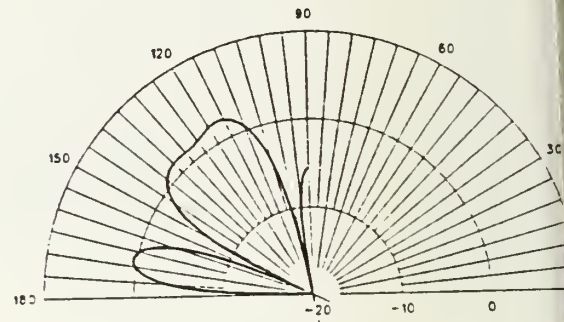

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

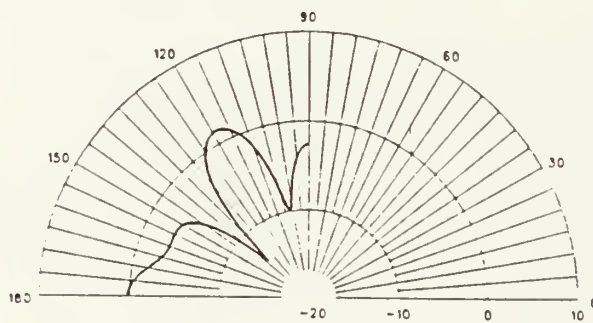

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 20 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



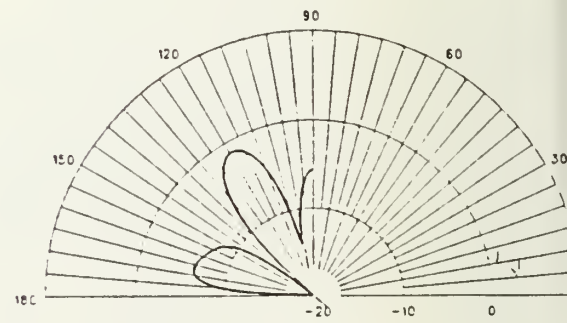


Figure 285. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 20 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

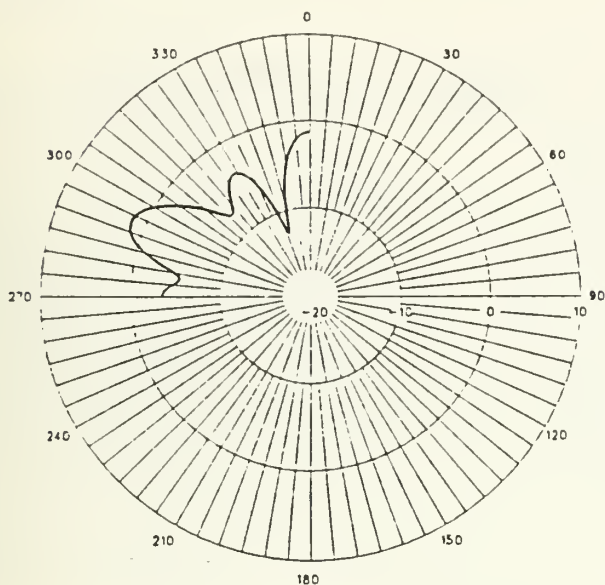

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

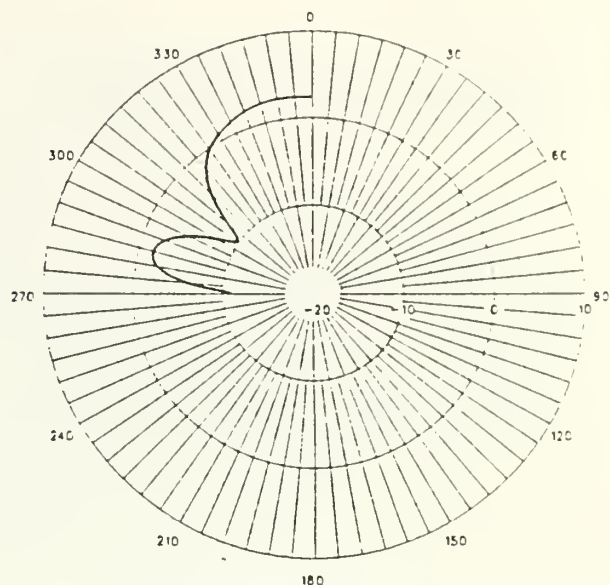

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

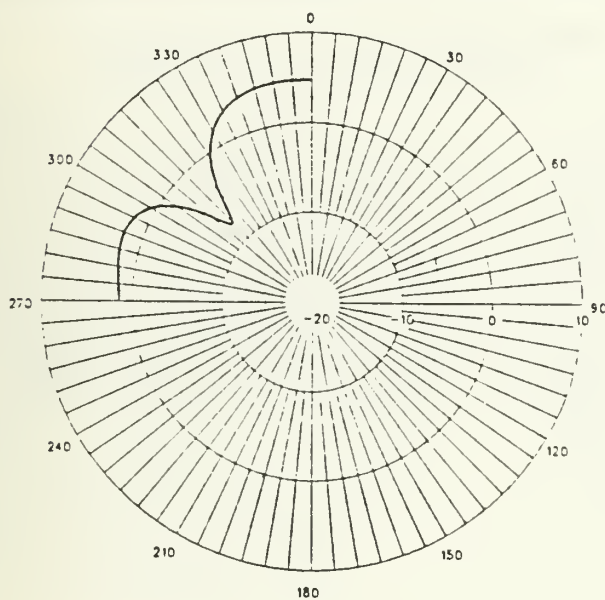

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



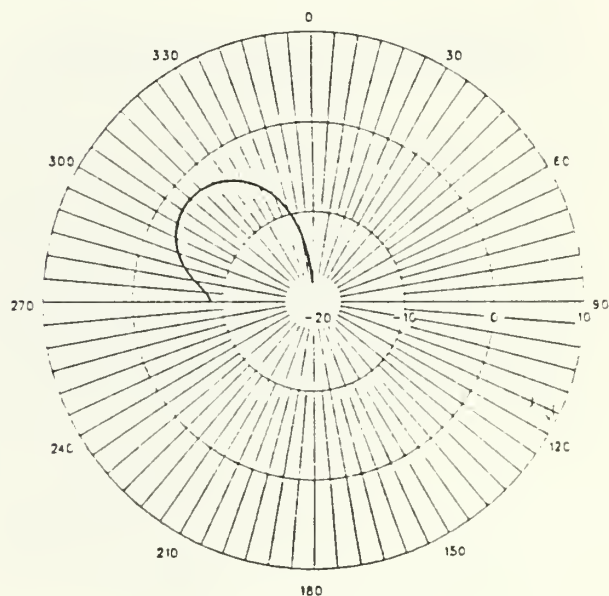


Figure 286. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 20 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

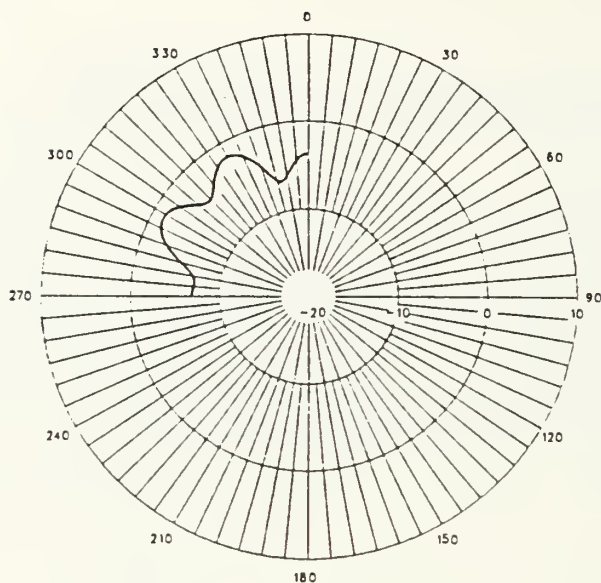

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

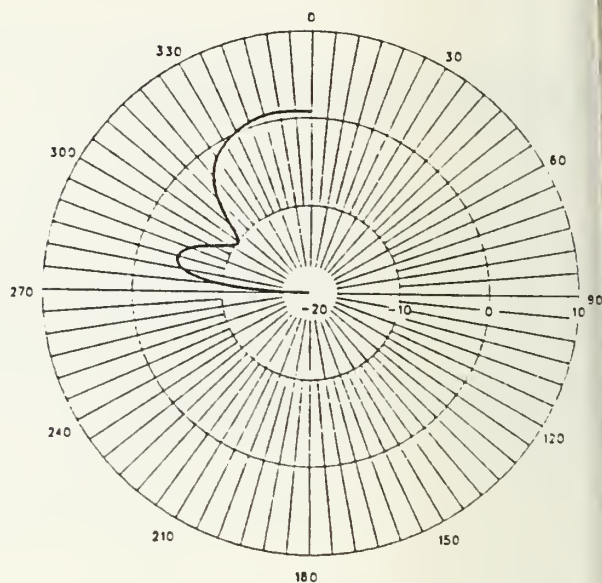

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

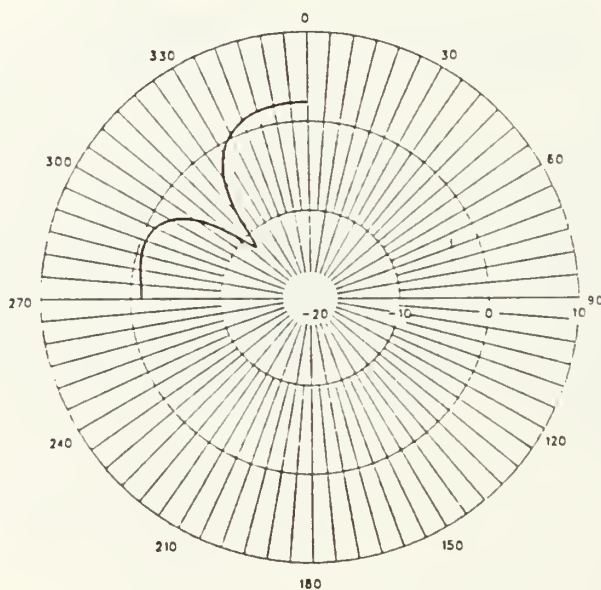

ES 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 20 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



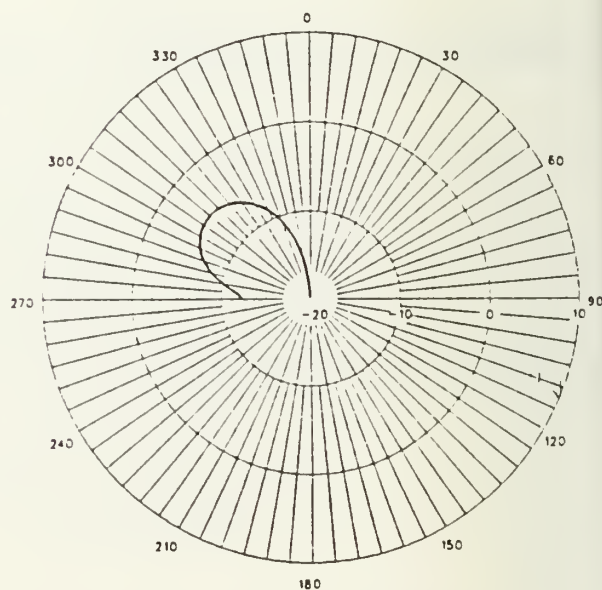


Figure 287. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 20 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

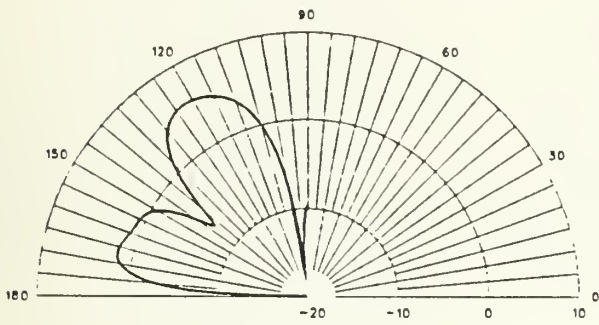

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

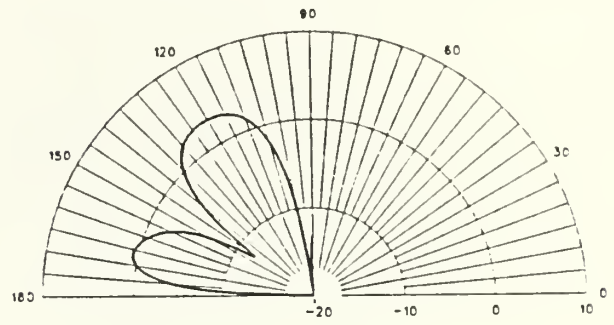

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

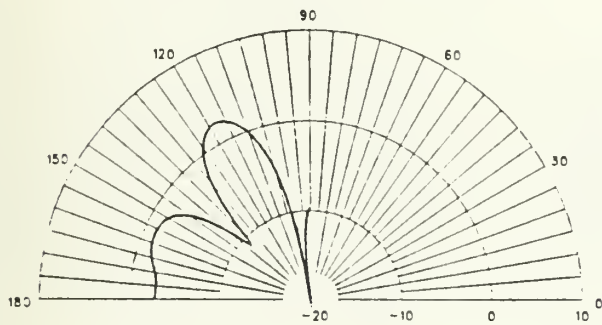

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 21 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



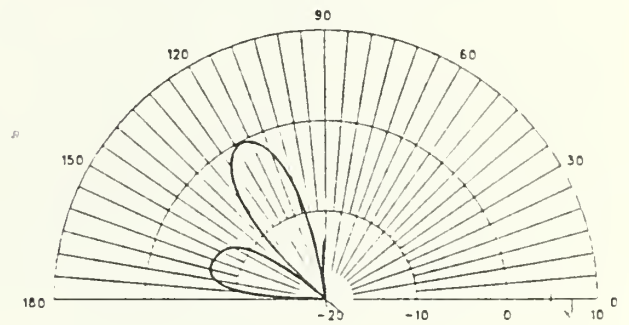


Figure 288. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 21 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

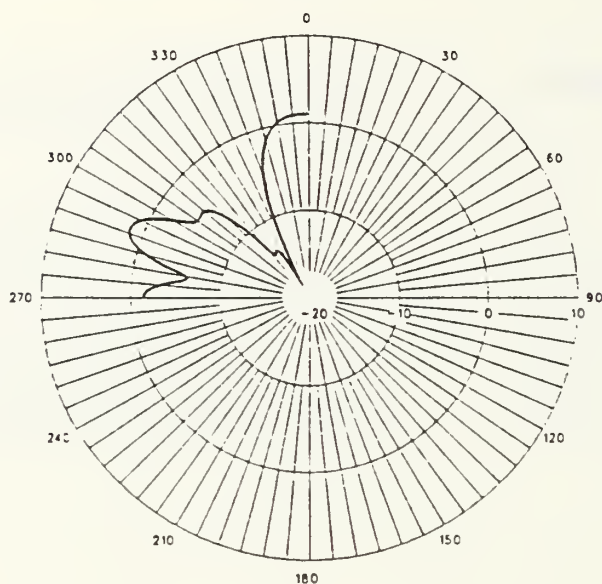

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

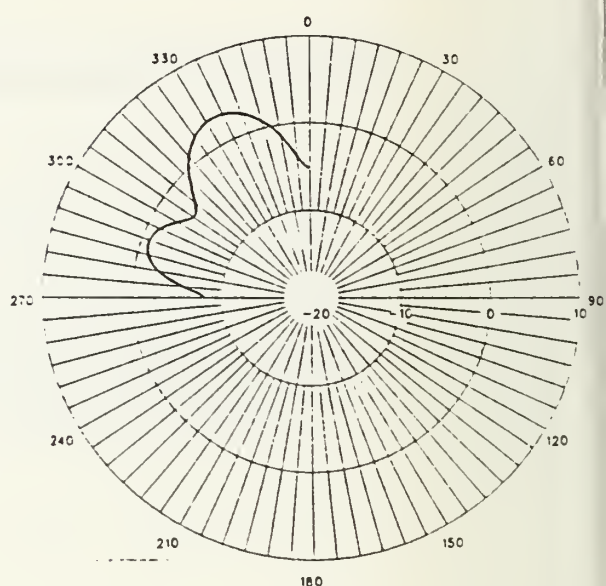

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

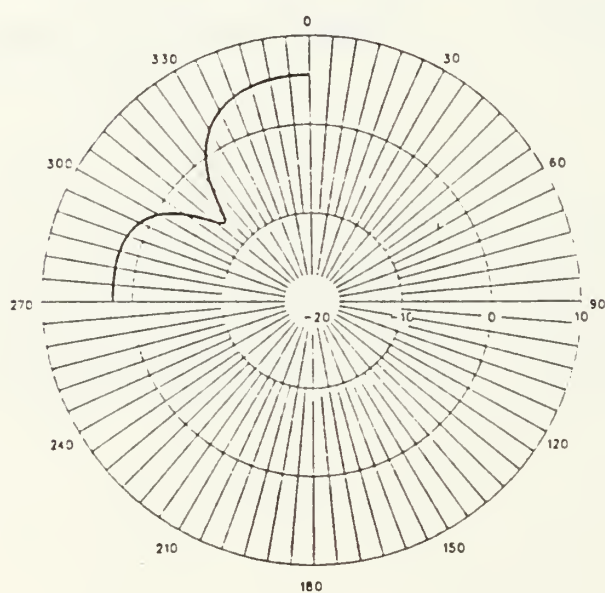

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



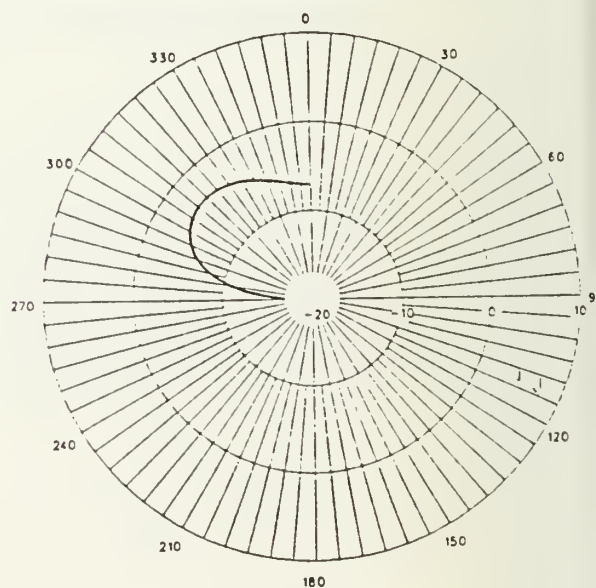


Figure 289. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 21 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

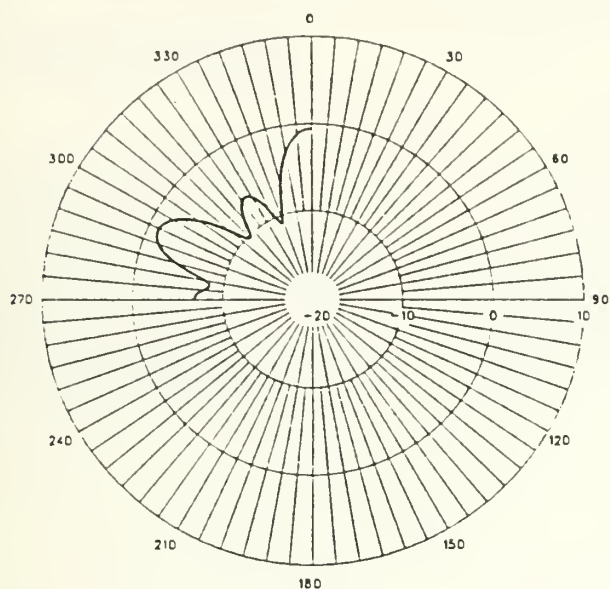

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

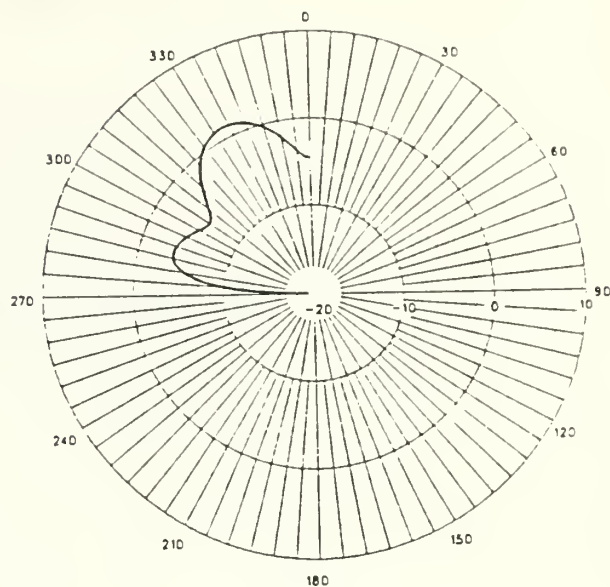

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

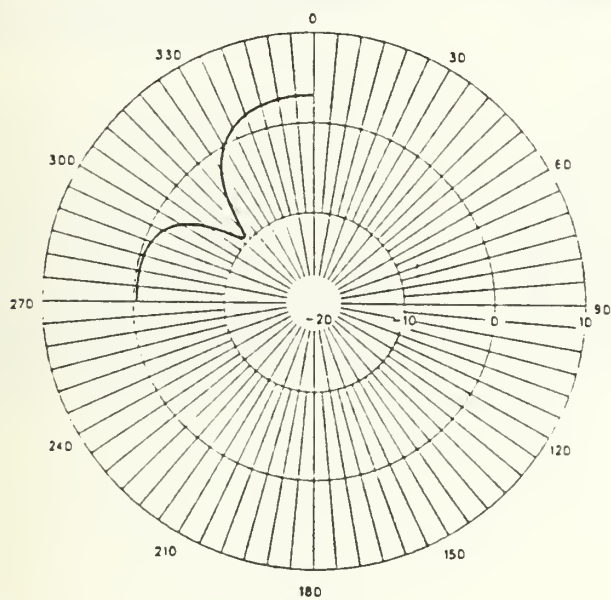

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 21 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



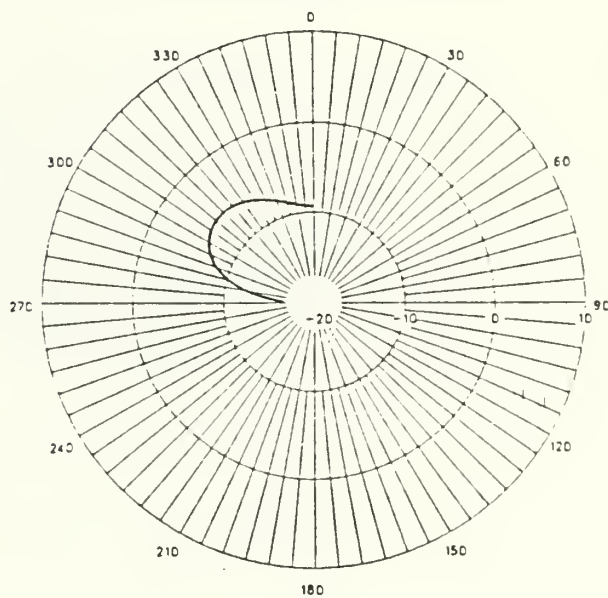


Figure 290. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 21 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

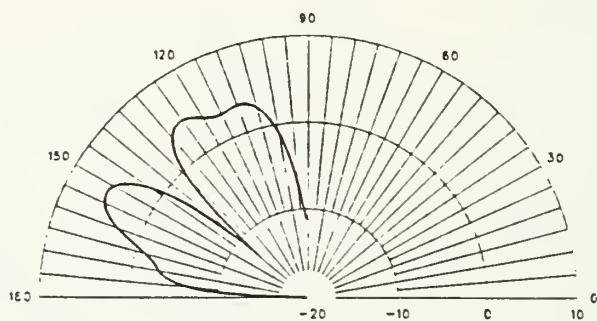

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

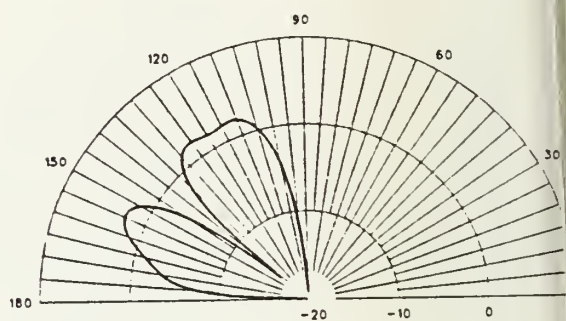

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

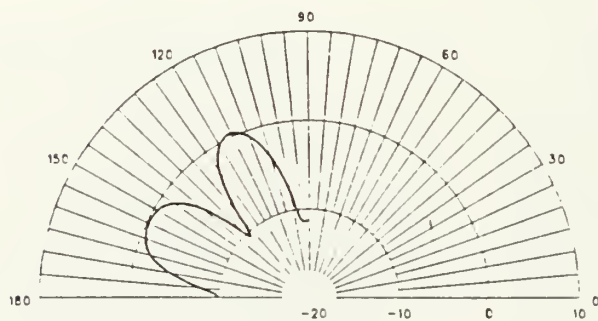

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 22 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



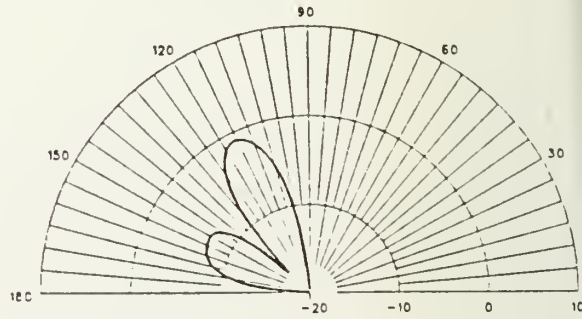


Figure 291. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 22 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

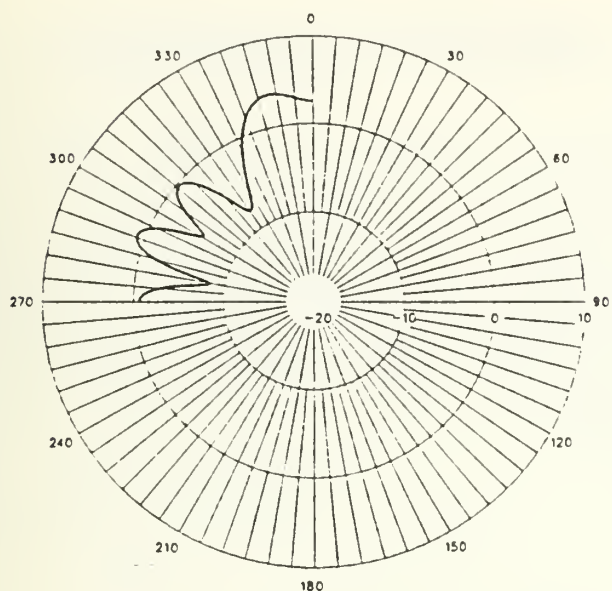

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

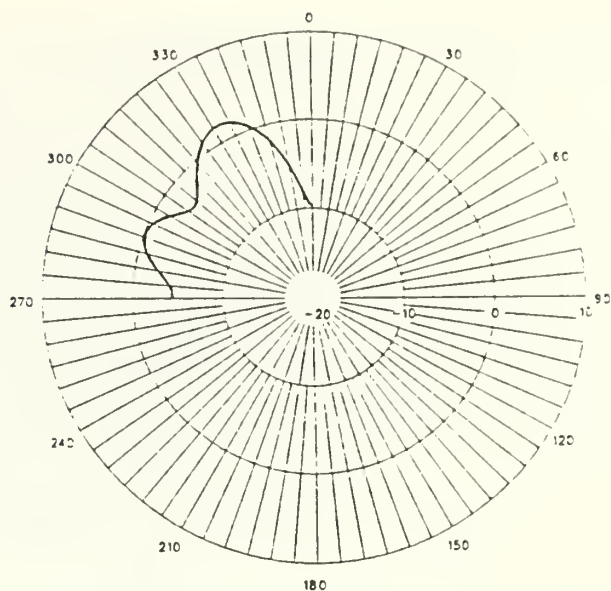

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

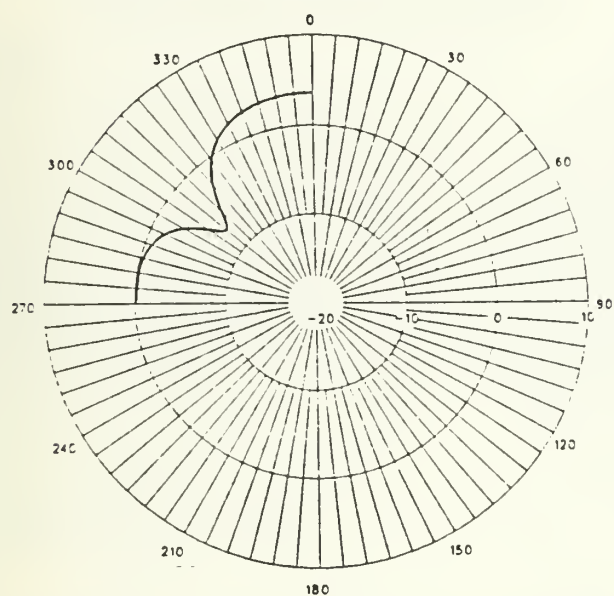

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



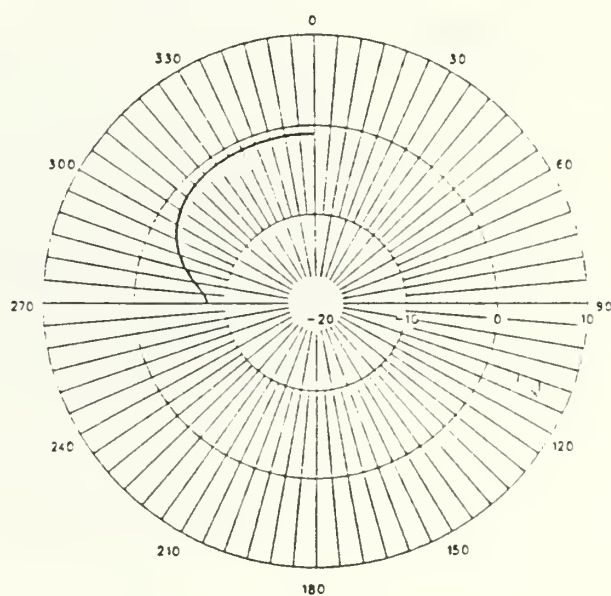


Figure 292. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 22 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

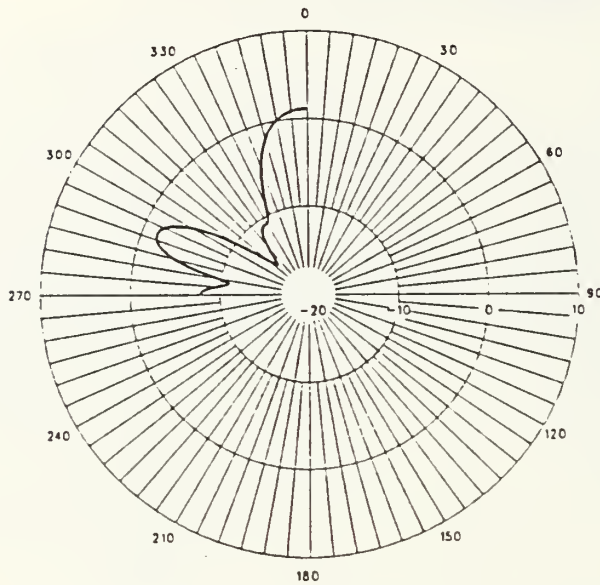

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

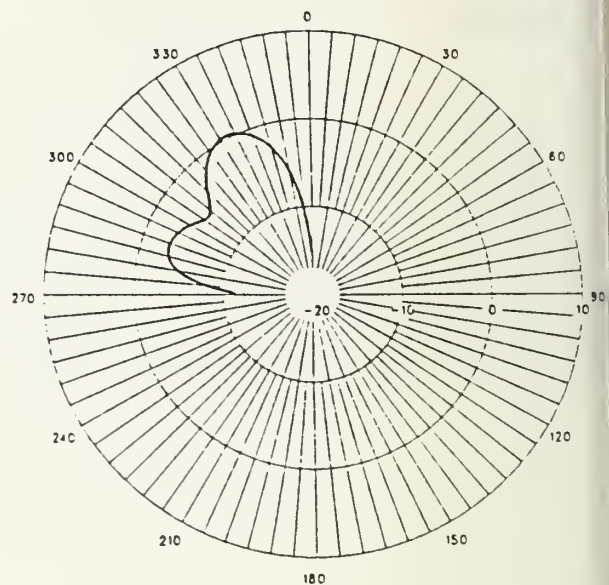

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

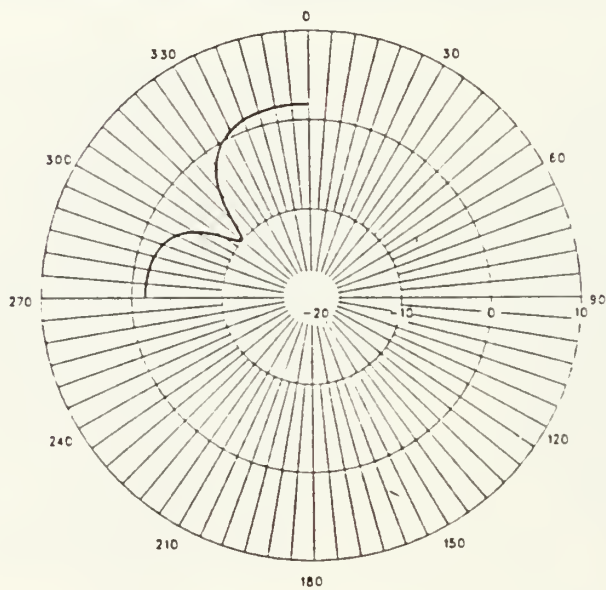

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 22 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



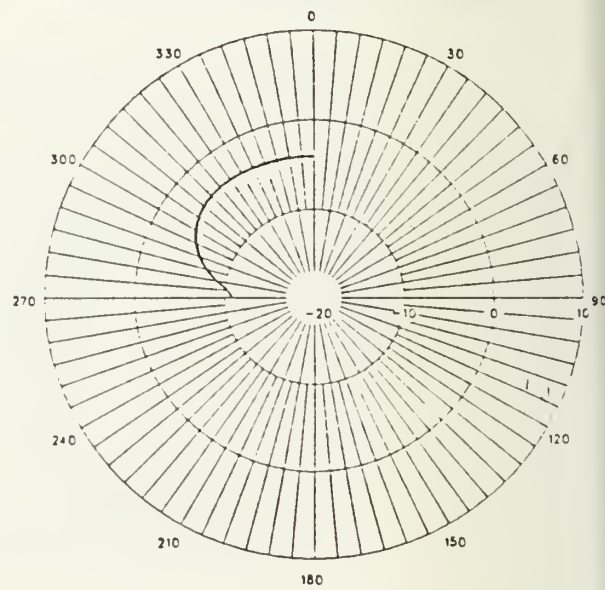


Figure 293. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 22 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

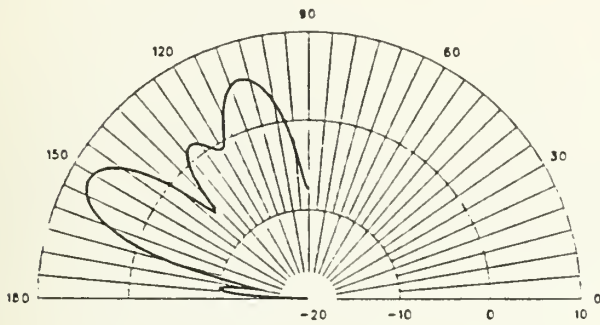

ESI 32A2A BROADBAND DOUBLE DELTA / ~~PERF~~ GND. / 23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

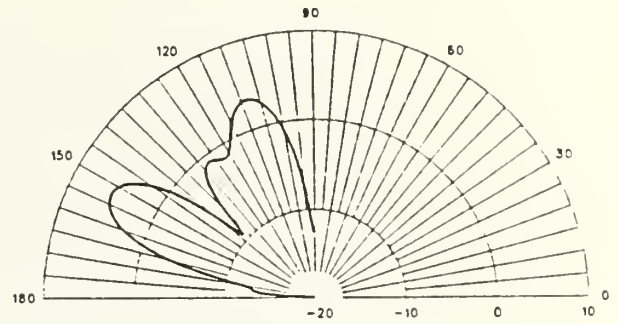

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

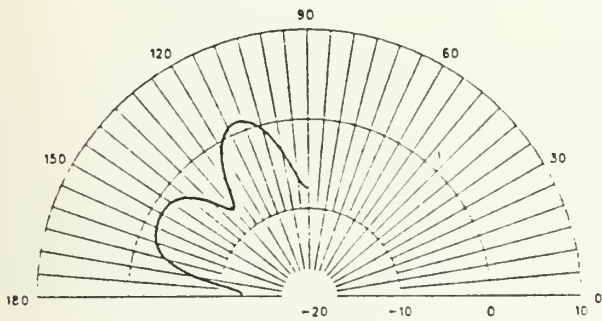

ESI 32A2A BROADBAND DOUBLE DELTA / ~~PERF~~ GND. / 23 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



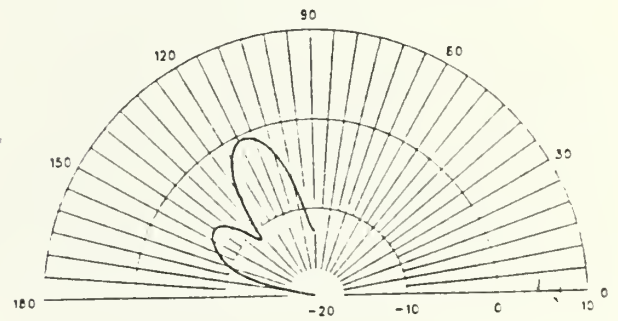


Figure 294. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 23 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

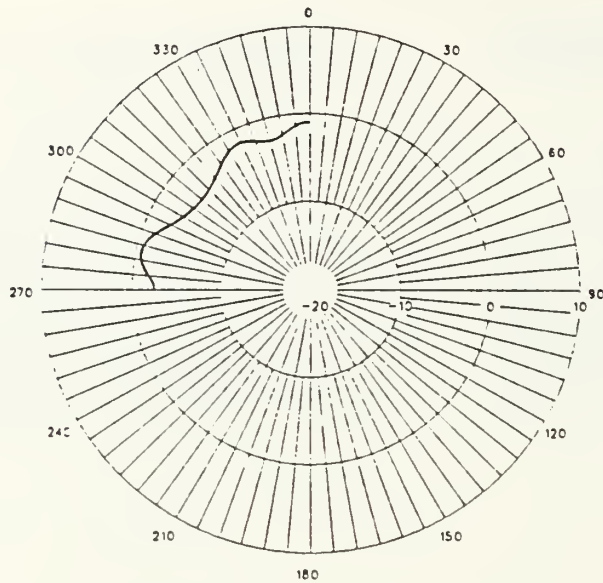

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

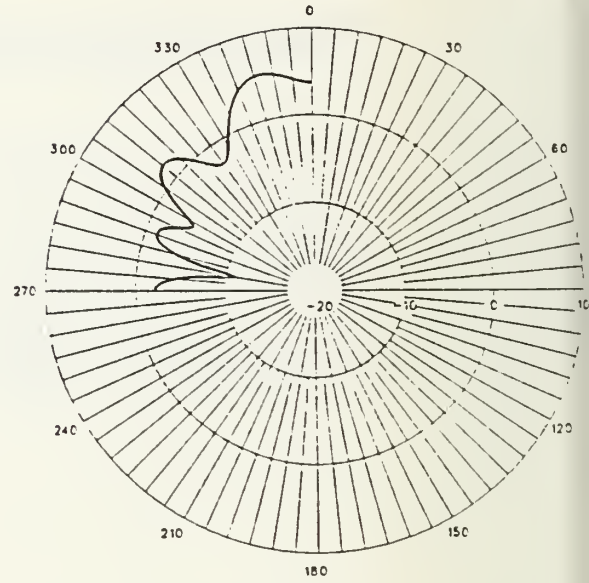

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

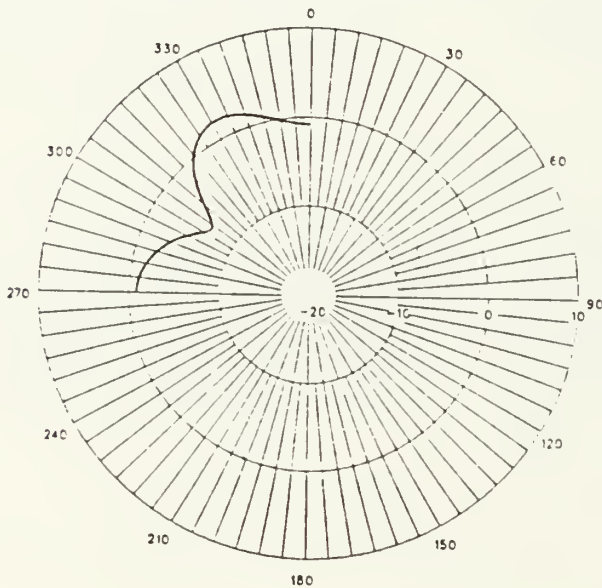

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



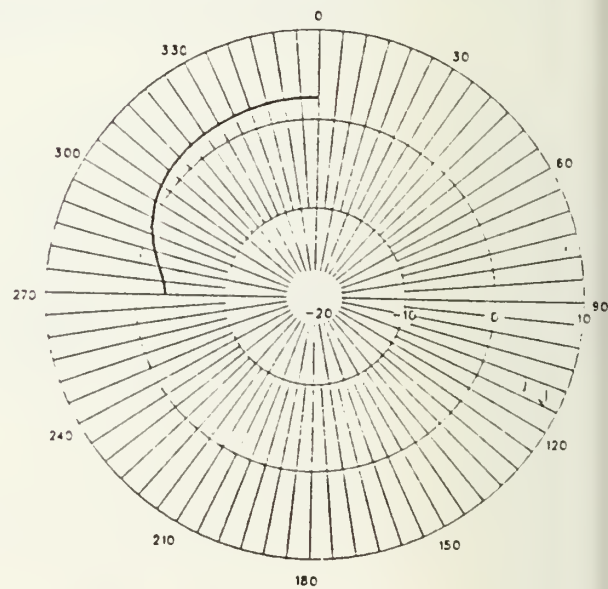


Figure 295. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 23 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

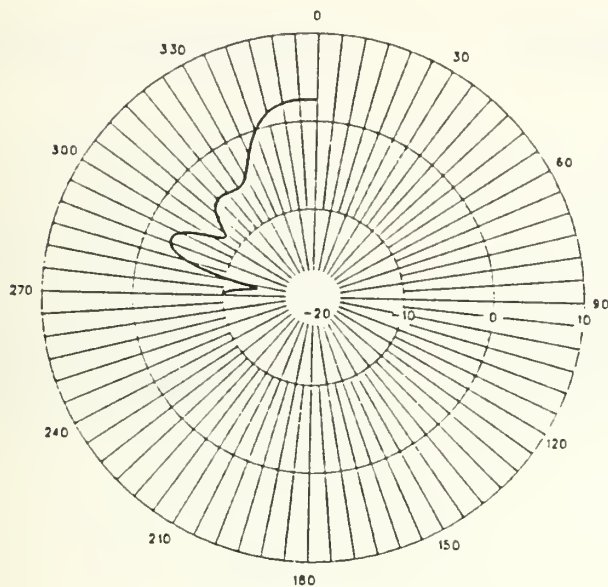

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

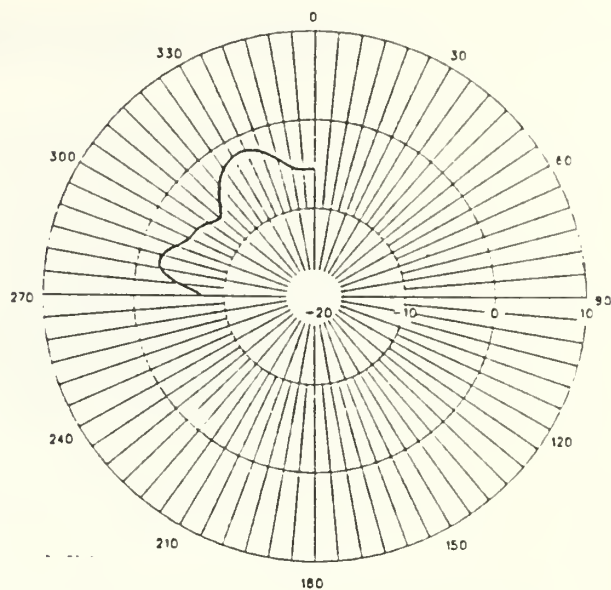

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

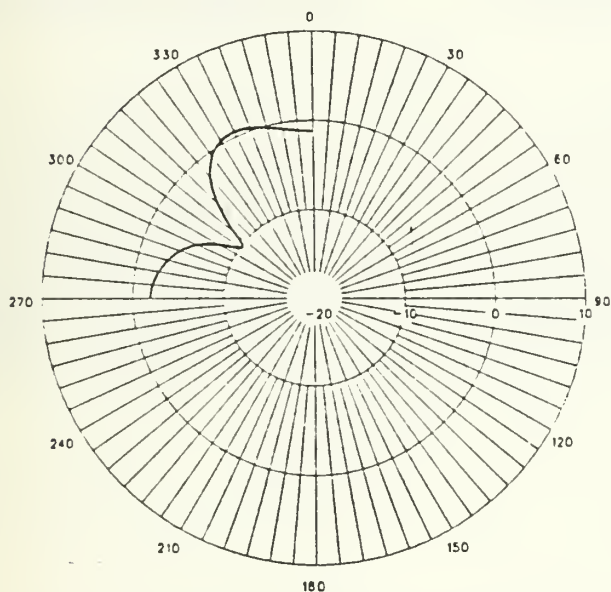

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 23 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



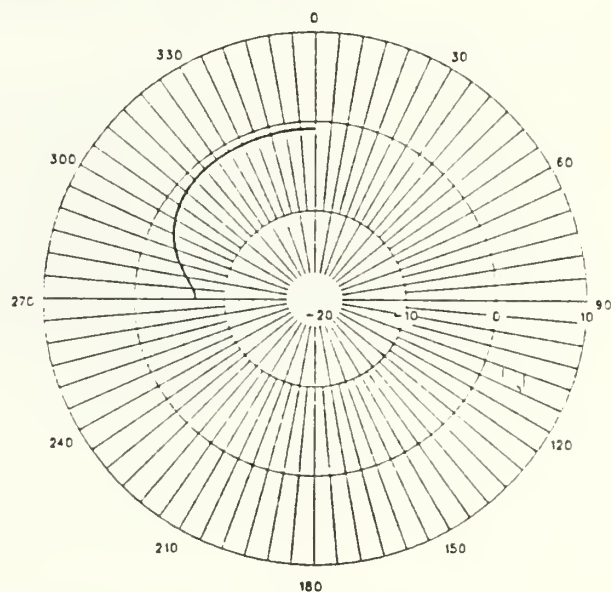


Figure 296. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 23 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

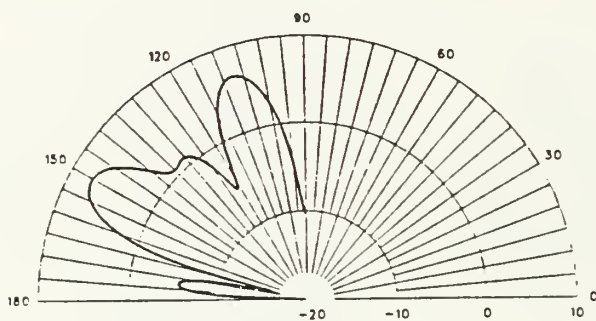

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

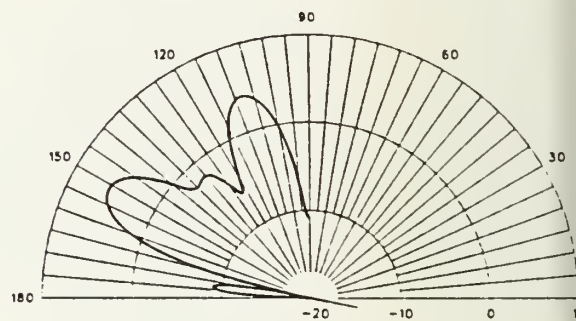

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

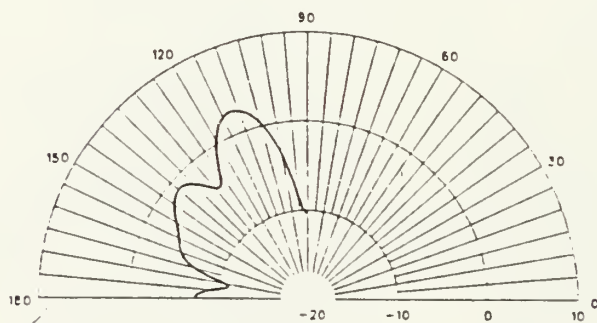

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 24 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



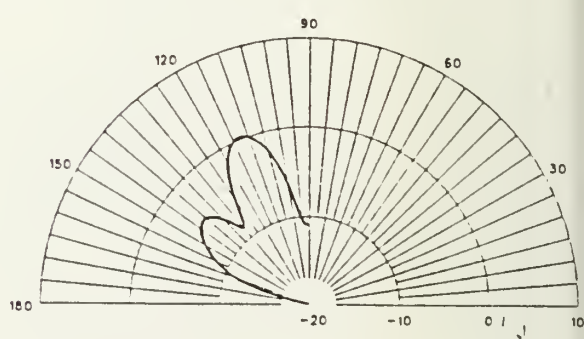


Figure 297. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 24 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

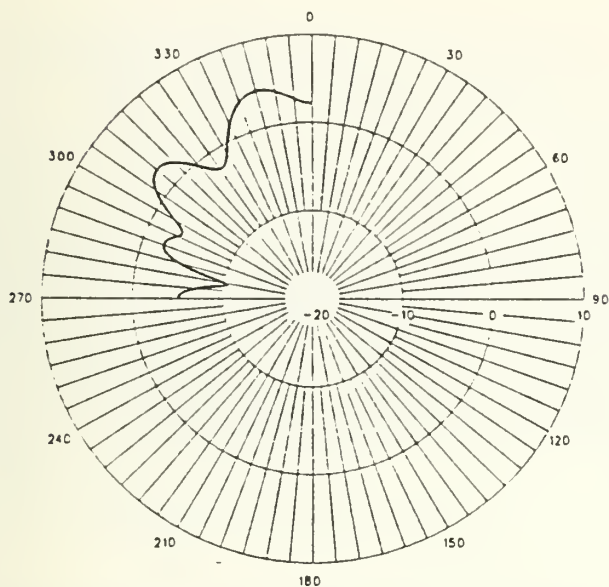

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

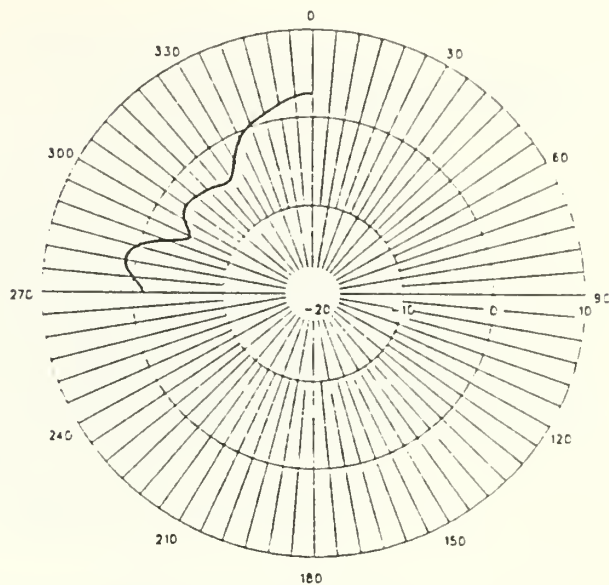

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

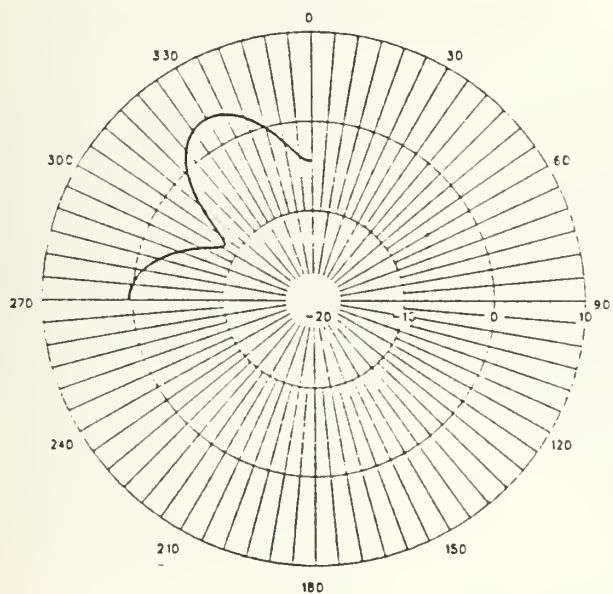

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



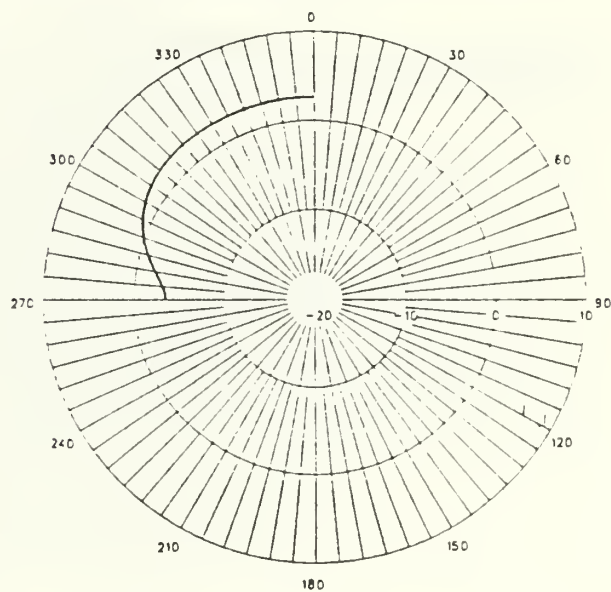


Figure 298. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 24 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

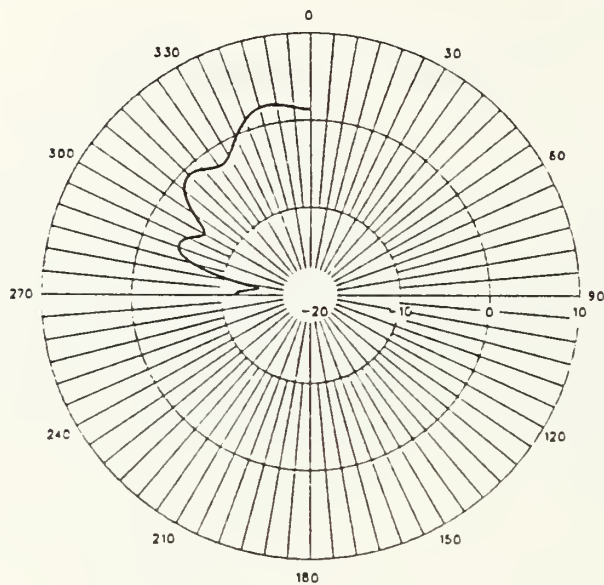

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

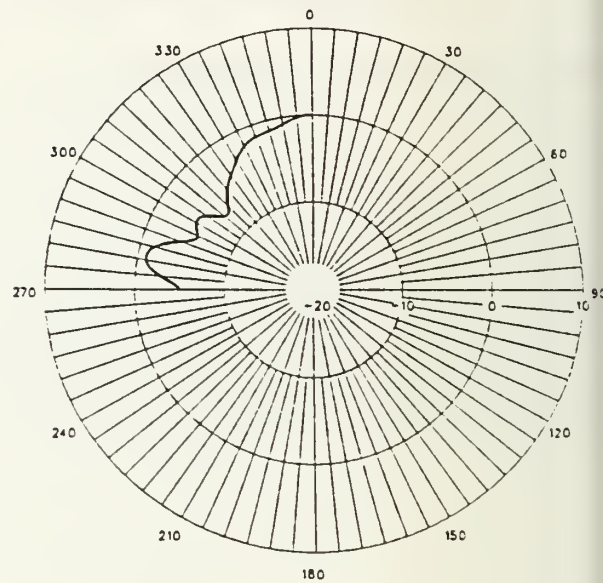

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

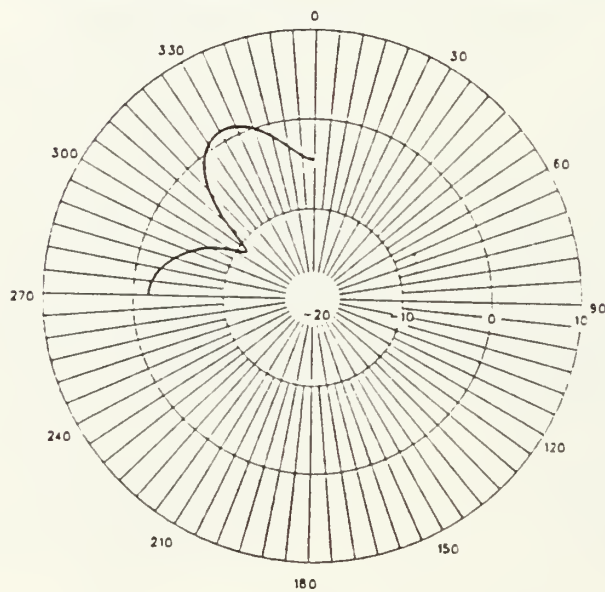

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 24 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



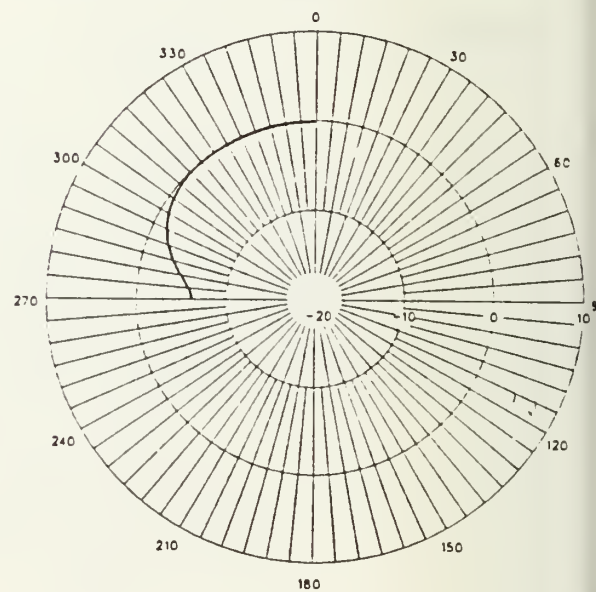


Figure 299. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 24 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

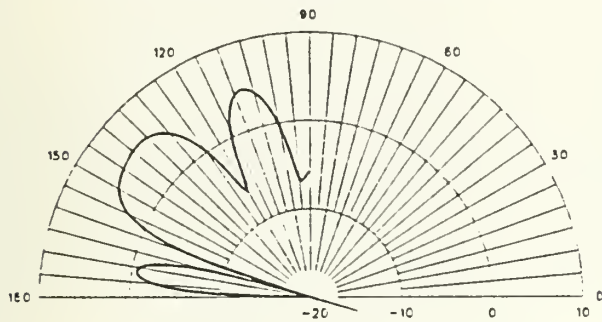

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

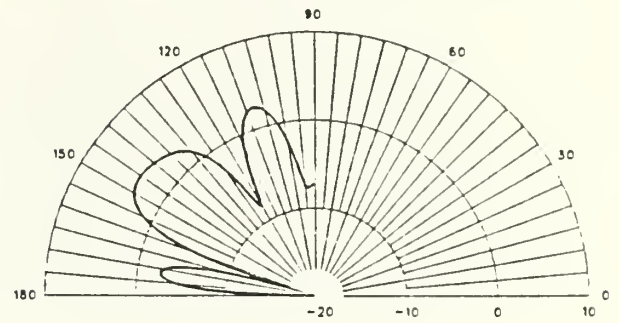

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

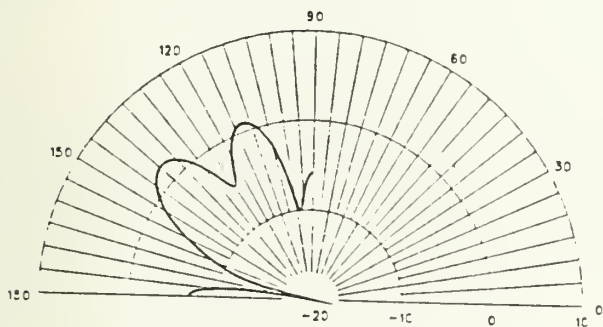

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 25 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



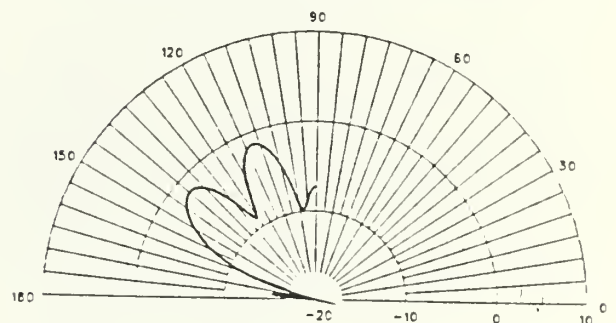


Figure 300. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 25 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

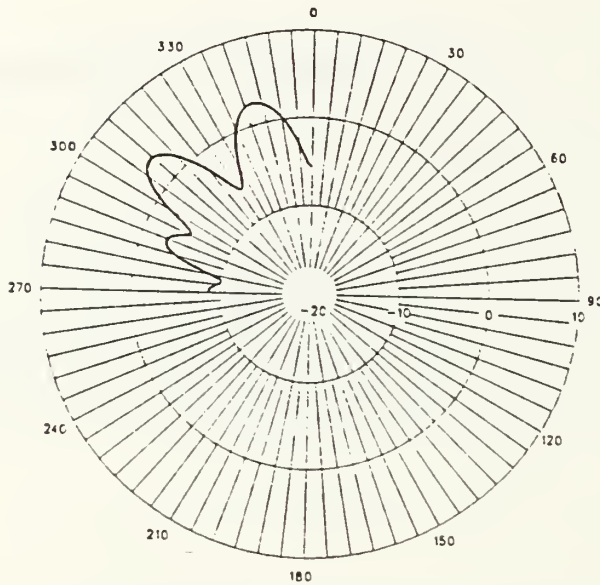

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

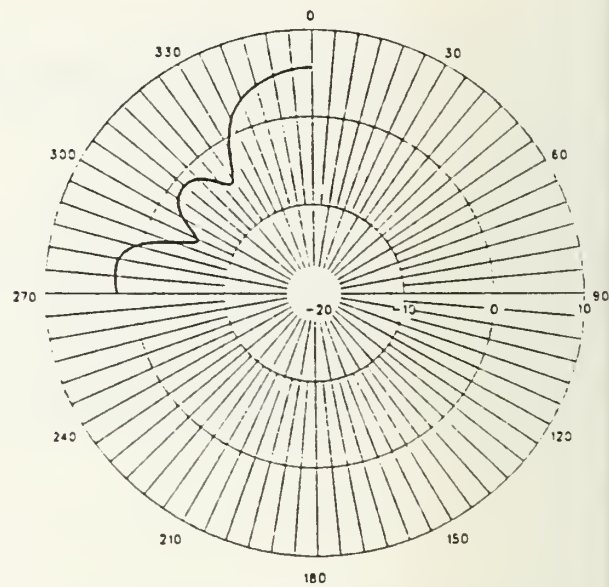

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

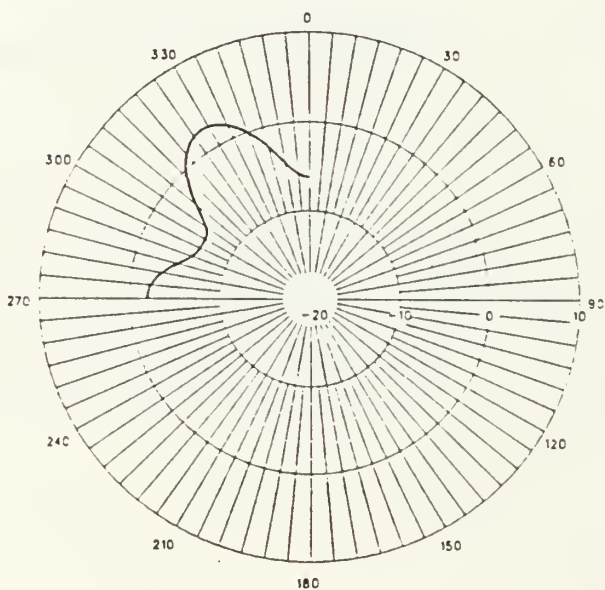

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



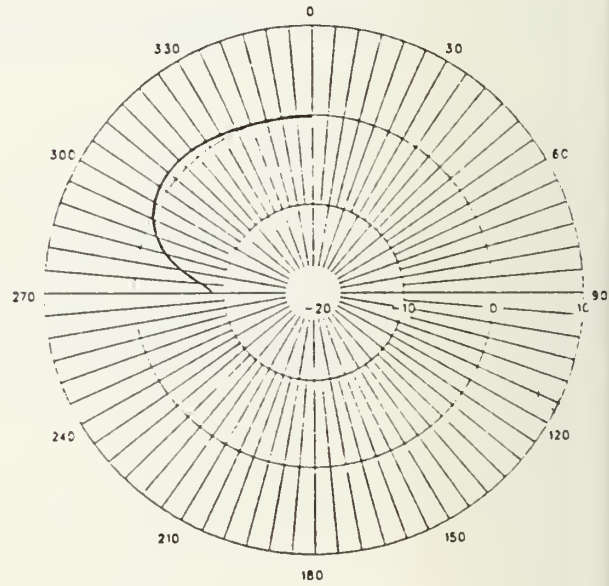


Figure 301. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 25 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

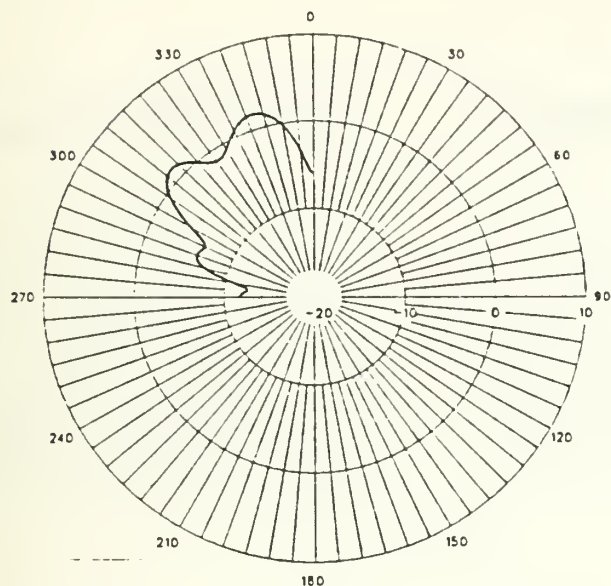

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

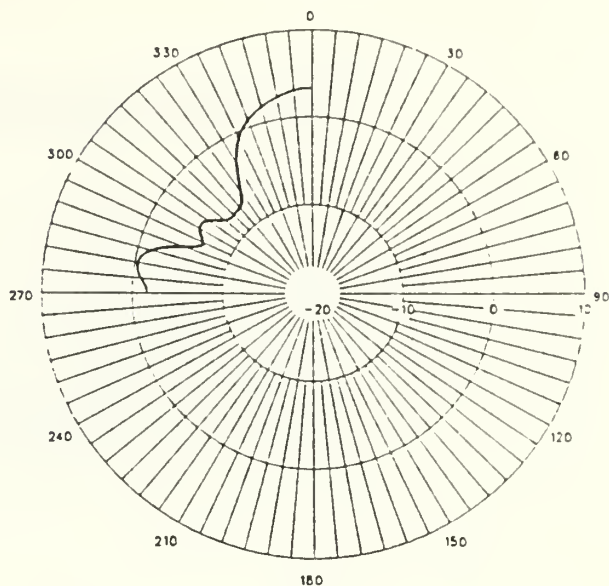

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

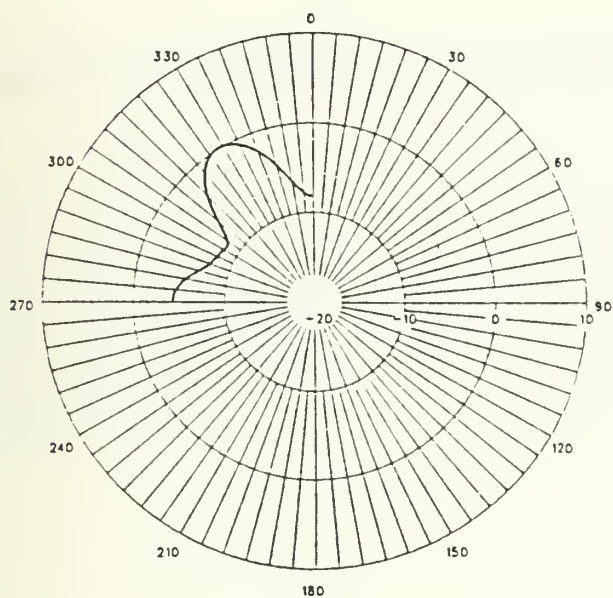

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 25 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



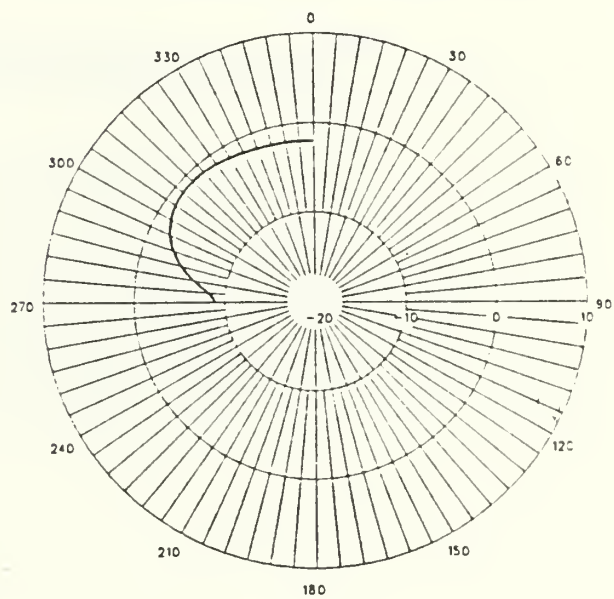


Figure 302. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 25 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

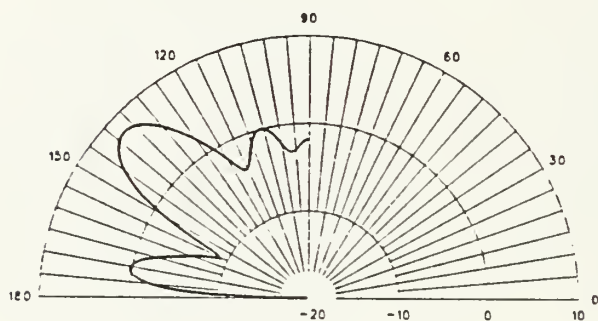

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

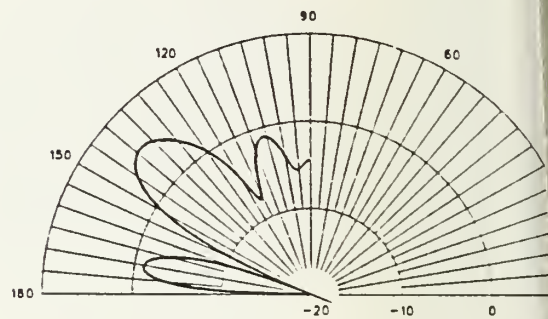

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

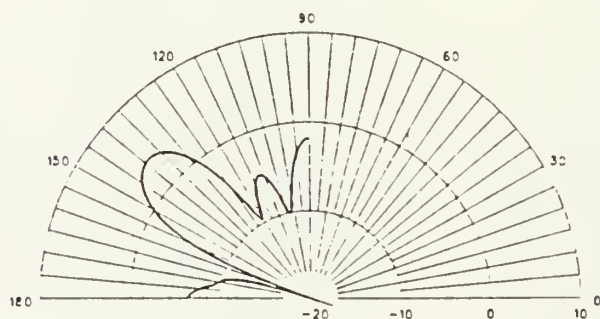

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 26 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



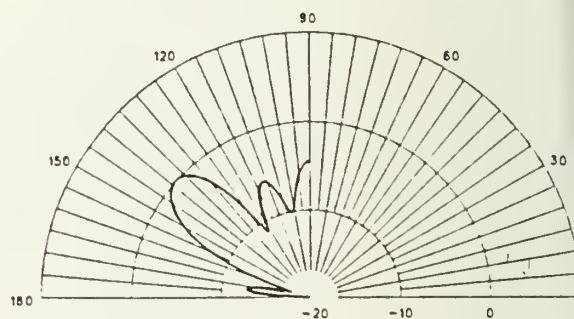


Figure 303. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 26 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

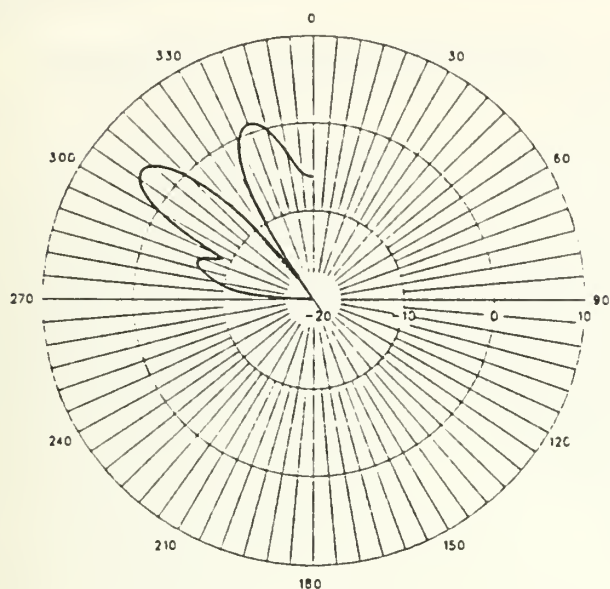

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

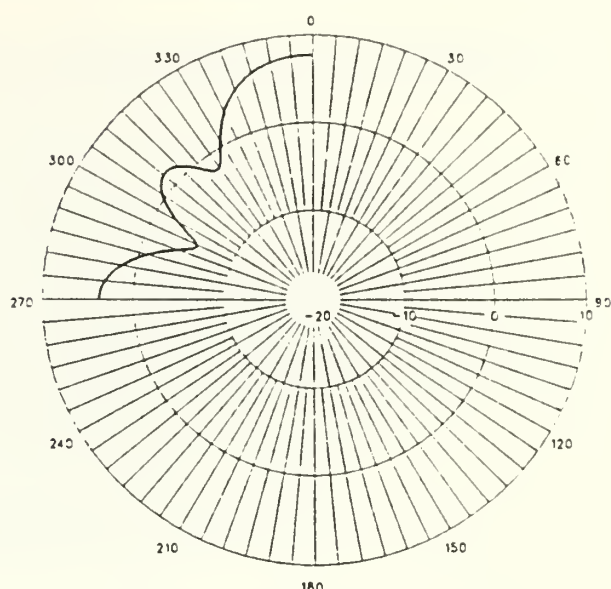

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

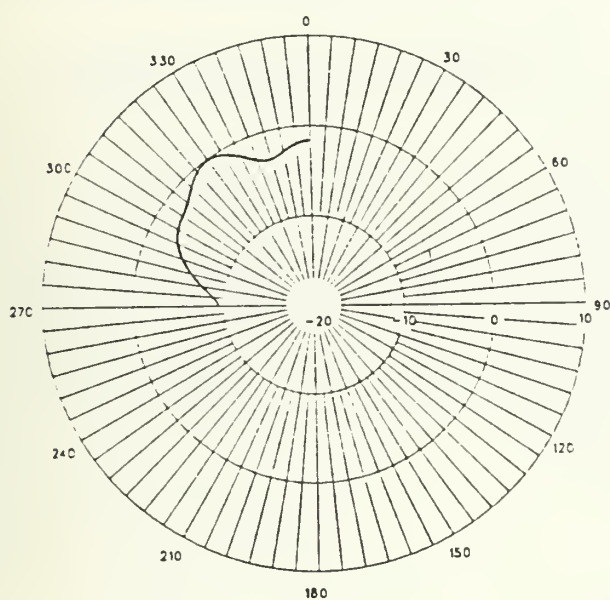

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



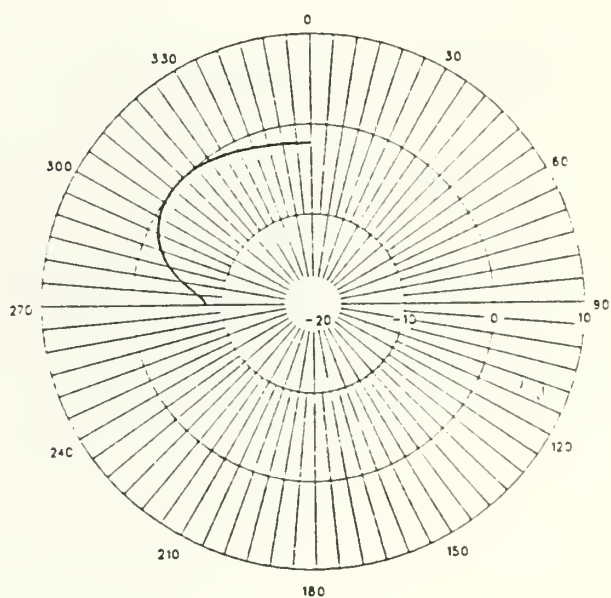


Figure 304. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 26 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

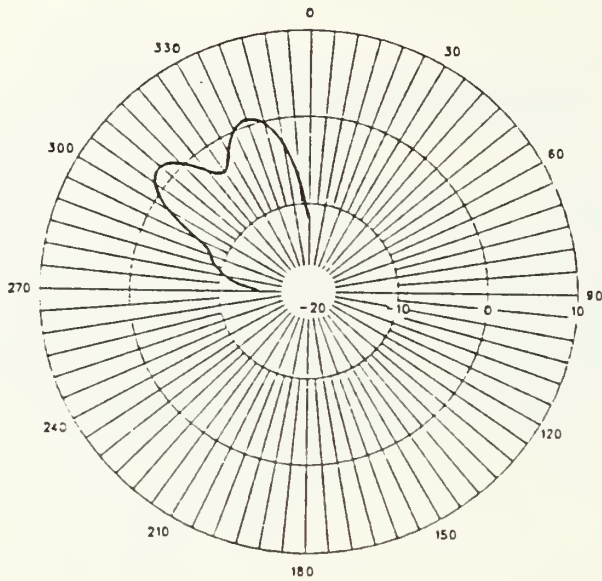

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

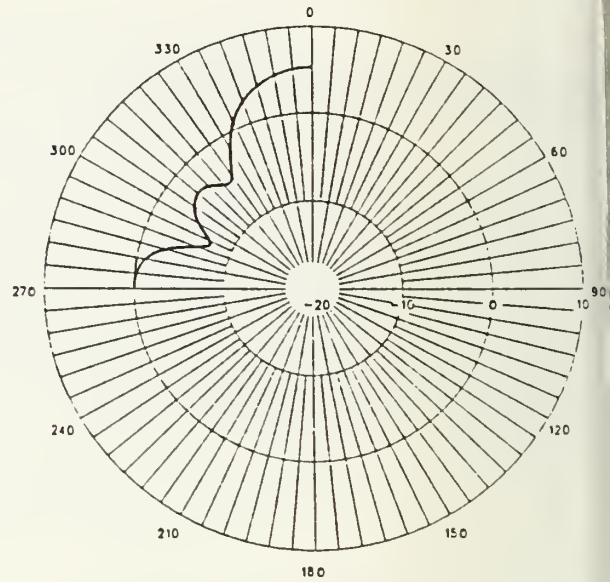

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

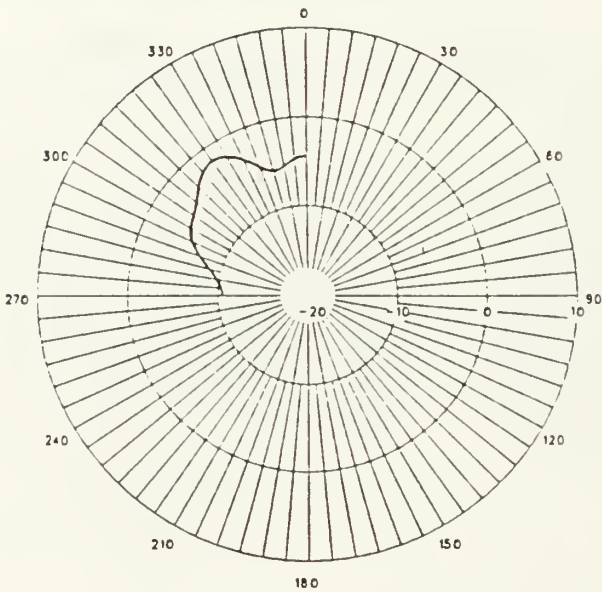

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 26 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



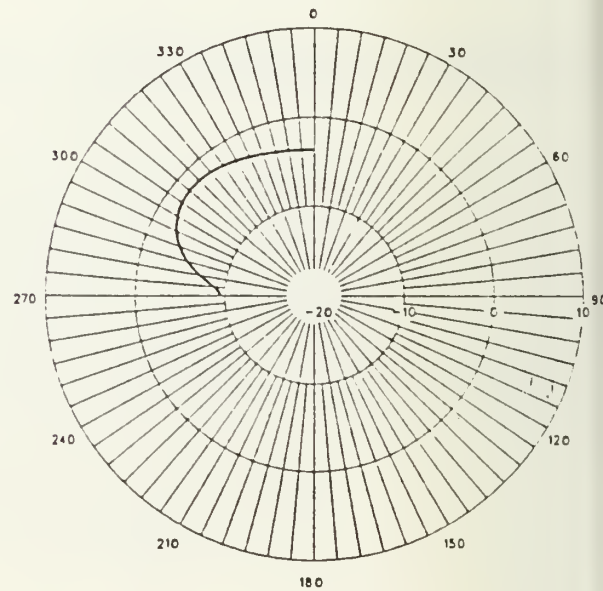


Figure 305. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 26 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

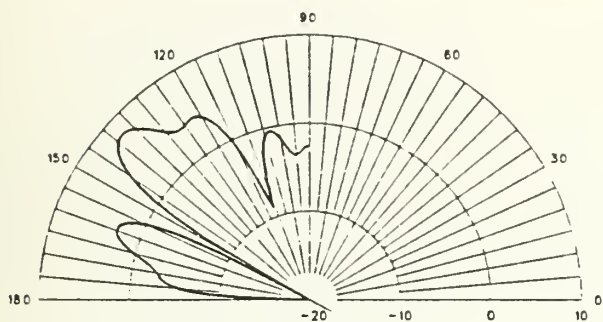

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

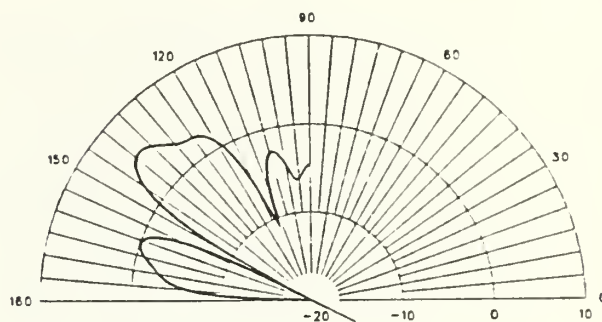

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

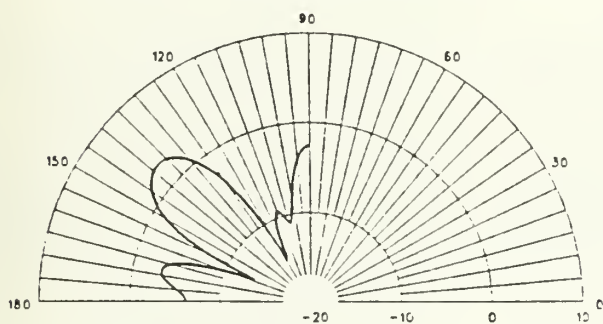

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 27 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



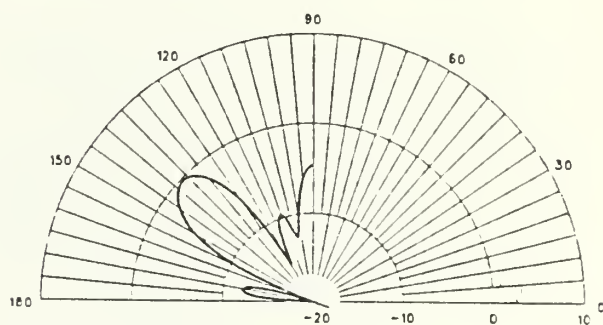


Figure 306. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 27 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

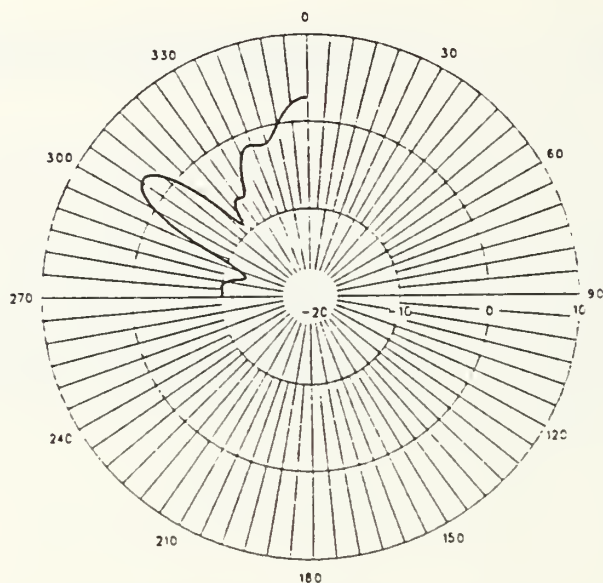

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

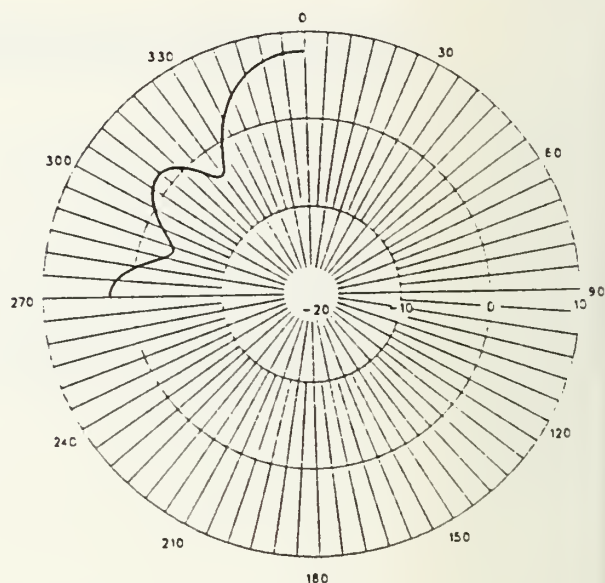

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

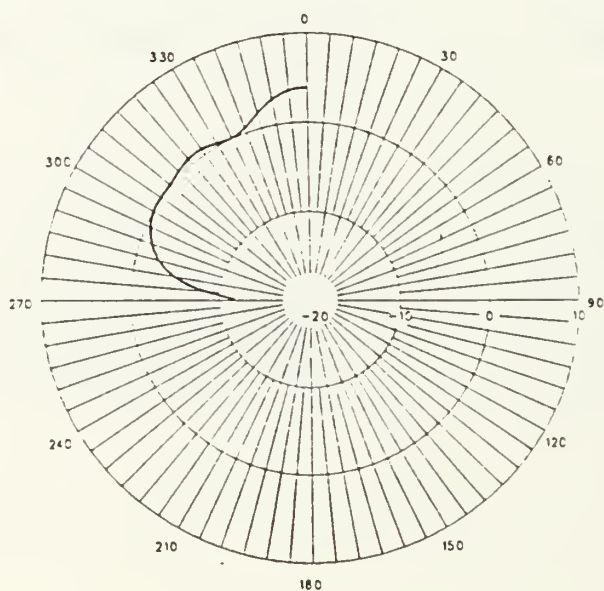

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



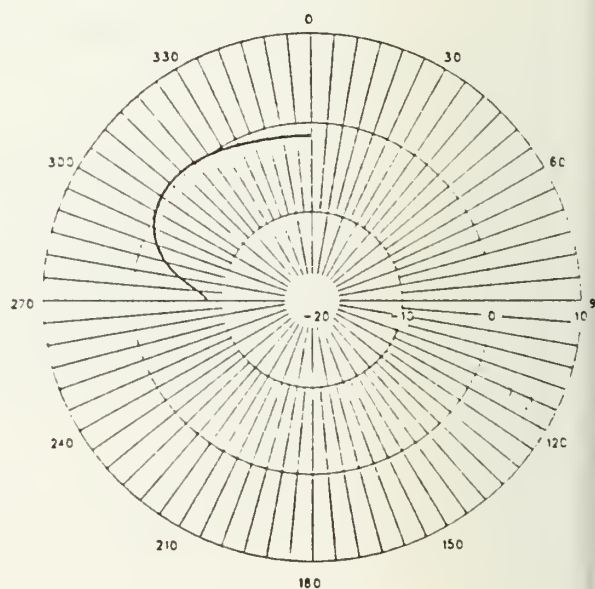


Figure 307. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 27 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

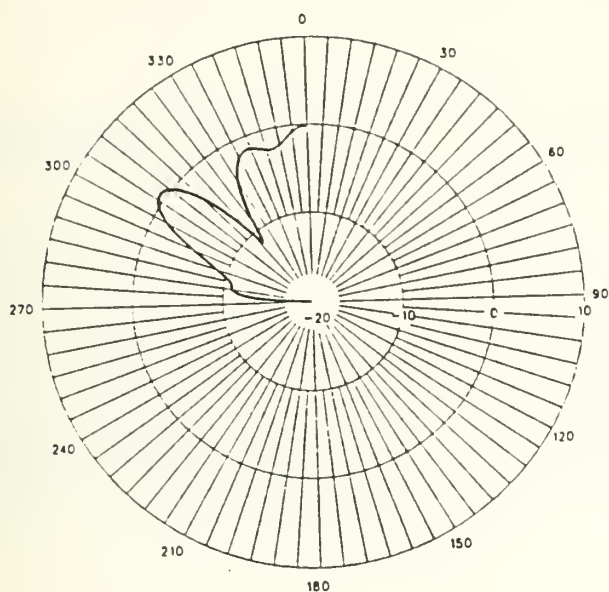

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

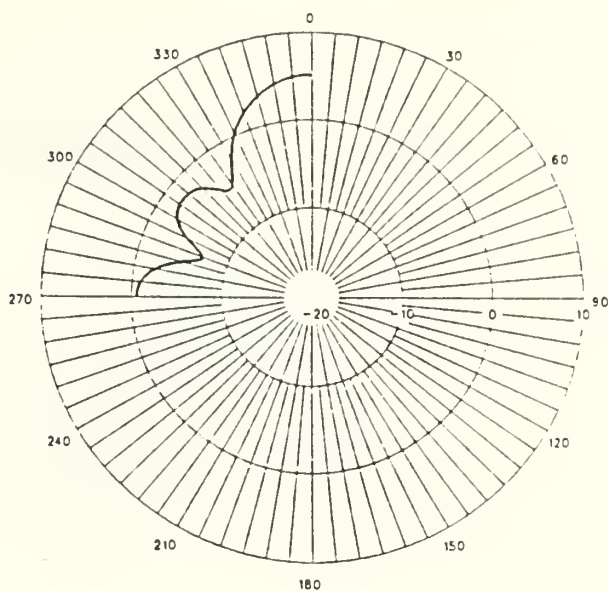

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

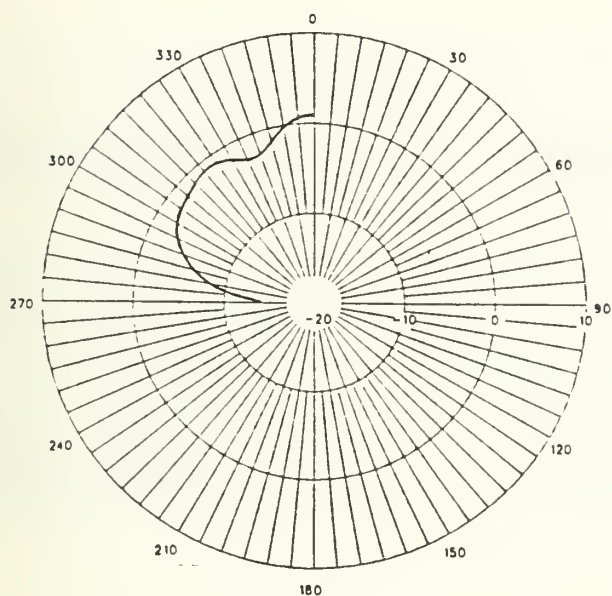

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 27 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



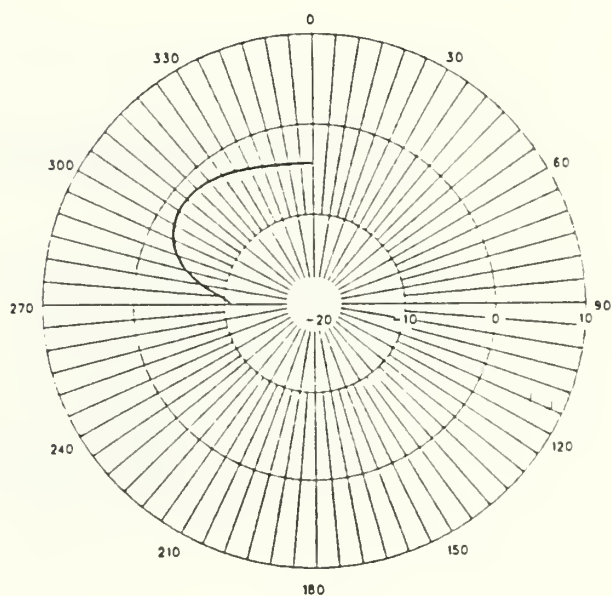


Figure 308. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 27 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

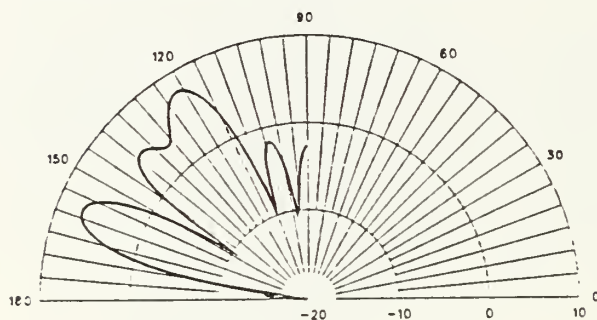

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

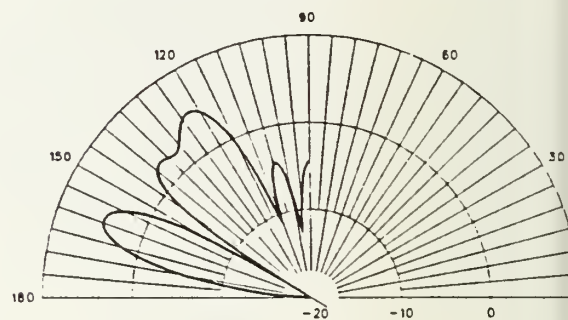

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

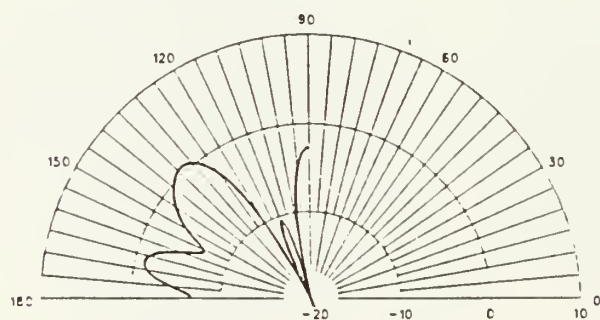

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 28 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



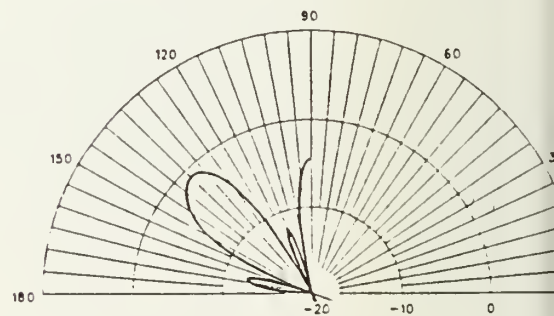


Figure 309. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 28 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

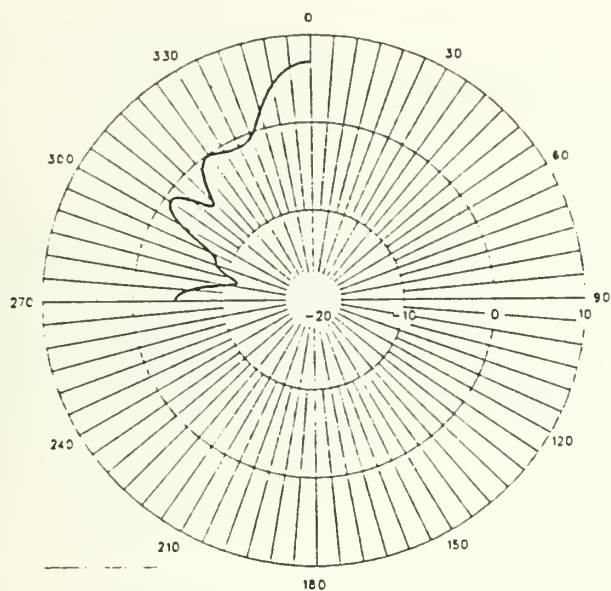

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

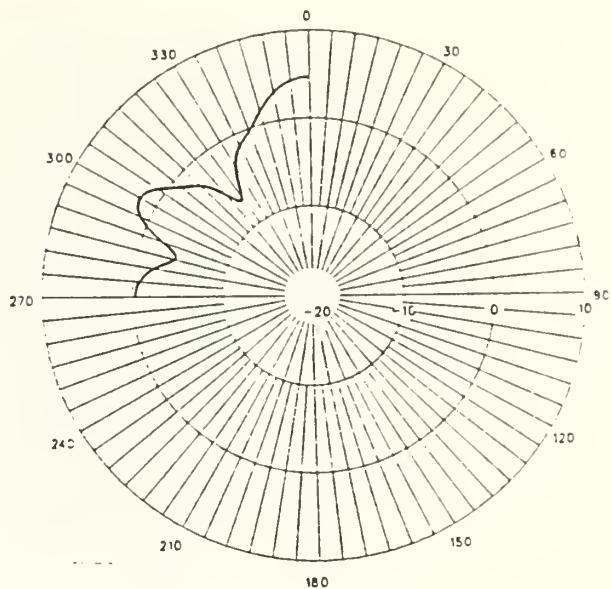

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

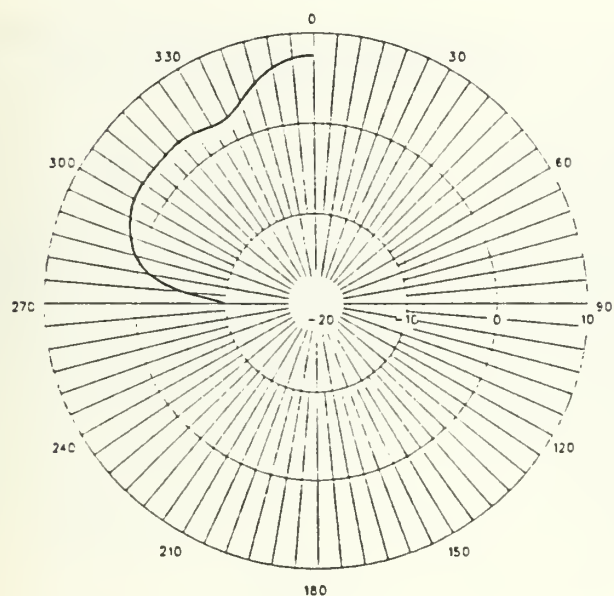

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



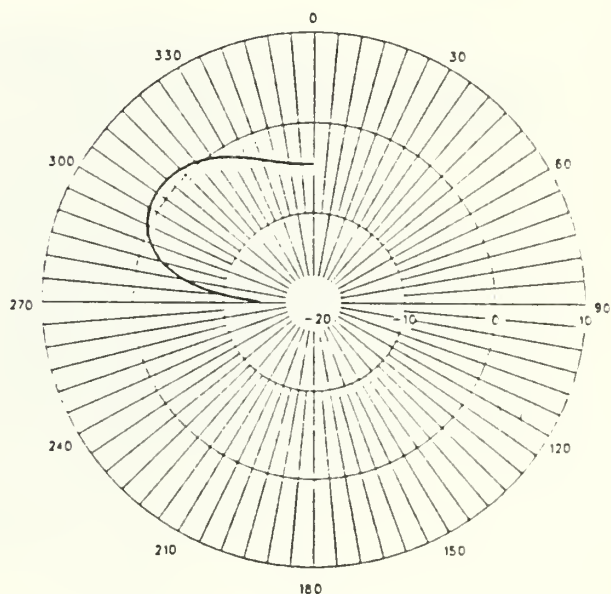


Figure 310. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 28 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

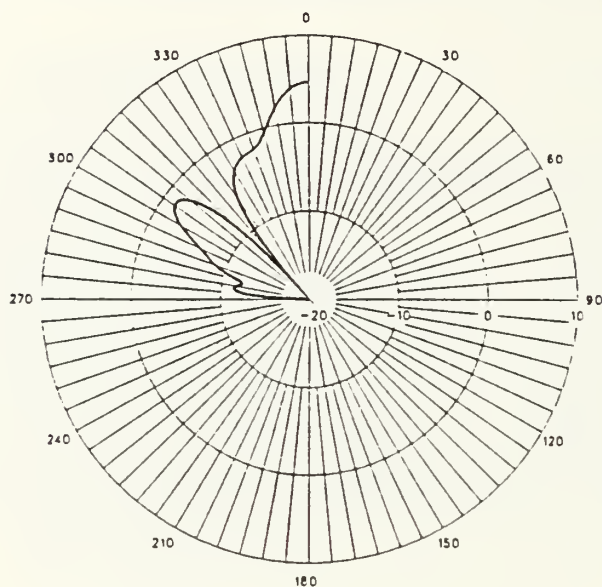

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

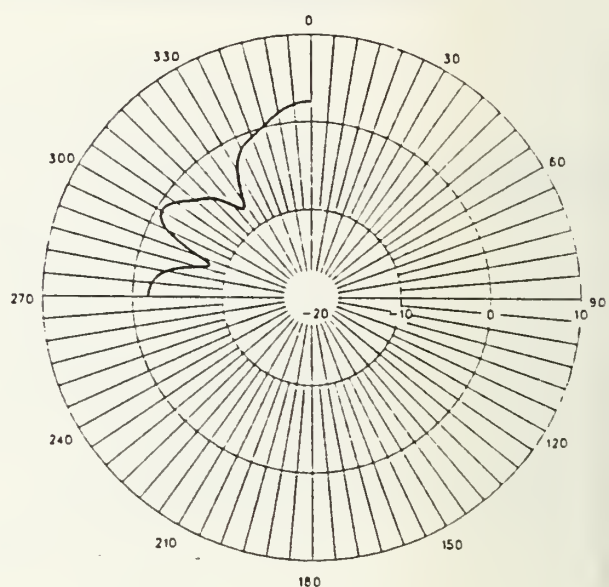

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

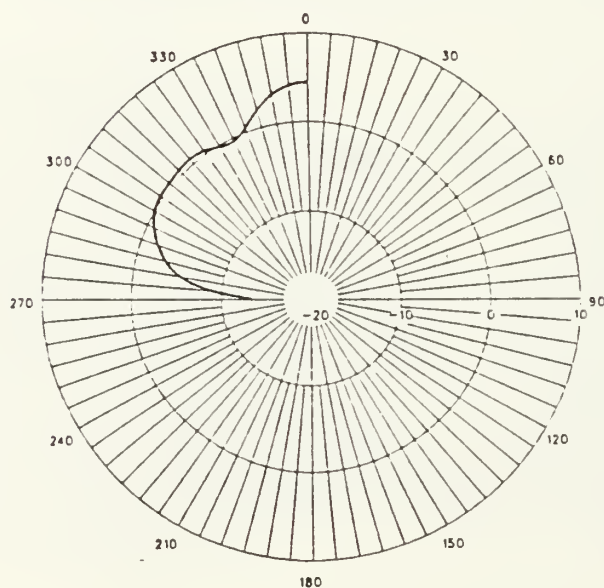

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 28 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



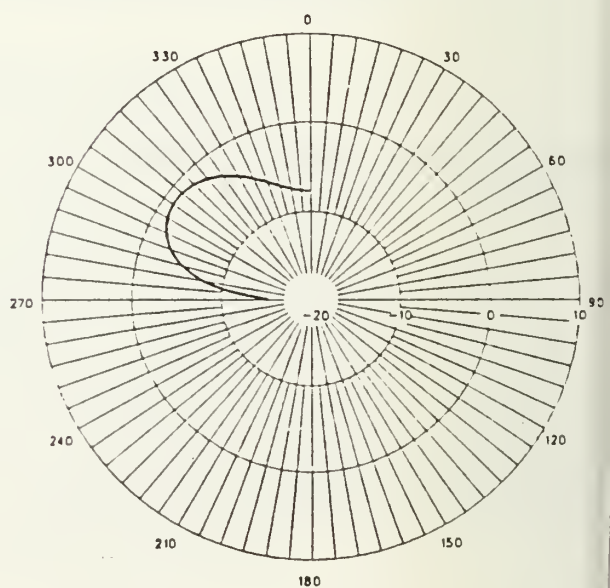


Figure 311. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 28 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

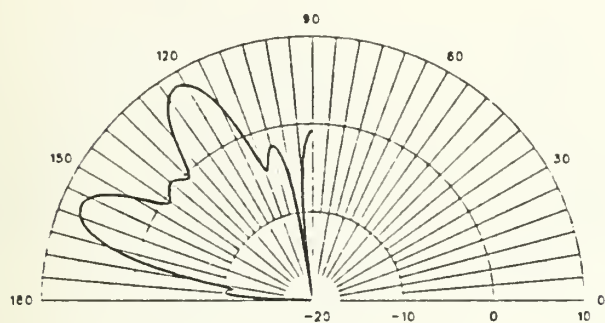

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

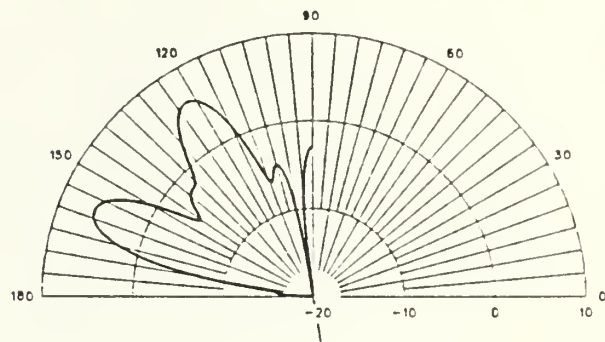

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

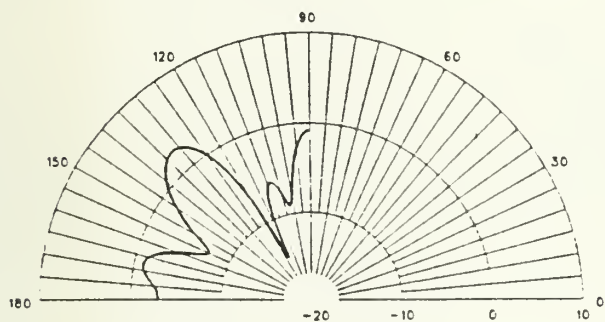

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 29 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



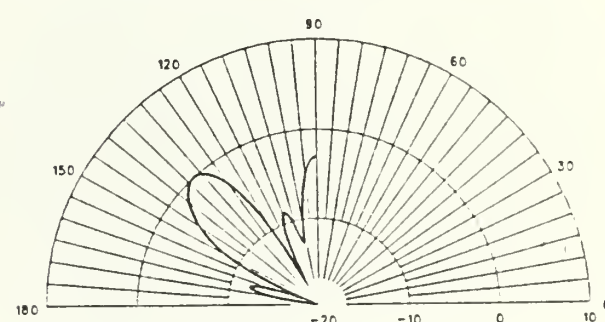


Figure 312. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 29 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

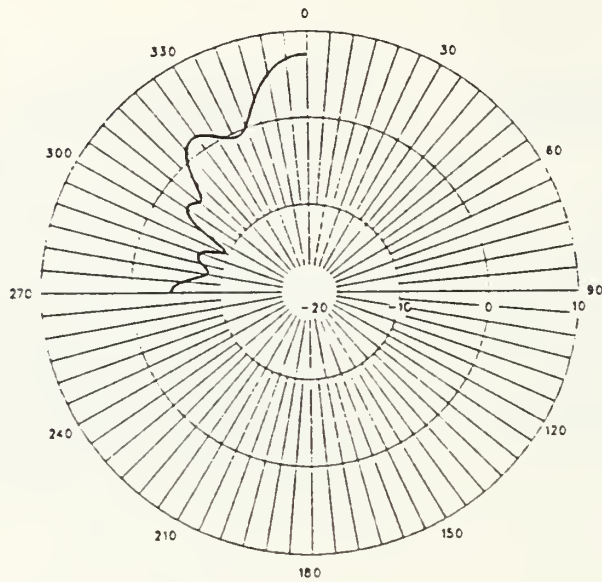

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

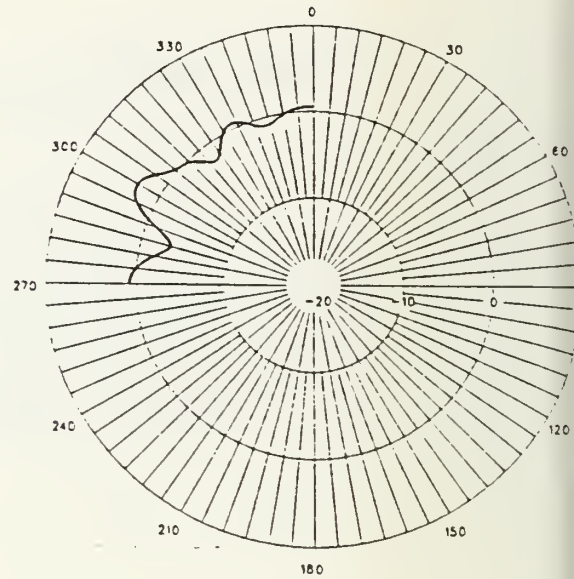

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

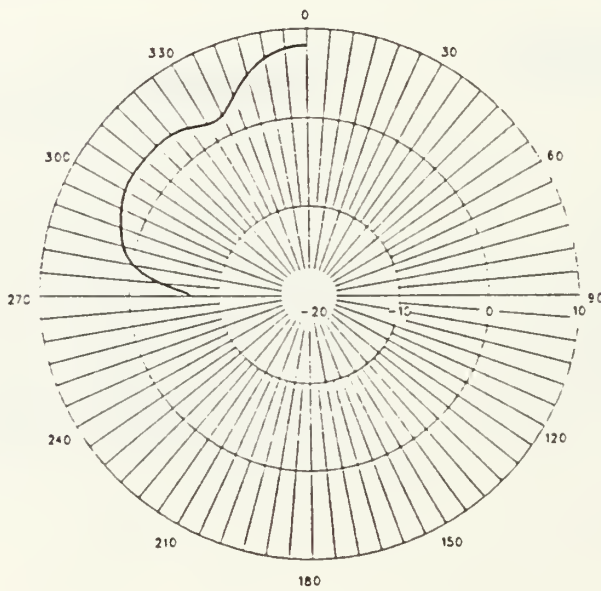

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



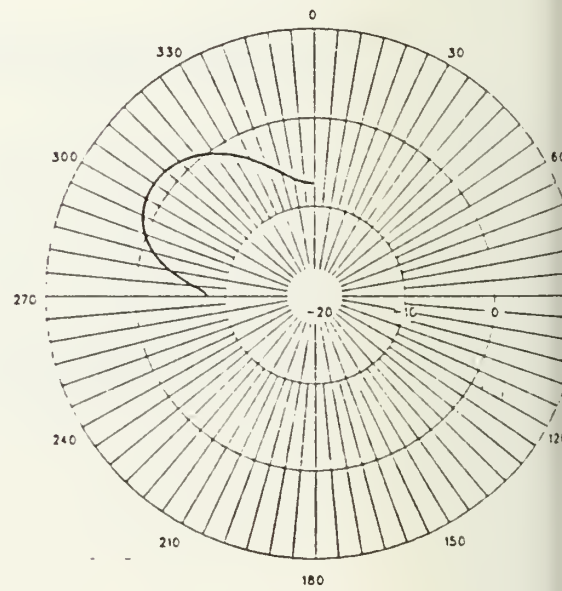


Figure 313. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 29 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

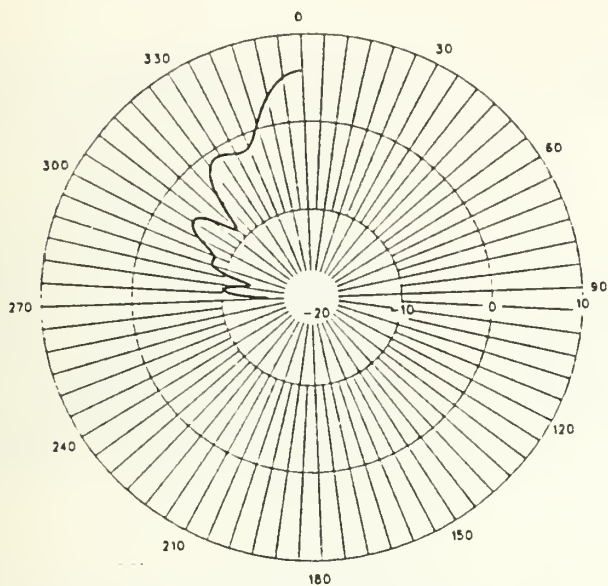

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

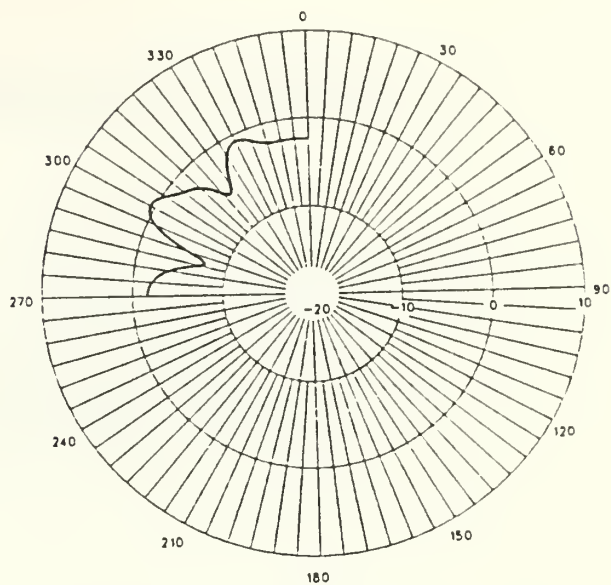

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

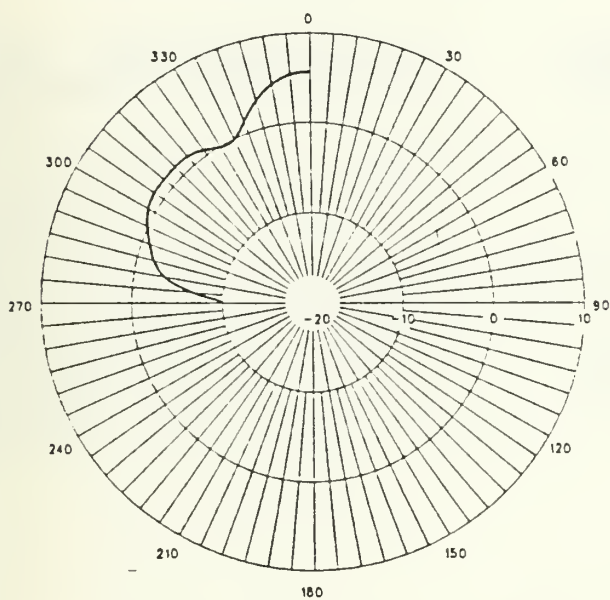

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 29 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



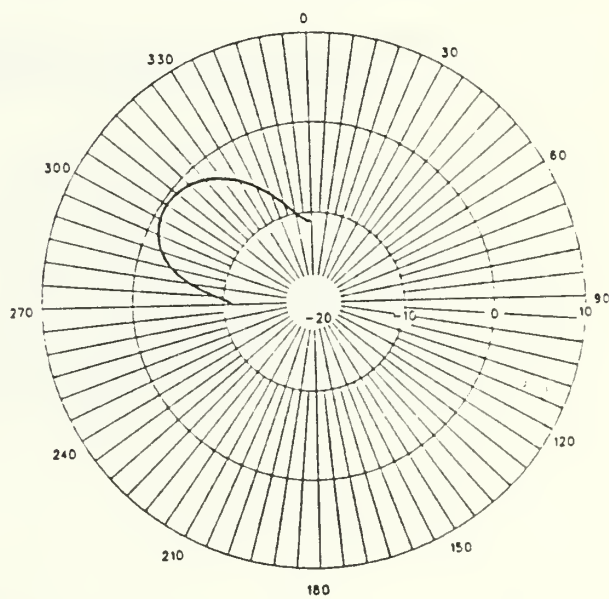


Figure 314. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 29 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

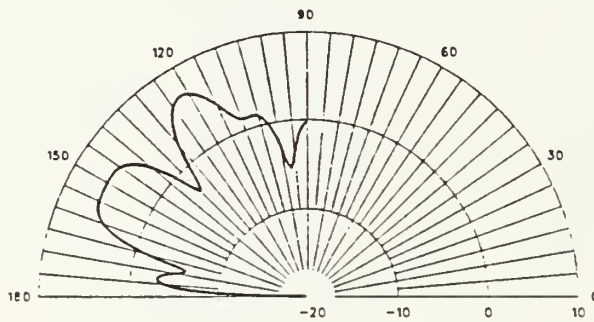

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BORESIGHT

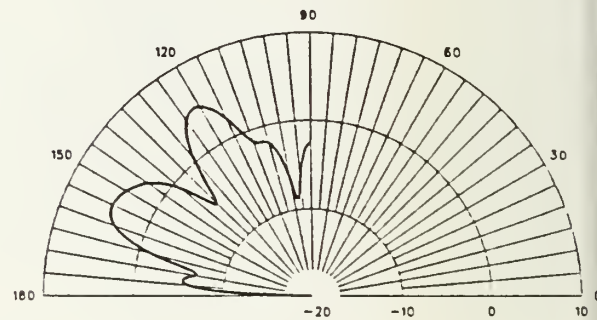

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE

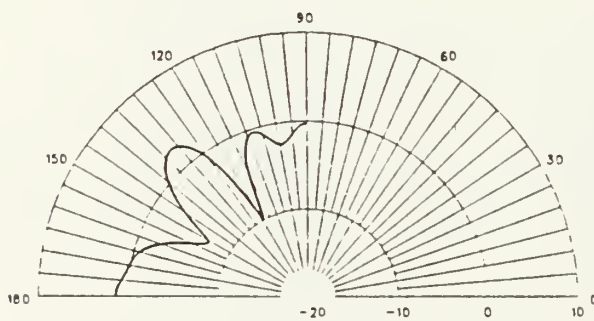

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 30 MHZ
ELEVATION PATTERN / AZIMUTH ANGLE = BROADSIDE



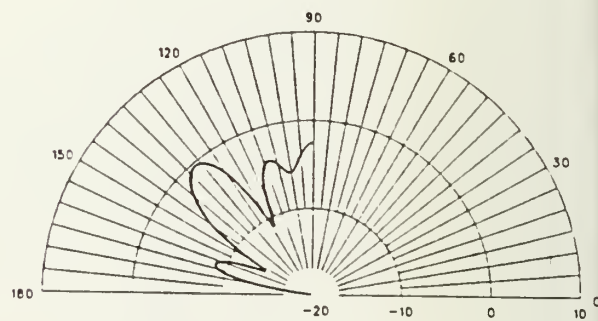


Figure 315. Elevation patterns of the ESI 32A2A DD antenna over perfect ground and fair ground at 30 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

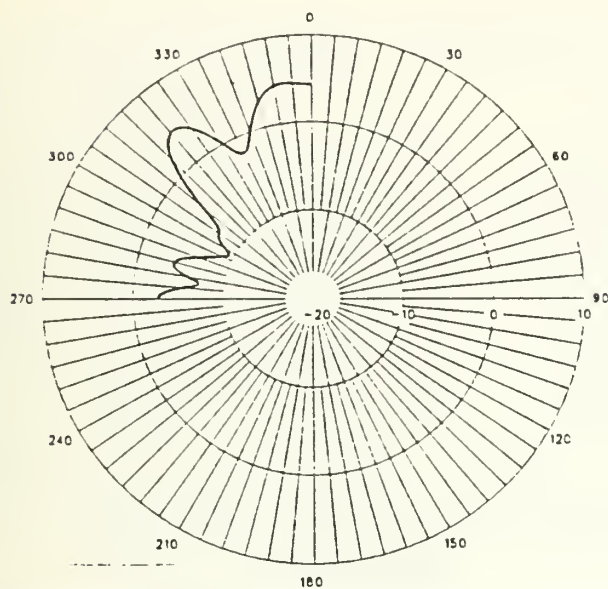

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

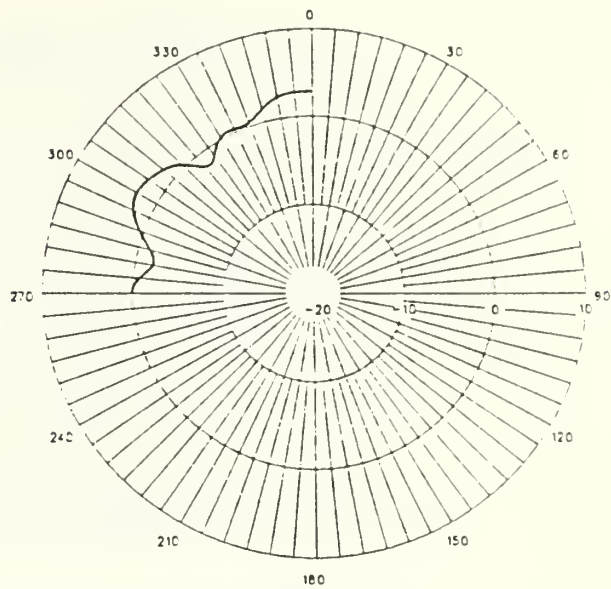

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

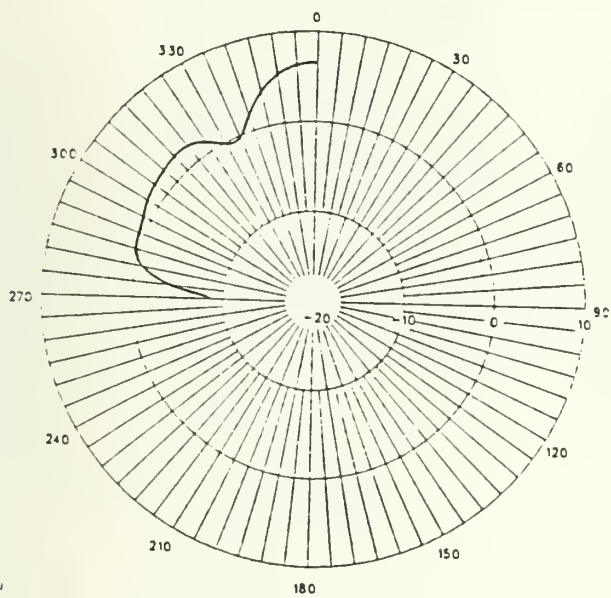

ESI 32A2A BROADBAND DOUBLE DELTA / PERF. GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80



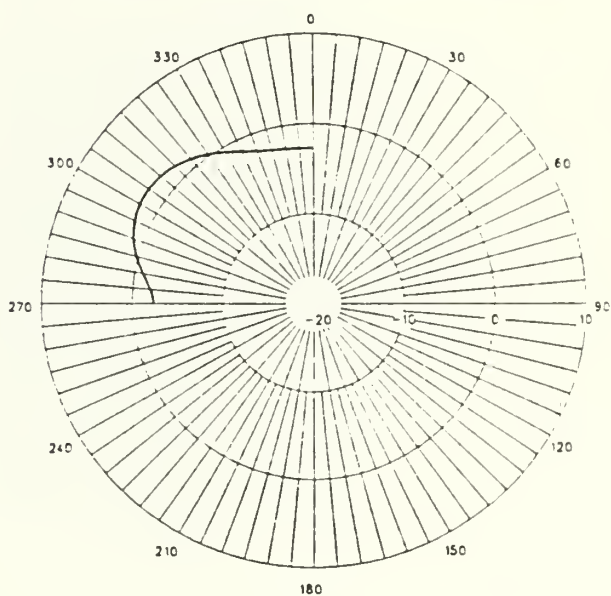


Figure 316. Azimuth patterns of the ESI 32A2A DD antenna over perfect ground at 30 MHz


ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 20

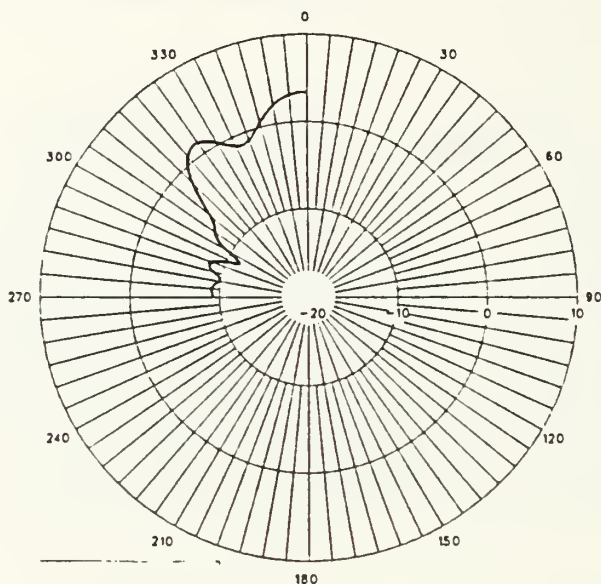

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 40

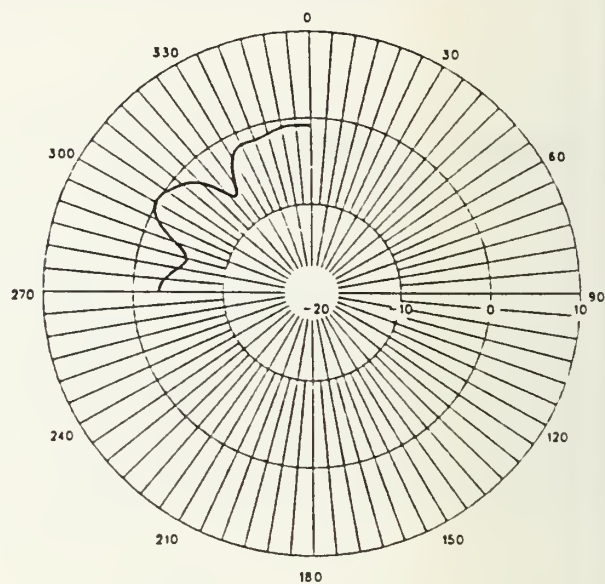

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 80

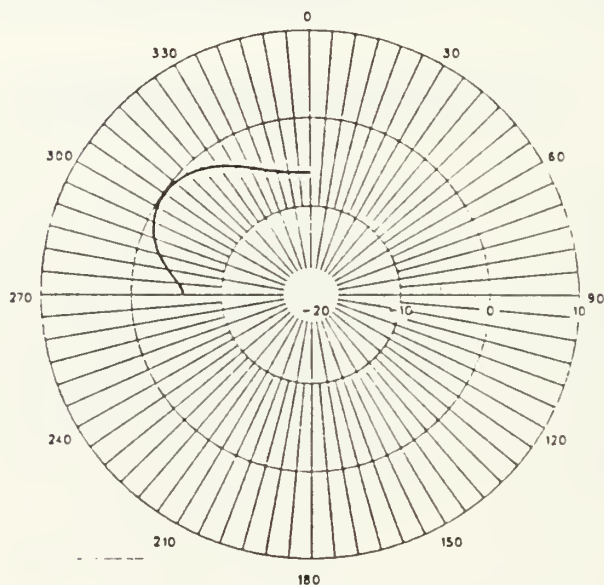

ESI 32A2A BROADBAND DOUBLE DELTA / FAIR GND. / 30 MHZ
AZIMUTH PATTERN / ELEVATION ANGLE = 60

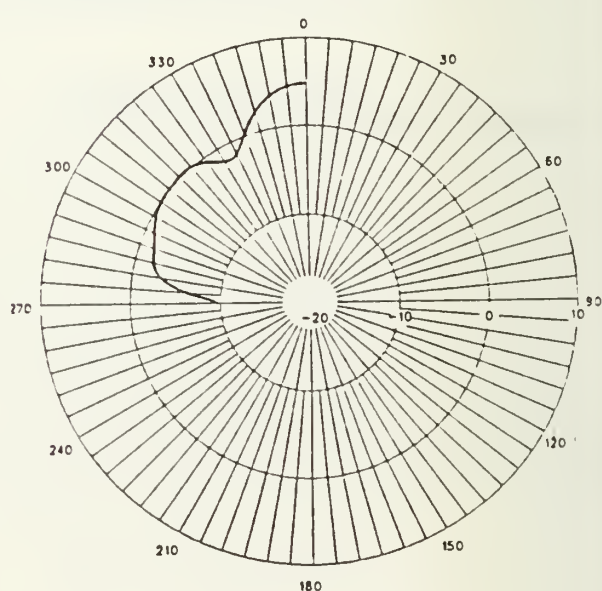


Figure 317. Azimuth patterns of the ESI 32A2A DD antenna over fair ground at 30 MHz

INITIAL DISTRIBUTION LIST VOLUME II

		No. Copies
1.	Defense Technical Information Center Cameron Station Alexandria, VA 22304-6145	2
2.	Library, Code 0142 Naval Postgraduate School Monterey, CA 93943-5002	2
3.	Dr. Richard W. Adler, Code 62Ab Departement of Electrical and Computer Engineering Naval Postgraduate School Monterey, CA 93943-5000	3
4.	Dr. James K. Breakall, Code 62Bk Departement of Electrical and Computer Engineering Naval Postgraduate School Monterey, CA 93943-5000	2
5.	Lee W. Corrington Commander USAISEC, ASB-SET-P Ft. Huachuca, AZ 85613-7300	1
6.	Pete Cunningham US Army Cecom Attn : AMSEL-RD-COM-TA-1 Ft. Monmouth, NJ 07703	1
7.	G. H. Hagn SRI International 1611 N. Kent Street Arlington, VA 22209	1
8.	Janet McDonald Commander USAISEC, ASB-SET-P FT. Huachuca, AZ 85613-5300	1
9.	Ed Shea 8818 Burbank Road Annandale, VA 22003	1
10.	Bob Rigel 8806 Crendall Road Lanham, MD 20801	1

11. Chief of the Defense Attache
Embassy of the Republic of Indonesia
2020 Massachusetts avenue N.W.
Washington D.C. 20036
12. Director of Research Administration, Code 012
Naval Postgraduate School
Monterey, CA 93943
13. Center for Naval Analyses
4401 Ford Avenue
Alexandria, VA 22302-0268
14. Director of Education of the Indonesia Air Force
Jl Gatot Subroto no 76
Jakarta-Selatan
Indonesia
15. Director of Elec.& Comm. of the Indonesia Air Force
Jl Gatot Sobroto no 76
Jakarta-Selatan
Indonesia
16. Commandant of TPI Air Force Base
Jln Nusantara Km12
Tanjungpinang - Kep.Riau
Indonesia
17. Achmad Chafid
Major Indonesia Air Force
TPI Air Force Base
Tanjungpinang - Kep.Riau
Indonesia

Thesis
C338645 Chafid
v.2 Numerical analysis of
c.1 Double Delta antennas.

Thesis
C338645 Chafid
v.2 Numerical analysis of
c.1 Double Delta antennas.



thesC338645v.2

Numerical analysis of Double Delta anten



3 2768 000 88746 7

DUDLEY KNOX LIBRARY